




Lumme LU-605 Convection Heater User Manual

[Home](#) » [LUMME](#) » Lumme LU-605 Convection Heater User Manual 

LUMME

LU-605 Convection Heater
User Manual




Contents

- [1 LU-605 Convection Heater](#)
- [2 BEFORE THE FIRST USE](#)
- [3 CLEANING AND MAINTENANCE](#)
- [4 SPECIFICATION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

LU-605 Convection Heater

Description

1. Heating mode switches
2. Thermostat knob
3. Air outlet
4. Handle
5. Feet

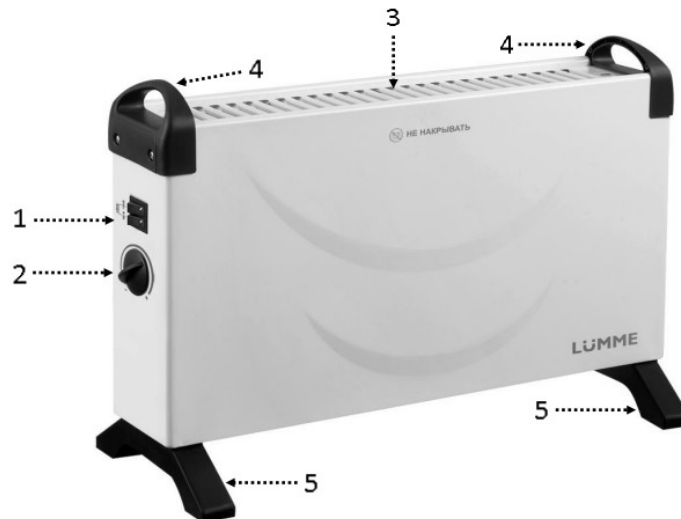

Real set of the appliance could be different from listed in the User manual. Check once buy.

CAUTION

When using any electrical appliance, basic safety precautions should always be followed, including the following: To ensure familiarity with the controls, safety features, and operation of your heater, read all instructions before use.

- Danger of electric shock exists even when the appliance is switched off. ALWAYS unplug the unit when not in use.
- Unplug heater by grasping plug and pulling it from the outlet. NEVER YANK ON CORD.
- Do not insert and pull out the plug by wet hands, as this may cause electrical shock.
- Heater should never be used under conditions where it may be immersed, or come in contact with water. Similarly do not plug in your heater if its surfaces are damp.
- Do not operate the heater with a damaged cord set, or if it has been dropped, or damaged in any manner. Return it to an Authorized Service center for inspection, repairing and testing.
- Do not use outdoors.
- Do not leave the cable on hot surfaces.
- Disconnect the cord from the outlet before cleaning.
- When store your heater, keep it in a cool, dry place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is required when any appliance is used by or near children.
- The surface temperature of the flanges is higher, during use, thus closely supervise any children in the area of this appliance.
- If malfunctions happen during operation, please put it to nearby appointed service center with the maintenance card. Never disassemble it by yourself.

- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- The heater must always operate in vertical position.
- Do not scrap the surface with rod or sharp hard tools, as this may cause deformation and rust because of damage of paint coat.
- During use surface temperature of the flanges is perhaps higher, thus do not touch it except handle, knob and the keys.
- Never use the unit in places with not flat and unstable surfaces. Make sure there are no flammable or easy deformed objects within 1m.
- The heater is suitable for operation on an A.C. electricity supply having the same voltage as that shown on its rating label. The unit should be earthed.
- Do not cover the appliance.

CAUTION! Do not cover the heater while it is on. This can cause dangerous temperature increase.

BEFORE THE FIRST USE

- Unpack the appliance and remove all packaging materials and labels. Store warning labels (if available) and the product serial number plate on the housing!
- Clean the device with a damp cloth, clean the accessories in soapy water rinse thoroughly and dry.

ASSEMBLING

- Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit.
- These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.

CLEANING AND MAINTENANCE

- Always un-plug the heater from the wall socket and allow it to cool down before cleaning.
- Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.
- Do not use any detergents or abrasives and do not allow any water to enter the heater.
- When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

SPECIFICATION

Power supply	Net weight I Gross weight	Package size (L x W x H)	Recommended room space
230 V, 50 Hz	2,0 kg / 2,5 kg	550 mm x 140 mm x 337 mm	20 m ²

Producer: Cosmos Far View International Limited

Room 701, 16 apt, Lane 165, Rainbow North Street , Ningbo, China. Made in China

WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)

Production date is available in the serial number located on the identification sticker on the gift box and/or on


sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production.

Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device.

Current information about service centers is available on the website <http://lumme-ru.com>

LUMME

Documents / Resources

	<p>Lumme LU-605 Convection Heater [pdf] User Manual LU-605 Convection Heater, LU-605, Convection Heater, Heater</p>
---	---

References

- [Интернет-магазин Lumme](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.