



LUMME LU-SM1255A Waffle Maker User Manual

[Home](#) » [LUMME](#) » LUMME LU-SM1255A Waffle Maker User Manual 

Contents

- [1 LUMME LU-SM1255A Waffle Maker](#)
- [2 Product Information: LU-SM1255A Waffle Maker](#)
- [3 Product Usage Instructions](#)
- [4 Parts list](#)
- [5 BEFORE FIRST USE](#)
- [6 USING THE DEVICE](#)
- [7 CLEANING AND MAINTENANCE](#)
- [8 SPECIFICATION](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

LUMME

LUMME LU-SM1255A Waffle Maker



Product Information: LU-SM1255A Waffle Maker

- Power supply: 230 V.~ 50 Hz. 750 W.
- Net weight / Gross weight: 1.1 kg / 1.25 kg
- Package size (L x W x H): 245 mm x 90 mm x 240 mm
- Producer: Cosmos Far View International Limited
- Producer address: Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China
- Made in China
- Warranty does not cover supplies (filters, ceramic and non-stick coating, rubber seals, etc.)
- Production date is available in the serial number located on the identification sticker on the gift box and/or on the sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production.
- Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device.

Product Usage Instructions

CAUTION: Read and follow the instruction concerning use of the appliance by a person responsible for their safety.

Before First Use:

1. Remove all packaging materials and labels from the waffle maker.
2. Clean the plates with a damp cloth and dry thoroughly.


Using the Device:

1. Plug the waffle maker into a power outlet and wait for it to heat up.
2. Once the operation light indicator turns on, pour the batter into the waffle maker and close the lid.
3. Wait for the heating light indicator to turn on.
4. Once the heating light indicator turns off, open the lid and remove the waffle.

Cleaning and Maintenance:

1. Unplug the waffle maker and let it cool down before cleaning.
2. Clean the plates with a damp cloth and dry thoroughly.
3. Do not immerse the waffle maker in water or any other liquid.
4. Store the waffle maker in a cool and dry place.

Parts list

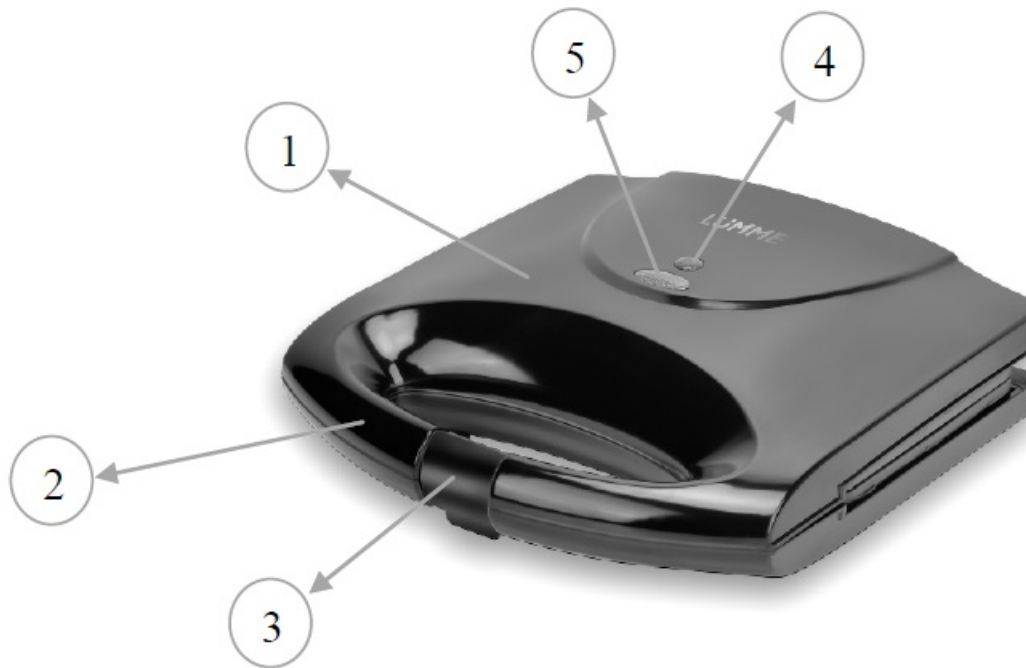

1. Housing
2. Handles
3. Handles fixator
4. Operation light indicator
5. Heating light indicator

Real set of the appliance could be different from listed in the User manual. Check once buy.

CAUTION

Read this manual carefully before using the appliance and save it for future reference.

- Before the first use, check the device specifications and the power supply in your network.
- It is not intended for industrial use.
- For indoor use only. Use only for domestic purposes according to the instruction manual.
- Do not use with damaged cord, plug or other injuries.
- Keep the power cord away from sharp edges and hot surfaces.
- Do not pull the cord. Always take the socket. Do not reel the cord around the device housing.
- Never attempt to frame and repair the appliance by yourself. If you meet problems, please contact the nearest customer service center.

- Using accessories or replacement parts that are not recommended or sold by the manufacturer may cause damage to the appliance.
- Always unplug the appliance and let it cool down before cleaning and removing parts. Keep unplugged when not in use.
- To avoid electric shock and fire, do not immerse in water or other liquids. If this occurs, immediately unplug it and contact service center for inspection.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

BEFORE FIRST USE

- Before the first use grease grill pates with butter or margarine.
- Turn on the appliance and let to heat for 10 minutes in a closed state.
- Then unplug the appliance, let it to cool, then wipe working surface with a damp cloth.

USING THE DEVICE

- Plug the device to the power supply. Device starts to heat up, the indicator lights (red and green) will be on.
- Once the cooking surface has reached the preset temperature, the heating indicator light (the green one) will be off. You can start cooking.
- Please don't open the device during heating.
- Place all ingredients to the working surface, close the lid.
- Fix the lid with handles fixator.

CAUTION: Be careful, hot steam could come out!

- Average cooking time is 6-8 minutes. Anyway you can vary the time of cooking to taste.
- Open the lid and take out prepared meal with wooden paddle. Please, do not use sharp metal things to not damage non-stick coating.
- Close the lid to keep warm for cooking next.
- Unplug the device after cooking.

CLEANING AND MAINTENANCE

- Unplug the device before the cleaning.
- Let the device to cool.
- Working surface and edges should be wiped with paper towel or soft cloth.
- If rest of stuffing stuck to the surface, pour a little bit oil on working surface and heat up for 1-2 minutes. Switch off the device and wipe the working surface after 5 minutes.
- Outer parts of device might be cleaned with wet cloth. Avoid contact of inner part with liquids and oil.
- Never sink the device into the water or other liquids.
- Device can't be washed in dishwasher.
- Do not use abrasive agents, organic solvents and corrosive liquids.

SPECIFICATION

- Power supply 230 V.~ 50 Hz.
- Power 750 W
- Net weight / Gross weight 1,1 kg / 1,25 kg
- Package size (L xW x H) 245 mm x 90 mm x 240 mm

Producer:

Cosmos Far View International Limited
Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China
Made in China

WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)
Production date is available in the serial number located on the identification sticker on the gift box and/or on sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production.
Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device.

Documents / Resources

	LUMME LU-SM1255A Waffle Maker [pdf] User Manual LU-SM1255A Waffle Maker, LU-SM1255A, Waffle Maker, Maker
---	---