

lushh LS-MP-POSM Maple Gooseneck Pullout Sink Mixer



# lushh LS-MP-POSM Maple Gooseneck Pullout Sink Mixer User Manual

[Home](#) » [lushh](#) » lushh LS-MP-POSM Maple Gooseneck Pullout Sink Mixer User Manual 

## Contents

- [1 lushh LS-MP-POSM Maple Gooseneck Pullout Sink Mixer](#)
- [2 Product Information](#)
- [3 Maintenance and Care](#)
- [4 Frequently Asked Questions](#)
- [5 Warranty & Care Instructions](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

# LUSH

lushh LS-MP-POSM Maple Gooseneck Pullout Sink Mixer



## Product Information

### Specifications:

- **Mixers:** 20 year German cartridge replacement warranty, 7 year product or parts replacement period
- **Tapware:** 7 year product or parts replacement period
- **Toilets:** 7 year product or parts replacement period

### Maintenance and Care

- Avoid using harsh detergents or abrasive cleaners as they may deteriorate the surface of the product. Household sprays containing bleach should also be avoided as they can damage the product.
- Do not use abrasive wipes or sponges to clean the product. Instead, use warm soapy water and a soft cloth for cleaning.

### Frequently Asked Questions

- Q: Can I use abrasive cleaners to clean the product?

A: No, it is recommended to avoid harsh detergents or abrasive cleaners as they may damage the surface of the product.

- Q: What should I do if the product needs replacement within the warranty period?

A: If the product requires replacement within the specified\ warranty period, please contact our customer service for assistance.

## Warranty & Care Instructions

Product	Period
<b>Mixers</b>	20-year German cartridge replacement 7-year product or parts replacement
<b>Tapware</b>	7-year product or parts replacement 5-year ceramic spindle replacement 2-year jumper valve replacement
<b>Shower rails</b>	7-year product or parts replacement
<b>Outlets</b>	7-year product or parts replacement
<b>Shower head &amp; arms</b>	Lifetime product or parts replacement
<b>Accessories</b>	7-year product or parts replacement
<b>Colour finish</b>	7 years
<b>Toilets</b>	10 years product replacement on vitreous china 1-year product or parts replacement on the toilet seat
<b>Wastes &amp; traps</b>	1-year product or parts replacement
<b>Kitchen sinks</b>	15-year product replacement
<b>Kitchen sink accessories</b>	2-year product replacement
<b>Floor grates</b>	2-year product replacement

- Harsh detergents or abrasive cleaners may deteriorate the surface of the product.
- Household sprays may contain bleach which may damage the surface of the product.
- Abrasive wipes and sponges may damage the surface of the product.
- To clean, use warm soapy water and a soft cloth.

- Harsh detergents or abrasive cleaners may deteriorate the surface of the product.
- Harsh food sprays may contain bleach which may damage the surface of the product.
- Abrasive sponges and sponges may damage the surface of the product.

*To clean, use warm soapy water and a soft cloth.*

**[Iushh LS-MP-POSM Maple Gooseneck Pullout Sink Mixer](#)** [pdf] User Manual  
LS-MP-POSM, LS-MP-POSM Maple Gooseneck Pullout Sink Mixer, Maple Gooseneck Pullout Sink Mixer, Gooseneck Pullout Sink Mixer, Pullout Sink Mixer, Sink Mixer, Mixer

## References

- User Manual

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.