



LUTECE LP20WC LED Work Light Instruction Manual

[Home](#) » [LUTECE](#) » LUTECE LP20WC LED Work Light Instruction Manual 

LUTECE LP20WC LED Work Light



Contents

 
- [1 Specification](#)
- [2 Dimension](#)
- [3 Customer Support](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Specification



item n°	LP20WC	LP50WC
Power	20W	50W
IP protection (IK)	IP65 (IK10)	
Lumen	1800 lm	4500 lm
temperature	4000K	
size (mm)	(L) 208 x (H) 245 x (P) 68 mm	(L) 273 x (H) 313 x (P) 68 mm
Voltage	220-240V ~	
frequency	50/60 Hz	
protection class	I : terre /earth protection	
cable	1.8 m H05RN-F	
Guarantee	5 ans / years	
energy label	F	
QR CODE		

Dimension


1. Loosen the two sides of the structure
2. Hold the foot and adjust the position floodlight then tighten the two sides.

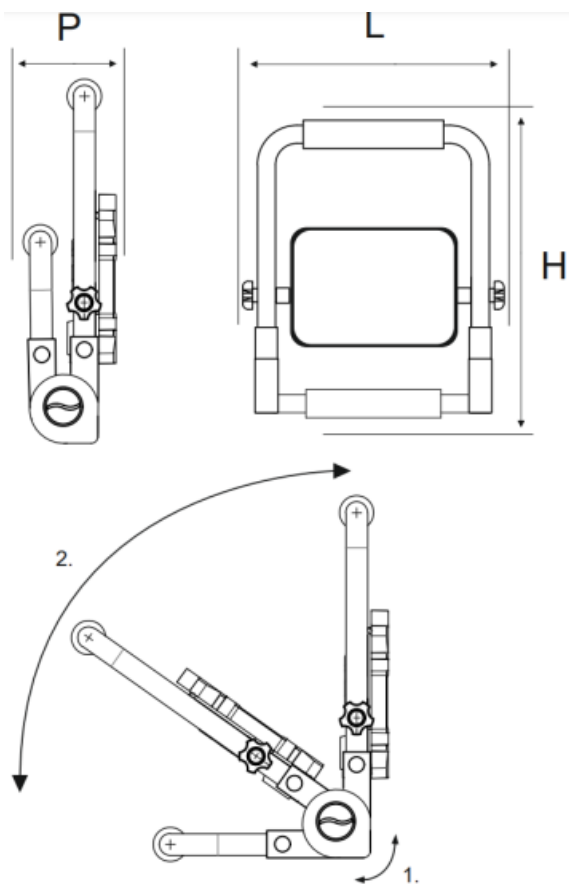

  the components of the floodlight are integrated and are not replaceable and the product does not have to be opened.

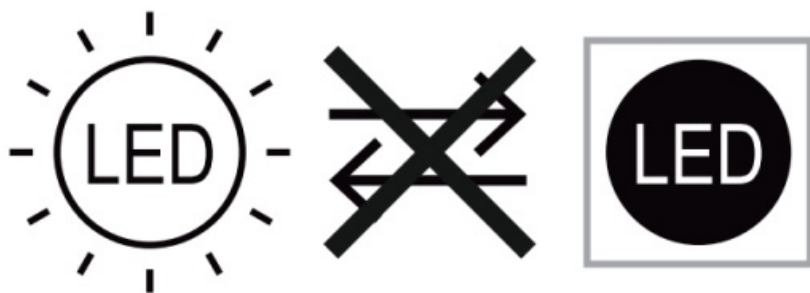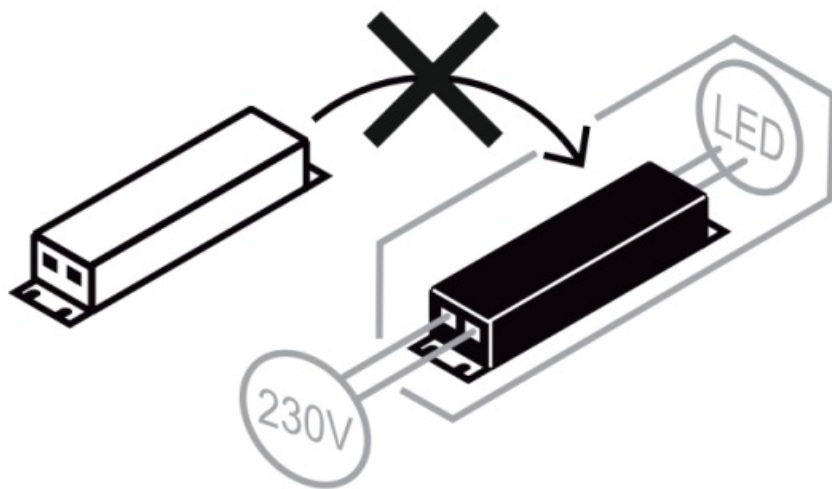

Prise / socket

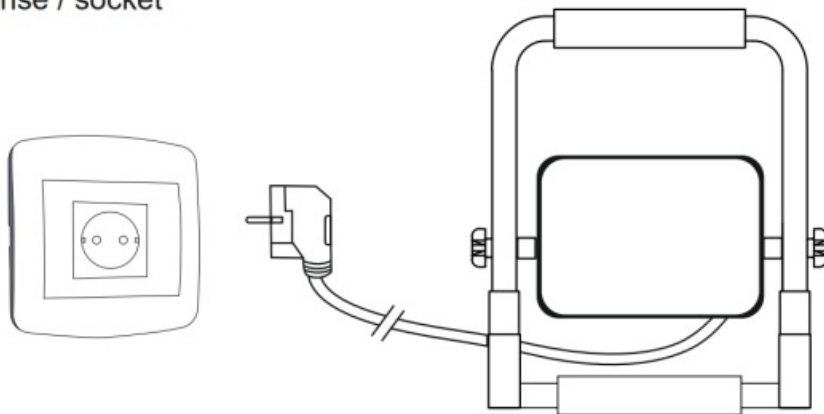 

Customer Support

ARC SAS – luteceled.fr
SAV : contact@arcgroup.fr
fabriqué en Chine – made in China



Documents / Resources

	LUTÈCE LP20WC LED Work Light [pdf] Instruction Manual LP20WC, LP50WC, LP20WC LED Work Light, LP20WC, LED Work Light, Work Light, Light
--	--

References

- [Accueil pour particuliers](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.