



# LUX PRO LP600V3 High-Output Small Handheld LED Flashlight User Manual

[Home](#) » [LUX PRO](#) » LUX PRO LP600V3 High-Output Small Handheld LED Flashlight User Manual 



USER MANUAL  
LP600V3  
High-Output Small Handheld  
LED Flashlight






**Contents**

- [1 Features](#)
- [2 Operation Instructions](#)
- [3 Battery Replacement](#)
- [4 Product Warranty](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

**Features**

Constructed with aircraft-grade aluminum  
LPE optics  
Patented TackGrip molded rubber grip  
High-quality wrist lanyard  
Tactical on/of button  
IPX4 waterproof rating  
Batteries included (4 AAA)

**ANSI/PLATO FL1 STANDARD**

MODES	 LUMENS	 RUN TIME	 BEAM DISTANCE
High	550 lm	1h 45m	335m
Medium	185 lm	9h 30m	190m
Low	40 lm	20h	85m
Strobe	465 lm	—	—



**Operation Instructions**

On/Of: Press and release the button on the tail cap to turn the light on and of.



Cycle Modes: Press the button on the tail cap quickly to cycle through modes (High/Medium/Ultra-Low). If the light remains in a single mode for longer than 3-5 seconds the next press of the button will turn the light off. Light automatically resets to High mode when turned off.

Hidden Strobe On/Of: Press and hold the button for 3 seconds to activate the hidden strobe. The flashlight will remain in hidden strobe mode until it is deactivated by pushing and holding the button for 3 seconds again.

Once the battery has drained too low to allow the flashlight to run on high mode, the LP600V3 is programmed to turn off. At this point, the flashlight can still run on medium and low modes. Continuously running the flashlight in high mode and turning the light on and off will drain the battery of the light more quickly.

## Battery Replacement

The LP600V3 uses 4 AAA batteries.

To change the batteries, turn the tail cap counterclockwise to remove it. Tip the light downward to slide out the battery case which contains the batteries. Remove the batteries from the case and insert new batteries according to the (+/-) symbols found on the case. For best results, we recommend using brand new alkaline batteries that are the same voltage and brand. Re-insert the battery case into a flashlight with the metal knob and arrow on the battery case pointing down. Re-attach the tail cap by pressing down lightly and turning it clockwise until tight.



If you know it will be a while between uses, we suggest removing the batteries from the flashlight and storing it in a dry, protected place.

## Product Warranty

The LP600V3 has a Limited Lifetime Warranty Against Manufacturer's Defects from time of purchase.

For warranty claims please contact us by calling 801-553-8886 or sending an email to

[info@simpleproducts.com](mailto:info@simpleproducts.com) [luxpro.com](http://luxpro.com)

14725 S Porter Rockwell Blvd Ste C Bluffdale, UT 84065 866.553.8886

## Documents / Resources



[LUX PRO LP600V3 High-Output Small Handheld LED Flashlight](#) [pdf] User Manual  
LP600V3, High-Output Small Handheld LED Flashlight