

LUXSWAY
DY137MIR MOTION SENSOR
CEILING LIGHT



LUXSWAY DY137MIR Motion Sensor Ceiling Light Instruction Manual

[Home](#) » [LUXSWAY](#) » LUXSWAY DY137MIR Motion Sensor Ceiling Light Instruction Manual 

Contents

- 1 LUXSWAY DY137MIR Motion Sensor Ceiling Light
- 2 INTRODUCTION
- 3 SPECIFICATIONS
- 4 WHAT'S IN THE BOX
- 5 PRODUCT OVERVIEW
- 6 FEATURES
- 7 SETUP GUIDE
- 8 CARE & MAINTENANCE
- 9 TROUBLESHOOTING
- 10 PROS & CONS
- 11 WARRANTY
- 12 FREQUENTLY ASKED QUESTIONS
- 13 References

LUXSWAY

LUXSWAY DY137MIR Motion Sensor Ceiling Light



INTRODUCTION

A stylish LED lighting option for contemporary houses is the LUXSWAY DY137MIR Motion Sensor Ceiling Light, which runs on batteries. This small yet effective light is perfect for stairwells, garages, hallways, and closets because it has 250 lumens of brightness. Its motion sensor technology, which activates immediately upon detecting movement, guarantees hands-free operation. It is both practical and fashionable, with color-changing features that allow users to choose between many lighting modes using a remote control.

With its energy-efficient performance and single CR2032 battery power, this 2.5-watt LED light is an affordable substitute for conventional ceiling lights. It has infrared (IR) connectivity and runs at 4.5 volts, enabling smooth remote controls. Made by LUXSWAY and initially offered on June 16, 2022, this light has rapidly gained popularity among consumers looking for wire-free, smart lighting options for a reasonable \$25.99.

 
SPECIFICATIONS

Brand	LUXSWAY
Price	\$25.99
Special Feature	Color Changing
Light Source Type	LED
Power Source	Battery Powered
Controller Type	Remote Control
Connectivity Technology	IR
Wattage	2.5 Watts
Voltage	4.5 Volts
Brightness	250 Lumens
Package Dimensions	7.4 x 7.09 x 2.91 inches
Weight	15.84 ounces
Item Model Number	DY137MIR
Batteries Required	1 CR2032 Battery
Date First Available	June 16, 2022
Manufacturer	LUXSWAY

WHAT’S IN THE BOX

- Ceiling Light
- Remote
- Manual

PRODUCT OVERVIEW

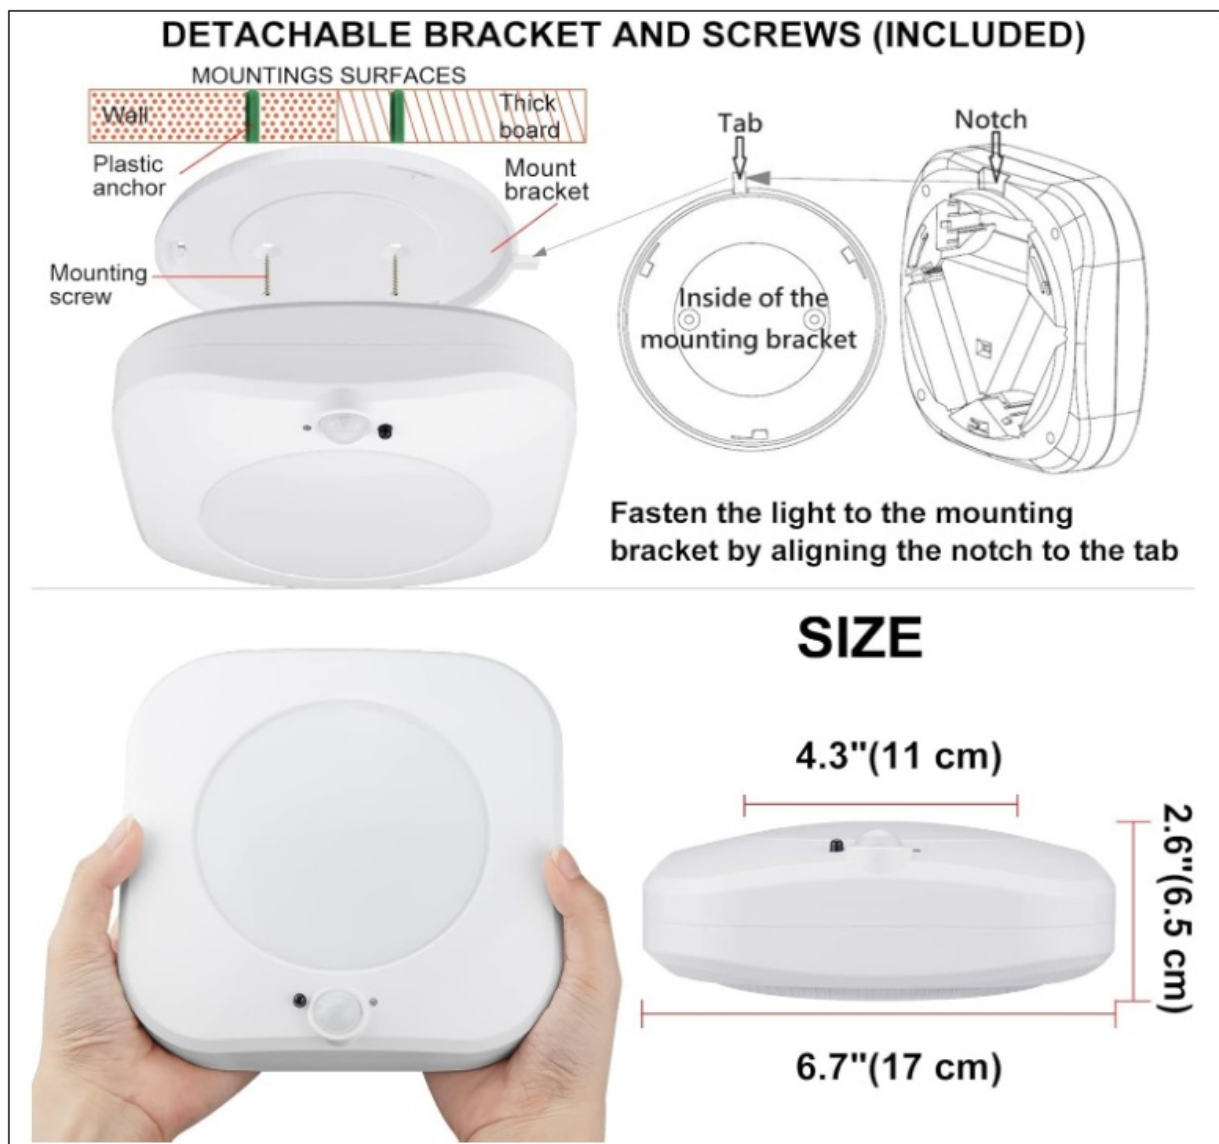


FEATURES

- **Motion Sensor & Infrared Control:** This hands-free device uses motion detection and an infrared remote to function.
- **18 RGB LEDs and 30 warm white (4000K) LEDs** are included for a variety of lighting settings.
- **Brightness Level:** Provides enough light with 250 lumens.
- **Four Lighting Settings:** Available for a personalized atmosphere: Flash, Strobe, Fade, and Smooth.
- **Ten Color Options:** To fit your setting or mood, pick from ten distinct hues.
- **Timer Function:** To conserve battery life, set an automated shut-off for 1, 2, 3, or 4 hours.

AUTO-ON
only in darkness

Motion sensor
detector aim
at active area

 AUTO-OFF
after 45 seconds
of inactivity

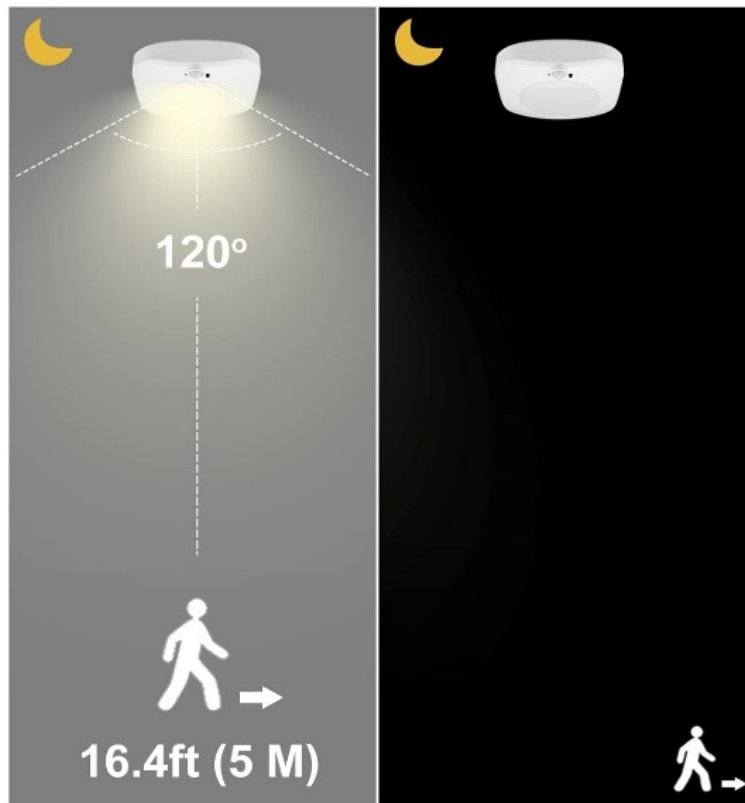

- **Powered by Batteries Convenience:** Long battery life and operation on three D-cell batteries (not included).

 


INSTALL BATTERIES




Use 3*D Batteries (not included)

- **Up to 700 Days of Battery Life:** Can be achieved in motion mode (assuming 8 activations per day, lasting 45 seconds each).
- **Operation of the Remote Control:** Color, brightness, and timing settings can be easily adjusted using the infrared remote.

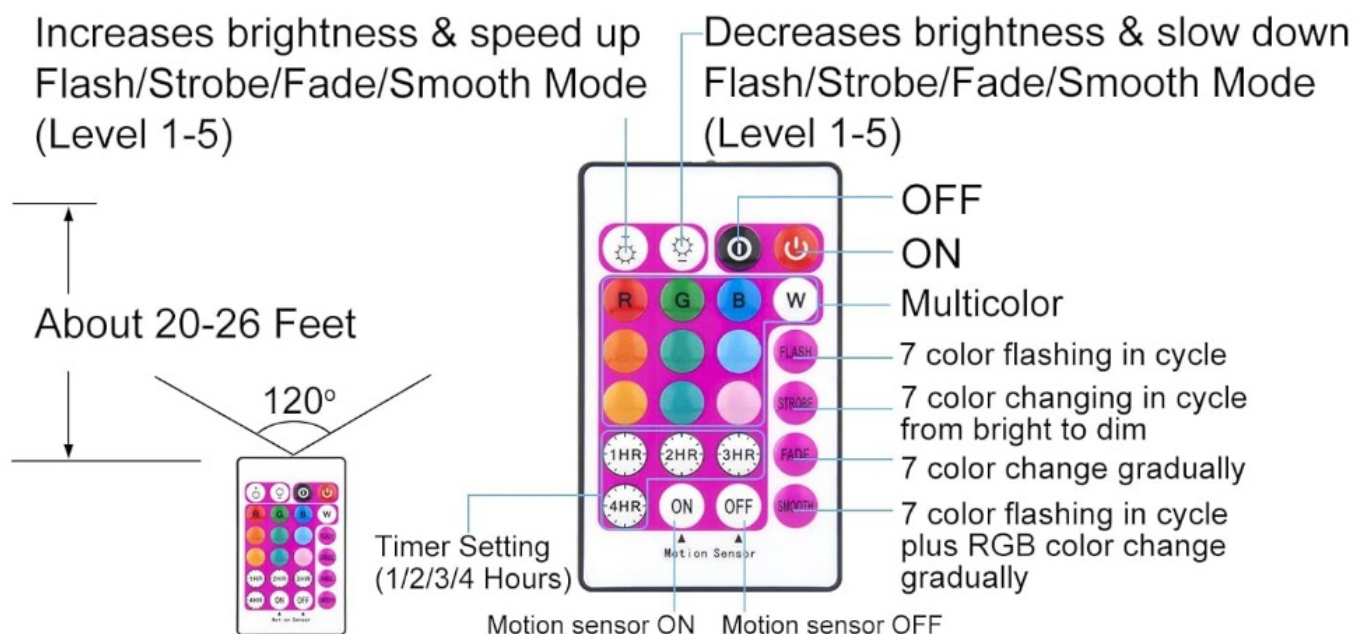

- **Continuous Operation Mode:** With the remote control, it can run continuously for 70 hours.

 - **Cordless Installation:** Eliminates the need for wiring, perfect for closets, corridors, baths, bedrooms, and stairways.
- **Small and Light:** 15.84 ounces, 7.4 x 7.09 x 2.91 inches, providing a sleek, contemporary appearance.
- **Simple Mounting:** Using the included screws, it is easy to mount on walls or wood surfaces.
- **Low Power Consumption:** For energy efficiency, it runs at 2.5 watts.
- **Sturdy Design:** Long-term dependability is ensured with a 30,000-hour lifespan rating.

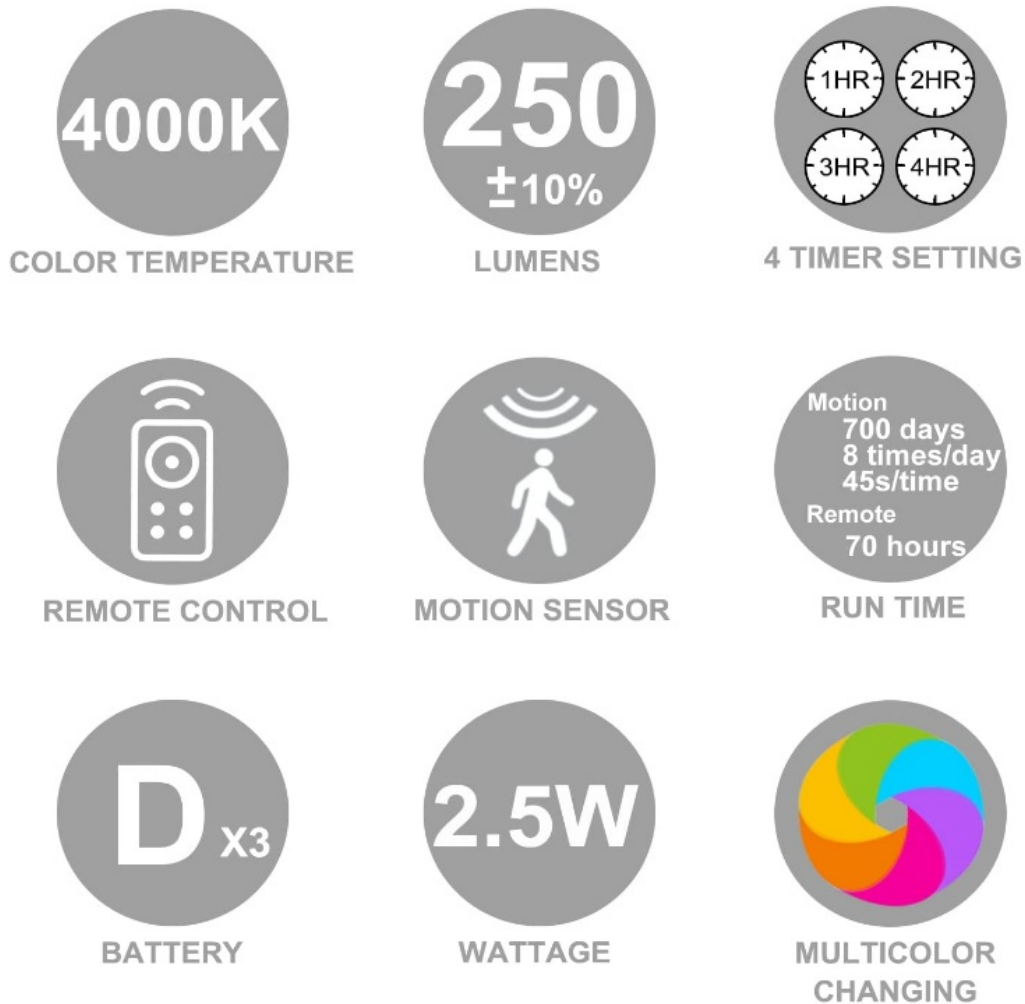

SETUP GUIDE

- **Unpack the Product:** Take the mounting accessories, light, and remote control out of the box.
- **Place Batteries:** Put one CR2032 battery into the remote control and three D-cell batteries (not included) into the light.
- **Choose Installation Location:** Perfect for bedrooms, corridors, stairways, showers, and closets.
- **Mark the Mounting Position:** Press the light up against the surface and mark the locations of the screw holes.
- **Install Mounting Screws:** Using the included screws, fasten the base to drywall or wood.
- **Connect the Light to the Base:** Position the light in line with the installed base and fasten it firmly.
- **Turn On the Light:** Press the integrated power button or use the remote control.
- **Turn on Motion Sensor Mode:** Press the "ON" button on the remote control.
- **Choose a Color:** There are ten color options available; use the remote to select one.
- **Adjust Brightness:** Use the remote control to set the brightness level you want.
- **Select the Lighting Mode:** Choose between Smooth, Strobe, Fade, or Flash effects.

- **Set Timer:** Use the timer buttons to have the light switch off automatically after one, two, three, or four hours.
- **Test Motion Detection:** Walk by the light in a pitch-black setting to ensure functionality.
- **Cancel Timer Setting:** Press the ON button to turn off the timer.
- **Verify Remote Functionality:** Test all buttons at different distances to ensure proper operation.

CARE & MAINTENANCE

- **Clean Frequently:** Wipe the surface with a gentle, dry cloth to remove dust and dirt.
- **Prevent Water Exposure:** Although the light is appropriate for showers, keep it away from water.
- **Battery Check:** Replace the three D-cell batteries when the brightness starts to fade.
- **Replacement of Remote Battery:** Change the CR2032 battery if the remote stops working.
- **Keep the Remote Safe:** Store it in a convenient location to prevent misplacing.
- **Avoid Overtightening Screws:** Tighten only enough to hold the lamp securely in place.
- **Use in Appropriate Lighting:** Dark or low-light settings optimize the motion sensor’s performance.
- **Verify Sensor Function:** Reset the motion “ON” button on the remote if detection stops working.
- **Avoid High Temperatures:** Keep the light away from heat sources and direct sunlight.
- **Use Gentle Cleaning Solutions:** Never spray liquid directly onto the light; use a mild dishwashing solution if needed.
- **Test Timer Function Occasionally:** Ensure the auto shut-off works correctly.
- **Verify Mounting Stability:** Regularly check that the base and screws remain securely in place.
- **Avoid Mixing New and Old Batteries:** Use fresh batteries of the same type for best performance.
- **Store Unused Lights Properly:** Remove batteries if not using for an extended period to prevent leaks.
- **Ensure Proper Ventilation:** Keep the light in a well-ventilated space to prevent overheating.

TROUBLESHOOTING

Issue	Possible Solution
Light does not turn on	Check battery and replace if necessary
Motion sensor not working	Ensure the sensor is not blocked by objects
Remote control unresponsive	Replace the remote battery and try again
Light turns off too quickly	Adjust the motion sensor settings
Color settings do not change	Reset the remote and try again
Dim light output	Ensure battery is fully charged
Flickering light	Check for battery corrosion and clean terminals
Light turns on randomly	Avoid placing it near heat sources or moving objects
Sensor delay in activation	Test in different lighting conditions
Unable to mount properly	Ensure the surface is clean and flat before installation

PROS & CONS

PROS	CONS
Motion sensor activation for hands-free use	Battery-powered; requires replacement over time
Remote control for easy adjustments	Not suitable for large rooms due to brightness
Energy-efficient with low wattage (2.5W)	Limited to 250 lumens brightness
Easy to install with no wiring required	Uses CR2032 battery, which may need frequent changes
Color-changing feature for customizable ambiance	IR remote may not work from long distances

WARRANTY

The LUXSWAY DY137MIR Motion Sensor Ceiling Light comes with a **1-year limited warranty** covering manufacturing defects. Customers can contact LUXSWAY customer support for replacements or repairs if any defects occur within the warranty period. Damage caused by improper use, battery leakage, or unauthorized modifications is not covered.

FREQUENTLY ASKED QUESTIONS

<p>Why is my LUXSWAY DY137MIR Motion Sensor Ceiling Light not turning on?</p> <p>Ensure that the battery is properly installed and has sufficient charge. Also, check that the motion sensor is not obstructed.</p>
<p>Why does my LUXSWAY DY137MIR Motion Sensor Ceiling Light not detect motion?</p> <p>Ensure the sensor is positioned correctly and that the room is not too bright, as excessive light may prevent activation.</p>
<p>Why is my LUXSWAY DY137MIR Motion Sensor Ceiling Light turning off too quickly?</p> <p>The LUXSWAY DY137MIR may have a built-in auto-off timer. Check the settings on the remote control to adjust the timing.</p>
<p>Why is the remote control not working with my LUXSWAY DY137MIR Motion Sensor Ceiling Light?</p> <p>Ensure that the remote is battery is functional and that there are no obstacles blocking the IR signal. Try using the remote closer to the light.</p>

How do I reset my LUXSWAY DY137MIR Motion Sensor Ceiling Light?

Remove the battery for 5 minutes, then reinsert it and test the light using the remote or motion sensor.

What type of power source does the LUXSWAY DY137MIR Motion Sensor Ceiling Light use?

The LUXSWAY DY137MIR is battery-powered, requiring 1 CR2032 battery for operation, making it ideal for wireless installations.

How bright is the LUXSWAY DY137MIR Motion Sensor Ceiling Light?

The LUXSWAY DY137MIR delivers 250 lumens, providing adequate lighting for small spaces such as closets, hallways, and bathrooms.

How is the LUXSWAY DY137MIR Motion Sensor Ceiling Light controlled?

The LUXSWAY DY137MIR is operated via an IR remote control, offering convenient adjustments for brightness, color, and power settings.

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.