



Lydsto R5 Sweeping and Mopping Robot Instruction Manual

[Home](#) » [Lydsto](#) » Lydsto R5 Sweeping and Mopping Robot Instruction Manual 

Contents

- [1 Lydsto R5 Sweeping and Mopping Robot](#)
- [2 Product Introduction](#)
 - [2.1 Accessories list](#)
 - [2.2 Install](#)
 - [2.3 Direction for Use](#)
 - [2.4 Cleaning/Pause](#)
 - [2.5 Automatic Cleaning](#)
 - [2.6 Connect APP](#)
 - [2.7 Daily Maintenance](#)
- [3 Basic Specification](#)
- [4 FAQ](#)
- [5 Trouble Removal](#)
- [6 Safety Information](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Lydst- logo

Lydsto R5 Sweeping and Mopping Robot



Lydsto Sweeping and Mopping Robot R5 Instruction Manual

Before using the product, please read through this manual and keep it properly.


Table of Contents

- Product Introduction
- Install
- Direction for Use
- Connect APP
- Daily Maintenance
- Basic Specification
- FAQ
- Trouble Removal
- Safety Information

Product Introduction


The Lydsto Sweeping and Mopping Robot R5 is a robot vacuum cleaner that can sweep and mop floors. It comes with various sensors and features to ensure efficient cleaning of your home.

Host

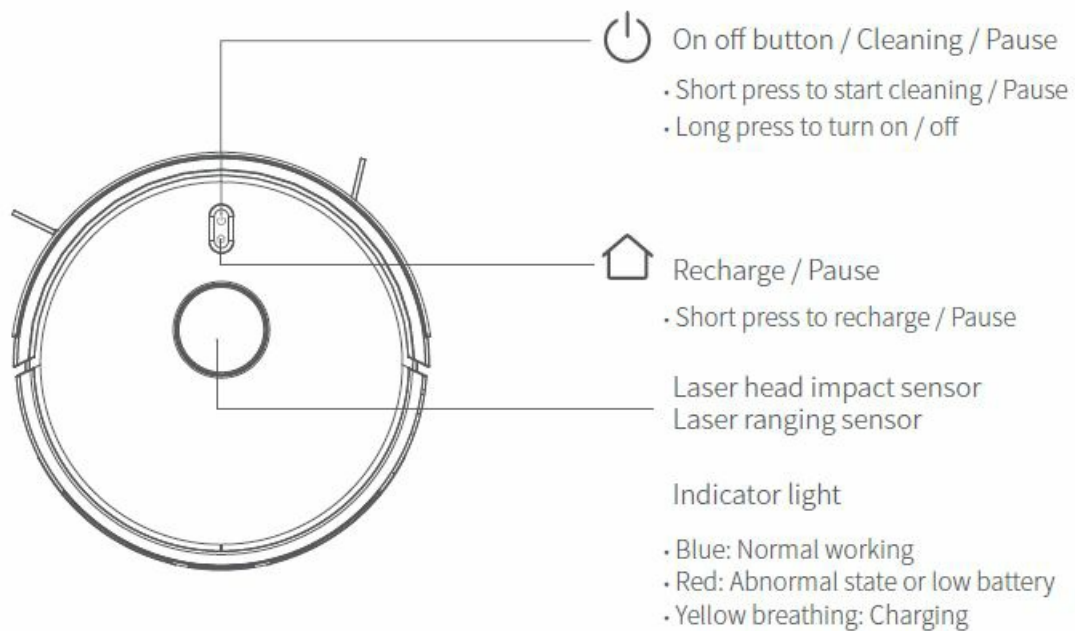

- On/Off button: Used to turn the robot on and off.
- Cleaning/Pause button: Used to start and stop cleaning.
- Recharge/Pause button: Used to start and stop charging.
- Laser head impact sensor: Detects obstacles and prevents collisions.
- Laser ranging sensor: Measures distance for efficient cleaning.
- Indicator light: Displays the status of the robot.


Sensor and Structure

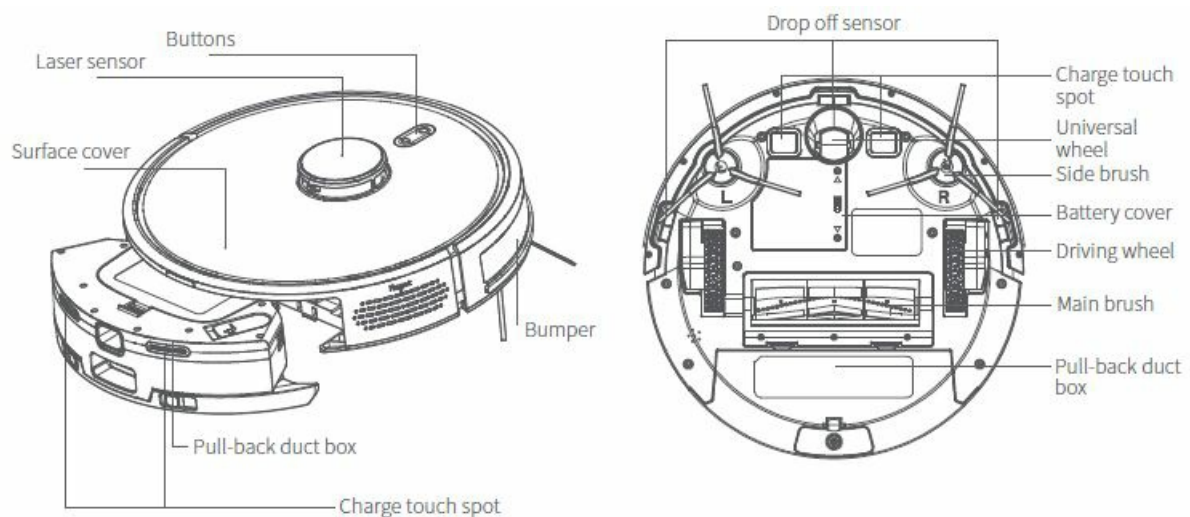

- Buttons: Used to control the robot.
- Laser sensor: Detects obstacles and measures distance.
- Bumper: Protects the robot from collisions.
- Pull-back duct box: Collects dust and debris.
- Charge touch spot: Used to charge the robot.
- Drop off sensor: Detects stairs and prevents falls.
- Universal wheel: Allows the robot to move in different directions.
- Side brush: Sweeps debris into the suction inlet.


- Battery cover: Covers the robot's battery.
- Driving wheel: Propels the robot forward and backward.
- Main brush: Picks up debris and dust.

Dust Collector Bin

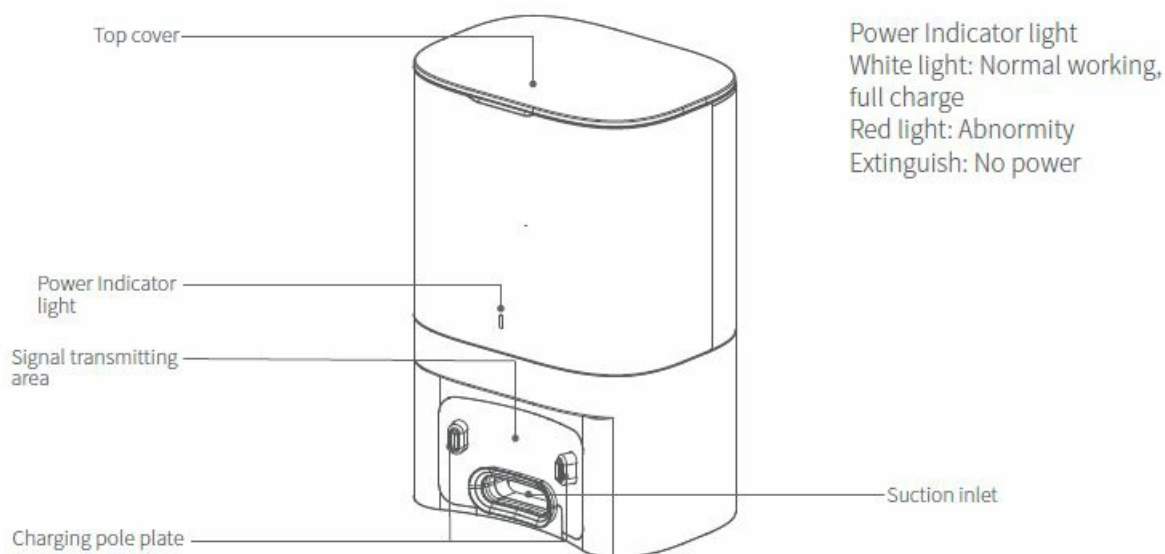

- Top cover: Covers the dust collector bin.
- Power indicator light: Displays the status of the robot's power.
- Signal transmitting area: Sends signals to the robot.
- Charging pole plate: Used to charge the robot.
- Suction inlet: Sucks up dust and debris.

Accessories list

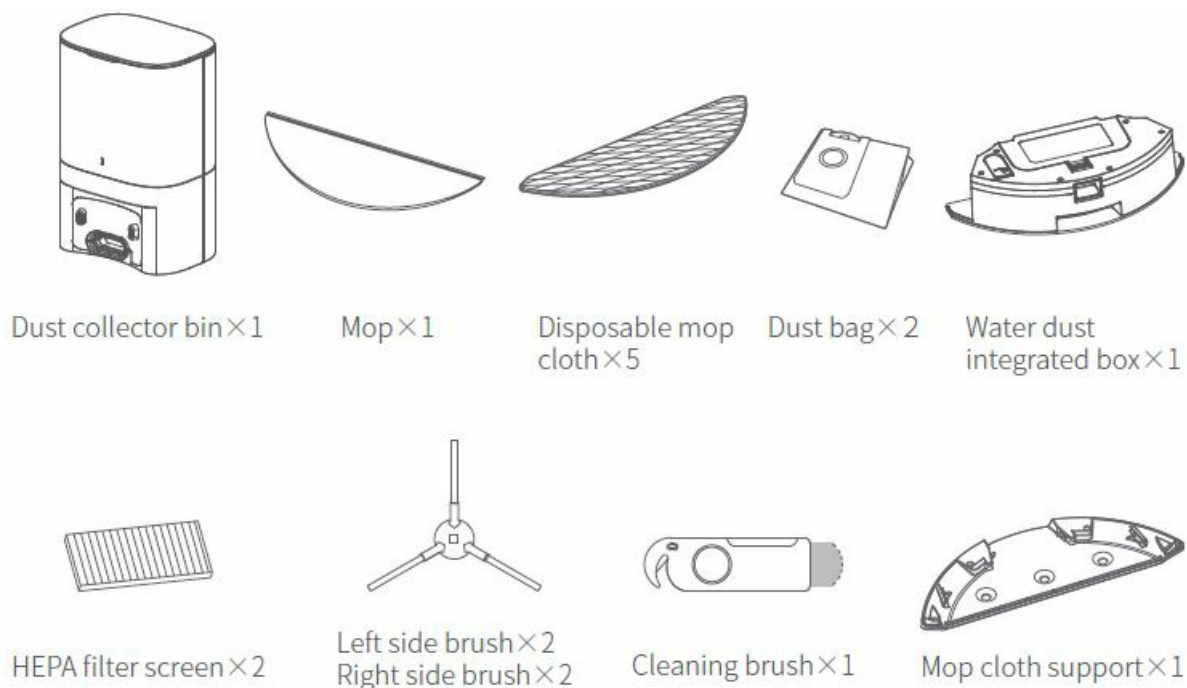

- Side brush

- Dust collection treasure
- Charging cable



Install

Place the dust collection treasure against the wall, and ensure that there are no obstacles within 0.5 meters on both sides and 1.5 meters in front. Please wrap the excess wire around the winding board and plug it in.

Before use, please first put the host on the dust collection treasure to charge, full before use.


Install side brush. Let the left brush (L) and the right brush (R) correspond to the letters L and R on the bottom shell respectively. Press down and hear click to indicate that the installation is in place.

1. Before starting the machine, please clean the scattered wires, hard objects, sharp objects (such as nails and glass) on the ground and remove the toppable, fragile, valuable and potentially dangerous objects. Avoid personal injury or property damage caused by machine entanglement, jamming, dragging or collision.
- 2 If the product is used in the hanging environment, please set the guardrail to prevent the equipment from accidentally falling or pushing items to fall, causing personal or property damage.

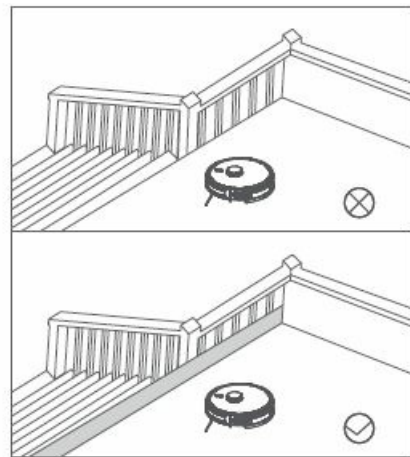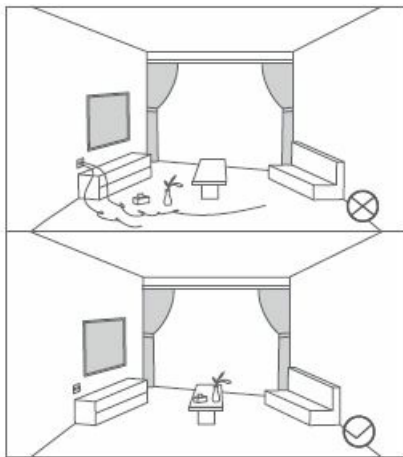


Reminder

1. During the first cleaning process, it is recommended to follow the host throughout the whole process to help deal with some possible minor problems. After handling, the host can smoothly clean itself in the future cleaning.
 2. If some areas do not need to be cleaned or may jam the host, you can set a restricted area in the mobile APP to prevent the host from entering the above areas.
 3. Do not let the robot absorb hard or sharp objects (such as decoration waste, glass, nails, etc.), otherwise it may scratch the robot and the ground.
2. Place the dust collection treasure against the wall, and ensure that there are no obstacles within 0.5 meters on both sides and 1.5 meters in front. Please wrap the excess wire around the winding board and plug it in.

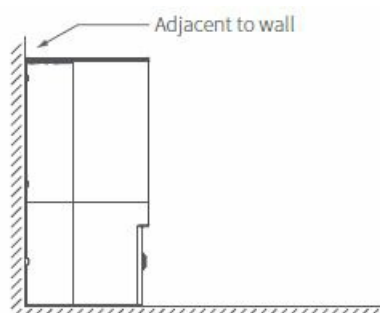


3. Before use, please first put the host on the dust collection treasure to charge, full before use.

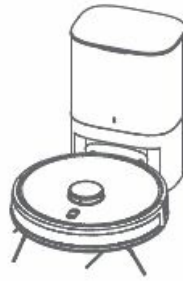


Note:

Sunlight will interfere with the return signal, which may cause the host to fail to return the dust collector bin. Ensure that the dust collector has more than 0.5 meters on both sides, and the power cord of the space more than 1.5 meters in front of the dust collector is hanging down to the ground, which may be dragged by the host to causing the dust collector bin to lose power.

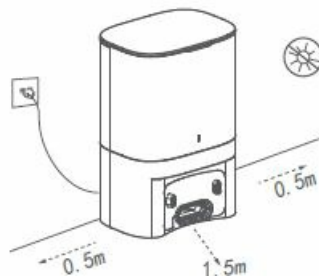


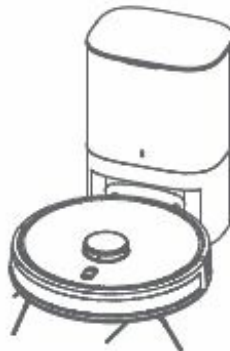
4. Install side brush

Let the left brush (L) and the right brush (R) correspond to the letters L and R on the bottom shell respectively. Press down and hear “click” to indicate that the installation is in place.

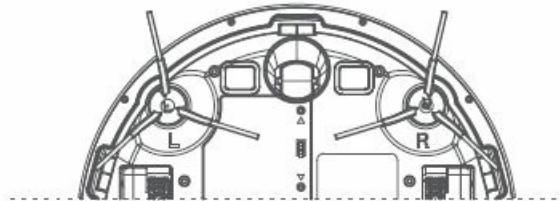

5. Start up and charging



Long press the () button to start up, wait for the indicator light to be steady on, and charge the host with the dust collector. The language prompt “Charging” indicates successful charging.



Note: The device cannot be started due to insufficient power supply. Please place the host on the dust collector and the device will start up automatically.


Direction for Use

Start Up/Off

- Long press () buttons for 3 seconds, indicator lights on, start up successful.
- When the robot is on standby, long press () buttons for 3 seconds, indicator lights off, machine shutdown.

Note: The main host cannot be turned off while charging.


Cleaning/Pause

- After start up, short press () buttons on the main host, or control begin cleaning from mobile APP.
- Automatic mode: After cleaning, the robot will automatically return to the dust collector to charge.
- Manual mode: In the paused state, press the () buttons to start the recharge or the phone APP to start the recharge.

Note:

- Vacuum robot should not be used to clean liquid.
- If the battery is lower than 15%, the cleaning task cannot be performed. Please charge the battery first and then continue the cleaning.
- When the battery is lower than 15% during the cleaning process, the device will automatically return to the dust collector bin for charging.
- Please tidy up all kinds of cables on the ground (including the power cable of dust collection treasure) before cleaning to avoid electrical power failure, damage to articles or cables caused by dragging during cleaning.

Charging

- **Automatic mode:** After cleaning, the master will automatically return to the dust collector to charge.
- **Manual mode:** In the paused state, press the () buttons to start the recharge or the phone APP to start the recharge

Note: If the host does not find the dust collector bin, it will automatically return to the starting position. Please manually put the host back on the dust collector bin to charge.

Automatic Cleaning

After starting up, the robot will first plan the cleaning path in the way of edge and then in the way of arch filling, orderly and efficient cleaning of the whole house. After cleaning, the robot will automatically return to the dust collector bin to charge (the default cleaning mode of the robot).
(the default cleaning mode of the machine).



Suction adjustment

You can choose Quiet, Standard, Strong and MAX by using mobile APP.

Water level adjustment

You can choose High gear, Medium gear and Low gear (The default mode is Medium gear).

Appointment cleaning

The mobile phone APP can be used to set the scheduled cleaning time.

The host will automatically start cleaning at the specified time. The mobile phone APP can be used to set the scheduled cleaning time. The host will automatically start cleaning at the specified time.

Connect APP



The Lydsto Sweeping and Mopping Robot R5 can be controlled using a mobile app. Please follow the instructions in the app to connect to your robot.

Lydsto APP can be downloaded from Apple APP market or Google APP market.

Or Scan the following QR code, Download and install Lydsto APP.



Reset WIFI

At the same time, long press () and () for 3 seconds, and the voice prompt “WIFI has been reset” is heard. The blue lights of the power button and recharge button flash, and the robot enters the waiting state for connection. After the connection is completed, the blue lights of the power button and recharge button are steady on.



Tip: Only WIFI networks in the 2.4GHz band are support.

The product has been connected to MIJIA. It can be controlled by MIJIA APP and interconnected with other products. Scan the QR code, download and install MIJIA APP. Users with MIJIA APP already installed will directly enter device connection page. Or search "MIJIA" in APP store, download and install MIJIA APP. Open the home page of MIJIA APP, click "+" at the top right, and add the device according to the method recommended by the APP.

Note: The actual operation may be slightly different from the description above due to the upgrade and update of MIJIA APP. Please follow the current guide in MIJIA APP.



Reset WIFI


When turned on, press and hold the () and () simultaneously for 3 seconds. You will hear a voice prompt 'WiFi has been reset', and the 'power light' and 'recharge light' will flash blue. At this time, do not let go, continue to press and hold for 2 seconds. You will hear a voice prompt 'Enter Mijia distribution mode', and the device will enter Mijia distribution mode. You can use the Mijia APP for distribution operations.

Daily Maintenance


- Empty the dust collector bin after each use.
- Clean the robot's brushes and suction inlet regularly.
- Charge the robot when the power is low.

Main brush (recommended cleaning once a week)


1. Turn the machine over and press the buckle on the main brush cover to take out the cover

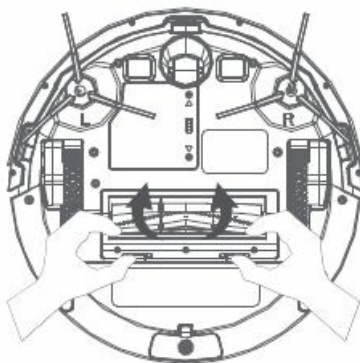

2. Remove the main brush

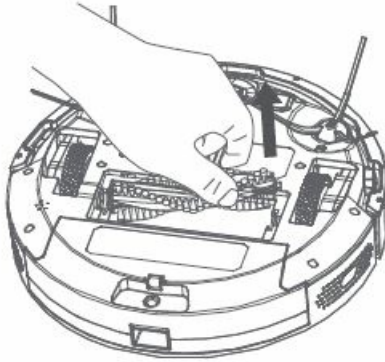


3. Use a matching cleaning brush to remove dust from the main brush and the main brush cavity, and then remove entanglements from the main brush

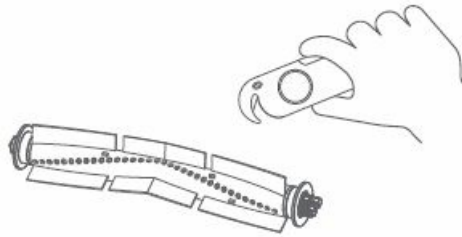

Side brush (recommended cleaning once a week)

1. Turn the machine over and pull out the edge brush vertically.
2. Remove tangled hair and dirt and reinstall it.
3. The left side brush (L) and the right side brush (R) correspond to the letters L and R on the bottom shell, and press down to reinstall them.

Note: It is recommended to replace the side brush every 3 months to ensure the cleaning effect.

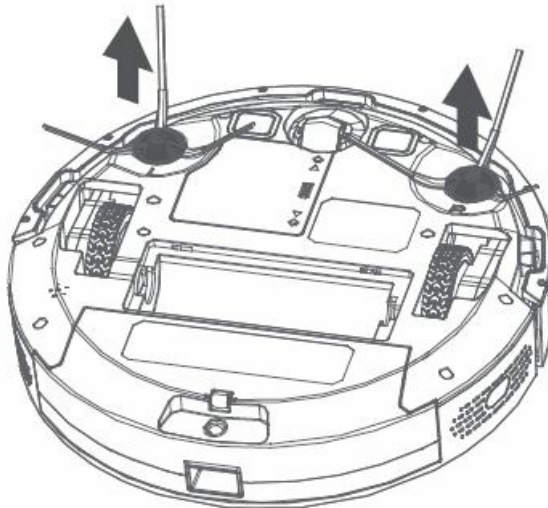

Dust box and filter screen

(recommended to be cleaned after each cleaning)

1. Press the button at the back of the machine and take out the dust box



2. Press and hold the dust box switch to open the dust box and dump the garbage.



Clean the dust box

(recommended cleaning once a week)

1. After a long time of use, remove the filter mesh, HEPA filter.
2. Remove the primary effect filter and put the dust box under the faucet to wash (HEPA filter can not be washed).
3. After cleaning, dry the water, air filter and dust box, until thoroughly dry can be used




Note:

- Please wash, do not add any detergent.
- Do not use brush, fingers clean strainer.
- Mesh to dry for at least 24 hours, thoroughly dry.
- It is recommended to replace one set of filters every 3 months.


Use of water tank

Do not use the mop function on the carpet. After the mop is completed, please empty the water tank and remove the rag in time.


Add water

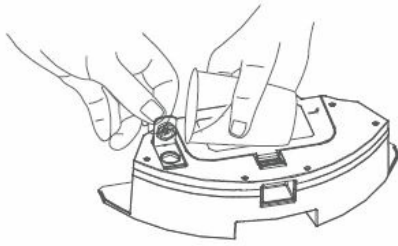

Installing the water tank Assembly

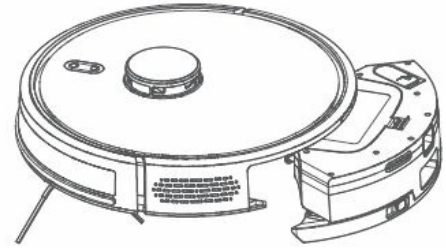




Installing mop

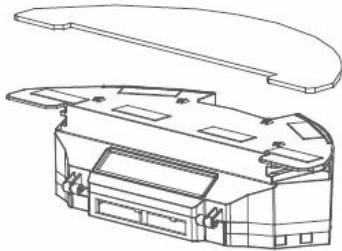

Start mopping



- Clean the laser detection sensor (once a month is recommended)
- Clean the charging contact of the host (once a month is recommended)
- Clean cliff sensor (monthly cleaning is recommended)
- Clean the dust collector signal transmitting area and charging contact (once a month is recommended)

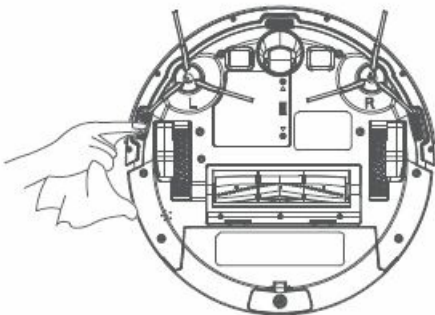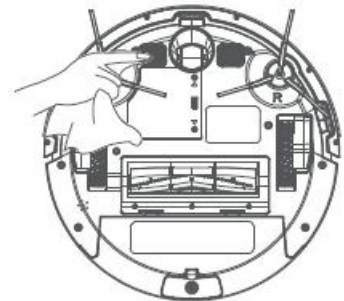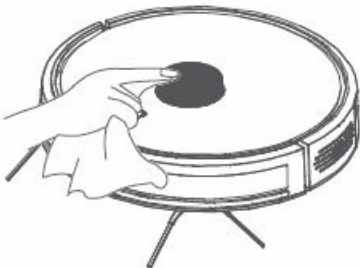


Dust bag replacement:

When the device indicates that the dust bag is full, replace the dust bag in time. Dust bags for wear and tear, can


be purchased in the official designated channels.

1. Open the top cover
2. Lift up the dust bag
3. Throw the dust bag into the trash can
4. Install a new dust bag
5. Cover the bucket

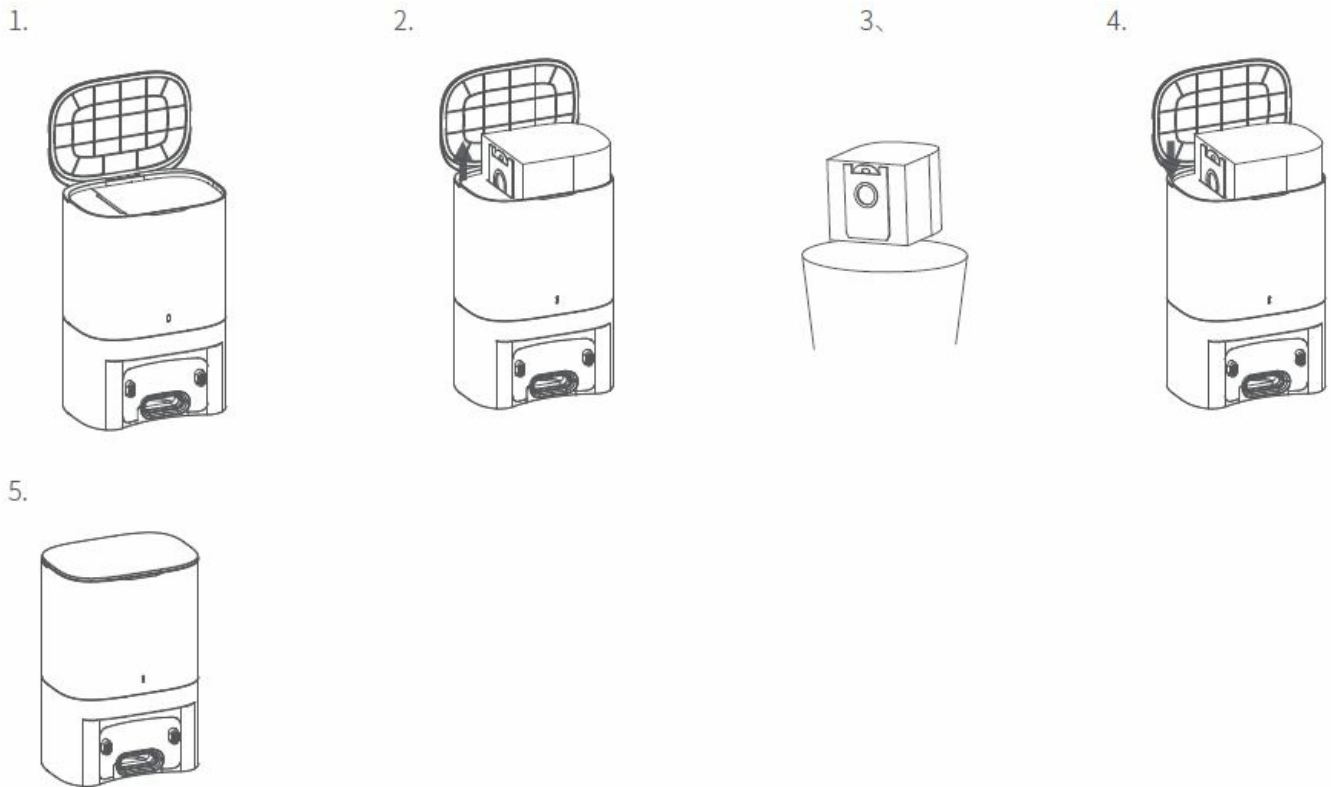


Clean the dust collector dust path and filter port

If the dust collecting treasure has poor dust collecting effect after replacing the dust bag, it is recommended to unplug the power plug and reverse the device to check whether the dust channel is blocked by foreign matter. Please use a screwdriver to remove the transparent cover of the dust passage and clean out foreign bodies. Take out the dust bag to check whether there are foreign bodies at the filter port and clean the filter port.

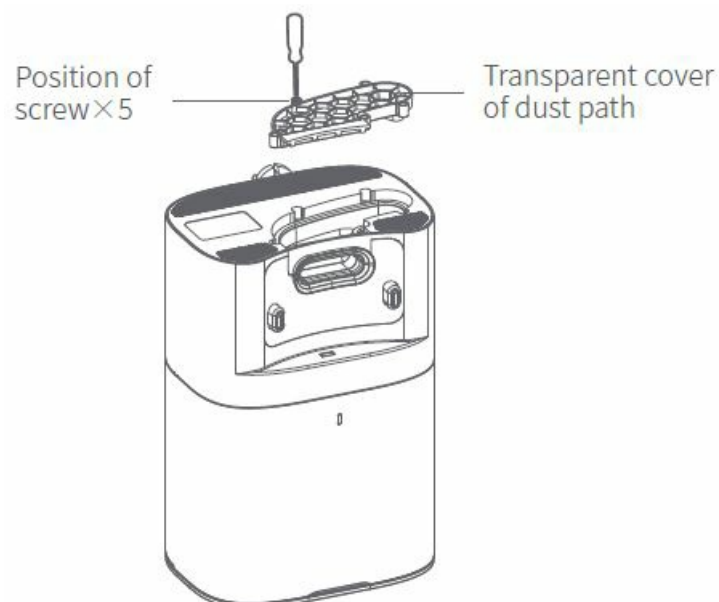

Firmware updates

Enter the firmware upgrade function through the mobile APP. After detecting the new firmware, guide the firmware upgrade according to the prompts. The firmware upgrade requires power $\geq 20\%$, it is recommended to upgrade the device on the dust collector.

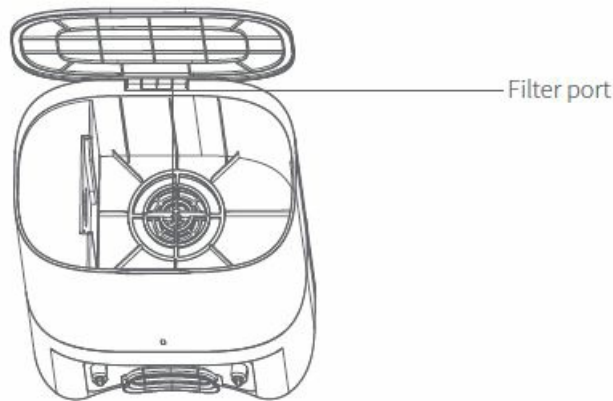

Battery Maintenance

1. The device has a built-in rechargeable lithium battery-pack. In order to maintain the battery performance, please keep the host in the charging state during daily use to ensure the best performance of the battery without excessive power loss.
2. Please fully charge when you not used for a long time: ensure that the machine is turned off before storage.
3. Charge the battery at least once every 3 months to avoid damage caused by overdischarge.
4. The power adapter must be used for charging.
5. Lithium battery with use with charge, full use.

Basic Specification

- Battery capacity: 2600mAh
- Charging time: 4-5 hours
- Cleaning time: 100-120 minutes
- Size: 320mm x 320mm x 79mm
- Weight: 2.7kg

Host

	Specification
Product model	YM-R5-B031 YM-R5-W031
Shape size	320X320X93mm
Battery	4S1P 2600mAh lithium battery
Rated voltage	14.4V
Rated power	45W
Charging time	5H
Dust bag capacity	3L

Dust collector bin

	Specification
Shape size	336*227*165mm
Rated input	110-120V~/220-240V~
Rated output	19V 0.6A
Power	900W

FAQ

Q: How do I know when the robot needs to be charged?

A: The power indicator light will turn red when the power is low.

Q: How often do I need to clean the robot?

A: It is recommended to clean the robot after each use.

Type of Problem	The Solution
The machine freezes/ cannot be turned on	<p>If the battery is low, place the device on the dust collector, align it with the contact point, and the device will start up automatically.</p> <p>If the ambient temperature is lower than 0 ° C, use it in an environment ranging from 0 ° C to 40 ° C.</p> <p>Please check whether the power plug of the device is properly connected and confirm that the power supply of the socket is normal.</p>
Failure to charge	<p>Bad contact, please clean the dirt on the charging contact point, or unplug the edge brush.</p> <p>The equipment is too far away from the dust collector, please put the host near the dust collector.</p>
Failure to recharge	Shut down and restart.
Abnormal behavior Abnormal noise/dust	The main brush, side brush or wheel may have foreign body entanglement, please stop the machine after cleaning.
collection when cleaning	Dust box is full, please clean the dust box.
or The cleaning ability is reduced or ash is dropped	<p>Filter screen is blocked, please clean or replace.</p> <p>The main brush is entangled with foreign matter, please clean the main brush.</p>
Unable to connect to WIFI	<p>WIFI signal is not good, please ensure that the device is in good WIFI(2.4G band, 5G is not supported) signal coverage in the region.</p> <p>Please reset WIFI and download the latest mobile APP to try to connect again. Check if you entered the wrong password.</p>
Scheduled cleaning does not take effect	If the power is insufficient, the cleaning appointment will be started only when the remaining power is $\geq 15\%$. When the machine starts on the charging station, the remaining power should be $\geq 30\%$.

Trouble Removal

If you experience any issues with your Lydsto Sweeping and Mopping Robot R5, please refer to the troubleshooting guide in this manual.

Prompt tone	The Solution
Please reinstall the 2-in-1 tank and start again	Cleaning will be triggered when the water tank is removed. Please reinstall the tank.
Please start the device on the level ground	The device is suspended in the air, please move the device to a flat
Please restart away from the restricted area	Please move the machine to a non-restricted area before starting up.
Please place the machine flat on the ground	Tilt the machine, move the machine to a level ground before starting.
If the location fails, re-create the diagram	If map data is lost, plan the path again
The machine is trapped	Please move the main engine to open ground and restart.
Please check the main wheel	Main wheel is stuck or entangled. Please check the main wheel and clean the foreign matter.
Please check the main brush	Main brush stuck or wrapped, please check the main brush and clean the foreign matter.
Please check the edge brush	If the edge brush is stuck or wrapped, please check the edge brush and clean the foreign matter.
If the device is suspended in the air, please return to the ground	The device is suspended in the air, please move the device to a flat
Please check the crash barrier	If the collision sensor is stuck, please clean and maintain it.

Safety Information

- Do not place the robot in water or other liquids.
- Do not use the robot on stairs or uneven surfaces.
- Keep the robot away from children and pets.

Restrictions on use

- Plastic bags are dangerous! Keep plastic bags out of the reach of infants and children to avoid suffocation.
- This product is designed only for cleaning the floor in the home environment. Do not use it outdoors (such as open balcony), in places other than the floor (such as sofa), or in commercial or industrial environment.
- Do not use the product in hanging places (such as duplex floor, open balcony, top of home) without any protective rail.
- Do not use the product in the environment above 40 °C, below 0 °C or with any liquid and viscous substances on the ground
- Before use, please hang up the ground cable at home to avoid dragging the cable when the machine is operating.
- Put away the fragile articles and sundries (such as flower bottles and plastic bags) on the ground to prevent the machine from being blocked or hit during operation, causing damage to valuables.
- Do not let those who are physically, perceptually and intellectually deficient or lacking of experience and

common sense (including children) use the product without monitoring or guidance.

- Do not let children use the product as a toy.
- Do not put the main brush cleaning tool in a place accessible to children.
- Keep the hair, fingers and other parts of men or pets away from the suction inlet of the machine when the machine is operating. Do not use the product to clean any burning objects (such as cigarette ends that are not extinguished).
- Do not absorb hard or sharp objects (such as decoration wastes, glass and nails) with the machine.
- Do not handle the machine with the protective cover of the laser distance measuring sensor, the upper cover of the machine and the collision buffer as the lifting hand.
- To clean and maintain the machine and the dust collection charging pile, you must turn off the machine, pull out the plug from the socket and disconnect the power supply first.
- Do not immerse the machine and the dust collection charging pile in water for cleaning or flush them with water.
- Do not wipe any part of the product with a damp cloth or any liquid.
- Do not use the floor mopping module on the carpet.
- Do not use it under direct sunlight.
- Use the product according to the instructions. Any loss and injury caused by improper use shall be borne by the user.

Battery and charging

- Even if the product has been seriously damaged, it is strictly forbidden to burn the product, because the product battery may cause explosion.
- Do not use the batteries, chargers and dust collection charging piles of any third party.
- Do not disassemble, repair or refit the battery and dust collection charging pile without permission.
- Do not place the dust collection charging pile close to heat sources (such as radiator).
- Do not wipe or clean the dome of the dust collection charging pile with a damp cloth or wet hands.
- Do not discard used batteries at will. Before discarding the sweeping and mopping robot, the power supply must be disconnected and the batteries should be taken out of the sweeping and mopping robot for environmental protection.
- In order to avoid danger, any damaged power cord must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
- If you need to transport the product, make sure that the machine is turned off and it is recommended to use the original package.
- Do not pour water into the device or immerse it in water.
- If it will be not used for a long time, fully charge the machine, turn it off and put in a cool and dry place. Charge the machine at least once every three months to avoid battery damage due to over discharge.

Warn

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.

- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance contains batteries that are only replaceable by skilled persons.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.


FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in fixed/mobile min20cm exposure condition without restriction.

Manufacturer: Guangdong Yimu Technology Co., Ltd. Website: www.lydsto.com

Address: Room 703 ,Building 4,No.636,Changdong Road,Changping Town,Dongguan, Guangdong,China

Documents / Resources

	<p>Lydsto R5 Sweeping and Mopping Robot [pdf] Instruction Manual 2AX8T-LYDSTO008, 2AX8TLYDSTO008, lydsto008, R5, R5 Sweeping and Mopping Robot, Sweeping and Mopping Robot, Mopping Robot, Robot</p>
---	--

References

- [L Lydsto | Born for cleanliness | Robot Vacuum & Robotic Pool Cleaner](#)