



Lyngsoe Systems XREADER WiFi and Bluetooth Module User Manual


[Home](#) » [Lyngsoe Systems](#) » Lyngsoe Systems XREADER WiFi and Bluetooth Module User Manual 

Contents

- [1 Lyngsoe Systems XREADER WiFi and Bluetooth Module](#)
- [2 Discription](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



Lyngsoe Systems XREADER WiFi and Bluetooth Module

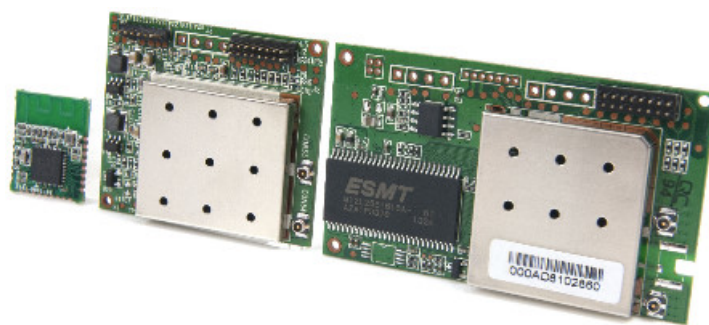

Discription

The Lyngsoe Systems Wi-Fi module bearing the FCC ID: PQG-XREADER, IC: 4113A-XREADER was evaluated for co-location with one or two other modular approved radios at a time as per the following eight options (configurations):

	Lyngsoe	Impinj	Jadak	Quectel	Telit
	Wi-Fi	RFID	RFID	LTE cell	LTE cell
FCC ID:	PQG-XREADER	TWYIPJREV	QV5MERCURY6E-M	XMR201906EG21G	RI7LE910CXNF
IC:	4113A-XREADER	6324A-IPJREV	5407A-MERCURY6EM	10224A-201906EG21G	5131A-LE910CXNF
Option 1	X	X		X	
Option 2	X	X			X
Option 3	X	X			
Option 4	X		X	X	
Option 5	X		X		X
Option 6	X		X		
Option 7	X			X	
Option 8	X				X

The calculations were done for a minimum distance of 55 cm for North America and of 36 cm for European Union. This module complies with FCC/ISED RF radiation exposure limits set forth for an uncontrolled environment. These co-located modules shown in the table above must be installed and operated with a minimum distance between the radiators (antennas) and users bodies of 55 cm for North America or 36 cm for the European Union.

Lyngsoe Systems Ltd.

101 Simona Dr, Unit 2,
Bolton, L7E 4E8, Ontario, Canada

Tel. +1-647-956-0170 info@lyngsoesystems.com www.lyngsoesystems.com

Documents / Resources

	Lyngsoe Systems XREADER WiFi and Bluetooth Module [pdf] User Manual XREADER, PQG-XREADER, PQGXREADER, XREADER WiFi and Bluetooth Module, WiFi and Bluetooth Module, Bluetooth Module
---	---