

RA-LYNX-RCVR Programming Receiver



RA-LYNX-RCVR Programming Receiver Instructions


[Home](#) » [LYNX](#) » RA-LYNX-RCVR Programming Receiver Instructions 

Contents

- [1 RA-LYNX-RCVR Programming Receiver](#)
- [2 Programming Instructions](#)
- [3 Connections](#)
- [4 Connecting Door Operator](#)
- [5 Programming Transmitters](#)
- [6 Erasing Codes](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

LYNX

RA-LYNX-RCVR Programming Receiver

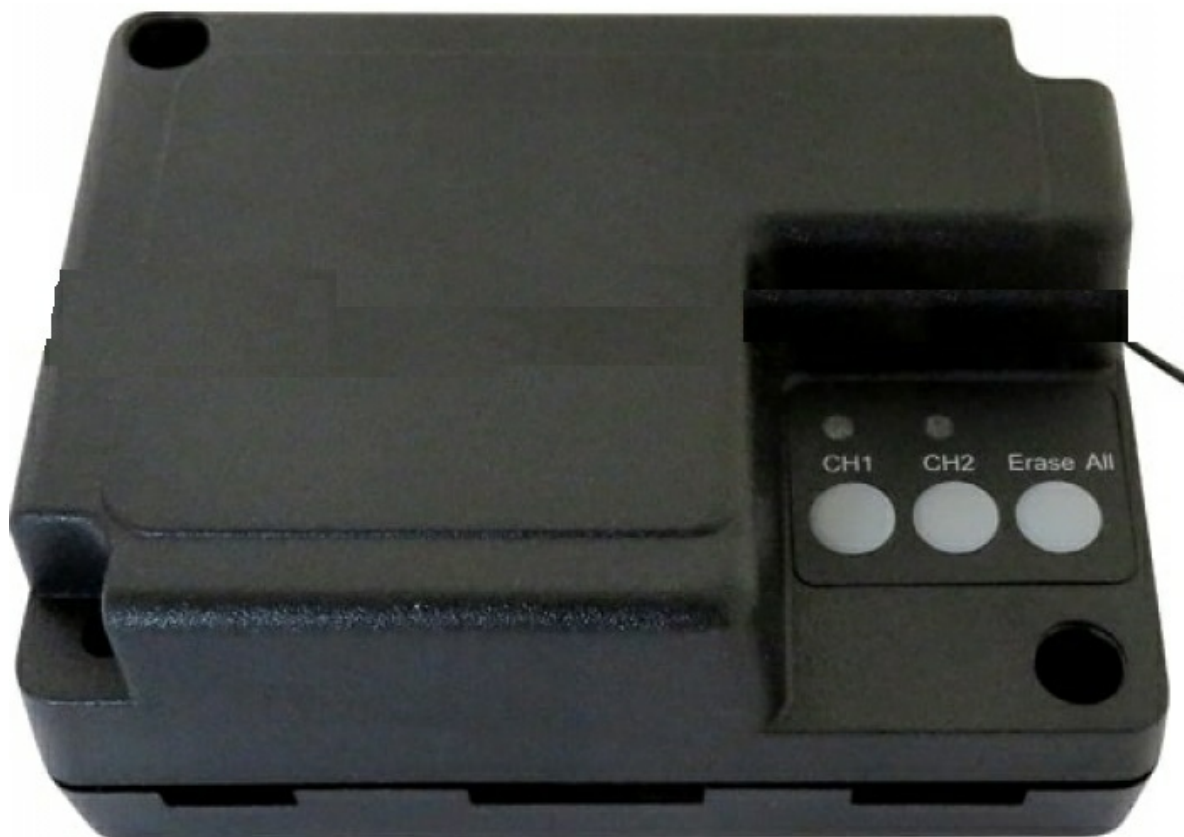

Programming Instructions

Connections

Connecting Power

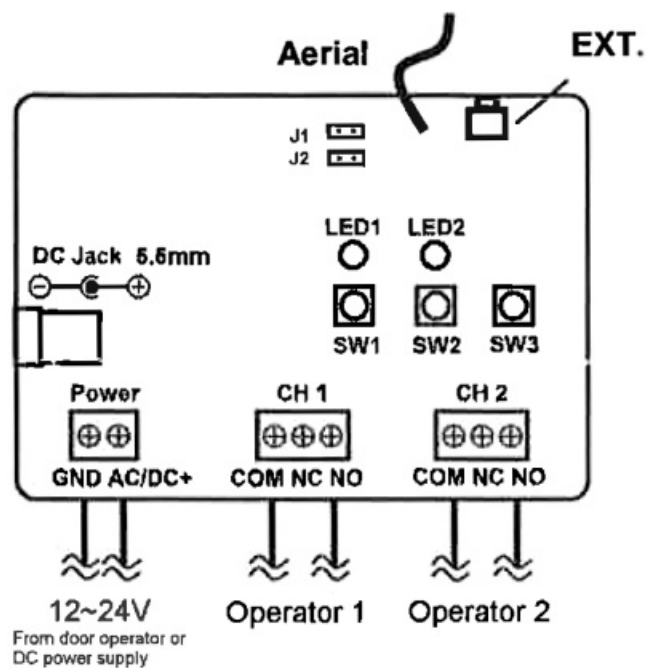


Fig. 1
Connections



To set RX5 in 2-CH mode, ensure jumper J3 is open as shown in Table 1. (LED is not unused in 2-CH mode). AC/DC 12~24V power can either be connected,,: from the door operator to the Power connector, or the DC power supply to the DC Jack.

Note: ONLY ONE power source can be applied. NEVER connect power to both power inputs. Upon power connection, both LEDs will flash once.

Connecting Door Operator

Connecting Door Operator(s) in 2-CH Mode

Table 1
Jumper Selection

| Jumper / Control Mode |  Open |  Short |
|----------------------------------|--|---|
| J1 (CH 1) | Pulse | Latch |
| J2 (CH 2) | Pulse | Latch |

There are 2 channels (CH 1 & CH 2) for controlling up to 2 door operators. Each channel can be connected to function as Push Button for one door operator.

Use a pair of bell wire to connect "COM" and "NO" on one channel to the 2-pin Push Button connector on a door operator. (Refer to Table 1 for adjusting control mode if necessary.)

Programming Transmitters

Adding a Code

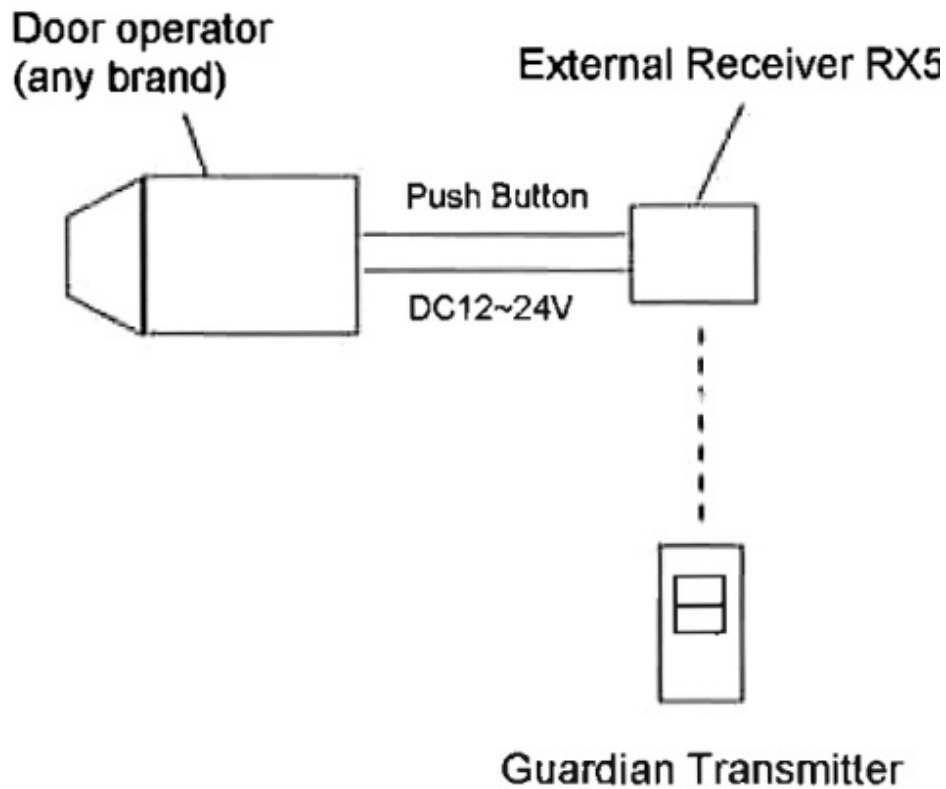


Fig. 2
Using RX5

To program a transmitter, press the switch corresponding to the desired channel (e.g. SW1 for Channel 1).

The corresponding LED will glow for 30, press a button on the transmitter or enter a code on a keypad. When code is programmed the LED will go off.

Upon activation from a programmed transmitter, the corresponding LED for the channel will flash twice. Up to 20 codes can be programmed into a channel.

Erasing Codes

To erase ALL codes for a single channel, press and hold the switch (e.g. SW1 for Channel 1) for 5 seconds until the corresponding LED flashes 7 times.

To erase ALL codes for ALL channels, press and hold SW3 for 5 seconds until the both LEDs flash 7 times.

For more information, please visit www.devancocanada.com
or call toll-free at 855-931-3334

RA-LYNX-RCVR

Programming Instructions

1. Description

1.1. Introduction

1.2. Features

1.3. Applications

1.4. Block Diagram

1.5. Pin Configuration

1.6. Power Supply

1.7. Signal Connections

1.8. Test Equipment

1.9. Safety

1.10. Notes

2. Programming Instructions

2.1. General

2.2. Initialization

2.3. Data Transfer

2.4. Error Handling

2.5. Termination

3. Appendix

3.1. Glossary

3.2. Index


3.3. Revision History

3.4. Contact Information

LYNX RA-LYNX-RCVR Programming Receiver [pdf] Instructions

RA-LYNX-RCVR, RA-LYNX-RCVR Programming Receiver, Programming Receiver, Receiver

References

-  [Devanco Canada](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.