

Quick start guide

1. Instructions for Buttons

1.1 Power On

Press and hold the power button for approximately 12 seconds, and the bottom LED light strip will appear in blue.

1.2 Power Off

Press and hold the power button for approximately 12 seconds till the screen goes off, indicating that the robot is successfully powered off.

1.3 Pause

Tap on the screen to pause the working robot. Tap again to resume operation.

1.4 Emergency Stop

In case of an emergency, press the emergency stop switch to stop a working robot. Rotate the emergency stop switch clockwise, and resume the operation according to the screen tips.

Caution: Before starting an automatic cleaning task, make sure the robot is powered on and placed below or in front of the visual marker (depending on the position of the marker) for successful positioning at the startup location.

2. Instructions for Handle

When you need to push the robot, raise the handle. When the robot is idle or working automatically, lower the handle.



When you need to interact with the screen, there are two options: you can either open the screen protector and directly interact with the screen, or detach the screen from the robot and operate it either by holding it in your hands or by attaching it to the handle.



* The robot handle and the screen are designed to be detachable.