

420mm

封面 (84mm)

封面 (74.25mm)

297mm




### A4 portable printer Quick Start Guide Phomemo

Before using this product, please read this manual carefully.

Package Contents / 用品一覧 / Packliste				
1	2	3	4	5
Printer	Data Cable	Travel Bag	Quick Start Guide	Ink Ribbon
プリンター	データケーブル	旅行バック	Quick Start Guide	インクリボン
Impresora	Cable de datos	Bolsa de viaje	Guía de inicio rápido	Cinta de tinta

Printer Components / 機能の説明 / Gerätebeschreibung				
1	2	3	4	5
Power Button	Power-Button	Power-Taste	Power-Button	Power-Taste
電源ボタン	電源ボタン	電源ボタン	電源ボタン	電源ボタン

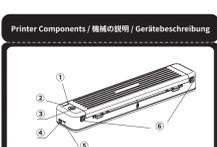

English	日本語	Deutsch
Indicator Light (Status)	操作指示ランプ	Steuerungslampe
Indicator Light (Connection)	接続指示ランプ	Verbindungsleuchte
Power Button	電源ボタン	Power-Taste
Power Port	充電ポート	Ladungsanschluss
Reset Button	リセットボタン	Resettaste
Open Cover Button	カバー開閉ボタン	Deckelöffnungstaste

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	LED (Green)
Finished Printing	LED (Green)
On/Off Button	LED (Green)
Normal	LED (Green)
No Paper (Ink Ribbon) / Paper Not Detected	LED (Red)
Install Paper (Ink Ribbon)	LED (Green)
Paper Compartment Opened	LED (Green)
Paper Compartment Closed	LED (Green)
Print Head is overheat	LED (Red)

05. Precautions	
1	Please use → DC 5V input for charging.
2	Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable when charging, to prevent excess force from damaging the port.
3	After the charging is completed, please unplug the charging cable in time. In order to avoid charges, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near the open flame, etc.
4	Improper charging may cause damage to the print head.
5	Do not touch the print head to prevent scalding caused by overheating.
6	The tearing blade is sharp, please be careful to avoid touching it by mistake.
7	If the machine is malfunctioning, insert the reset hole to restart the machine.

06. Battery warning instructions	
1	It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire. If severe swelling occurs, please do not reuse it.
2	Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water.
3	There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions.
4	If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or power adapter with CCC certification.

07. Install App	
1	Download the App
2	How to download and install driver
3	Connect the printer to the App

08. Function of the Taste	
Drucker einschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht leuchtet.
QR-Code drucken	Doppelklicken Sie auf die Power-Taste, um den QR-Code zu drucken. Bitte stellen Sie sicher, dass die App für den Android App installiert ist, um eine Verbindung zum Gerät herzustellen.
Drucker ausschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht erloscht.

09. After-sales Service	
1	Warranty description
2	FCC Warning
3	IC Warning
4	Warranty Card

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	LED (Green)
Finished Printing	LED (Green)
On/Off Button	LED (Green)
Normal	LED (Green)
No Paper (Ink Ribbon) / Paper Not Detected	LED (Red)
Install Paper (Ink Ribbon)	LED (Green)
Paper Compartment Opened	LED (Green)
Paper Compartment Closed	LED (Green)
Print Head is overheat	LED (Red)

05. Precautions	
1	Please use → DC 5V input for charging.
2	Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable when charging, to prevent excess force from damaging the port.
3	After the charging is completed, please unplug the charging cable in time. In order to avoid charges, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near the open flame, etc.
4	Improper charging may cause damage to the print head.
5	Do not touch the print head to prevent scalding caused by overheating.
6	The tearing blade is sharp, please be careful to avoid touching it by mistake.
7	If the machine is malfunctioning, insert the reset hole to restart the machine.

06. Battery warning instructions	
1	It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire. If severe swelling occurs, please do not reuse it.
2	Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water.
3	There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions.
4	If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or power adapter with CCC certification.

07. Install App	
1	Download the App
2	How to download and install driver
3	Connect the printer to the App

08. Function of the Taste	
Drucker einschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht leuchtet.
QR-Code drucken	Doppelklicken Sie auf die Power-Taste, um den QR-Code zu drucken. Bitte stellen Sie sicher, dass die App für den Android App installiert ist, um eine Verbindung zum Gerät herzustellen.
Drucker ausschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht erloscht.

09. After-sales Service	
1	Warranty description
2	FCC Warning
3	IC Warning
4	Warranty Card

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	LED (Green)
Finished Printing	LED (Green)
On/Off Button	LED (Green)
Normal	LED (Green)
No Paper (Ink Ribbon) / Paper Not Detected	LED (Red)
Install Paper (Ink Ribbon)	LED (Green)
Paper Compartment Opened	LED (Green)
Paper Compartment Closed	LED (Green)
Print Head is overheat	LED (Red)

05. Precautions	
1	Please use → DC 5V input for charging.
2	Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable when charging, to prevent excess force from damaging the port.
3	After the charging is completed, please unplug the charging cable in time. In order to avoid charges, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near the open flame, etc.
4	Improper charging may cause damage to the print head.
5	Do not touch the print head to prevent scalding caused by overheating.
6	The tearing blade is sharp, please be careful to avoid touching it by mistake.
7	If the machine is malfunctioning, insert the reset hole to restart the machine.

06. Battery warning instructions	
1	It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire. If severe swelling occurs, please do not reuse it.
2	Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water.
3	There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions.
4	If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or power adapter with CCC certification.

07. Install App	
1	Download the App
2	How to download and install driver
3	Connect the printer to the App

08. Function of the Taste	
Drucker einschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht leuchtet.
QR-Code drucken	Doppelklicken Sie auf die Power-Taste, um den QR-Code zu drucken. Bitte stellen Sie sicher, dass die App für den Android App installiert ist, um eine Verbindung zum Gerät herzustellen.
Drucker ausschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht erloscht.

09. After-sales Service	
1	Warranty description
2	FCC Warning
3	IC Warning
4	Warranty Card

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	LED (Green)
Finished Printing	LED (Green)
On/Off Button	LED (Green)
Normal	LED (Green)
No Paper (Ink Ribbon) / Paper Not Detected	LED (Red)
Install Paper (Ink Ribbon)	LED (Green)
Paper Compartment Opened	LED (Green)
Paper Compartment Closed	LED (Green)
Print Head is overheat	LED (Red)

05. Precautions	
1	Please use → DC 5V input for charging.
2	Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable when charging, to prevent excess force from damaging the port.
3	After the charging is completed, please unplug the charging cable in time. In order to avoid charges, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near the open flame, etc.
4	Improper charging may cause damage to the print head.
5	Do not touch the print head to prevent scalding caused by overheating.
6	The tearing blade is sharp, please be careful to avoid touching it by mistake.
7	If the machine is malfunctioning, insert the reset hole to restart the machine.

06. Battery warning instructions	
1	It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire. If severe swelling occurs, please do not reuse it.
2	Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water.
3	There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions.
4	If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or power adapter with CCC certification.

07. Install App	
1	Download the App
2	How to download and install driver
3	Connect the printer to the App

08. Function of the Taste	
Drucker einschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht leuchtet.
QR-Code drucken	Doppelklicken Sie auf die Power-Taste, um den QR-Code zu drucken. Bitte stellen Sie sicher, dass die App für den Android App installiert ist, um eine Verbindung zum Gerät herzustellen.
Drucker ausschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht erloscht.

09. After-sales Service	
1	Warranty description
2	FCC Warning
3	IC Warning
4	Warranty Card

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	LED (Green)
Finished Printing	LED (Green)
On/Off Button	LED (Green)
Normal	LED (Green)
No Paper (Ink Ribbon) / Paper Not Detected	LED (Red)
Install Paper (Ink Ribbon)	LED (Green)
Paper Compartment Opened	LED (Green)
Paper Compartment Closed	LED (Green)
Print Head is overheat	LED (Red)

05. Precautions	
1	Please use → DC 5V input for charging.
2	Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable when charging, to prevent excess force from damaging the port.
3	After the charging is completed, please unplug the charging cable in time. In order to avoid charges, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near the open flame, etc.
4	Improper charging may cause damage to the print head.
5	Do not touch the print head to prevent scalding caused by overheating.
6	The tearing blade is sharp, please be careful to avoid touching it by mistake.
7	If the machine is malfunctioning, insert the reset hole to restart the machine.

06. Battery warning instructions	
1	It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire. If severe swelling occurs, please do not reuse it.
2	Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water.
3	There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions.
4	If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or power adapter with CCC certification.

07. Install App	
1	Download the App
2	How to download and install driver
3	Connect the printer to the App

08. Function of the Taste	
Drucker einschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht leuchtet.
QR-Code drucken	Doppelklicken Sie auf die Power-Taste, um den QR-Code zu drucken. Bitte stellen Sie sicher, dass die App für den Android App installiert ist, um eine Verbindung zum Gerät herzustellen.
Drucker ausschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht erloscht.

09. After-sales Service	
1	Warranty description
2	FCC Warning
3	IC Warning
4	Warranty Card

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	LED (Green)
Finished Printing	LED (Green)
On/Off Button	LED (Green)
Normal	LED (Green)
No Paper (Ink Ribbon) / Paper Not Detected	LED (Red)
Install Paper (Ink Ribbon)	LED (Green)
Paper Compartment Opened	LED (Green)
Paper Compartment Closed	LED (Green)
Print Head is overheat	LED (Red)

05. Precautions	
1	Please use → DC 5V input for charging.
2	Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable when charging, to prevent excess force from damaging the port.
3	After the charging is completed, please unplug the charging cable in time. In order to avoid charges, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near the open flame, etc.
4	Improper charging may cause damage to the print head.
5	Do not touch the print head to prevent scalding caused by overheating.
6	The tearing blade is sharp, please be careful to avoid touching it by mistake.
7	If the machine is malfunctioning, insert the reset hole to restart the machine.

06. Battery warning instructions	
1	It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire. If severe swelling occurs, please do not reuse it.
2	Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water.
3	There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions.
4	If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or power adapter with CCC certification.

07. Install App	
1	Download the App
2	How to download and install driver
3	Connect the printer to the App

08. Function of the Taste	
Drucker einschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht leuchtet.
QR-Code drucken	Doppelklicken Sie auf die Power-Taste, um den QR-Code zu drucken. Bitte stellen Sie sicher, dass die App für den Android App installiert ist, um eine Verbindung zum Gerät herzustellen.
Drucker ausschalten	Halten Sie diese Taste 3 Sekunden lang gedrückt, bis das Power-Licht erloscht.

09. After-sales Service	
1	Warranty description
2	FCC Warning
3	IC Warning
4	Warranty Card

03. Button Function	
Power Button Function	Press and hold the button for around 3 seconds until the indicator light turns on. Double press the button to print QR code. Press the button on the phone using the App to print QR code and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the indicator light turns off.

04. Indicator Light	
Normal	LED (Green)
Low Power	Blink Slowly (Red)
No Power Automatic Shutdown	Blink Quickly (Red)→Off
Charging	Blink Slowly (Green)
Full Charge	LED (Green)
Printing Normally	