



Original	Replacement
 Power	 Power
 Phono/AUX	 Display / Media
 Mode	 Picture / Format
 Live S	 Zoom / Size
 Active Bass Extension	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide / EPG / -/--
 Program	 TV/Radio /

Original	Replacement
 Tuner	 Smart / List
 Cancel	 Exit / Cancel / Clear
 Play CD	 Play / Slow
 Phono/AUX	 AV / Input / RDS
 Stop CD	 Stop / Hold
 >>I CD	 >>I / Preset+
 I<< CD	 I<< / Preset-
 Volume+	 Vol+
 Volume-	 Vol-
 Fade Muting	 Mute / Dimmer
 > Deck A	 Right
 < Deck A	 Left
 >> Deck A	 CH+ / Page+
 << Deck A	 CH- / Page-
 Stop Deck A	 OK
 > Deck B	 Shift + Right
 < Deck B	 Shift + Left



