





720 Humidifier Wiring Instructions for Various Applications

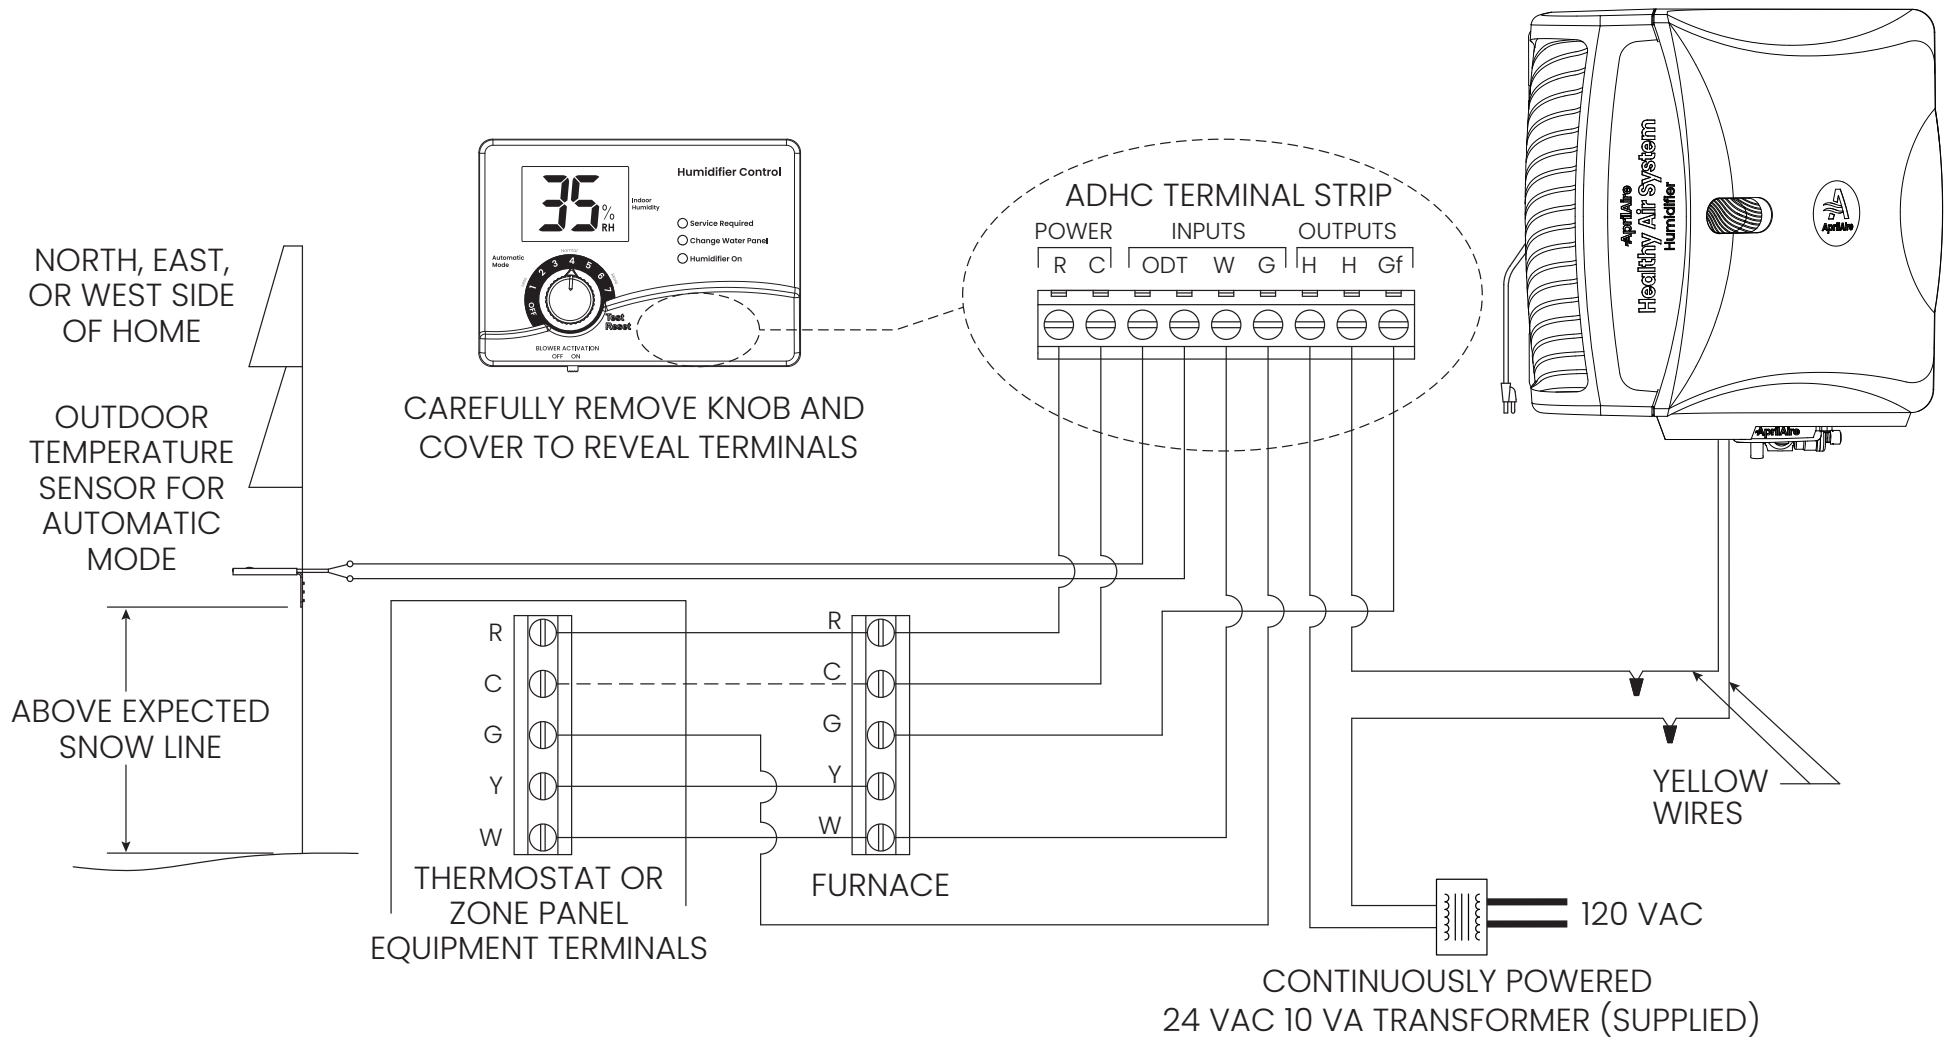


Model 60 Standard Wiring




Model 4655 Wired to HUM Terminal

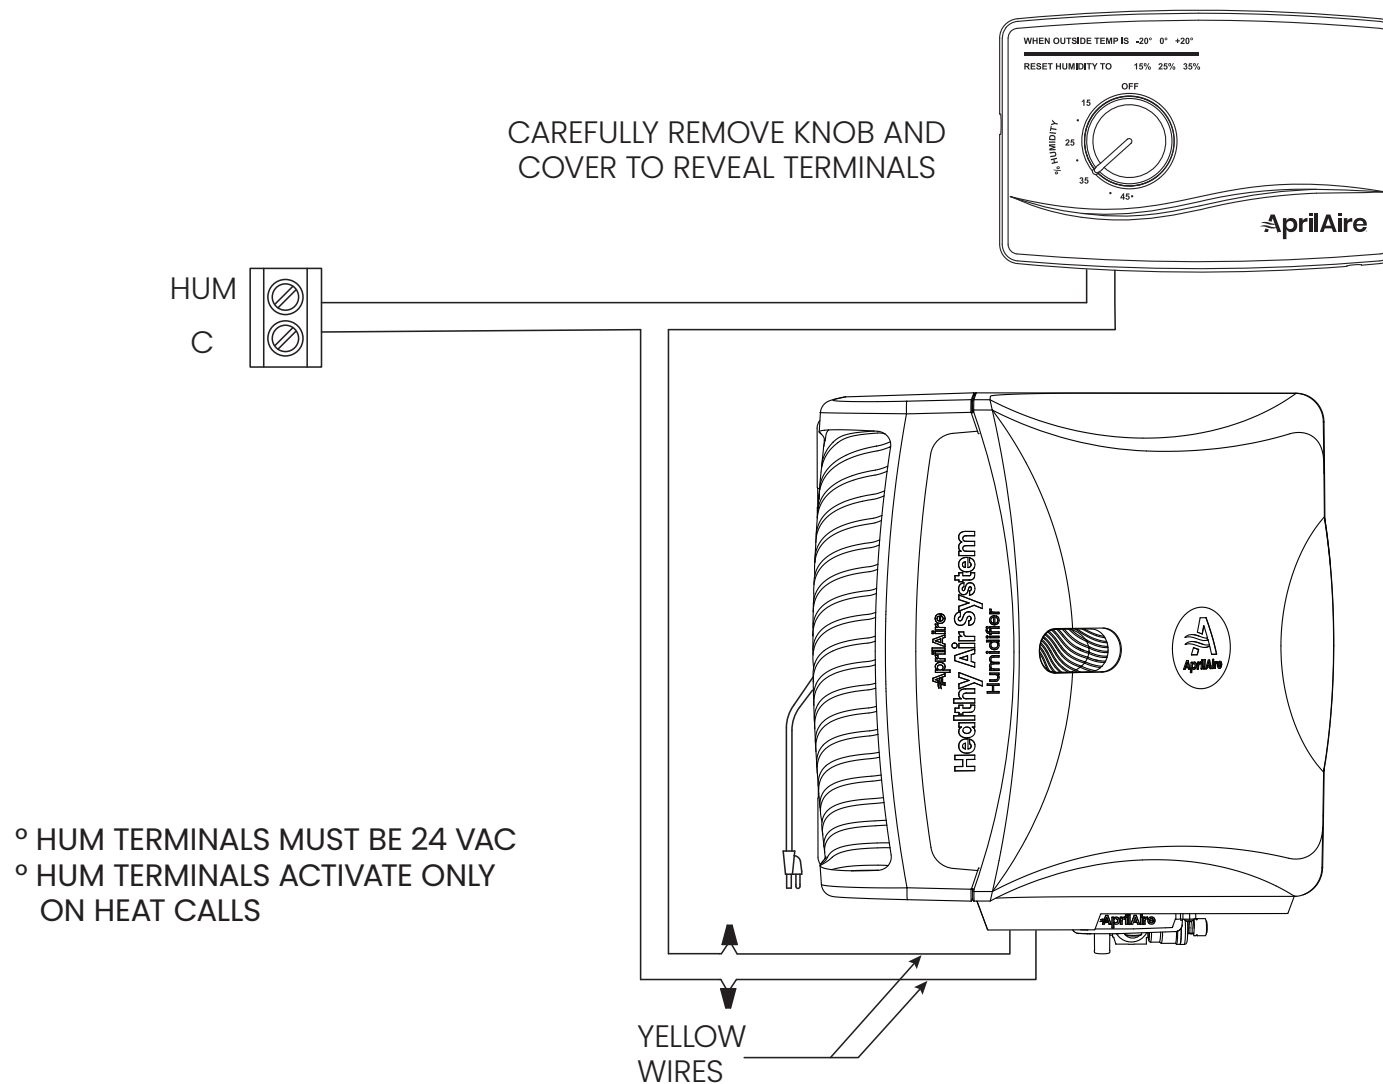

Model 4655 Wired to EAC Using Included Transformer

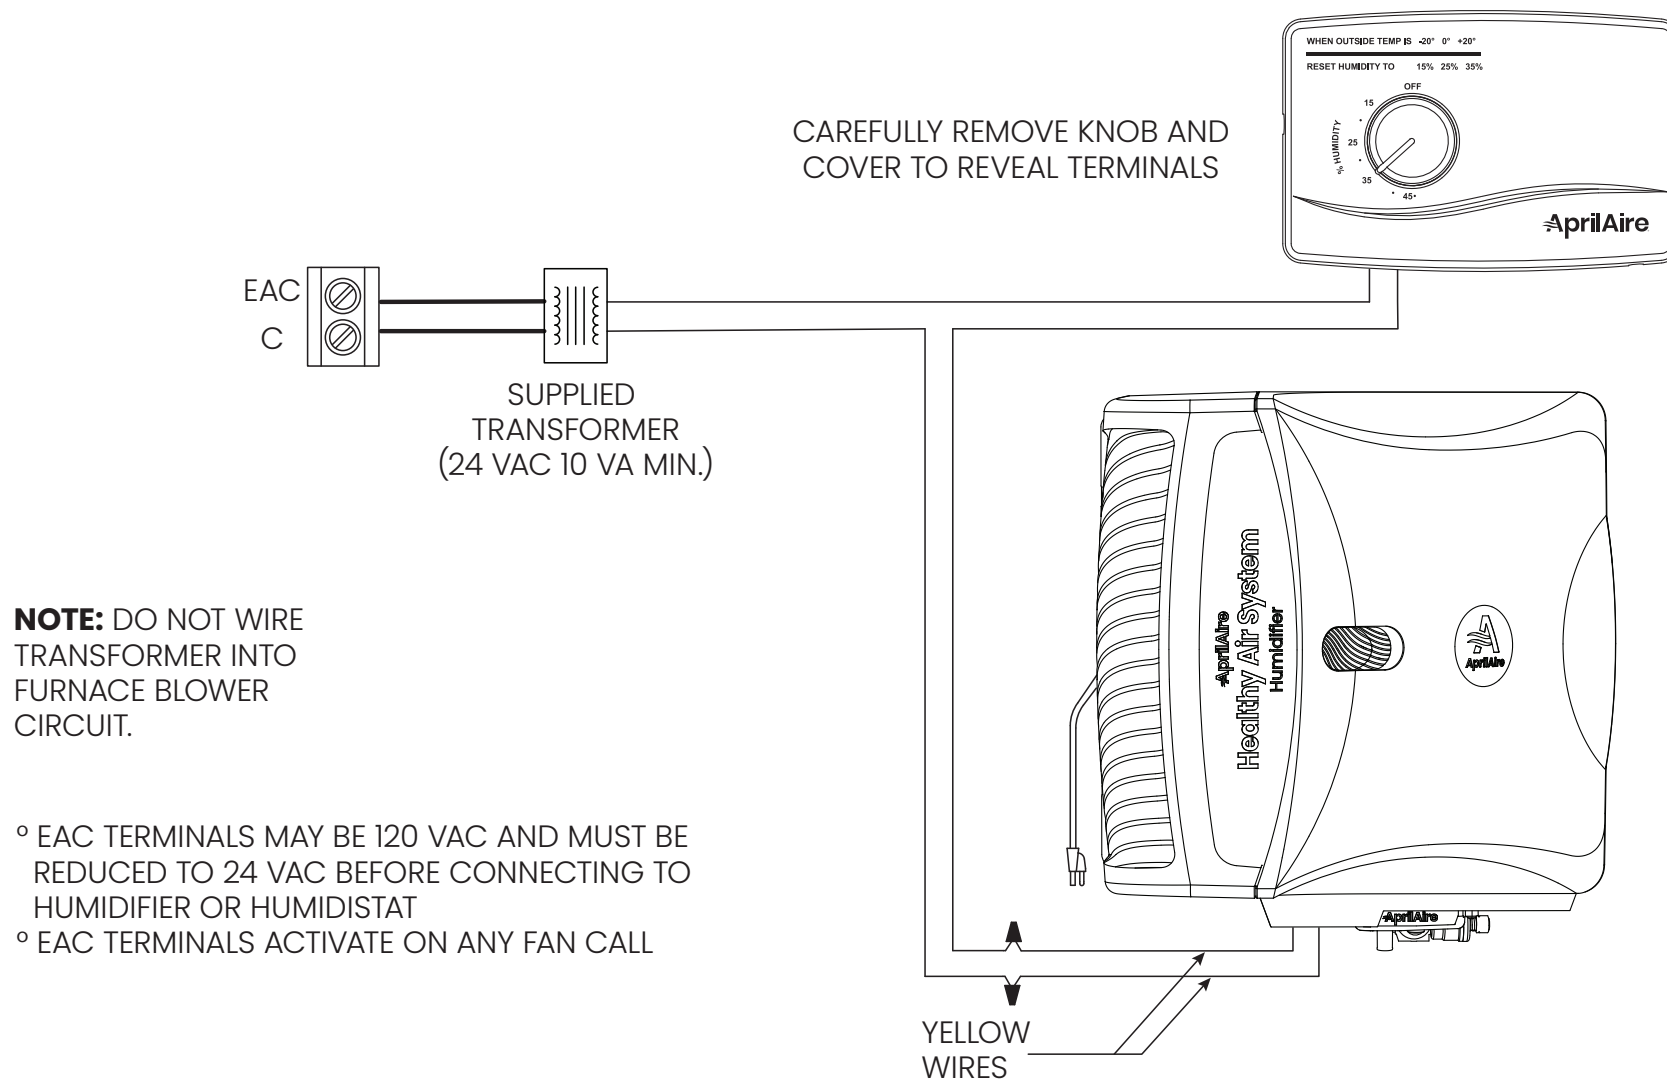


Model 4655 with Current Sensing Relay

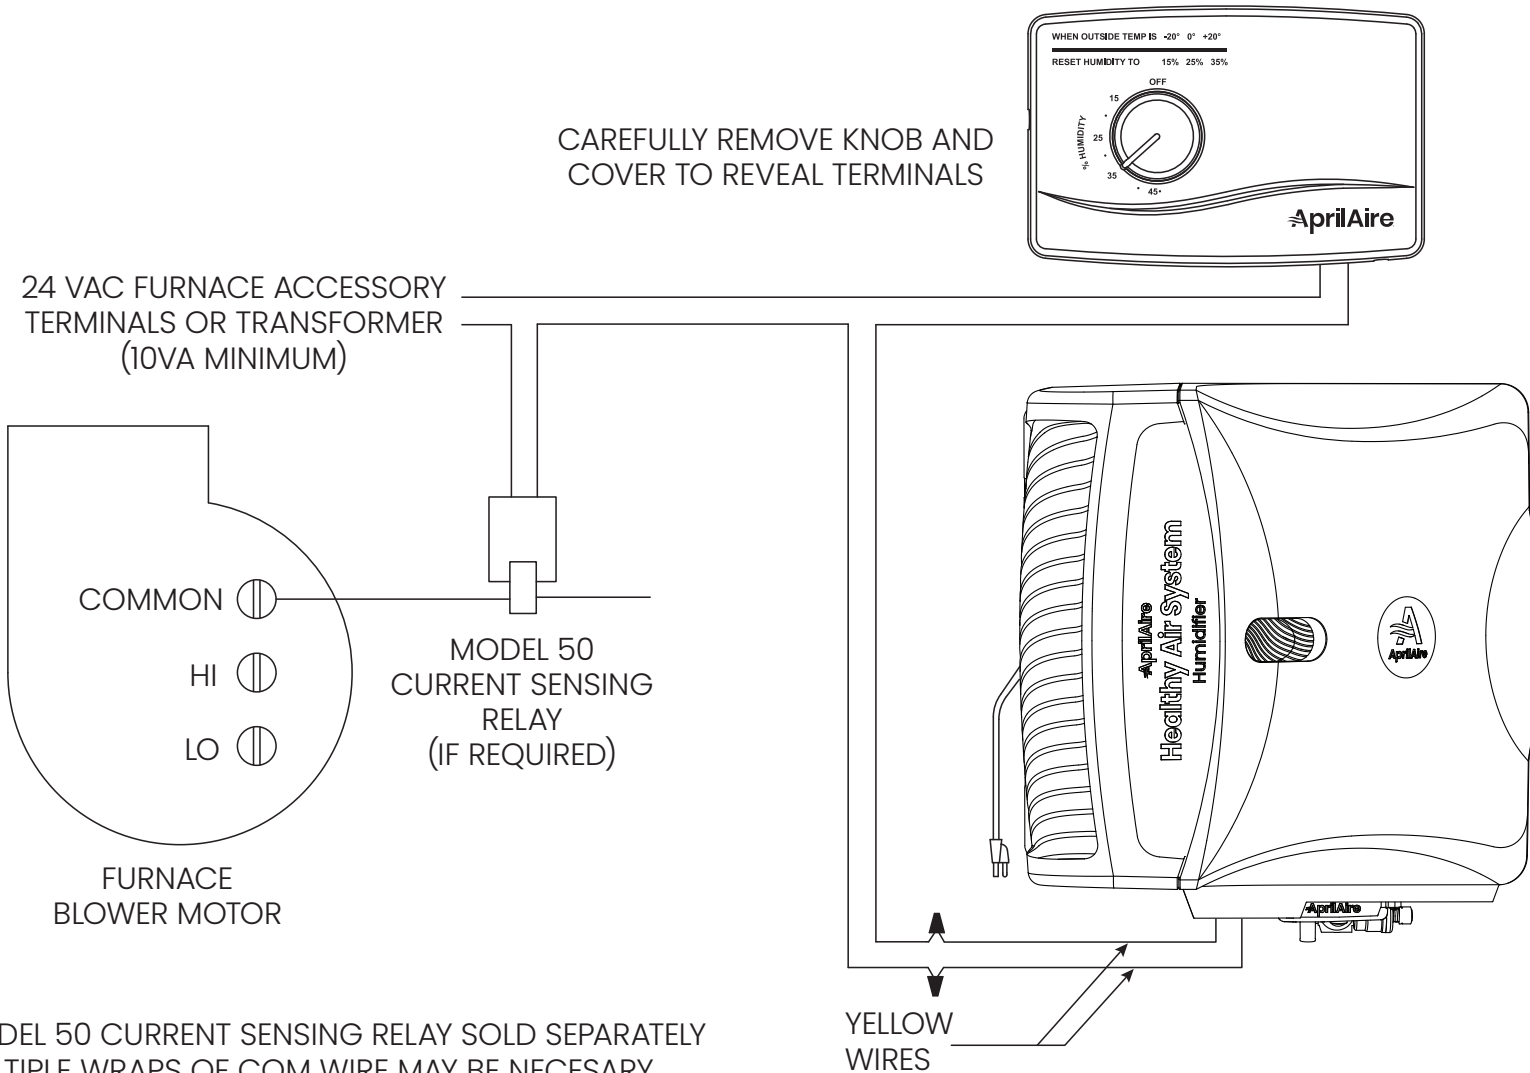

- ° MODEL 50 CURRENT SENSING RELAY SOLD SEPARATELY
- ° MULTIPLE WRAPS OF COM WIRE MAY BE NECESSARY TO TRIGGER MODEL 50

Model 4655 with Blower Activation Relay

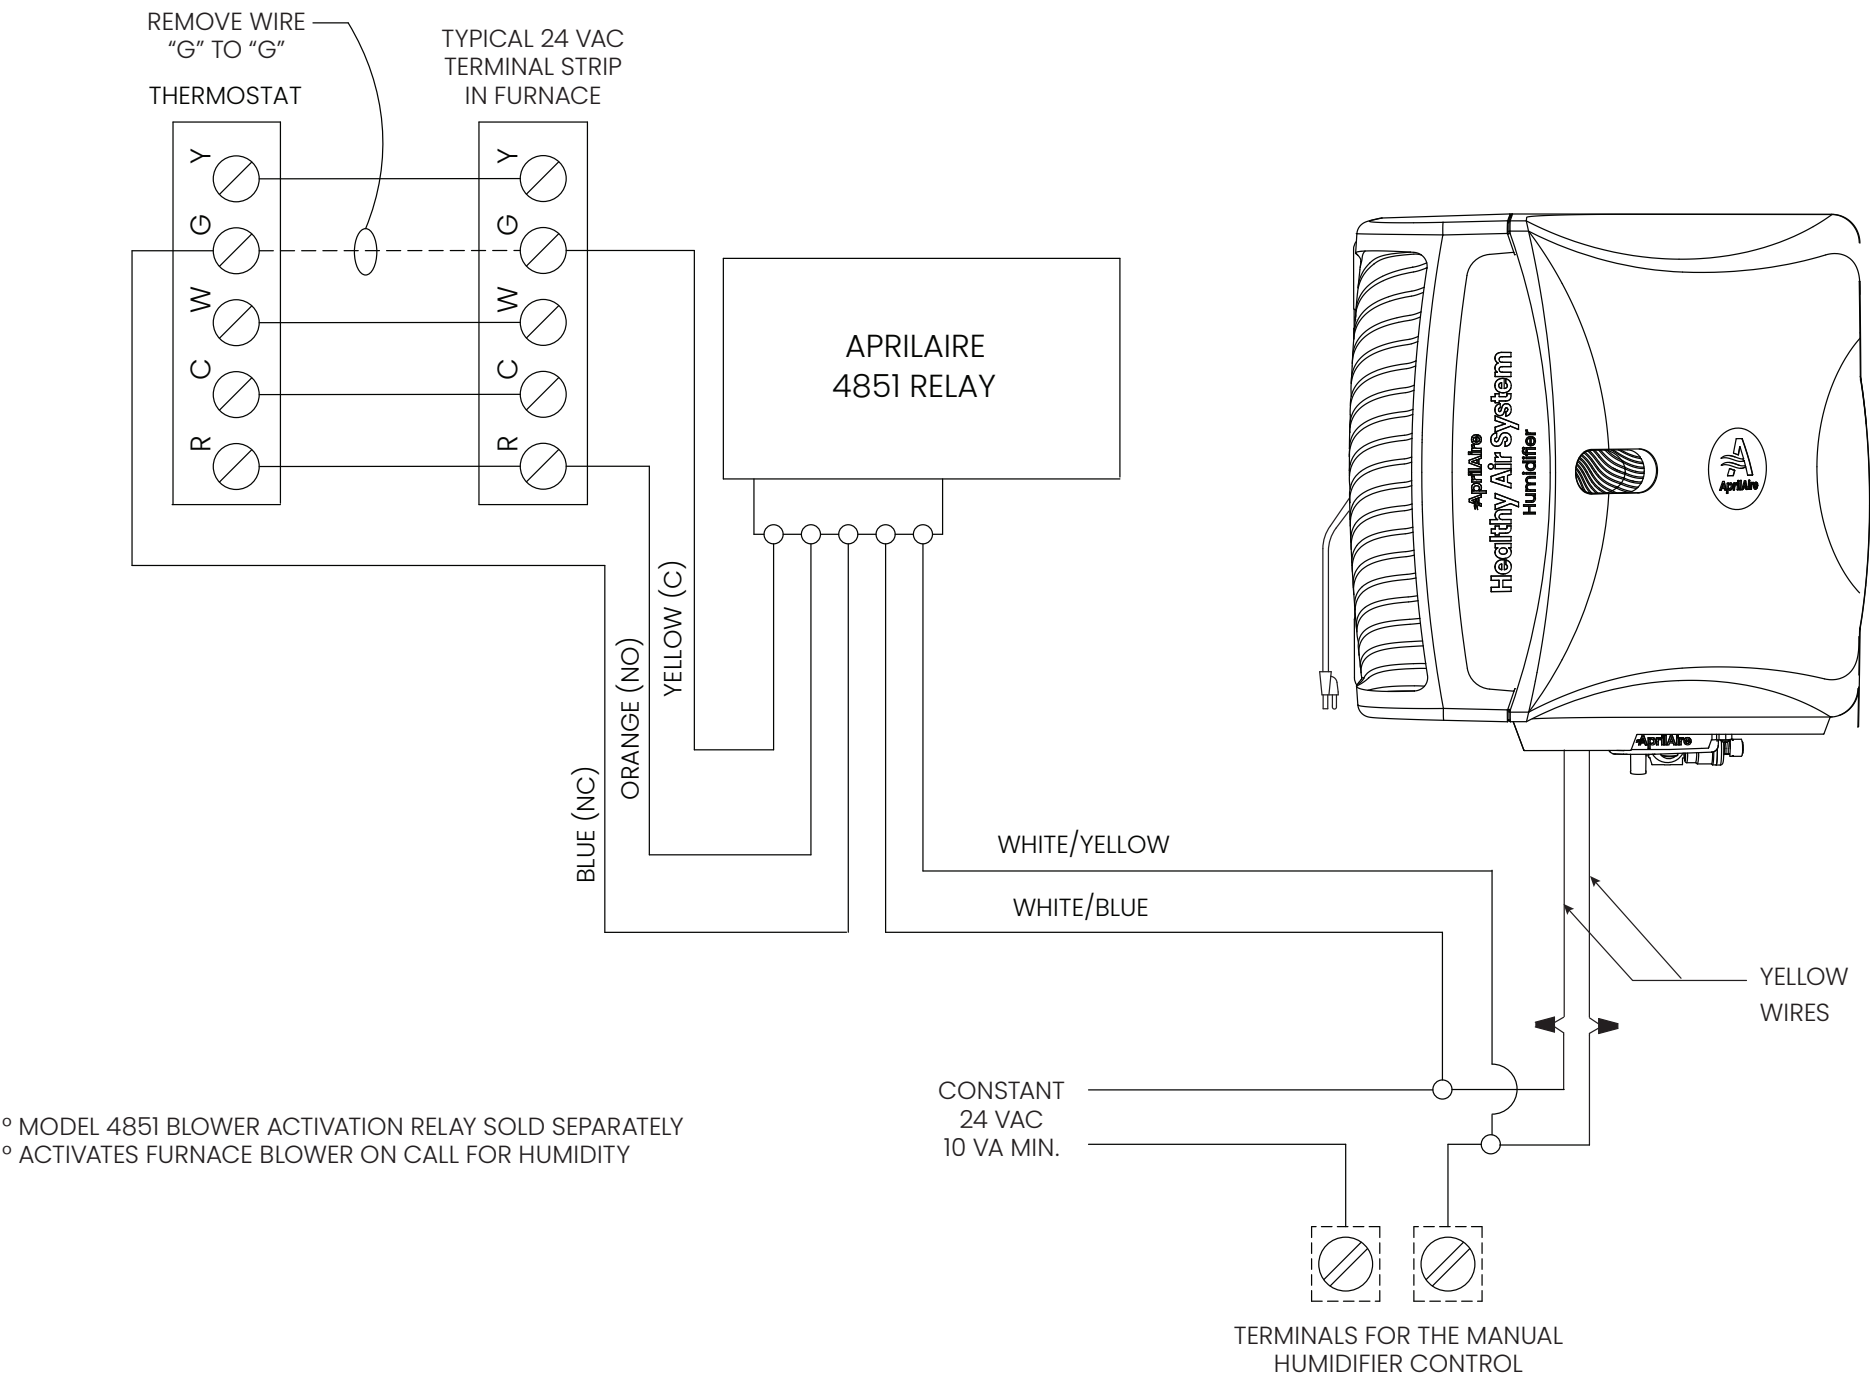

- ° MODEL 4851 BLOWER ACTIVATION RELAY SOLD SEPARATELY
- ° ACTIVATES FURNACE BLOWER ON CALL FOR HUMIDITY

Model 4655 with Air Flow Proving Switch

