## D-Link AQUILA PRO AI Router Configuration for Starlink

Please note that for Gen 2 Starlink systems, an Ethernet Adapter is required to connect another router. The adapter is available at Starlink Shop.

When connecting to another router, it is recommended to set your Starlink router to "Bypass Mode". Please enable Bypass Mode in the Starlink app before connecting the D-Link router.

To disable Bypass Mode, perform a factory reset on your Starlink router.

D-Link router access: https://192.168.200.1

The factory-assigned login password is printed on the label on the back of the router.

Go to Settings > Internet. Select "Dynamic IP (DHCP)".

Under Advanced Settings set MTU to 1492. Save.





If the Starlink app says "Starlink unreachable", please add a static route in your D-Link router:

Go to Features > Static Routes and click on "Add Route".

Destination Network: 192.168.100.0

Mask: 255.255.255.0

Gateway: 192.168.100.1

Metric: 1

Interface: WAN

