

## AX86R

### Package Contents



AX86R Handset



Charging Cradle



(5V/2A)

Power Adapter



Battery Cover




Rechargeable Battery



Belt Clip

OR

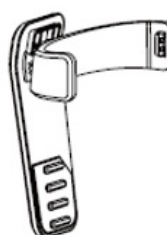

Quick Start Guide

#### TIP

We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.

### Assemble AX86R


1. Insert the battery into the handset.




2. Attach the belt clip to the handset.

*Choose the appropriate mounting method based on your belt clip.*


**Method 1:**

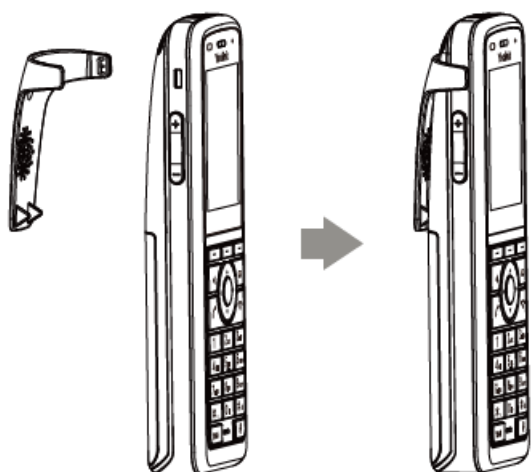

**Method 2:**

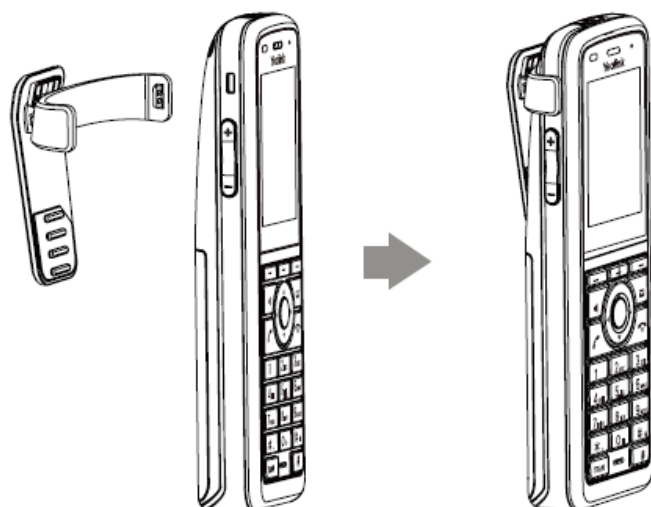


3. (Optional) Mount the charging cradle to the wall.

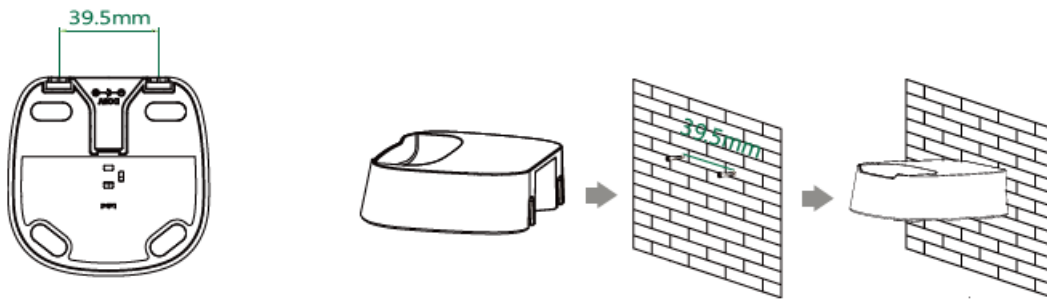


## Charging

- Option 1: Connect the charging cradle and charge the handset.

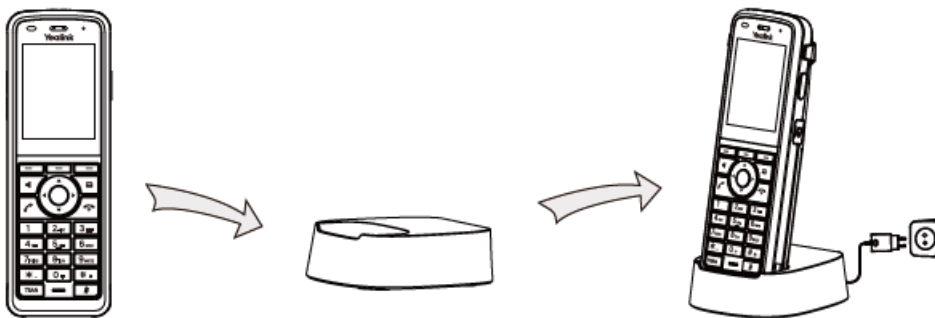


- Option 2: Connect the type-C end of the charging cable to the charging port on the bottom of the AX86R. Plug the other end into a power source.

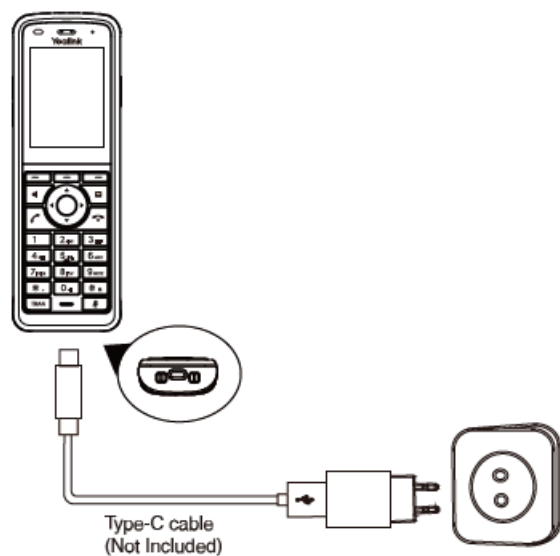**TIP**

- Use Yealink-supplied power adapter (5 V/2 A). A third-party power adapter may damage the handset.
- Check the charging status on the top-right corner of the LCD screen.

## Hardware Introduction

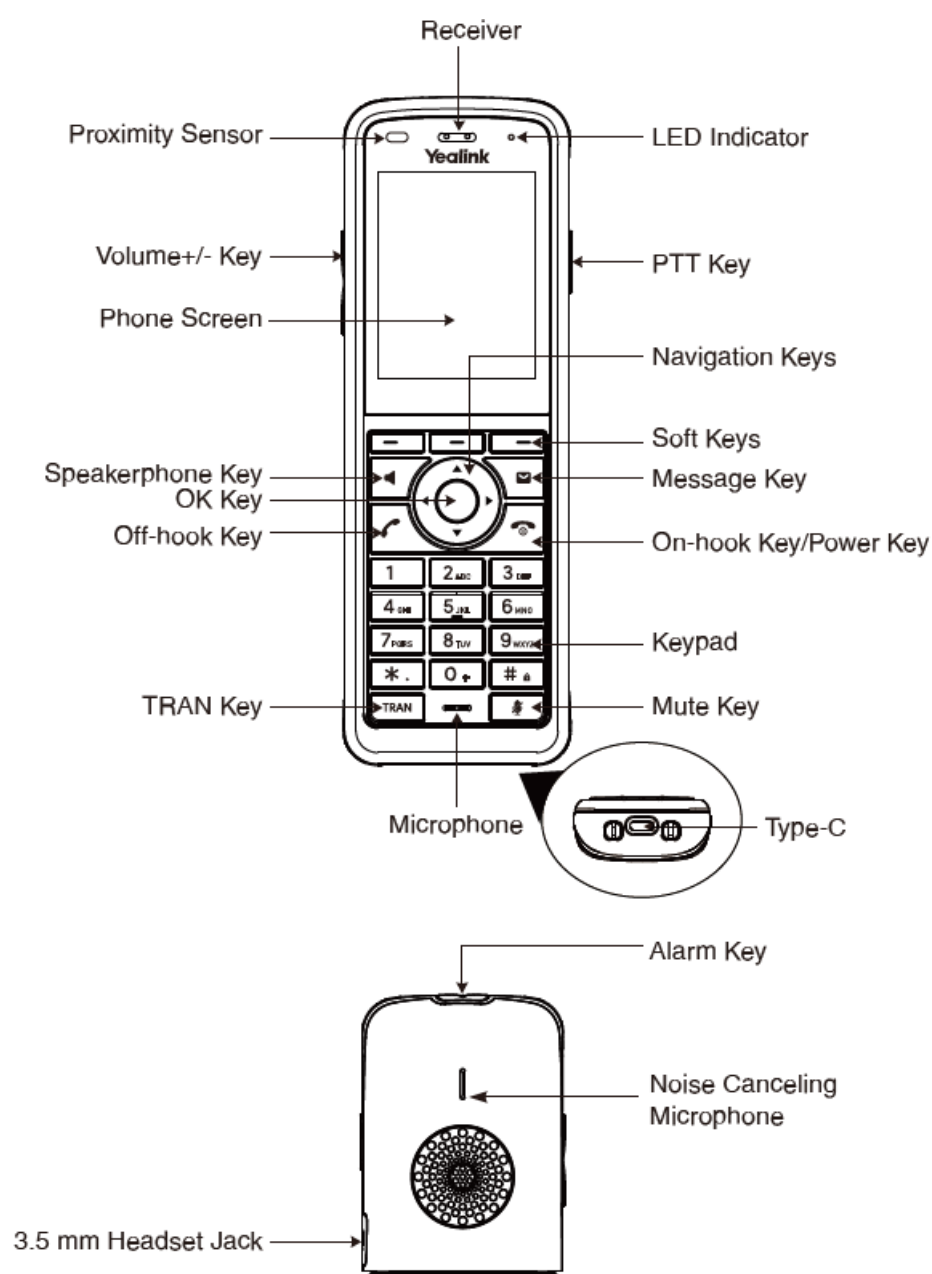

| Item                | Description                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Receiver            | Receive audio in receiver mode.                                                                                                                                                         |
| LED Indicator       | Indicate call status, message status, and charging status.                                                                                                                              |
| Proximity Sensor    | The proximity sensor can detect the human ear.                                                                                                                                          |
| Phone Screen        | Show information.                                                                                                                                                                       |
| 3.5 mm Headset Jack | Connect a standard 3.5 mm headset.                                                                                                                                                      |
| Soft Keys           | Access the function directly. It depends on the operating situation.                                                                                                                    |
| Message Key         | Access the voice mail or missed call.                                                                                                                                                   |
| Speakerphone Key    | <ul style="list-style-type: none"> <li>Switch among the receiver, headset, and hands-free modes.</li> <li>Answer an incoming call.</li> <li>Place a call in hands-free mode.</li> </ul> |

|                       |                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Navigation Keys       | Scroll through information or options on the screen.                                                                                                                                                                                                                                                                                             |
| OK Key                | Confirm actions or enter the main menu.                                                                                                                                                                                                                                                                                                          |
| On-hook Key/Power Key | <ul style="list-style-type: none"> <li>· Press briefly to return to the previous screen.</li> <li>· Long press to return to the idle screen.</li> <li>· Press to turn the handset on.</li> <li>· Long press on the idle screen to turn the handset off.</li> <li>· Cancel actions or ends a call.</li> <li>· Reject an incoming call.</li> </ul> |
| Off-hook Key          | <ul style="list-style-type: none"> <li>· Answer an incoming call.</li> <li>· Enter the redial calls list.</li> <li>· Place a call in receiver or headset mode.</li> </ul>                                                                                                                                                                        |
| Keypad                | Provide digits, letters, and special characters.                                                                                                                                                                                                                                                                                                 |
| TRAN Key              | Transfer a call to another party.                                                                                                                                                                                                                                                                                                                |
| Mute Key              | Toggle the mute feature on or off.                                                                                                                                                                                                                                                                                                               |
| Microphone            | Pick up audio.                                                                                                                                                                                                                                                                                                                                   |
| Type-C                | Support Type-C charging.                                                                                                                                                                                                                                                                                                                         |
| Alarm Key             | Press to report the alarm.                                                                                                                                                                                                                                                                                                                       |
| Volume+/- Key         | Press to adjust the volume.                                                                                                                                                                                                                                                                                                                      |
| PTT Key               | Press to use the PTT feature.                                                                                                                                                                                                                                                                                                                    |

## Power LED Indicator

| LED Status        | Description                                 |
|-------------------|---------------------------------------------|
| Off               | Power off/normal status                     |
| Solid red         | Initialization/charging (not fully charged) |
| Solid green       | Battery fully charged                       |
| Fast flashing red | Incoming call                               |
| Slow flashing red | New voicemail/missed call/text message      |

## Icons Description

The following table contains the description of the icon that might be displayed on the screen of the AX86R.

| Icon                                                                                | Description         |
|-------------------------------------------------------------------------------------|---------------------|
|  | Keyboard lock       |
|  | Wi-Fi signal status |

|                                                                                     |                                    |
|-------------------------------------------------------------------------------------|------------------------------------|
|    | Battery status                     |
|    | Missed Call notification           |
|    | Unconditional Call Forwarding      |
|    | Busy Call Forwarding               |
|    | No Answer Call Forwarding          |
|    | Voicemail notification             |
|    | Mute enabled                       |
|    | DND enabled                        |
|    | Bluetooth enabled                  |
|    | Pair and connect Bluetooth headset |
|    | SMS                                |
|   | Auto Answer enabled                |
|  | Handset Mode                       |
|  | Hands-free mode                    |
|  | Headset Mode                       |

## Connect to Wi-Fi

- On the startup wizard, select your language and press **OK** or **Next**.
- Do one of the following:
  - Option A: Quick Wi-Fi Connect**
    - Use your mobile phone to connect to the temporary access point created by the AX Series.
    - On the Wi-Fi Configuration page, enter the Wi-Fi SSID and password for the network you wish to connect to. (If the page doesn't open automatically, open your web browser and enter 192.168.144.1 in the address bar.)
  - Option B: Available Networks**
    - Select the Wi-Fi network from the available options and press OK.
    - Enter the password and press Save.

