



Original	Recharge	Original	Recharge
 Step	 +  Shift + Pause / Step /	 Angle	 Info / Angle
 Search	 Red / Netflix / Search	 Audio	 Audio / Lang 1/11
 Mute	 Mute / Dimmer	 Menu PBC	 Menu / Home
 Source	 AV / Input / RDS	 Title	 Sound / Title
 1	 1	 Up	 Up
 2	 2	 Stop	 Stop / Hold
 3	 3	 Play	 Play / Slow
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Mode	 Smart / List
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9	 Set up	 Set up / OPT /
 0	 0	 Down	 Down
 10+	 Guide / EPG / -/-	 Vol -	 Vol -
 Display	 Display / Media	 Vol +	 Vol +
 Subtitle	 Subtitle / EQ	 Repeat	 Green / APP / Repeat



