

esatto

This little Quick Start Guide
is everything you need to get
started so that your EDW606CS
60cm Freestanding Dishwasher
does all of your dirty work, literally!



esatto

Get ready to use your EDW606CS 60cm Stainless Steel Dishwasher!

The Controls

- 1 On/Off power button
- 2 Program button
- 3 Program indicator lights
- 4 LED display
- 5 Half Load function button
- 6 Child lock function button
To activate & deactivate, press the Half Load & Extra Drying buttons together for 3 seconds.
- 7 Extra Drying function button
- 8 Additional function indicator lights
- 9 Delay Start button
1–24 hours
- 10 Start/Pause button

For a complete guide on operating your dishwasher, refer to user manual on pages 16–17.

Program Cycles

- **Quick 30'**
A quick 30 minute wash suitable for lightly soiled dishes—does not include drying stage.
- **Super 90'**
A fast 90 minute daily program for lightly soiled dishes.
- **Glass**
Suitable for lightly soiled delicate glassware.
- **ECO 50° C**
A standard program for daily use with reduced energy and water consumption.
- **Heavy**
A program suitable for heavily soiled dishes.
- **Intensive 65° C**
A hot intensive program suitable for heavily soiled dishes and cookware.

Note: To assist drying, we recommend partially opening the door after the program has finished.



Product Details

Dimensions (W, D, H mm) / **598 x 600 x 845**
Energy Rating (MEPS/WELS) / **3.5 / 4.5 Stars**
Capacity / **15 Place Settings**
Warranty / **2 Years**

Register your Esatto product online for a free additional year esatto.house/warranty

Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentiagroup.com.au

Instagram [@esatto.house](https://www.instagram.com/esatto.house) Facebook [@esatto.house](https://www.facebook.com/esatto.house)

www.esatto.house