

MINISO

PRODUCT MANUAL

Wireless Earbud MS206

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly

02 Product Introduction

03 Touch Operation

04 Item list

05 Warranty Statement

5

9

12

21

24

1Welcome to MINISO Wireless Earphones

Take out and pair it

When using for the first time, please remove the left and right sides. Wear headphones at the same time. When the headphone indicator light flashes white, the headphones will enter automatic pairing mode.

2

How to wear headphones correctly

1

2

3

Specification of Product

Model of Product: MS206

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 15 \times 7 \times 2.7$ mm

Impedance: $32\Omega \pm 15\%$

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: -42dB \pm 1dB

Earphone Input: 5V \approx 35mA

Charging Case Input: 5V \approx 300mA

Charging Case Output: 5V \approx 70mA

Earphone Battery Capacity: 35mAh

Charging Case Battery Capacity: 300mAh

Duration: Approx. 4.5 H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 1.5 H

4

Product Description

Bluetooth LED Display light

Multi function key touch position

Charging Contacts

Digital Screen

Type-c Interface

5

Touch Operation

Connect with Bluetooth device

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-MS206".Click the pairing name to pair.

When the headset is turned on: White light flashing

When the headset is turned off: The white light flashes three times and then goes out

Successful pairing of left and right ears: The main ear light flashes white, and the auxiliary ear light goes out

Bluetooth device successfully connected: no light

Headphone Charging:The screen of the charging box Light up for 5 seconds.The white indicator light of the earphones is always on. After it is fully charged, the white indicator light goes off.

Charging of the Charging case: The digital display screen of the charging case flashes, and after being fully charged, the digital display screen of the charging case always shows 100.

Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

6

Indicator Light Description

Power On

Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du". Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

Power Off

Auto power off: Put the Earphone in the charging case, the Earphone will be powered off, with the prompt sound of "Du". Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

7

Once Press

Music mode

Play/Pause

Phone mode

Call Answer/End

8

Double Press

Music mode

Double press the right ear: Volume up

Music mode

Double press the left ear: Volume decreases

9

Long Press

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

10

Triple Press

Music mode

Triple press on the left ear: Previous song

Music mode

Triple press on the right ear: next song

11

Clear Bluetooth pairing history

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.

2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

12

Switch between game mode and music mode

Game mode

Press and hold the multi-function button on the right ear for 2 seconds

Music mode

Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

13

Item list

Headphones *1

Charging case *1

14

Product Description

Instruction *1

Charging cable *1

15

FCC ID: 2BHJR-MS206

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

16

Warranty statement

MINISO product warranty card

Product number		SN number	
	name	Purchase date	
	telephone		
	address		
	Invoice number		
	name	(stamp)	
	address		
	telephone		

17

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-time or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.
The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.
Customer Service Email: customercare@yhemi.net

RoHS

CE

18

Important safety tips

Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
The product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun/heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type.
battery usage.
After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional leg, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

19

Enjoy the company of MINISO

Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved

20

Creating sound to live with

21

正面

22

背面