

Merlin M842/M832 Garage Remote Programming Instructions

1. Finding the Learn Button

Device Type	Instructions
Overhead Door Openers	a) For units with five terminal screws at the back: <ul style="list-style-type: none"> - Remove the black cover near the terminal screws. - The Learn button is a red button underneath that cover. b) For units with four terminal screws possibly hidden by a plastic cover: <ul style="list-style-type: none"> - Take off the lamp cover; then remove the red or green panel. - Look for a small button labeled 'Learn'. c) If a Merlin wall switch is connected: <ul style="list-style-type: none"> - The Learn function is handled through the wall switch's small button.
Roller Door Openers	On roller door openers: <ul style="list-style-type: none"> a) For models with a small red square button on the front: <ul style="list-style-type: none"> - Remove the black cover next to the lamp holder. - The red Learn button is under that cover. b) For models with a red or green button on the front: <ul style="list-style-type: none"> - Remove the front panel and find the 'Learn' button inside. c) If a Merlin wall switch is also installed:
Other Receivers	<ul style="list-style-type: none"> - The Learn button is on the Merlin wall switch. On other receivers: <ul style="list-style-type: none"> a) For dark grey receivers with a round green button: <ul style="list-style-type: none"> - The Learn button is a smaller grey button inside the green one. b) For gate receiver cards: <ul style="list-style-type: none"> - The Learn button is a tactile switch labeled 'Learn' on the circuit board. c) For all other types: <ul style="list-style-type: none"> - Refer to the user manual or inspect the board to find a 'Learn' button.

2. Programming the Remote

Programming Steps
<ul style="list-style-type: none"> - Hold the Learn button for 1-2 seconds. - Press the button on your remote control twice. (Optional for lamp control): <ul style="list-style-type: none"> - Hold the Learn button for 1-2 seconds. - Press the remote button once to set it for the main door operation. - Press the same button again to assign the light control function.



WARNING!

Product contains coin/button cell battery.
 Keep product and batteries away from children. The battery is hazardous and can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside any part of the body.