


MODEL No. FSDH-TOPKT-*-10-DD

INSTALLATION MANUAL



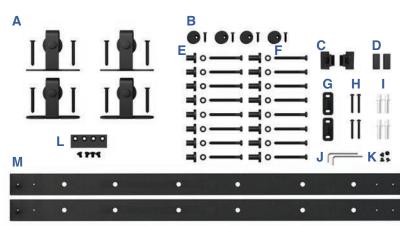

TOOLS REQUIRED

- Plumb Line
- Pencil
- Phillips Head Screwdriver
- 4mm Drill Bit
- Wrench
- Level
- Power Drill
- Tape Measure


INCLUDED IN KIT

Α	Door Roller Hardware	х4
В	Anti-Jump Disk	x4
С	Adjustable Door Stop	x2
D	End Cap	x2
Е	Mounting Bracket for ¾" and 1" Doors	x8 ea.
F	M6x60 Bolt + Washer	x16
G	Routed Door Guide	x2
Н	ST4.2x35 Screw	x4
1	Anchor	x4
J	1.5mm Allen Key	x2
K	Hole Cover	x4
L	Splicer + Screws	x1
M	60" Rail	x2


PLEASE NOTE: The installation manual is a suggested guideline. Adjustments may need to be made based on your specific application.

UNDERSTANDING YOUR RAILS


LEFT RAIL

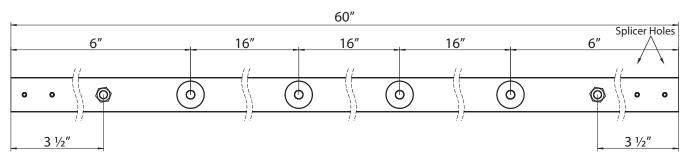


RIGHT RAIL

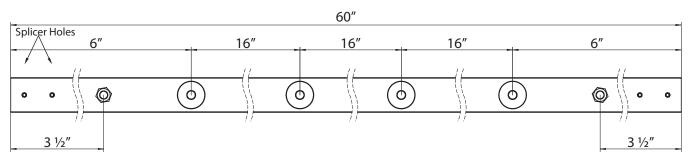


LEFT AND RIGHT RAILS JOINED BY SPLICER

 


INSTALLATION

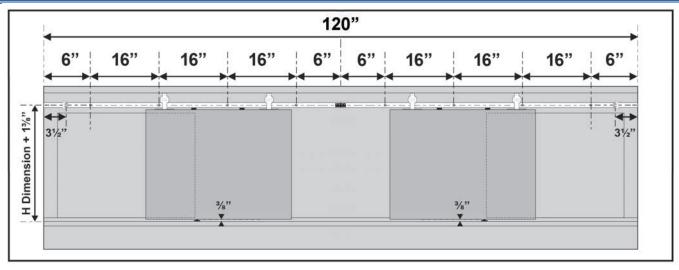


Using a pencil, mark the locations where you will drill holes as indicated.

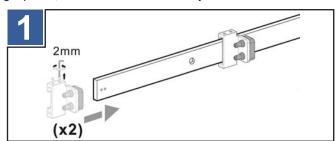

Before beginning installation, attach the door stops [C] to both rails [M].

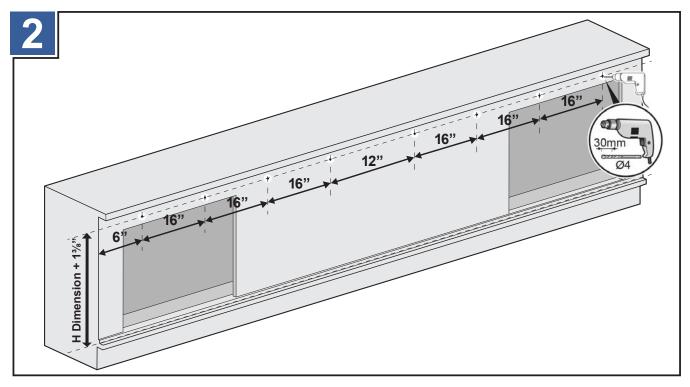


Using a power drill with a 4mm drill bit, drill holes as indicated.

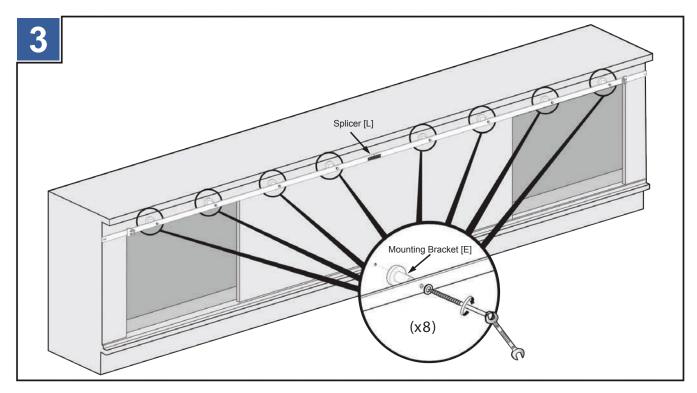

- 1. Install the first rail, and mounting brackets [E].
- 2. Line up the second rail against the first and install with mounting brackets. Secure the two rails with the splicer [L].

NOTE: If mounting to a wall, fasteners must be mounted into solid wood studs, wall blocking or, a wood header board when additional projection is needed. (Example: When using as TV shutters)

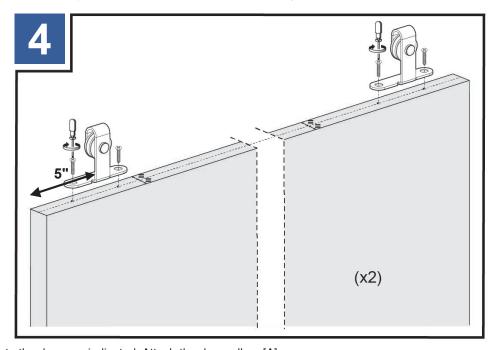


Drill holes into the doors as indicated. Attach the door rollers [A].


It is suggested that the door rollers [A] be mounted 5" from the edge of the doors to the neck of the rollers.

NOTE: Trimming the rail will alter the position of the roller hardware. Adjust accordingly.


FOR 3/4" DOORS

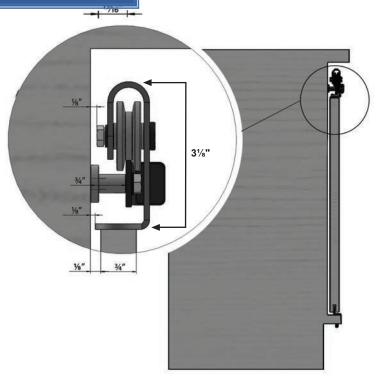


FOR 1" DOORS

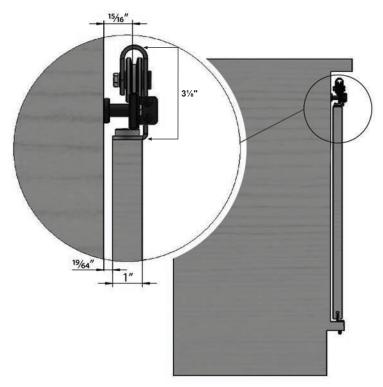


Allow a minimum 3-1/8" clearance above the doors.

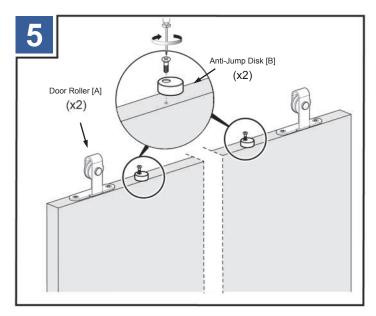


Attach the anti-jump disks [B] to the doors.

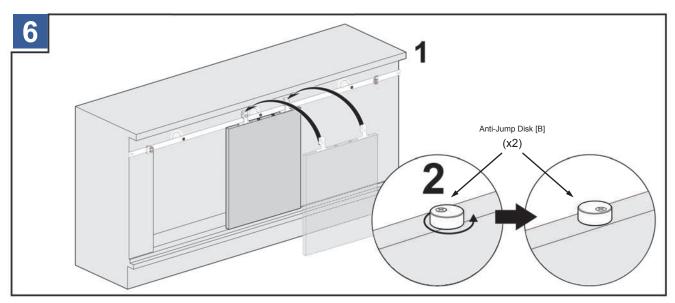


Attach the doors to the rail [L] and lock the anti-jump disks [B] into position. Doors should be routed beforehand if using the routed door guides [G].

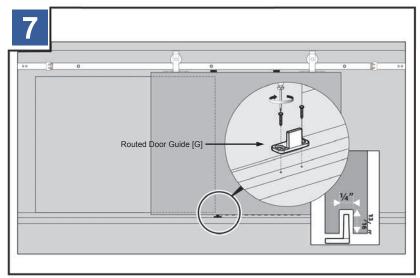

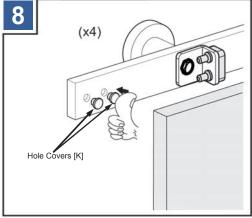


If using the routed door guides [G], install them at this time. Repeat steps 4-7 for additional door.

Use the hole covers [K] to give the rail a finished look.

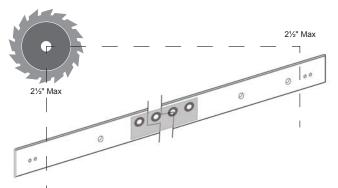

The rail can be trimmed if necessary using a band saw or hacksaw. Use blades suitable for iron or stainless steel depending on your rail.

NOTE: If you are trimming the rail, do so equally. Each rail can be trimmed equally up to $2\frac{1}{2}$ " from one (1) side of each length of rail. Holes for splicer must remain intact on one side of the rail. However; trimming will alter the position of the roller hardware. Adjust accordingly.

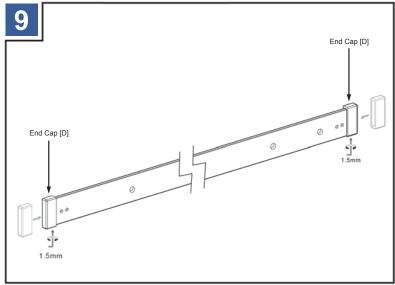

Once cut, add the end caps [D] to the ends of the rail and secure with a set screw.



Maximum T.V. size of 60" with a width of 56"