






User manual

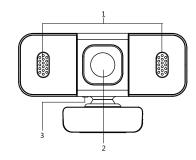

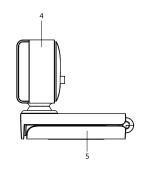

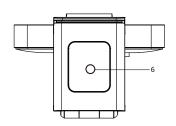

## Functional Overview

- Built-in microphones
   HD lens
   Status indicator

### Connection Guide



- Plug into the computer USB port.
   The device features plug-and-play

## **Packaging Contents**

- 1\* Webcam 1\* User manual/warranty card

## System Requirements

- Windows 7, Windows 8, Windows 10 or later; Linux V1.24 and above; Android 9 and above; Mac OS 10.4 and above

## Trouble Shooting

- Containing Questicities.

  Ensure that the USB connector of the computer camera is correctly inserted into the USB port of the computer.

  Ensure that the computer meets the minimum system requirements.

  If you encounter a problem that cannot be solved, please do not disassemble it yourself, log in to the official website to find a solution or send it to the nearest dealer.

- Acterition

  Do not touch the glass part of the optical lens with your hands or sharp objects. Please wipe it with a special glass lens cleaning cloth. When in use, avoid the camera from falling and other external forces impacting the product and causing the lens and electronic parts to not work properly. When using in winter, please discharge static electricity first to avoid damage of electronic parts caused by direct contact of hands with USB interface, so that within cause the processories.

## **Technical Specifications**

Connectivity: USB wired Resolution: 1920\*1080 Frame rate: 30FPS Viewing angle: 90° Video interface: USB Pickup distance: 3m Pickup angle: 180° Sample rate: 48KHz/16bit Image sensor: 1/2.9 inch CMOS sensor Effective Pixel: 2 megapixels Video formats: MJPG/YUY2 Focal length: 2.88mm White balance: Automatic
Wide dynamic: Support
Microphone specification: Digital MIC



2021 © Top Victory Investments Limited. All rights reserved. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Top Victory Investments Limited, and Top Victory Investments Limited is the warrantor in relation to this product

Through the following website, you can register your product in order to get support: www.philips.com/welco

## Product Environmental Notices

Disposal of Waste Equipment by Users in Private Household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling or waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact the local city office, the household waste disposal service or the shop where you purchased the product.

# PHILIPS Recycling Program

PHILIPS encourages customers to recycle used electronic hardware, PHILIPS original print cartridges, and rechargeable batteries. For more information about recycling programs, go to http://www.philips.com/a-w/about/sustainability.html



Thank you for purchasing a Philips IT accessory product To ensure you a reliable after-sales service, please read the following instructions carefully.

This product warranty period is valid for two years from the date of purchase (the date of receipt of the return receipt and the invoice date of the buver).

Register your product and get support at : www.philips.com/welcome

The following situations are not covered by after-sales service Unable to provide a valid warranty card and invoice (not including those that can prove the products is within the valid warranty period) or the alteration of the warranty without authorization.

The product model and serial number on the warranty card are

- not in conformity with the physical product or without the distributor seal.
- Damage due to not used in accordance with product instructions.
   Damage caused by the use of pirated software or computer virus
- during use. 5. Damage caused by accident, damage, or repair from unauthorized
- service vendors.

  6. Without serial number.

  7. Damage caused by force majeure.

The serial number of the product filled in the form must be consistent with the actual product. This certificate the primary instrument for the after-sales service, please safe keep it. If you need technical support, please show this warranty card, and we will provide quality and professional services.

This product was manufactured and brought to the market by or on behalf of Top Victory Investments Ltd. or one of its affiliates. Top Victory Investments Ltd. is the warrantor in relation to this product.

Name ADD Model No. Serial No. Name ADD Tel PostCode
Model No. Serial No. Name ADD Tel PostCode
Serial No. Name ADD Tel PostCode
Name ADD Tel PostCode
ADD Tel PostCode
Tel PostCode
PostCode
Retailer
Place of origin
Tel
PostCode
Date of Sell
Invoice No.

Dear customer, the above information is to be filled in by the seller. Please cooperate with us. Thank you The following information shall be filled in by the maintenance agency and returned to the custo

Ī	Maintance Information	Maintance Company Name	
		ADD	
		Tel	
		PostCode	
		Document No.	
		Date	
		Maintance man Signature	

# 背面1

背面2

背面3



成品尺寸: 65\*100mm

材质: 120铜板纸

颜色: 四色印刷 正反印刷

装订: 三折页