 


VR SHINECON

WIRELESS REMOTE CONTROL

USER GUIDE

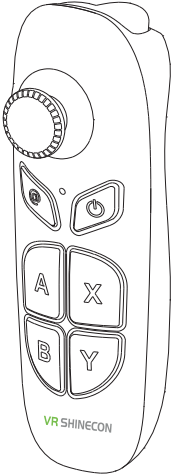

● Basic function introduction

1 confirmation button

2 360 degree rocker

3 360 degree rocker

4 power key

5 indicator light

 
6 key A

7 key X

8 key B

9 key Y

10 battery cover

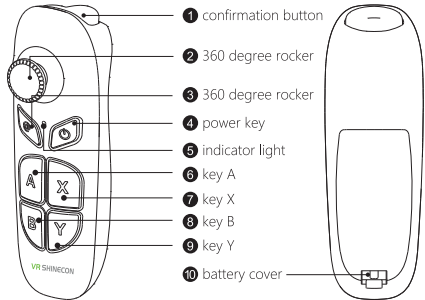

Many thanks for purchasing our product, this is a multifunctional wireless gaming joystick, used for controlling smart phone , pad,TV box, smart TV, VR etc, support IOS ,Android system.
Important attention: if the Product specifications are changed, it will be without prior notice.This product has been patented,and copy is not permitted.

● Operating instruction

Power on:press start button until LED light is on(about 3 seconds) , it is acquiesced in VR mode when the joystick is turned on.
Mode switching instruction(please press the mode switching button while pressing the @ button with 3-5 seconds)
Mause Mode: @ +A button
Multi-media mode:@+B button
Gaming mode: @+X button

Remarks:press @ button with 5 seconds to return back to vr mode,mause mode will only be effective in Android system, iCade mode will only be effective in Apple facility

Pair and connect: after power on, LED indicator will flash,the joystick will enter into the wireless pair mode.

Use the device to search for the address and name of the joystick(SC-B03-XXXX), click then can be connected,pair and connect successfully,Slow flashing of work LED , it can connect and match the last wireless device when next time power on.

Power off:press power button until the LED indicator off(about 5 seconds) the joystick is off,
the joystick will be off automatically if no connecting with wireless device after 5 mins;joystick will power off after 30 mins if no any operation.

● Game operation and access

VR mode: IQIYI VR and other VR APPS. (Different APP may have different functions)
Multi-media mode:This machine has its own **player** or **download QQ music, cool music etc.**
● Each mode switch and button function are operated as follow sheet:

android device				
		android device	VR mode	Mause mode(@+A)
Confirmation button	-	Pause,play	Pause,play	Confirmation button
360° rocker	up	-	Last song	Slide Up/Zoom In
	down	-	next song	Glide/shrink
	left	short press	-	Left slide/fast reverse
	right	short press	-	Slide right/fast forward
@ button	long press	Long press 3 seconds to enter VR mode	-	Long press 3 seconds to enter VR mode
Power button	short press	-	Press for 3 seconds to turn on/off	-
A button	short press	Volume-	Volume-	Volume-
X button	short press	Volume+	Volume+	Volume+
B button	short press	Return	Return	Return
Y button	short press	Enter settings	-	-

Apple device				
		android device	VR mode	Mause mode(@+A)
Confirmation button	-	Pause,play	Pause,play	Confirmation button
360° rocker	up	-	Last song	-
	down	-	next song	-
	left	short press	-	-
	right	short press	-	-
@ button	long press	Long press 3 seconds to enter VR mode	-	Long press 3 seconds to enter VR mode
Power button	short press	-	Press for 3 seconds to turn on/off	-
A button	short press	Volume-	Volume-	Volume-
X button	short press	Volume+	Volume+	Volume+
B button	short press	Return	Return	Return
Y button	short press	Enter settings	-	-

● Warm reminder

As the update function of the mobile phone system or APP may change, the company is subject to change without notice. Please understand.

(@+X button-Horizontal operation mode)

The game can be downloaded from the mobile app store.
(This mode is only available for Android, IOS are not available)


● specification


item	specification
product model	SC-B03
product size	43*37*110mm
wireless protocol	Wireless 5.0 compliant
wireless distance	2-10M
support OS	Android、iOS
battery type	Standard AAA7 alkaline battery
continuous service time	about 40 hours
working current	0.5-8mA


● Attention

1. Some android devices have the automatic connect function when detecting the last used bluetooth devices. Please check out whether this joystick has been connected with others device when you find out the devices and the joystick are unable to pair successfully, if so, please cut off the connection and pair again.
2. If you have ever connected this product, but if this products is hard to connect with other devices after pairing, please connect after pair again.
3. Individual smart phone exist the problem that the signal of bluetooth and WIFI affect each other, you'd better turn of WIFI before connection.
4. When accident situation causes abnormality, please take out the battery and reload it.
5. When the indicator light is not bright enough, it shows that the capacity of battery is not enough, the consumer need to change the battery

 Thank you for choosing 《VR Shinecon》, please check the packing list first.

User manual 1

Device 1



Scan the QR code to get more informations and enjoy it!

VR SHINECON after-sales service card/ Service

The holder max width is 9cm, can support the phone size is 3.5-6.0 inches. We will whole heartedly provide service for you. Please fill in the relevant informations as belows to ensure the legitimate rights and interests of you.

Product Item: _____
Model NO.: _____
Purchase Date: _____
Name: _____
Tel: _____
Country: _____
Address: _____
Dealers: _____
Dealers Address: _____
Dealers Tel: _____
Web: _____
Return Reason: _____

This card is VR SHINECON service vouchers and the content should not be modified at will, please safekeeping to safeguard the legitimate rights and interests of you. Producers for VR SHINECON.

产品服务凭证卡 / Service

感谢您对VR SHINECON产品的信任和支持，我们将竭诚为您提供服务，请填写相关条目，以确保您的合法权益。

产品型号: _____
序列号: _____
购买日期: _____
客户姓名: _____
客户电话: _____
国家: _____
客户地址: _____
经销商名称: _____
经销商地址: _____
经销商电话: _____
网址: _____
退换货原因: _____

此售后服务卡是VR SHINECON 服务凭证，内容不得擅自涂改，请妥善保管。以维护您的合法权益。出品方为VR SHINECON

● 基本功能介绍

1 确认键

2 360°摇杆

3 @模式切换键

4 开关键

5 指示灯

 
6 A键

7 X键

8 B键

9 Y键

10 电池盖

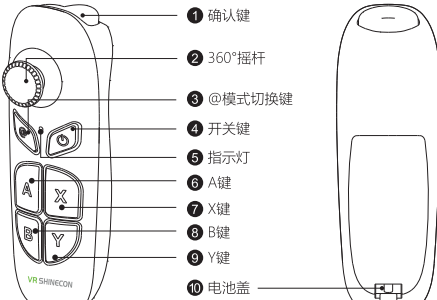

感谢您购买本产品，这是一款多功能无线游戏手柄，可用于控制手机、平板电脑、TV电视盒、智能电视、VR等；支持苹果（IOS）系统，安卓（Android）系统。重要提醒：产品规格如有更改，恕不另行通知。本产品已申请多项专利，仿冒必究！

● 操作说明

开机按住开关键（约3秒），至工作灯亮起，手柄开机，默认为VR模式。

各模式切换说明（请在开机状态下，按住@键同时按住各模式切换键3-5秒）
鼠标模式：@+A键
多媒体模式：@+B键
游戏模式：@+X键

备注：长按@键5秒返回VR模式，苹果鼠标模式要开启辅助触控才有功能。

配对连接：开机后，工作灯闪烁，手柄进入无线配对模式。使用设备搜寻到手柄的地址及名称（SC-B03-XXXX），点击即可连接。连接成功后，工作灯微闪。下次开机将会自动连接到最后配对的无线设备。

关机：长按电源键，工作灯闪烁至熄灭（约5秒），手柄关机。
开机之后5分钟未连接无线设备，手柄自动关机；手柄无线连接后30分钟无任何操作，手柄自动关机。

● 游戏操作及获取

VR模式指：爱奇艺VR以及其它VR APP。（不同APP可能功能不同）
多媒体模式指：手机自带音乐播放器或下载QQ音乐、酷我音乐等。
●系统各模式切换及按键功能操作如下表：

安卓设备				
		音乐模式（@+B）	VR模式	鼠标模式(@+A)
确认键		暂停，播放	暂停，播放	确认
360°摇杆	上	上一曲	上滑/放大	鼠标向上
	下	下一曲	下滑/缩小	鼠标向下
	左	短按 /	左滑/快退	鼠标向左
	右	短按 /	右滑/快进	鼠标向右
@键	长按	长按3秒进入VR模式	/	长按3秒进VR模式
电源键	短按		长按3秒开机/关机	/
A键	短按	音量-	音量-	音量-
X键	短按	音量+	音量+	音量+
B键	短按	返回	返回	返回
Y键	短按	静音	/	/

苹果设备				
		音乐模式（@+B）	VR模式	鼠标模式(@+A)
确认键		暂停，播放	暂停，播放	确认
360°摇杆	上	短按 上一曲	/	鼠标向上
	下	短按 下一曲	/	鼠标向下
	左	短按 /	/	鼠标向左
	右	短按 /	/	鼠标向右
@键	长按	长按3秒进入VR模式	/	长按3秒进VR模式
电源键	长按		长按3秒开机/关机	/
A键	短按	音量-	音量-	音量-
X键	短按	音量+	音量+	音量+
B键	短按	Home	Home	Home
Y键	短按	静音	/	/

● 温馨提示

由于手机系统或APP的更新功能可能会有所变化，本公司恕不另行通知，敬请谅解。

(@+X键 - 横向操作模式)

在手机应用商店下载，如《魂斗罗》、《三国战记》等游戏。
(此模式只适用于安卓手机，苹果手机不能使用)。


● 规格参数


项目	规格
产品型号	SC-B03
产品尺寸	43*37*110mm
无线协议	Wireless 5.0 compliant
无线距离	2-10M
支持系统	Android、iOS
电池类型	标准 AAA7号碱性电池
连续使用时间	约40小时
工作电流	0.5-8mA


● 注意事项

1.部分安卓设备检测到最后一次所使用的蓝牙设备的时候具备自动连接功能。当发现无法配对成功时请检查安卓设备或本产品是否已经与其他设备处于连接状态，如果是，请先解除连接后再配对。
2.如果曾经连接过本产品，但本产品与其他设备进行过配对后出现连接困难的，请重新配对再连接。
3.由于个别手机存在蓝牙与WiFi信号干扰问题，建议在连接前关闭WiFi。
4.当意外情况导致出现异常时，请取出电池后重新装入。
5.当指示灯亮度不够时，说明电池电量已经不足，此时用户应该更换电池。

 感谢您选购 《VR Shinecon》 产品请您先核对装箱清单








用户手册一份

主机一台



扫描二维码获取各种资源，精彩就此开始！

Without authorization in written of Shinecon, to copy all or part of this manual is not allowed (Excluding comments on an article or simple reference for comment).



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction