 

70X110mm 105双铜 正反面4色印刷 5折6页

VR SHINECON

USER GUIDE



Basic function introduction

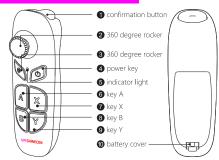

Many thanks for purchasing our product, this is a multifunctional wireless gamin joystick, used for controlling smart phone , pad,TV box, smart TV, VR etc, support Important attention: if the Product specifications are changed, it will be without prior notice. This product has been patented, and copy is not permitted

6.0

A

Power on:press start button until LED light is on(about 3 seconds) , it is acquiesced in VR mode when the joystick is turned on.

Mode switching instruction(please press the mode switching button while pressing the @ button with 3-5 seconds) Mause Mode: @ +A button

Gaming mode: @+X button

Remarks:press @ button with 5 seconds to return back to vr mode,mause mode will only be effective in Android system, iCade mode will only be effective in Apple facility

Pair and connect; after power on, LED indicator will flash, the joystick will enter into the wireless pair mode.

Use the device to search for the address and name of the joystick(SC-B03-XXXX), click then can be connected pair and connect successfully, Slow flashing of work LED, it can connect and match the last wireless device when

Power off:press power button until the LED indicator off(about 5 seconds) the joystick is off,

the joystick will be off automatically if no connecting with wireless device after 5 mins;joystick will power off after 30 mins if no any operation.

Game operation and access

VR mode: IQIYI VR and other VR APPs. (Different APP may have different Multi-media mode:This machine has its own player or download QQ music,

Each mode switch and button function are operated as follow sheet:

			android o	levice	
			android device	VR mode	Mause mode(@+A)
Confirmation button		-	Pause,play	Pause,play	Confirmation button
360° rocker	up	-	Last song	Slide Up/Zoom In	Move mouse up
	down	-	next song	Glide/shrink	Move mause down
	left	short press	-	Left slide/fast reverse	Move mause left
	right	short press	-	Slide right/fast forward	Move mause right
@ button		long press	Long press 3 seconds to enter VR mode	-	Long press 3 seconds to enter VR mode
Power button		short press	8	Press for 3 seconds to turn on/off	-
A button		short press	Volume-	Volume-	Volume-
X button		short press	Volume+	Volume+	Volume+
B button		short press	Return	Return	Return
Y button		short press	Enter settings	-	-
			Apple de	evice	

71 0000011					vojurije-	
X button		short press	Volume+	Volume+	Volume+	
B button		short press	Return	Return	Return	
Y button		short press	Enter settings	-	=	
			Apple de	evice		
			android device	VR mode	Mause mode(@+A	
Confirmation button		-	Pause,play	Pause,play	Confirmation butto	
360° rocker	up	-	Last song	-	Move mouse up	
	down	-	next song	-	Move mause dowr	
	left	short press	ı	-	Move mause left	
	right	short press	-	-	Move mause right	
@ button		long press	Long press 3 seconds to enter VR mode	-	Long press 3 seconds to enter VR mode	
Power button		short press	-	Press for 3 seconds to turn on/off	-	
A button		short press	Volume-	Volume-	Volume-	
X button		short press	Volume+	Volume+	Volume+	
B button		short press	Return	Return	Return	
Y button		short press	Enter settings	-	-	

Warm reminder

As the update function of the mobile phone system or APP may change, the company is subject to change without notice. Please understa

(@+X button-Horizontal operation mode)

The game can be downloaded from the mobile app store. (This mode is only available for Android, IOS are not available)

specification
SC-B03
43*37*110mm
Wireless 5.0 compliant
2-10M
Android iOS
Standard AAA7 alkaline battery
about 40 hours
0.5-8mA

Attention

Some android devices have the automatic connect function when detecting the last used bluetooth devices. Please check out whether this joystick has beer connected with others device when you find out the devices and the joystick are unable to pair successfully, if so, please out off the connection and pair

2. If you have ever connected this product, but if this products is hard to connect with other devices after pairing, please connect after pair again.

3. Individual smart phone exist the problem that the signal of bluetooth and WiFI affect each other, you'd better turn of WiFI before connection.

4. When accident situation causes abnormality, please take out the battery and

5. When the indicator light is not bright enough, it shows that the capacity of battery is not enough, the consumer need to change the batter.y

Thank you for choosing 《VR Shinecon》, please check the packing list first.



User manual 1





Scan the QR code to get more

VR SHINECON after-sales service card/ Service

The holder max width is 9cm, can support the phone size is 3.5-6.0 inches. We will whole heartedly provide service for you. Please fill in the relevant informations as belows to ensure the legitimate rights and interests of you.

Product Item:
Model NO.:
Purchase Date:
Name:
Tel:
Country:
Address:
Dealers:
Dealers Address:
Dealer's Tel:
Web:
Return Reason:

This card is VR SHINECON service vouchers and the content shoud not be modified at will, please safekeeping to safeguard the legitimate rights and interests of you. Producers for VR SHINECON.


产品售后服务凭证卡 / Service

感谢您对VR SHINECON产品的信任和支持,我们将竭诚为您提 供服务,请填写相关条目,以确保您的合法权益。

客户姓名: 经销商名称 经销商地址

此售后服务卡是VR SHINECON 服务凭证,内容不得擅自涂改,请妥善保管。 以维护您的合法权益。出品方为VR SHINECON

●基本功能介绍

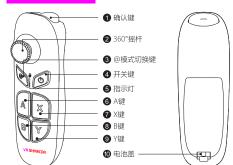

感谢您购买本产品。这是一款多功能无线游戏手柄。可用干控制手机。平板电 腕、TV申视盒、智能申视、VR等;支持苹果(iOS)系统、安卓(Android)系统。 重要提醒:产品规格如有更改,恕不另行通知。本产品已申请多项专利,仿冒必究!

6.0

A Sz

开机按住开关键(约3秒),至工作灯亮起,手柄开机,默

各模式切换说明(请在开机状态下,按住@键同时按住 各模式切换键3-5秒) **鼠标模式**:@+A键

多媒体模式:@+B键 游戏模式:@+X键

备注:长按@键5秒返回VR模式,苹果鼠标模式要开 启辅助触控才有功能。

配对连接:开机后,工作灯闪烁,手柄进入无线配对模式。 使用设备搜寻到手柄的地址及名称(SC-B03-XXXX),点击即可连接。连接成功 后、工作灯慢闪。下次开机将会自动连接到最后配对的无线设备。

关机:长按电源键,工作灯闪烁至熄灭(约5秒),手柄关机。 开机之后5分钟未连接无线设备,手柄自动关机;手柄无线连接后30分钟无任何

●游戏操作及获取

操作,手柄自动关机。

VR模式指:爱奇艺VR以及其它VR APP。(不同APP可能功能不同) **多媒体模式指:**手机自带音乐播放器或下载QQ音乐、酷我音乐等。

系统各模式切换及按键功能操作如下表

			女字以	C III	
			音乐模式 (@+B)	VR模式	鼠标模式(@+A)
确认键			暂停,播放	暂停,播放	确认
360°揺杆	上		上一曲	上滑/放大	鼠标向上
	下		下—曲	下滑/缩小	鼠标向下
	左	短按	/	左滑/快退	鼠标向左
	右	短按	/	右滑/快进	鼠标向右
@键		长按	长按3秒进入VR模式	/	长按3秒进VR模式
电源键		短按		长按3秒开机/关机	/
A键 短i		短按	音量-	音量-	音量-
X键 短按		短按	音量+	音量+	音量+
B键 短接		短按	返回	返回	返回
Y键 短按		短按	静音	/	/
			苹果设	备	
			音乐模式 (@+B)	VR模式	鼠标模式(@+A)
确认键			暂停,播放	暂停,播放	确认
	上	短按	上一曲	/	鼠标向上
360°採杆	下	短按	下一曲	/	鼠标向下
300 揺竹	左	短按	/	/	鼠标向左
	右	短按	/	/	鼠标向右
@键 长		长按	长按3秒进入VR模式	/	长按3秒进VR模式
电源键		长按		长按3秒开机/关机	/
A键		短按	音量-	音量-	音量-
X键		短按	音量+	音量+	音量+
B键		短按	Home	Home	Home
Y键		短按	静音	/	/

由于手机系统或APP的更新功能可能会有所变化,本公司恕不另行通知,敬请谅

(@+X键 - 横向操作模式)

在手机应用商店下载,如《魂斗罗》、《三国战纪》等游戏。 (此模式只适用于安卓手机,苹果手机不能使用).

●规格参数	
项目	规格
产品型号	SC-B03
产品尺寸	43*37*110mm
无线协议	Wireless 5.0 compliant
无线距离	2-10M
支持系统	Android iOS
电池类型	标准 AAA7号碱性电池
连续使用时间	约40小时
工作电流	0.5-8mA

1.部分安卓设备检测到最后一次所使用的蓝牙设备的时候具备自动连接功能。 当发现无法配对成功时请检查安卓设备或本产品是否已经与其他设备处于连 接状态,如果是,请先解除连接后再配对。

2.如果曾经连接过本产品,但本产品与其他设备进行过配对后出现连接困难 的话,请重新配对再连接。

3.由于个别手机存在蓝牙与WiFi信号于扰问题,建议在连接前关闭WiFi。

4.当意外情况导致出现异常时,请取出电池后重新装入。

5.当指示灯亮度不够时,说明电池电最已经不足,此时用户应该更换电池。

感谢您选购 《VR Shinecon》 产品请您先核对装箱清单





主机一台



Without authorization in written of Shinecon,to copy all or part of this manual is not allowed (Excluding comments on an article or simple











经销商电话: 网址:_

退换货原因:



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction