



# User Manual

- 1409-2
- 1409-3



Figure 1

### Activation of video sources:

-  Long press to activate video sources
-  Return to OEM Display

## Activation/Deactivation of Caravan Camera in Reverse

### To Activate the Caravan Camera:

- Turn the car on and wait for the system to boot up.
- Put the vehicle in Reverse gear. The system should default to the factory Reverse Camera.
- While in Reverse, long press the NAV button for 4 seconds.

### To Deactivate the Caravan Camera:

- Turn the car on and wait for the system to boot up.
- Put the vehicle in Reverse gear. The system should display the Caravan Camera.
- While in Reverse, long press the NAV button for 4 seconds. This will automatically change back to the Navigation Screen.
- Take the vehicle out of reverse gear, e.g. put in Park. The system should now default back to the reverse camera.

Watch a video of how to activate/deactivate:



Figure 2

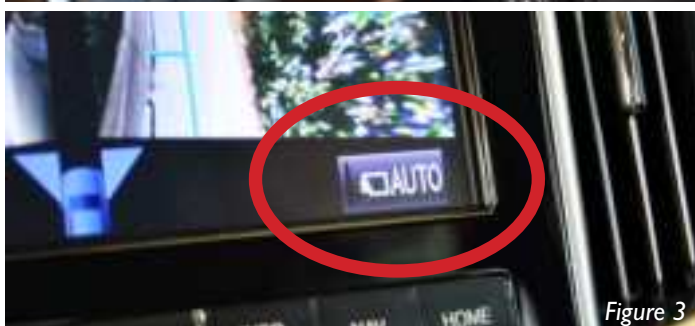


Figure 3

### \*\*\*FOR ALL VEHICLES WITH 360 DEGREE CAMERA\*\*\*

When using the RTC Function (Caravan Camera Override of the vehicle's factory reverse camera), it is important to first deactivate any of the vehicle's factory cameras that are set to **AUTO**.

If one or more of the camera views are set to **AUTO**, this will result in strange camera functionality when moving through the gears.

To deactivate the **AUTO** function, you can press the **VIEW** button (Figure 5) behind the left side of the steering wheel. Ensure that the **AUTO** icon at the bottom right of the touch screen on both camera screens is off as shown (Figure 6).

## Activation/Deactivation of PIP mode for Caravan Camera

### Activation of PIP for single Caravan Camera (AV1 only):



-  Activation: Long Press of Hang Up button on SWC
-  Deactivation: Long Press of Hang Up button on SWC



Figure 4

### Activation of PIP for dual Camera setup (AV1 & AV2):




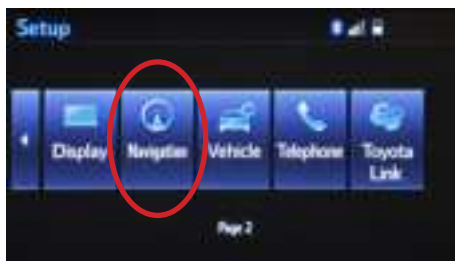
-  1st Long Press of Hang Up button on SWC:  
*Activates AV1*
-  2nd Long Press of Hang Up button on SWC:  
*Activates AV2*
-  3rd Long Press of Hang Up button on SWC:  
*Deactivates PIP mode.*




Figure 5

## How to Calibrate the Factory Navigation




### Step 1:

Access the *Setup* menu and select the *Navigation* option on page 2 of the Setup menu.

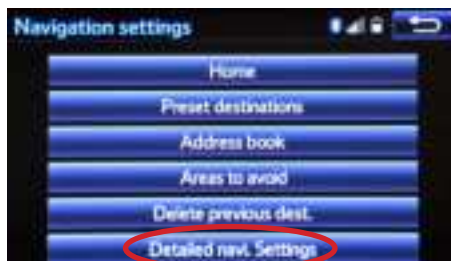

### Step 2:

Select the *Detailed navi. Settings* option of the *Navigation Settings* page.

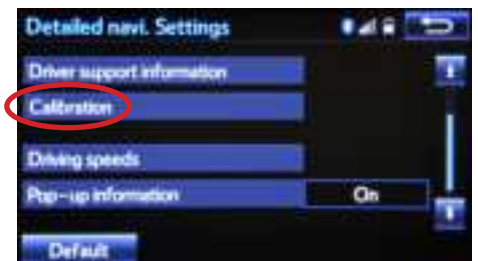

### Step 3:

Towards the bottom of the *Detailed navi. Settings* menu, click on the *Calibration* option to calibrate device.