

User Guide

Electronic Refrigeration Controller ERC 112

This user guide is intended to be used by OEMs for the purpose of programming ERC 112. It may also be useful for technicians. However, it is not intended as a user guide for end users.



Introduction

Application Temperature control for refrigeration appliances.
Front panel mounting.

Advantages The latest generation CPU, plenty of memory and high-end electronic components allow for a uniquely versatile software. Three separate password-protected user levels can be used to control more than 300 different parameters to fit all individual requirements.




Approvals R290/R600a end-use applications employing in accordance to EN/IEC 60335-2-24, annex CC and EN/IEC 60335-2-89, annex BB;
Glow wire according to EN/IEC 60335-1;
IEC/EN 60730
UL60730
NSF
CQC
EAC
Ukraine

Password protected The access level can be set separately for each parameter using KoolProg KoolProg Software. There are three levels of access 1, 2, 3:
- level 1 is for shop access;
- level 2 for technicians;
- level 3 for OEMs.
The access levels cannot be set using the buttons. Passwords for the different levels can however be altered for the level of access you have, e.g. a level 2 user can change the password for level 1 and level 2 but not level 3.

Danfoss
80G33.10

Danfoss
80G33.10

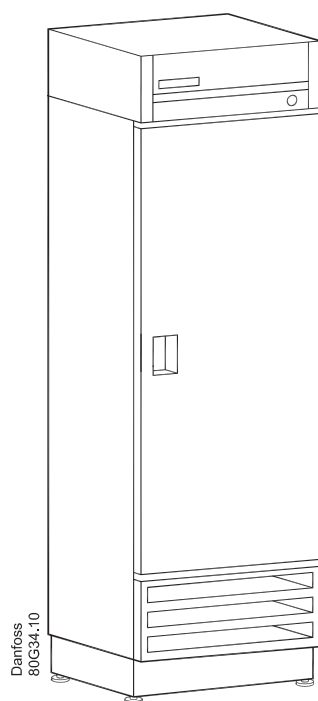

Danfoss
80G34.10

[illegible]

S3, S4 are optional

89C 112C
16K 4000/3000
Red Channel
7949254-4/429 1250-0-811
Display

S2, S3, S4 are optional

ENC 1120
 M0 9000 AD 2
 for cable
 112-9000-0000-0000-0000

Legend:

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

S3, S4 are optional

[illegible]

S2, S3, S4 are optional

Product overview

Display



Buttons




Clips



Front frame



Controller without front frame

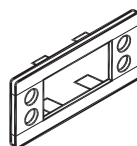

Front frame

"S1"

Temperature sensor for cabinet

"S2"

Temperature sensor for defrost

"S3"


Temperature sensor for condenser, light sensor or Motion sensor

"S4"

Temperature sensor
Pt 1000 ohm/0°C
or door signal

"di"

Door signal or
Motion sensor

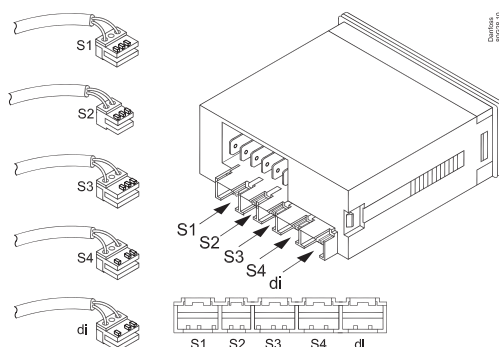

Control temperature sensor

There are different lengths.

Defrost temperature sensor

Should be mounted on the evaporator.

Condenser temperature sensor

Should be mounted on the condenser.

Light sensor

Is optional and is used to measure the level of ambient light around the cabinet so that night and day "Economy", "Normal" modes of operation can automatically be set, as well as the brightness of the display.

Motion sensor

Should be mounted on the cabinet front.

Door sensor connector cable

Is optional and is a connector and cable with spade terminals compatible with door contacts used in refrigeration applications.

The function of an input can be reprogrammed, but the connector can not be moved.
The connector is designed to only one location.
"S1" to "S1", "S2" to "S2", etc.

Quick programming

Software for PC



KoolProg

Software from Danfoss for programming the ERC-controller via a PC rather than with the front panel buttons.

<https://www.danfoss.com/en/service-and-support/downloads/dcs/koolprog/>


KoolKey (EKA200)



KoolKey (EKA 200)


KoolKey is a smart device that acts as a Gateway to connect ERC controller to PC software "KoolProg" as well as a Programming key for fast programming.

Refer to the [KoolKey installation guide](#) for detailed instructions.

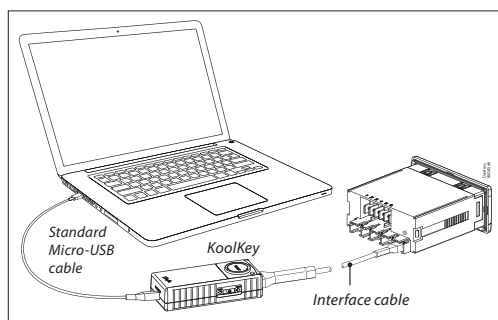


KoolKey as a Gateway

KoolKey in Gateway mode connects the ERC controller to PC to work online with PC software "KoolProg".

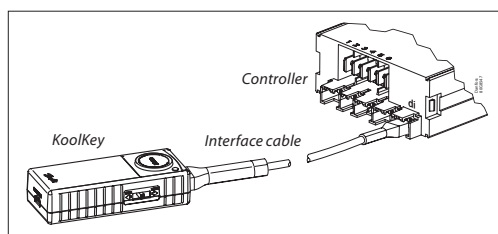

KoolKey as a Programming key is used for transferring parameter settings files from the KoolKey to the controller and vice versa (bidirectional setting file transfer)

Mass programming Key (EKA 201)

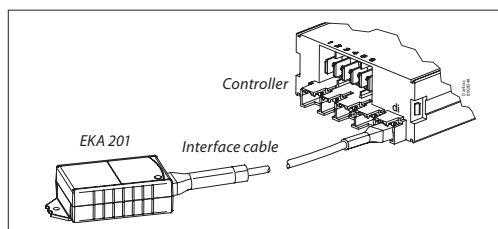

Mass Programming Key (EKA 201)

Mass Programming Key is a simple programming key for programming the controller in production assembly line. This is write only device and requires KoolProg software to load the setting file in to the device.

Refer to the [EKA 201 installation guide](#) for detailed instructions.

Technical specs

Power Supply	100 - 240 V AC Switch mode power supply. Average 0.7 W		
Purpose of control	To control commercial Refrigeration Applications		
Construction of Control	Electronic control for incorporation for use in Class I and Class II appliance		
Automatic Action	Micro- disconnection on operation type 1.B		
Input	5 inputs: 4 analogue (digital), 1 digital; user specific assignment; Optional: External button input		
	• Cabinet air/Evaporator/Condenser	• Door sensor: all types, user specific	
	• Light sensor: Danfoss ECO light sensor	• Motion sensor	
Output		UL60730	EN60730
	"DO1" (Compressor relay)	120 V AC: 16 A resistive/FLA16/LRA72 240 V AC: 10 A resistive/FLA10/LRA60	16(16) A
	"DO4"	8 A resistive, FLA2/LRA12, TV-1	8 A resistive, 2(2) A
	"DO5"	FLA2/LRA12, TV-1	8 A resistive, 2(2) A
	"DO6"	FLA2/LRA12, TV-1	8 A resistive, 2(2) A
			Max 10 A total "DO4-6"
Probes	Danfoss NTC sensors and Danfoss ECO accessories (Light, Motion and Door sensors) Danfoss Pt 1000 ohm/0°C		
Connectors	Modular connector system for OEM customers, with optional output screw terminal adapter; Input connector type: Rast2 5 Edge connectors; output connector type: RAST 5 standard		
Programming	Programming with Danfoss KoolProg PC software, Docking station and Programming key		
Assembly	Front mounting; Brackets		
Display	LED display, 3 digit, decimal point and multi functionality icons; °C/°F scale		
Keypad	4 buttons (integrated IP65 design), 2 left, 2 right; user programmable		
Operating Conditions	0 – +55 °C, 93% RH, non-condensing		
Storage Conditions	-40 – +85 °C, 93% RH		
Range of Measurement	-40 – +85 °C with standard sensors (-40 – +200 °C when using NTC 100K sensors)		
Protection	Front: IP65 Rear: water and dust protection corresponds to IP31, accessibility of connectors limit rear part rating to IP00		
Environmental	Pollution degree II, non-condensing		
Resistance to heat & fire	Category D (UL94-V0)		
EMC category	Category I		
Over Voltage Category	Category II (IEC 60664-1)		
Temperature for Ball Pressure Test	According to EN 60730-1, Annex G		
For SELV Circuits	Input Probes or Digital Input connected to SELV limited energy >15W		
Operating Cycles	Compressor relay: more than 175,000 at full load (16A (16A))		
Approvals	R290/R600a end-use applications employing in accordance to EN/IEC 60335-2-24, annex CC and EN/IEC 60335-2-89, annex BB Glow wire according to EN/IEC 60335-1 IEC/EN 60730 UL60730 NSF CQC EAC Ukraine		
	These approvals are only valid when used with recommended Danfoss accessories.		





IMPORTANT NOTE

The inputs are not galvanic isolated and are connected directly to the mains supply!
For that reason, door-switches, sensors as well as the cables must fulfil the reinforced insulation requirements.

Dimensions




Front mounting
(Lock with frame)

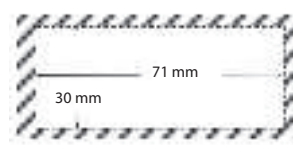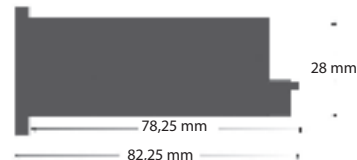


Rear mounting
(Lock with clips)

Connections


(Inputs and outputs are configurable)

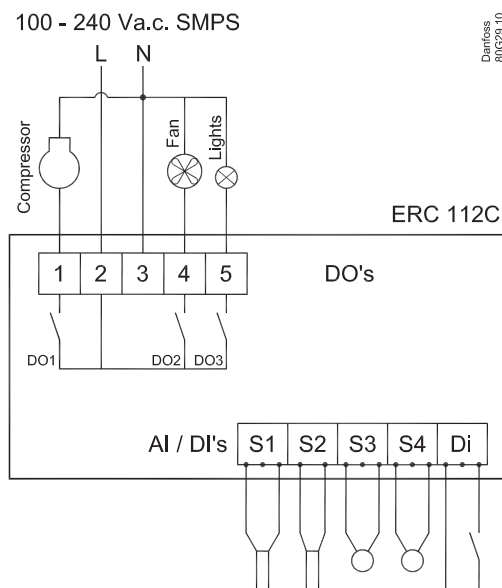


Danfoss
80G23.10

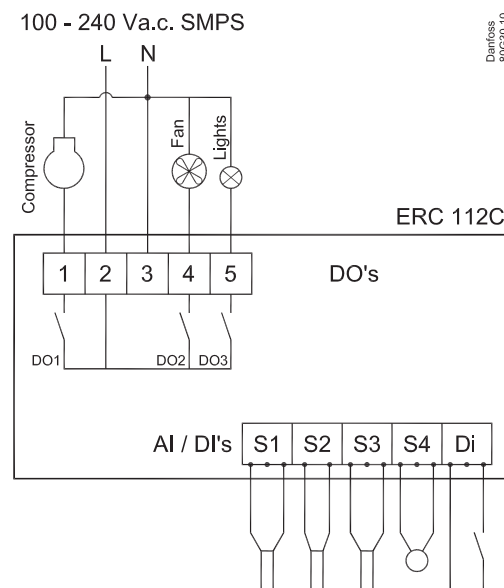

Danfoss
80G30.10

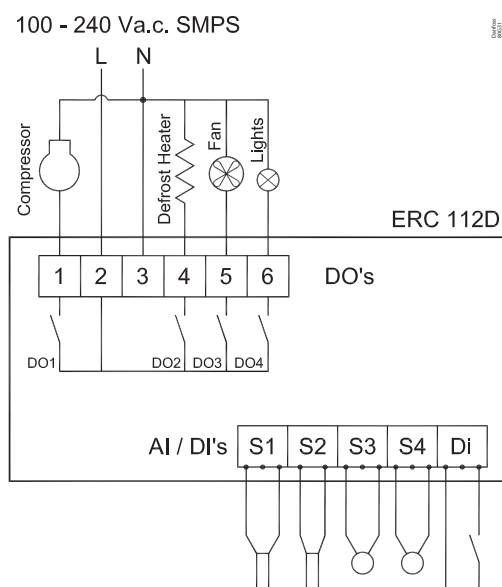

Danfoss
80G32.10

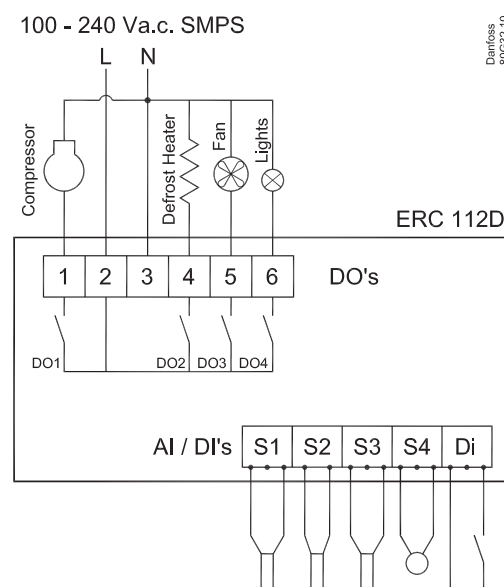

Danfoss
80G32.10

Note

S4 Port can also be used to connect other sensors and Door sensor.

Code numbers

	Type	I-Pack	
		Qty.	Code no.
ECO	ERC 112C GDM - Red	27	080G3202
	ERC 112D GDM - Red	27	080G3203
	ERC 112C GDM - Blue	27	080G3206
	ERC 112D GDM - Blue	27	080G3207
	ERC 112C GDM - Red, STM32	27	080G3489
	ERC 112D GDM - Red, STM32	27	080G3490
	ERC 112C GDM - Blue, STM32	27	080G3491
	ERC 112D GDM - Blue, STM32	27	080G3492
SC	ERC 112C CFF - Red, Buzzer	27	080G3212
	ERC 112D CFF - Red, Buzzer	27	080G3213
	ERC 112C CFF - Blue, Buzzer	27	080G3216
	ERC 112D CFF - Blue, Buzzer	27	080G3217
	ERC 112C CFF - Red, Buzzer, STM32	27	080G3493
	ERC 112D CFF - Red, Buzzer, STM32	27	080G3498
	ERC 112C CFF - Blue, Buzzer, STM32	27	080G3494
	ERC 112D CFF - Blue, Buzzer, STM32	27	080G3499
	ERC 112D CFF - Red, Buzzer, STM32	27	080G3471
	ERC 112C CFF - Blue, Buzzer	27	080G3233
	ERC 112D CFF - Blue, Buzzer,	27	080G3413
	ERC 112C CFF - Blue, Buzzer, STM32	27	080G3496
	Temperature sensors		
	<i>-40 – 85 °C, PVC Standard, NTC 5 K</i>		
	S1, 470 mm, 3-pole	120	077F8751
	S1, 1000 mm, 3-pole	120	077F8757
	S1, 1500 mm, 3-pole	120	077F8761
	S1, 2000 mm, 3-pole	120	077F8765
	S1, 2200 mm, 3-pole	120	077F8767
	S1, 3000 mm, 3-pole	60	077F8769
	S1, 3500 mm, 3-pole	60	077F8723
	S1, 6000 mm, 3-pole	27	080G2019
	<i>-40 – 120 °C, TPE precision NTC 5 K, Santoprene</i>		
	S1, 1500 mm, 3-pole	120	077F8726
	<i>-20 – 175 °C, Silicone rubber cable, NTC 100 K</i>		
	S1/S3, 2000 mm, 3-pole	108	080G2043
	<i>-40 – 85 °C, PVC Standard, NTC 5 K</i>		
	S2, 1000 mm, 2-pole	120	077F8786
	S2, 1500 mm, 2-pole	120	077F8790
	S2, 2000 mm, 2-pole	120	077F8794
	S2, 3000 mm, 2-pole	60	077F8798
	S2, 6000 mm, 2-pole	27	080G2029
	S3, 1000 mm, 3-pole	120	077F8756
	S3, 1500 mm, 3-pole	120	077F8760
	S3, 2200 mm, 3-pole	120	077F8766
	S3, 3000 mm, 3-pole	60	077F8768
	<i>-100 – 200 °C, Pt 1000</i>		
	S4, 1000 mm, 3-pole	108	080G3350

Sx (di)= connector position.
Inputs are configurable.

Type	I-Pack	
	Qty.	Code no.
Light-sensors		
S3, 3000 mm, 3-pole	108	080G3315
Magnetic door sensor		
di/S4, 2000 mm, 3-pole	81	080G3322
di/S4, 3000 mm, 3-pole	81	080G3324
Cable door sensor		
di/S4, 1000 mm, 3-pole	108	080G3340
di/S4, 2000 mm, 3-pole	108	080G3341
di/S4, 3000 mm, 3-pole	108	080G3342
di/S4, 4000 mm, 3-pole	81	080G3343
Motion sensor		
S3/di, 3000 mm, 3-pole	27	080G3392
Clips		
Black (2 needed per controller)	54	080G3308
Programming tools and other accessories		
KoolKey (EKA 200)	1	080N0020
Mass Programming Key (EKA 201)	1	080N0021
Interface cable, ERC11x (to connect with EKA 200 and EKA 201)	1	080N0328
Interface cable to connect EKA 201 in gateway mode	1	080N0324
Power plug *		
6-pole with screw	54	080G3357

* The connectors are rated for 28 Amps max.

Note: For more information about temperature sensor types and connectors, please refer to Danfoss' technical brochure "NTC type temperature sensors for ETC & ERC controllers".

Operation

Programming Tools

The controller can be configured in four ways:
Using:

- KoolProg and KoolKey as Gateway
- KoolKey as Copy key
- KoolKey with Docking station
- Buttons on the front panel of the controller.

All these tools are supplied separately.

For technical literature and further information, please contact your local Danfoss representative.

Manual operation with buttons (Direct Access)

1 Press: variable direct function, e.g. "ECO"/"Night mode"
Sub function: back

1 Press: variable direct function, e.g. light
Sub function: "OK"



1 Press: temperature set point
Sub function: "up"

1 Press: temperature set point
Sub function: "down"

Examples

Changing the Desired Temperature Set point:

1. The display shows the current temperature.
2. Press "up/down" to access set point.
3. Press "up/down" to adjust set point.

After 30 seconds, the display automatically reverts to showing the current temperature

7. Press "OK".
8. Press "^" and "v" to find the desired setting.
9. Press "OK".

After 30 seconds, the display automatically reverts to showing the current temperature.
Or Press 2 x "Back".

Turning ON/OFF the ECO Function:

1. Press "ECO".
- The green "ECO" symbol is lit when in "ECO" mode.

Turn ON/Off the Light:

1. Press the "Light" button.

Acknowledging Alarms:

1. Display Flashing the alarm message.
2. Press any button to acknowledge.

Password protection:

1. Press "^" and "v" together and hold 5 seconds to access the menu.
2. The display shows "PAS" (only if configured for password protection).
3. Press "OK".
4. Press "^"/"v" to the code.
5. Press "OK".

Password protection on three levels:

1. Level 1: "shop" (daily use by shop personnel).
2. Level 2: "ser" (service technician).
3. Level 3: "OEM" (OEM programming).

Changing a Parameter

Some parameters may be hidden to you. Your access level will determine which parameters you can view and edit:

1. Press "^" and "v" together and hold 5 seconds to access the menu.
2. First parameter group is shown "tHE".
3. Press "^" and "v" to find the desired group.
4. Press "OK".
5. First parameter is shown.
6. Press "^" and "v" to find the desired parameter.

Info Menu:

The Info Menu feature provides the user with key information about the controller, allowing them to quickly access critical data points. Here are the informations that can be viewed through the Info Menu button (based on the button configuration on page 21):

Highest Cab Air Temperature: Displays the highest cab air temperature since the last power on.

Lowest Cab Air Temperature: Displays the lowest cab air temperature since the last power on.

Average Cab Air Temperature: Displays the average cab air temperature since the last power on.

Active Alarms: Displays any active alarms currently being triggered in the system.

Resetting Temperature Values:

You can reset the highest, lowest, and average temperature values by pressing the Info Menu button for 5 seconds after entering the menu. This will clear the data collected since the last power on and start fresh.



Note:

Incorrect parameter settings can lead to inadequate cooling, excessive energy consumption, unnecessary alarms and in the case of temperature-sensitive food storage, breaches in food hygiene principles and regulations.



Only a trained operator should make changes to parameters.

Menu/functions


ERC menu code		Description
"tHE"		Thermostat settings
"SEt"	Min. -100.0°C Max. 200.0°C Default 2.0°C	Set point This parameter defines desired temperature to be maintained in the cabinet or storage area. The set point can be locked to a range within "HSE" and "LSE" settings. The set point can be changed quickly by simply pressing the "temperature up/down" buttons.
"SPr"	Min. 0.0 Max. 1.0 Default 0.5	Current set point adjustment value diF * SPr The default value is set to 0.5 and the parameter is hidden by default. "Spr" defines the position of the set point in relation to cut-in and cut-out. "Spr=0,5" sets the set point mid between cut-in and cut-out. "Spr=0" sets the set point at the cutout. "Spr=1" sets the set point at cut-in.
"diF"	Min. 0.0 K Max. 20.0 K Default 2.0 K	Thermostat differential This defines the difference between the cut-out and the cut-in. The desired temperature is determined by "SPr" and "diF".
"HSE"	Min. -100.0°C Max. 200.0°C Default 50.0°C	Upper limit of thermostat set point Define the temperature range limit of the controller. Once set, the desired temperature (set point) can not go above "HSE" or below "LSE".
"LSE"	Min. -100.0°C Max. 200.0°C Default -35.0°C	Lower limit of thermostat set point Define the temperature range limit of the controller. Once set, the desired temperature (set point) can not go below "LSE".
"iCr"	Min. no Max. yes Default no	Initial cut in Comp relay action when Tair is between cut-in and cut-out at power-up: "yES": cut in the compressor. "no": cut out the compressor.
"SP2"	Min. -25 K Max. 25 K Default 0	Seasonal offset temperature (This parameter is only available from Product version PV03 onwards. Please check product label for Product version of your controller.) Offset value for set point and alarms when the seasonal offset button is activated. It is an additional offset mode to have separate set points during summer and winter season, which can be activated by long press button after configuring in assignments as "tEc".
"dF2"	Min. 0 K Max. 20 K Default 2	Seasonal differential Temperature differential during seasonal offset mode. Only applicable during normal operation. During ECO mode, the controller will be worked to the ECO Differential setting. See ECO management section for more details.
FAn		Fan settings
"FCt"	Default FAo	Fan control method "FAo": fan always on "SEt": fan follow compressor by manual settings. (FoC and FSC needs to be set accordingly) "Aut": automatical fan control
"Fod"	Min. 0 s Max. 240 s Default 0 s	Fan ON Delay/Fod Fod defines the fan delay (in seconds) after a compressor cut-in.
"FSd"	Min. 0 s Max. 240 s Default 0 s	Fan Stop Delay/FSd "FSd" defines the fan delay after a compressor cut-out. If both "Fod" and "FSd" are set to zero then the fan runs whenever the compressor runs.
"FoC"	Min. 0 s Max. 960 s Default 0 s	Fan ON Cycle/FoC Fan Stop Cycle/FSC When the compressor is OFF, and "FoC" or "FSC" are not zero, the fan runs in cycles according to "FoC" and "FSC".
"FSC"	Min. 0 s Max. 960 s Default 0 s	Example: "FoC=120" [sec] and "FSC=120" [sec] means that the fan runs for half the time when the compressor is OFF. When the compressor is on, the fan is always ON (according to "FAo" and "Fod").

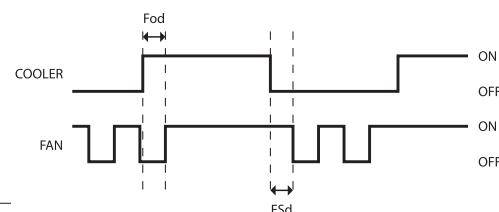 


	"FSt" Min. 0 s Max. 960 s Default 10 s	Fan Minimum Stop time Minimum stop time for fan protection.
	"FdC" Min. -10.0 K Max. 10.0 K Default 0.0 K	Fan Δt cut in (This parameter is only applicable with Automatic fan control "Aut" mode.) Delta T for fan to cut in which the temperature offset comparing with thermostat cut in temperature.
	"Fdt" Min. 0 s Max. 999 s Default 0 s	Fan stop time on door open The delay with wich the fan will be stopped after the door has been opened. "0": fan stop immediately when door open. "1-998": delay for fan stop after door open. "999": fan keep running all the time during door open.
	"FLt" Min. 0°C Max. 50°C Default 50	Fan limit temperature This function prevents the evaporator fan to operate if the temperature is above the fan limit temperature. If the defrost sensor registers a higher temperature than the one set here, the fan will be stopped to avoid the warm air circulation in the cabinet. This parameter is active only when evaporator sensor is connected.
	"FdF" Min. 1 K Max. 10 K Default 2	Fan limit Delta temperature This is the evaporator delta temperature for the fan to switch ON after it is switched off due to FLt setting.
Lig		Light settings
	"CLC" Min. on Max. dor Default on	Cabinet Light Control This parameter can be set to one of these alternatives to control the light in the cabinet: "on": always ON. "oFF": always OFF. "dor": door sensor only.
	"Lod" Min. 0 s Max. 300 s Default 0 s	Light OFF delay Number of seconds the light will stay ON after the door has been closed.
Pud		Pull Down settings
		Pull down (sometimes known as Super Cool) is a procedure for improving cooling performance, accelerating the time used to reach the desired temperature. Pull down settings overrule all other settings.
	"Pit" Min. -40.0°C Max. 50.0°C Default 50.0°C	Pull Down Initiate Temperature This parameter indicates the temperature which causes a pull down to start. If the temperature measured inside the cabinet exceeds this value for longer than one hour, then pull down will start. The compressor will have already cut-in, so the only effect is to stop defrost cycles until the desired temperature is reached. The period of one hour is fixed and cannot be altered.
	"PCy" Min. 0 min Max. 360 min Default 30 min	Pull Down Cycling This is the duration in minutes of the compressor cycling at the reduced set point temperature. Once the desired pull down limit temperature "PLt" has been reached during pull down, the compressor will continue to cycle ON/OFF for the duration of "PCy". At the end of the period defined by "PCy", the set point temperature will return to normal and pull down will cease.
	"Pdi" Min. 0 hour Max. 48 hour Default 15 hour	Pull Down Defrost Interval This is the time between defrost cycles during pull down. It is measured in hours and can be up to 48 hours. During pull down, this setting overrides the defrost interval and defrost time settings (see the defrost section).
	"Pdd" Min. 0 hour Max. 48 hour Default 24 hour	Pull Down Duration Maximum time for pull down. If time expires pull down will stop, regardless of temperature.

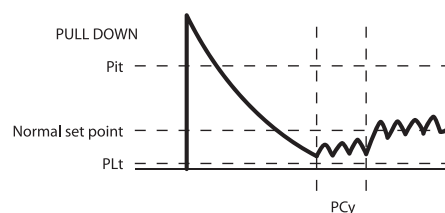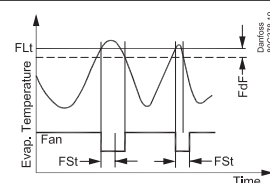


	"PLt" Min. -55.0°C Max. 55.0°C Default 0.0°C	Pull Down Limit Temperature This parameter sets the minimum allowed temperature during pull-down. In order to protect valuable contents you must always specify the absolute minimum temperature allowed in your application. For glass door merchandisers 0°C/32°F protects bottles from freezing; for commercial fridges you may opt for a slightly higher temperature (e.g. 2°C)
	"Prt" Min. 0.0 K Max. 10.0 K Default 0.1 K	Pull Down Reduction Temperature Δt The controller calculates a lower set point during pull down mode to increase the cooling capacity of your appliance. For each hour the cabinet temperature is above the pull down initiate temperature, the set point is reduced with the value of "Prt".
dEF		Defrost settings
	"dFt" Default no	Defrost Type "no": defrost function is disabled. "EL": electrical defrost. "Hgd": hot gas defrost (contact Danfoss for details). "nat": OFF-cycle defrost (natural defrost).
	"Add" Min. no Max. yes Default no	Adaptive defrost "no": defrost controlled by time. "yE5": automatic defrost control activated.
	"dtt" Min. 0.0°C Max. 25.0°C Default 6.0°C	Terminate Temperature This parameter defines at what temperature the defrost cycle will stop. The temperature is given by the evaporator sensor or by the cabinet temperature sensor if no evaporator sensor is used.
	"drt" Min. 0.0°C Max. 200.0°C Default 5.0°C	Defrost reset temperature The defrost counter is saved and restored at power-up, but if the temperature sensor, used for defrost, is higher than this value at power-up, it is assumed that the evaporator is free of ice and the defrost counter will be cleared.
	"dii" Min. 1 hour Max. 96 hour Default 6 hour	Defrost minimum Interval/dii Defines the minimum time period between the start of two defrost cycles. This parameter is applicable only in Adaptive defrost mode. Once the minimum interval has expired, controller will monitor the evaporator temperature and it will start the defrost if evaporator temperature goes below "dEt" or "dtt" value. If not, it will trigger the defrost once the maximum interval "dAi" has been reached. In case of time based defrost it always trigger the defrost at Maximum interval "dAi".
	"dAi" Min. 1 hour Max. 96 hour Default 7 hour	Maximum Interval Defines the maximum time period between the start of two defrost cycles.
	"dit" Min. 0 min Max. 240 min Default 5 min	Minimum Time Defines the minimum duration of a defrost cycle. During this period, the controller will not check the temperature. Once the minimum time has expired, the temperature will be checked and if the terminate temperature "dtt" has been reached, the defrost cycle will end. If dtt has not been reached, defrost will continue until either dtt is reached or the maximum time "dAt" reached, whichever occurs first.
	"dAt" Min. 0 min Max. 480 min Default 30 min	Maximum Time Defines the maximum duration of a defrost cycle. The controller will not allow a maximum time to be entered which is less than the minimum time, or a minimum time which is more than the maximum time.
	"dot" Min. 0 min Max. 60 min Default 0 min	Drip OFF Time This parameter can be set to between 0 and 60 minutes and defines how long the delay is between the heater being switched OFF and the compressor starting again.
	"Fdd" Min. 0 s Max. 600 s Default 0 s	Fan Delay after Defrost Defines how long the delay is between the start of the compressor after defrost and the fan starting again.
	"Ftd" Min. -25.0°C Max. 25.0°C Default 25.0°C	Fan Start Temperature This only applies if an evaporator temperature sensor is fitted. This parameter determines at what evaporator temperature the fan will start after a defrost cycle is complete. If the time set in "Fdd" occurs before the temperature set in "Ftd", the fan will start in line with "Fdd". If the temperature set in "Ftd" occurs first, then the fan will start in line with "Ftd". It is therefore a case of whichever parameter's setting is reached first which determines when the fan starts.

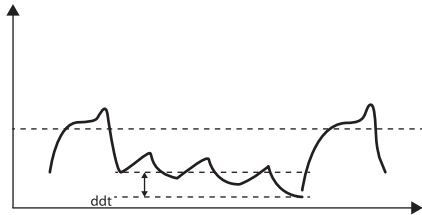	"dFA" Min. no Max. yes Default no	Defrost Fan On Set to "yES", the fan will constantly run during defrost cycles. Set to "no", the fan will not run during defrost cycles.
	"dCt" Min. no Max. yes Default no	Defrost by accumulated compressor run time If Yes: Defrost time based on actual accumulated compressor ON time "doC" If NO: Defrost Times based on elapsed time.
	"doC" Min. 0 hour Max. 24 hour Default 0 hour	Defrost by continuous compressor ON time Continuous compressor running can cause defrost. "0" = deactivated
	"dEt" Min. -50.0°C Max. 0.0°C Default -50.0°C	Defrost start evaporator temp Defrost will get triggered at this temperature after expiry of minimum defrost interval "dii" (adaptive defrost only).
	"ddt" Min. 0.0 K Max. 30.0 K Default 5.0 K	Defrost Δt Defrost Δt compare with evaporator temperature of first cut out after defrost to trigger defrost start. The defrost start if evaporator temperature has decreased more the "ddt"
		
	"idd" Min. 0 Max. 999 Default 100	Initial Defrost Interval The initial defrost interval determines the time for first defrost after power-up. The initial defrost is mainly intended for factory testing of the defrost functionality and can be set to expire after a number compressor cycles according to the setting of parameter idd. During normal operation, the defrost counter will be saved in memory and restored after power loss, making the initial defrost unnecessary.
	"idd" Min. 0 Max. 999 Default 100	Initial Defrost Duration The initial defrost duration is the number of compressor cycles before the initial defrost is deactivated. "0": "idd" No initial defrost. "1-998": number of compressor cycles before deactivation. "999": initial defrost always active.
CoP		Compressor settings
	"uPt" Min. no Max. yes Default no	Voltage protection "no": no voltage protection. "yES": voltage protection activated based on voltage related settings.
	"uLi" Min. 0 V AC Max. 270 V AC Default 0 V	Minimum cut-in voltage/uLi. Minimum cut-out voltage/uLo. Maximum voltage/uHi These three parameters provide voltage protection to the compressor. Start by setting "uHi", followed by "uLo" and "uLi".
	"uLo" Min. 0 V AC Max. 270 V AC Default 0 V	"uLi" : when the compressor is due to start, the voltage of the power supply will be checked and the compressor will only be allowed to start if it is at least the value given in this parameter. "uLo" : when the compressor is running, it will be switched OFF if the voltage goes below that given in this parameter.
	"uHi" Min. 0 V AC Max. 270 V AC Default 270 V	"uHi" : when the compressor is running, it will be switched OFF if the voltage exceeds that given in this parameter. If the compressor is already stopped, it will remain switched OFF.
	"EHd" Default no	Sensor Error Type "no": no sensor error handling. "SEt": in case of control sensor error, follow error run/stop time.
	"Ert" Min. 0 min Max. 60 min Default 0 min	Error Run Time The parameter only become active in the unlikely event of a broken temperature sensor. It is used to run the application in safety mode. At the same time the sensor error will be shown in the display. "Ert" define the duration the compressor will run. Example: "Ert=4" [min] and "SEt=16" [min] will provide an average cooling system activity of 20%. Ert and "SEt" values are based on OEM experience and are by default inactive.

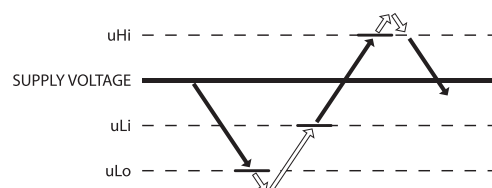


	"ESr" Min. 0 min Max. 60 min Default 1 min	Error Stop Time The parameter only become active in the unlikely event of a broken temperature sensor. It is used to run the application in safety mode. At the same time the sensor error will be shown in the display. "ESr" define the duration the compressor will be "idle".
	"CSr" Min. 0 min Max. 30 min Default 2 min	Minimum Stop Time It determines the minimum number of minutes the compressor must remain idle before a Temperature cut-in can take effect. For example, if the temperature sensor indicates that the cut-in temperature has been reached, but the number of minutes set in this parameter have not elapsed since the compressor last stopped, then the compressor will stay OFF. It will only start once the duration given by "CSr" has been reached provided the temperature is still high enough. "CSr" thus overrides the cut-in.
	"Crt" Min. 0 min Max. 30 min Default 0 min	Minimum Run Time It determines the minimum number of minutes the compressor must run before a Temperature cut-out can take effect. For example, if the temperature sensor indicated that the cut-out temperature has been reached, but the number of minutes set in this parameter have not elapsed since the compressor last started, then the compressor will continue. It will only stop once the duration given by "Crt" has been reached – provided the temperature is still low enough. "Crt" thus overrides the cut-out.
	"Cot" Min. 0 min Max. 480 min Default 0 min	Maximum OFF Time This is the maximum time in minutes the compressor is allowed to "idle" – up to 480 minutes. Cot is set to zero by default (inactive). If the controller is used on a draft beer (ice bank) application, this parameter can be used to control the ice thickness.
	"Cdd" Min. 0 min Max. 15 min Default 0 min	Compressor Door Open Delay/Cdd This parameter sets the delay in minutes before the compressor stops when the door is opened. If set to zero, the function is disabled.
	"Srt" Min. 0 min Max. 60 min Default 0 min	System resume after door open Fan and Compressor resume after cut out by door open.
	"Pod" Min. 0 s Max. 300 s Default 300 s	Power ON Delay This is the delay in seconds between power-on and the compressor being activated. Depends on the power ON temperature setting as explained below.
	"Pot" Min. -100.0 °C Max. 200.0 °C Default -100.0 °C	Power ON Temperature This parameter is used to accelerate the first application test on the OEM assembly line; if the cabinet temperature is higher than this parameter the power ON Delay is overruled and the outputs are activated without delay.
	"Scd" Min. 0 sec Max. 960 sec Default 10 sec	Second Compressor delay¹⁾ This parameter defines the time delay to start the second compressor in dual compressor application, This parameter is active only when the second compressor is configured to one of the auxiliary relays under assignment "ASI" menu group (o2C or o3C or o4C) ¹⁾ This parameter applicable only for dual compressor code 080G3471.
Con		Condenser Protection settings
		NOTE: A condensor temperature sensor is required to use these parameters. Condenser protection is generally used in dusty environments where the condenser may accumulate a layer of dust or dirt and therefore be at risk of overheating.
	"CAL" Min. 0°C Max. 200°C Default 80°C	Condenser Alarm Limit/CAL This parameter sets the temperature for the condenser at which an alarm will be generated.
	"CbL" Min. 0°C Max. 200°C Default 85°C	Condenser Block Limit/CbL This parameter sets the temperature which if reached will cause the compressor to switch OFF.



	"CoL" Min. 0°C Max. 200°C Default 60°C	Condenser OK Limit/CoL This parameter sets the temperature at which the compressor is allowed to start again after the temperature set in "Cbl" above has been exceeded and the compressor stopped.
	"CLL" Min. -100°C Max. 20°C Default -5°C	Condenser Low Limit/CLL This parameter sets the lowest (condenser) temperature at which the compressor is allowed to start.
diS		Display settings
		NOTE: some display parameters can be set in such a way that they may be illegal in some jurisdictions. Please check local legislation.
	"diC" Min. no Max. yes Default no	Display intensity auto control "no": display intensity use fixed value.
	"din" Min. 2 Max. 10 Default 10	Display Intensity The controller can have its display intensity (brightness) set in one of two ways: A) With a Danfoss ambient light sensor attached, the brightness of the display is adjusted automatically according to the ambient light level (see the assignments section). B) When no ambient light sensor is attached, the display intensity can be set to a fixed intensity. Both options are on a scale of 1 to 10, where 10 is the brightest.
	"CFu" Min. °C Max. °F Default °C	Display Unit This parameter sets the display to Fahrenheit or Celsius. Switching from one to the other will cause all temperature settings to be automatically updated accordingly.
	"trS" Default SCo	Temp sensor to display "SCo": temperature control. "EuA": evaporator temperature. "Con": condenser temperature (condenser cleaning). "AuS": only for showing on display.
	"rES" Min. 0.1 Max. 1 Default 0.1	Display Resolution This parameter can be set to 0.1, 0.5 or 1 and affects the way the temperature is displayed. With the parameter set to 1, the display will only ever show temperatures rounded to the nearest whole degree. At 0.5, it will round the temperature to the nearest half degree for display. For example, 3.3 degrees will be shown in the display as 3.5 degrees and 3.9 as 4.0. With the parameter set to 0.1, no rounding occurs. This parameter does not affect the temperature itself, merely the display.
	"rLt" Min. no Max. yes Default no	Display Range Limit In some point of sales applications you may want to show the desired instead of the real temperature. This parameter sets whether the displayed temperature is the actual temperature or whether it is restricted to the cut-in / cut-out limits. Set to "nO" means that the actual temperature will be displayed. The parameter is set to "nO" by default.
	"ddl" Min. 0 min. Max. 10 min Default 0 min	Display Delay In order to provide a realistic temperature appearance for an application, a display delay can be set. The parameter sets the time constant τ (tau) of the moving average filter for the display. Physically, one time constant represents the time it takes the system's step-response to reach 66% of its final value and five time-constants the time it takes to reach 99% of its final value.
	"doF" Min. -10.0 K Max. 10.0 K Default 0.0 K	Display Offset This parameter is a relative value and allows the temperature displayed to be different to the temperature measured. For instance, at a measured temperature of 7°C and "doF" set to -2K, the displayed temperature will be 5°C instead.

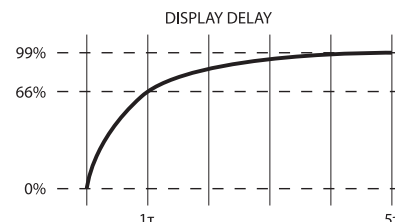

	"dLt" Min. 0 min Max. 60 min Default 15 min	Lock Time After Defrost In order not to show a rising temperature during defrosting, the displayed temperature is locked at the temperature shown at the start of the defrost cycle for the number of minutes set in this parameter. "0": no lock.
	"SEC" Min. no Max. yes Default no	Show Economy State If set to "yES", this parameter causes the display to show ECO when the system is in ECO mode. If set to "nO", the temperature continues to be displayed.
	"SSC" Min. no Max. yes Default no	Show Pull down state If set to "yES", this parameter causes the display to show SC when the system is in pull down mode. If set to "nO", the temperature continues to be displayed.
	"SHo" Min. no Max. yes Default no	Show Holiday "no": display will show temperature or ECO mode during holiday mode. "yES": display will show "HoL" during holiday mode.
	"SdF" Min. no Max. yes Default yes	Show Defrost If set to "yES", this parameter causes the display to show DEF when the system is in defrost mode. If set to "nO", the temperature continues to be displayed.
	"SCS" Min. no Max. yes Default yes	Show compressor symbol "no": compressor symbol will not show on display. "yES": show compressor symbol on display.
	"SFS" Min. no Max. yes Default yes	Show Fan symbol "no": fan symbol will not show on display. "yES": show fan symbol on display.
	"SdS" Min. no Max. yes Default yes	Show Defrost symbol "no": defrost symbol will not show on display. "yES": show defrost symbol on display.
	"SES" Min. no Max. yes Default yes	Show ECO symbol "no": ECO symbol will not show on display. "yES": show ECO symbol on display.
	"Ld" Min. -100.0°C Max. 200.0°C Default -100	Minimum Display value If the probe value is less than minimum display value mentioned in this parameter, it doesn't show the actual value and instead show this minimum only until the probe starts reading a higher value than minimum display value set here.
	"Hd" Min. -100.0°C Max. 200.0°C Default 200	Maximum display value - Controller will display actual temperature, if the probe value is between Maximum display value and Signaling threshold value and the trend of the probe is increasing (trend is based on past 10 readings) - Controller will display Error "Err", if the probe value is more than Signaling threshold value and the trend of the probe is increasing (based on the past 10 readings) - Controller will display "---" if the probe value is more than signaling threshold and trend of the probe is decreasing (based on the past 10 readings) - Controller will display "---" if the probe value is bigger than Max display value and the trend of the probe is decreasing (based on the past 10 readings)
	"St" Min. -100.0°C Max. 200.0°C Default 200	Signalling threshold value Temperature limit for Maximum display visualization
ALA		Alarm settings
	"HAt" Min. -100.0°C Max. 200°C Default 15.0°C	High Temp Alarm Absolute value. By setting "HAt" to the maximum alarms will be deactivated.

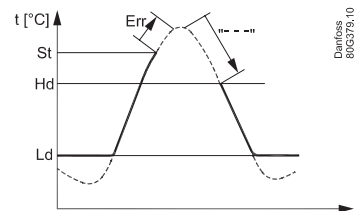
Danfoss
80G379-10

	"LAT" Min. -100.0°C Max. 200°C Default -50.0°C	Low Temp Alarm Absolute value. By setting "LAT" to the minimum value, alarms will be deactivated. In most situations, the low alarm delay will be set to 0 to warn about too low a temperature immediately.
	"Htd" Min. 0 min Max. 240 min Default 30 min	Alarm delay on high temperature alarm The number of minutes to wait before sounding an alarm once the high temperature alarm temperature is reached.
	"Ltd" Min. 0 min Max. 240 min Default 0 min	Alarm delay on low temperature alarm The number of minutes to wait before sounding an alarm once the low temperature alarm temperature is reached.
	"Pdd" Min. 0 min Max. 960 min Default 240 min	Pull down delay Normally, it is not necessary or desirable to sound an alarm during a pull down (the initial phase of reaching the desired temperature). This parameter prevents the high temperature alarm "HAt" sounding during pull down and after a defrost for the number of minutes set for the parameter. NOTE: it does not apply to the low temperature alarm "LAT".
	"dod" Min. 0 min Max. 60 min Default 2 min	Door Open delay It is possible to indicate to customers that a door has accidentally been left open. This parameter sets the delay in minutes before the alarm sounds. This is useful in environments where customers/users may hold the door open while making their selection. If the door is closed again before the set number of minutes is reached, the alarm does not sound. NOTE: a door sensor is required if this parameter is to be activated.
	"uAL" Min. no Max. yes Default no	Voltage alarm "no": no voltage alarm. "yES": voltage alarm activated.
	"LEA" Min. 0 hour Max. 96 hour Default 0 hour	Leakage alarm Leakage detection for compressor protection. If compressor operates for more than the set time, an alarm will be triggered. "0": disable
	"Abd" Min. 0 min Max. 999 min Default 0 min	Alarm Buzzer Duration The alarm sounds for 10 seconds, followed by silence for 50 seconds. One alarm sequence therefore lasts 60 seconds. These values cannot be changed. This parameter determines how long in minutes an audible alarm will continue while there is still a reason to have an alarm. If set to 999, the alarm will continue to sound until the reason for the alarm is cleared – for example the temperature has dropped enough or the door closed. In some cases, it may be necessary for a user or technician to take action in order to clear the alarm. If set to 0, the alarm will never sound.
	"ACA" Min. no Max. yes Default yes	Auto Clear of Alarm/Error/ACA If this parameter is set to "nO": The alarm status will not disappear automatically even if the condition which caused the alarm is no longer valid or present. If set to "yES": As soon as the condition which caused the alarm is no longer valid or present, the alarm status will automatically change back to inactive. There will be no trace of the alarm having occurred. In general, glass door merchandise applications will be set to "yES" and commercial fridges and freezers set to "nO". For example, if the temperature goes too high for a period there may be food safety considerations in a freezer containing food but not in a fridge with cold drinks.
AHC		Automatic Heater settings
		Automatic Heater Control applies reverse cooling mode (heating) to your refrigeration appliance where the ambient temperature can go below the set point. A) It will use the Defrost output to control the heating function when needed. Defrost operations will operate as normal. B) Automatic heater will only operate when using Electric Defrost. It is disabled with Natural Defrost or Hot Gas Defrost.

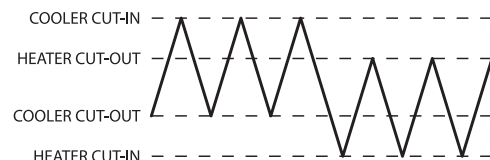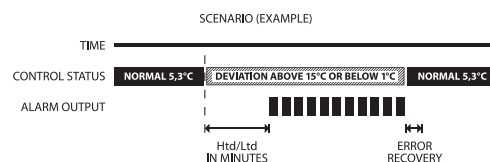

	"AuH" Min. no Max. yes Default no	Automatic Heater Mode Enable This setting is normally set to "no". When set to "yES", parameters "End", "AHS" and "AHD" apply.
	"End" Min. 0 min Max. 360 min Default 60 min	Energy Mode Delay This is the delay in minutes between the heater and the compressor operation. The heater is not allowed to start until this number of minutes has expired after the compressor has cut out and vice versa.
	"AHS" Min. -100.0 °C Max. 200.0 °C Default 2.0°C	Auto Heat set point Set point of auto heating.
	"AHD" Min. 0.0 K Max. 20.0 K Default 2.0 K	Auto heat differential Thermostat differential for auto heating.
ECS		ECO strategy
		NOTE: some of these parameters require the installation of the Danfoss Ambient Light Sensor. The Danfoss USB Gateway in combination with "KoolProg Software" allows for real time measurement of the current light intensity. Danfoss recommends testing and adjusting "SLd" and "SLn" values according to customers' specific needs.
	"ECO" Min. no Max. yes Default Yes	ECO ON/OFF ECO active or not. If no all other settings are not active.
	"EdA" Min. 1 Max. 10 Default 1	Door Actions Times of door action to trigger exiting ECO
	"EPA" Min. 1 Max. 10 Default 1	Pir Actions Times of "PIR" action to trigger exiting ECO
	"ECt" Min. 0 min Max. 180 min Default 30 min	Action counter time It is the duration of time for which the controller will check for number of times of Door action or activity through PIR sensor (mentioned in "EDA" and "EPA" parameters) to exit the ECO mode.
	"Edd" Min. 0 min Max. 180 min Default 180 min	Door delay Door delay after door close to trigger entering ECO
	"EPd" Min. 0 min Max. 180 min Default 120 min	Pir delay "PIR" delay to trigger entering ECO
	"SLd" Min. 0 Max. 80 Default 5	Shop Light Day/SLd Shop Light Night/SLn These parameters are set as the percentage of the maximum light and determine when the device moves into or out of ECO mode for power-saving purposes. Requires Light Sensor. "SLd" is the amount of ambient light which will cause the device to move to normal/serving mode from ECO mode (normally occurs in the morning). "SLn" is the amount of ambient light which will cause the device to move to ECO mode from normal/serving mode (normally occurs in the evening).
	"SLn" Min. 0 Max. 80 Default 3	
	"tto" Min. 0 hour Max. 168 hour Default 0 hour	Time to pull down Time that ERC must stay in ECO to go into Pulldown upon exiting ECO. E.g: If tto = 2, if the ERC stays in ECO for 2 or more hours, it will go into Pulldown after exiting ECO. If it stays in ECO for less than 2 hours, it will go to Serving Mode upon exiting ECO.
	"LSd" Min. 0 min Max. 180 min Default 0 min	Light Source delay on ECO Time delay for light source to change from serving mode source to ECO mode source.

	"Euu" Min. no Max. yes Default yes	EWU active on/OFF Enable or disable early wake up.
	"CLH" Min. 0 hour Max. 24 hour Default 6 hour	Shop close hour Shop is assumed to be closed when staying in ECO mode longer than shop close hour.
	"Erl" Min. 0 min Max. 240 min Default 120 min	Early wake up time offset Time of exiting ECO mode for next day= Time of first activity to exit ECO mode - the early wake-up time. "0": early wake up function disabled."
	"HoL" Min. 0 hour Max. 999 hour Default 72 hour	Holiday Length If controller stays for longer than HoL in ECO and no activity is detected, the controller will go into Holiday Mode. Early Wake Up is disabled.
ECA		ECO management
	"Eto" Min. -25.0 K Max. 25.0 K Default 4.0 K	Eco Temperature Offset This parameter gives a relative temperature in degrees. It is the difference in temperature for ECO mode operation compared to normal mode. NOTE: setting a temperature offset may be illegal in some jurisdictions.
	"Hto" Min. -25.0 K Max. 25.0 K Default 6.0 K	Holiday Temperature Offset Increase or decrease of temperature with respect to normal mode during holiday mode.
	"diE" Min. 0.0 K Max. 10.0 K Default 2.0 K	ECO Differential Thermostat differential for ECO.
	"FoE" Min. 0 s Max. 960 s Default 0 s	ECO Fan on cycle On time for fan during compressor OFF period in ECO mode.
	"FSE" Min. 0 s Max. 960 s Default 0 s	ECO Fan stop cycle OFF time for fan during compressor OFF period in ECO mode.
	"ELC" Default on	ECO Cabinet light control "on": always ON (Button is default to control light for all these options). "oFF": always OFF. "dor": door sensor only.
	"ELd" Min. 0 min Max. 10 min Default 5 min	Eco Light Delay This parameter causes a delay to the switch from normal to ECO mode when the shop lights are switched ON or OFF. The ambient light sensor detects the change in light level and causes a switch mode. With this parameter set to zero, the switch OFF mode occurs immediately. If not set to zero (max: 10 minutes), then the change will be delayed by the number of minutes set.
ASi		Assignments settings
	"uSA" Min. no Max. yes Default no	MODBUS Safety "no": MODBUS auto detection is enable and serial communication is available for configuration KoolProg Software. "yES": MODBUS communication is deactivated.

	"t1A" Min. -20.0 K Max. 20.0 K Default 0.0 K	Air Temperature Adjustment (applies to non-Danfoss temperature sensors only) This parameter is a relative value and allows adjustment of the control sensor temperature. For instance, at a measured temperature of 7°C and "tAd" set to -2 K, the input from the control sensor will be 5°C instead.
	"t2A"	
	"t3A"	
	"t4A"	
		Inputs and outputs are configurable There are two steps: 1. Define the type of sensor attached to the input: - temperature : light/digital. 2. Define the application for the sensor: - temperature : control/condenser/evaporator. - light : ECO/display/both. - motion - digital : door sensor. Please contact your local Danfoss representative for information about default settings. NOTE: coded sensors will impact on the number of possible configurations. For instance: Danfoss supplies only 2-pole defrost sensors, so input "S3" will most likely be used as a defrost/evaporator temperature sensor input.
	"S1C" Default Stn	S1 Config/S1C S2 Config/S2C S3 Config/S3C S4 Config/S4C Available options are: "Stn": for a standard temperature sensor NTC 5 K @ 25°C and TPE precision. "Htn": for a high temperature sensor NTC 100 K @ 25°C. "Pt1": for a temperature sensor Pt1000 ohm @ 0°C (only "S4"). "Ldr": for a light sensor (values given in Luminens). "dig": for a digital sensor with simple ON/OFF indication (motion, magnet, switch, button).
	"S2C" Default Stn	
	"S3C" Default Stn	
	"S4C" Default Stn	
	"S1A" Default SCo	S1 Application/S1A S2 Application/S2A S3 Application/S3A S4 Application/S4A Available options are: "nC": not connected. "SCo": temperature control. "EuA": evaporator temperature. "Con": condenser temperature (Condenser cleaning). "AuS": only for showing temperature on display. "Ldr": light sensor, Luminens. "ECo": external input to control ECO mode. "doC": door contact, contact closed when door closed. "doo": door contact, contact open when door closed. "Pir": motion sensor (only "S3"). "bt5": button 5 (only "S4").
	"S2A" Default nC	
	"S3A" Default nC	
	"S4A" Default nC	
	"diC" Default non	DI Config This is the digital input used for a digital sensor or bus communications. "non": not used. "doC": door contact, contact closed when door closed. "doo": door contact, contact open when door closed. "ECo": external input to control ECO mode. "Pir": motion sensor. Passive infrared.

	"o1C" Default CoP	D01 Config "CoP": direct compressor control. "PiC": pilot Relay (no zero cross) – if using pilot relay to control a compressor, this option must be used instead of "CoP". "HEt": heating application, inverse output. "PiH": pilot heat relay (no zero cross).																														
	"o2C" Default dEF	D02 Config/o2C D03 Config/o3C D04 Config/o4C																														
	"o3C" Default FAn	"no": not used. "dEF": electric defrost heater/valve for hot gas. "ALA": alamm output.																														
	"o4C" Default Lig	"FAn": fan control. "Lig": light control. "SCC": Second compressor control (applicable only for dual compressor code 080G3471).																														
	"b1C" Default noP	Lower left button: Button 1 Config (short press)/b1C Button 1 Config (long press)/b1L Upper left button: Button 2 Config (short press)/b2C Button 2 Config (long press)/b2L Upper right button: Button 3 Config (short press)/b3C Button 3 config (long press)/b3L Lower right button: Button 4 Config (short press)/b4C Button 4 Config (long press)/b4L The buttons can be programmed as follows:<table><thead><tr><th>Short press function</th><th>Long press function (3 s.)</th></tr></thead><tbody><tr><td>"noP": not operating</td><td>"noP": not operating</td></tr><tr><td>"tP": increase set point</td><td>"tP": increase set point</td></tr><tr><td>"tn": decrease set point</td><td>"tn": decrease set point</td></tr><tr><td>"ECo": toggle Eco mode</td><td>"ECo": toggle Eco mode</td></tr><tr><td>"Lig": toggle light</td><td>"Lig": toggle light</td></tr><tr><td>"dEF": toggle defrost</td><td>"dEF": toggle defrost</td></tr><tr><td>"SuP": toggle super-cool/pull down</td><td>"SuP": toggle super-cool/pull down</td></tr><tr><td>"diP": increase display intensity</td><td>"diP": increase display intensity</td></tr><tr><td>"din": decrease display intensity</td><td>"din": decrease display intensity</td></tr><tr><td>"CFA": toggle °C and °F</td><td>"CFA": toggle °C and °F</td></tr><tr><td></td><td>"PoF": ERC power ON/OFF</td></tr><tr><td></td><td>"HoL": enter holiday mode</td></tr><tr><td></td><td>"inF": enter info menu</td></tr><tr><td></td><td>"tEc": Toggle Winter & Summer Eco mode</td></tr></tbody></table> NOTE: Your assignments may not be shown on the printed buttons. We advice to use this functionality together with the fully integrated mounting model only. 	Short press function	Long press function (3 s.)	"noP": not operating	"noP": not operating	"tP": increase set point	"tP": increase set point	"tn": decrease set point	"tn": decrease set point	"ECo": toggle Eco mode	"ECo": toggle Eco mode	"Lig": toggle light	"Lig": toggle light	"dEF": toggle defrost	"dEF": toggle defrost	"SuP": toggle super-cool/pull down	"SuP": toggle super-cool/pull down	"diP": increase display intensity	"diP": increase display intensity	"din": decrease display intensity	"din": decrease display intensity	"CFA": toggle °C and °F	"CFA": toggle °C and °F		"PoF": ERC power ON/OFF		"HoL": enter holiday mode		"inF": enter info menu		"tEc": Toggle Winter & Summer Eco mode
Short press function	Long press function (3 s.)																															
"noP": not operating	"noP": not operating																															
"tP": increase set point	"tP": increase set point																															
"tn": decrease set point	"tn": decrease set point																															
"ECo": toggle Eco mode	"ECo": toggle Eco mode																															
"Lig": toggle light	"Lig": toggle light																															
"dEF": toggle defrost	"dEF": toggle defrost																															
"SuP": toggle super-cool/pull down	"SuP": toggle super-cool/pull down																															
"diP": increase display intensity	"diP": increase display intensity																															
"din": decrease display intensity	"din": decrease display intensity																															
"CFA": toggle °C and °F	"CFA": toggle °C and °F																															
	"PoF": ERC power ON/OFF																															
	"HoL": enter holiday mode																															
	"inF": enter info menu																															
	"tEc": Toggle Winter & Summer Eco mode																															
	"b1L" Default PoF																															
	"b2C" Default dEF																															
	"b2L" Default inF																															
	"b3C" Default tP																															
	"b3L" Default ECo																															
	"b4C" Default tn																															
	"b4L" Default Lig																															
	"b5C" Default noP	<table><thead><tr><th>Short press function</th><th>Long Press function (3 s.)</th></tr></thead><tbody><tr><td>"noP": not operating</td><td>"noP": Not operating</td></tr><tr><td>"ECo": toggle ECO mode</td><td>"ECo": Toggle Eco mode</td></tr><tr><td>"SuP": toggle super-cool/pull down</td><td>"SuP": Toggle Super-Cool /Pull-down</td></tr><tr><td>"Lig": toggle light</td><td>"Lig": Toggle light</td></tr><tr><td>"dEF": toggle defrost</td><td>"dEF": Toggle defrost</td></tr><tr><td></td><td>"PoF": ERC power ON/OFF</td></tr><tr><td></td><td>"HoL": enter holiday mode</td></tr></tbody></table>	Short press function	Long Press function (3 s.)	"noP": not operating	"noP": Not operating	"ECo": toggle ECO mode	"ECo": Toggle Eco mode	"SuP": toggle super-cool/pull down	"SuP": Toggle Super-Cool /Pull-down	"Lig": toggle light	"Lig": Toggle light	"dEF": toggle defrost	"dEF": Toggle defrost		"PoF": ERC power ON/OFF		"HoL": enter holiday mode														
Short press function	Long Press function (3 s.)																															
"noP": not operating	"noP": Not operating																															
"ECo": toggle ECO mode	"ECo": Toggle Eco mode																															
"SuP": toggle super-cool/pull down	"SuP": Toggle Super-Cool /Pull-down																															
"Lig": toggle light	"Lig": Toggle light																															
"dEF": toggle defrost	"dEF": Toggle defrost																															
	"PoF": ERC power ON/OFF																															
	"HoL": enter holiday mode																															
	"b5L" Default noP																															
	"PS1" Min. 0 Max. 999 Default 0	Password level 1 / PS1 Password Level 2 / PS2 Password Level 3 / PS3 These assign passwords to the three levels of access. The password is a three-digit number. Access levels are Shop, Service and OEM. You may not therefore have access to change all the passwords. Passwords are entered by using the up and down arrow buttons. Danfoss advises against using passwords which are easy to remember or enter, for example 111, 222, 123 etc. NOTE: When accessing the controller with 3 wrong password in a sequence ERC will automatically block access for 15 minutes.																														
	"PS2" Min. 0 Max. 999 Default 0																															
	"PS3" Min. 0 Max. 999 Default 0																															

Ser		Service information settings
		The parameters in the following section are READ ONLY and cannot be changed by the user. They provide information for technicians and OEM users. NOTE: the only parameters that can be configured are: "oEL", "oEn", "oEH". These parameters allow OEMs to enter their own product code.
	"ACt"	Accumulated Comp. run time
	"AFt"	Accumulated Fan run time
	"ALt"	Accumulated Light run time
	"AEt"	Accumulated ERC up time
	"SdI"	DI physcial DI pin state (ON; OFF).
	"uAC"	Voltage value Current main power supply voltage.
	"ouS"	DOs Status Current relay open closed status. "IIII" = all relay ON (Upper bar for on, Lower bar for OFF). "I/" = DO1 ON, DO2 OFF, DO3 & DO4 NA (no bar if relay not mounted). "IIII" = all relay OFF (Upper bar for on, Lower bar for OFF).
	"rL1"	Relay 1 counter Thousands of cycles of compressor relay since manufacture.
	"rL2"	Relay 2 counter Thousands of cycles of no. 2 relay since manufacture.
	"rL3"	Relay 3 counter Thousands of cycles of no. 3 relay since manufacture.
	"rL4"	Relay 4 counter Thousands of cycles of no. 4 relay since manufacture.
	"int"	Interval Counter Compressor run time since last defrost.
	"dnt"	Defrost time counter Duration of last defrost cycle [min].
	"ont"	Door open counter "ont/100"=number of door openings since last reset.
	"Snu"	Serial number Serial number given at manufacturing.
	"Fir"	SW version Danfoss software version number.
	"HAr"	HW version Danfoss hardware version number.
	"onL"	OrderNoLow Danfoss order code number.
	"onH"	OrderNoHigh Danfoss order code number.
	"oEL"	OEM code Low
	"oEn"	OEM code Middle
	"oEH"	OEM code High
	"PAr"	Parameter version OEM parameter version number [requires EKA copy key update].
	"CHd"	Manufacturing date Programme date WWY: week number and year number (2010-19).

"SFC"	Set as Default Resets all parameters to last good OEM settings.
"Ctt"	Condenser Temp Temperature of the condensor sensor.
"Et1"	Evaporator1 Temp Temperature of the evaporator sensor1.
"Et2"	Evaporator2 Temp Temperature of the evaporator sensor2.
"AuS"	AUX Temp. Temperature of the AUX sensor. invisible.
"LLu"	Light level value Actual light level value from light sensor.
"Pir"	Motion sensor state
"att"	Raw Sair Temp
"ESS"	External ECO switch state
	Display messages
"unP"	Device is unprogrammed (relay output is locked)
"Prg"	Device has not finished programming (relay output is locked)
"Eco"	Device is in Eco mode
"SC"	Device is in pull-down mode (super-chill)
"dEF"	Device is defrosting
"HoL"	Device is in Holiday mode


Troubleshooting

Problem	Probable cause	Remedy
Compressor does not start	Waiting for compressor delay timer Defrost in progress Line voltage to compressor too low or too high	Check CoP->CSt Check CoP ->Pot /Pod Check dEF ->dit, dot Check CoP->uLi, uLo, uHi
Fan does not start	Door is open or door contact is defective	Fan stops when door is opened Check that door contact is ok
Defrost does not start	Controller in pull down mode	Defrost might be delayed during pull down Check parameter Pud->Pdi
Alarm does not sound	Alarm delayed	Check ALA->Htd, Abd Check Pud->Pdd
Display brightness is weak	Ambient light sensor broken	Replace sensor
Shift between ECO and normal mode does not happen on ambient light change	Ambient light sensor broken or light level not set properly	Check Eng->SLd, SLn
Display alternates between condenser and temperature	Condenser too hot	Clean condenser Check Con ->CAL, CbL
Display alternates between high and temperature	Temperature too high	Check ALA->HAt
Display alternates between low and temperature	Temperature too low	Check ALA -> LAT
Display shows "dEF"	Defrost in progress	Check diS ->SdF


Alarm code	Trigger	Automatic clearance	Outputs	Comments
"Hi"	Air temperature is higher than "ALA->Hat" for "ALA->Htd"	User configured	Blink "Hi" with the highest temperature; If configured: cut in alarm relay, beep the buzzer	High temperature alarm
"Lo"	Air temperature is lower than "LAT" for "Ltd"	User configured	Blink "Lo" with the lowest temperature. If configured: cut in alarm relay, beep the buzzer	Low temperature alarm
"Con"	Condenser temperature is too high or too low	User configured	Blink "Con". If configured: cut in alarm relay, beep the buzzer	Condenser alarm
"dor"	Door open for more than "ALA -> dod"	Always	Blink "dor". If configured: cut in alarm relay, beep the buzzer	Door open alarm
"uHi"	Line voltage is higher than "Cop->uHi"	Always	Blink "uHi". If configured: cut in alarm relay, beep the buzzer	High voltage alarm
"uLi"	Line voltage is lower than "Cop->uLi"	Always	Blink "uLo". If configured: cut in alarm relay, beep the buzzer.	Low voltage alarm
"LEA"	Compressor continuous running for more than "ALA->LEA"	Always	Blink "LEA". If configured: cut in alarm relay, beep the buzzer	Leakage alarm
"E01"	"S1" error	Always	Blink "E01". If configured: cut in alarm relay, beep the buzzer	"S1" sensor failure (short or open)
"E02"	"S2" error	Always	Blink "E02". If configured: cut in alarm relay, beep the buzzer	"S2" sensor failure (short or open)
"E03"	"S3" error	Always	Blink "E03". If configured: cut in alarm relay, beep the buzzer	"S3" sensor failure (short or open)
"E04"	"S4" error	Always	Blink "E04". If configured: cut in alarm relay, beep the buzzer	"S4" sensor failure (short or open)

Typical applications


Glass Door Merchandiser, No-frost freezer/sub-zero cooler

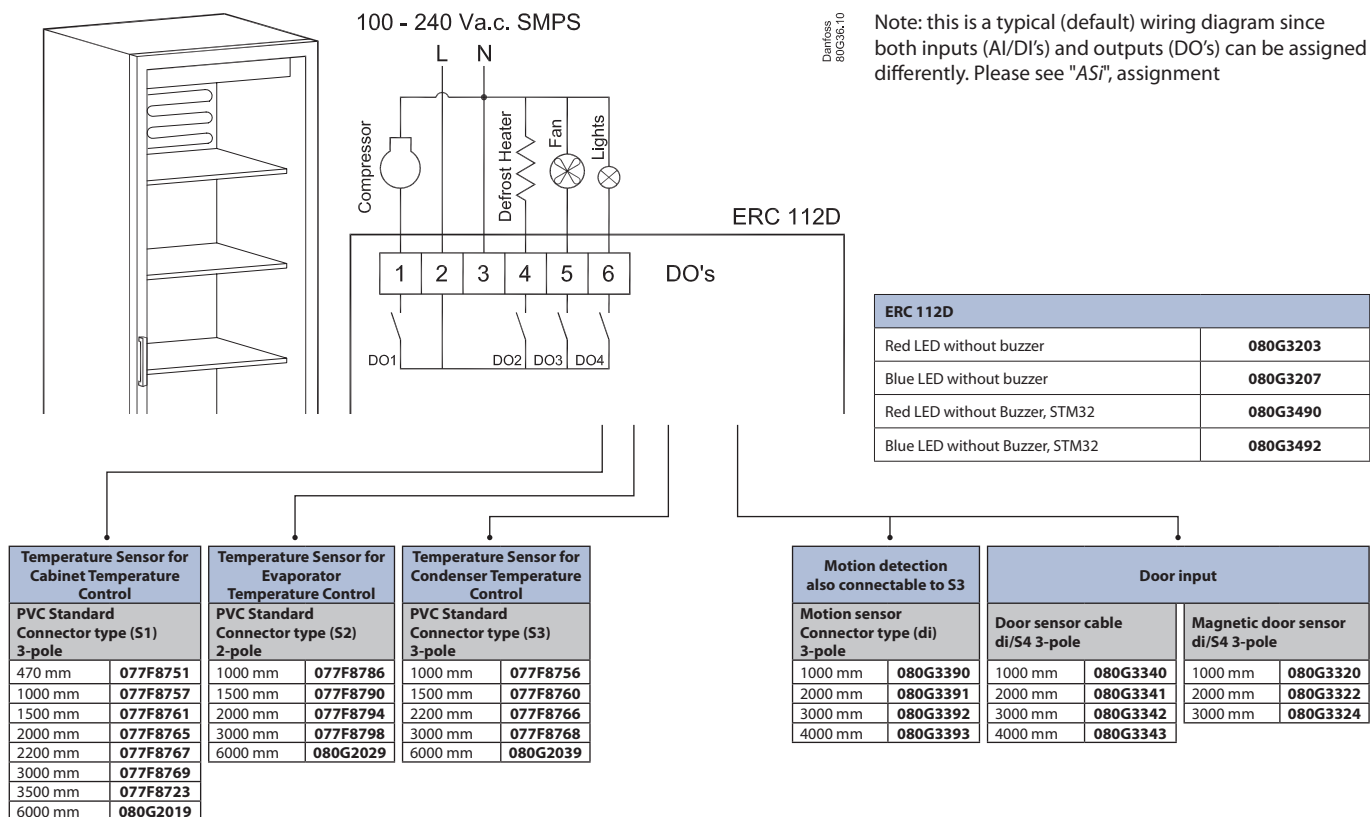


Glass Door Merchandiser

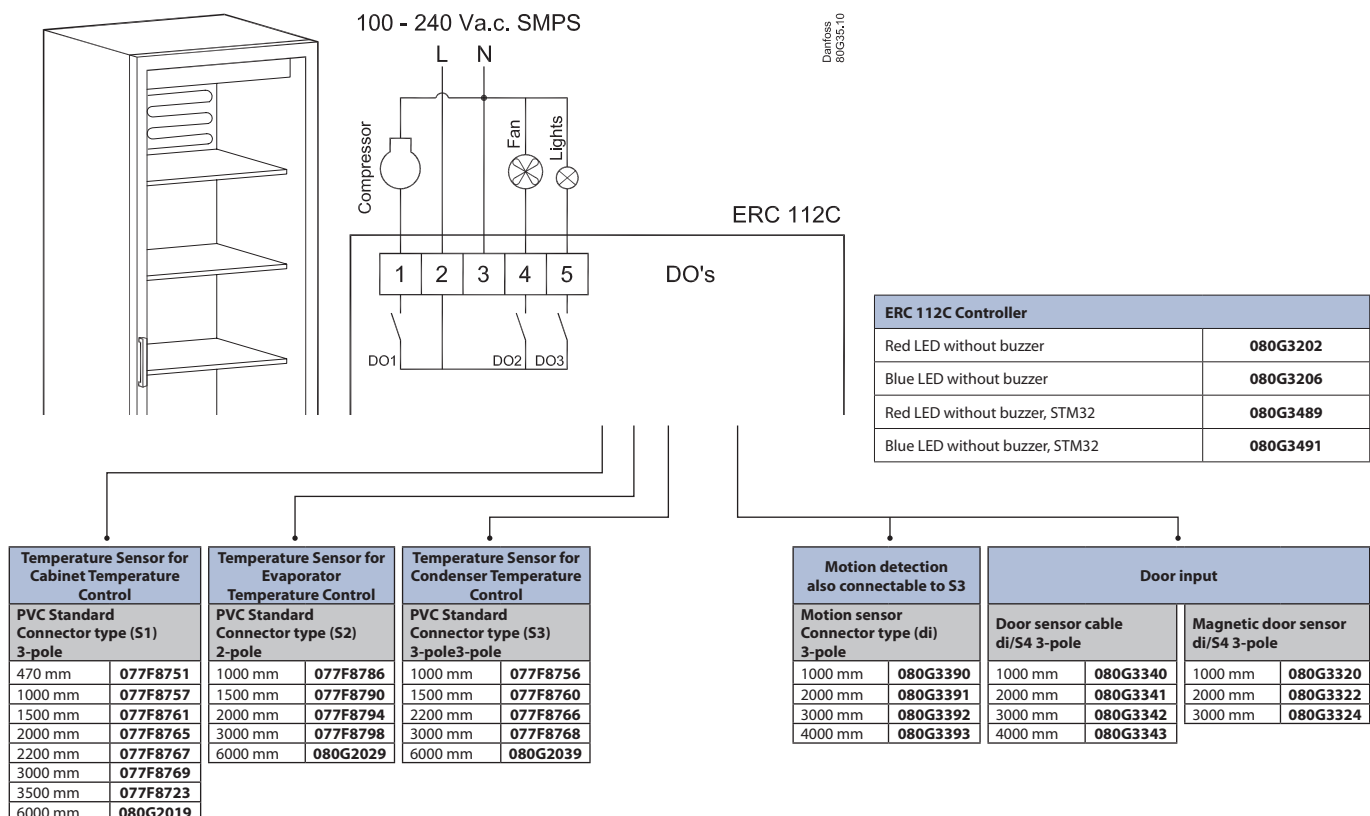

Gastro No-frost freezer

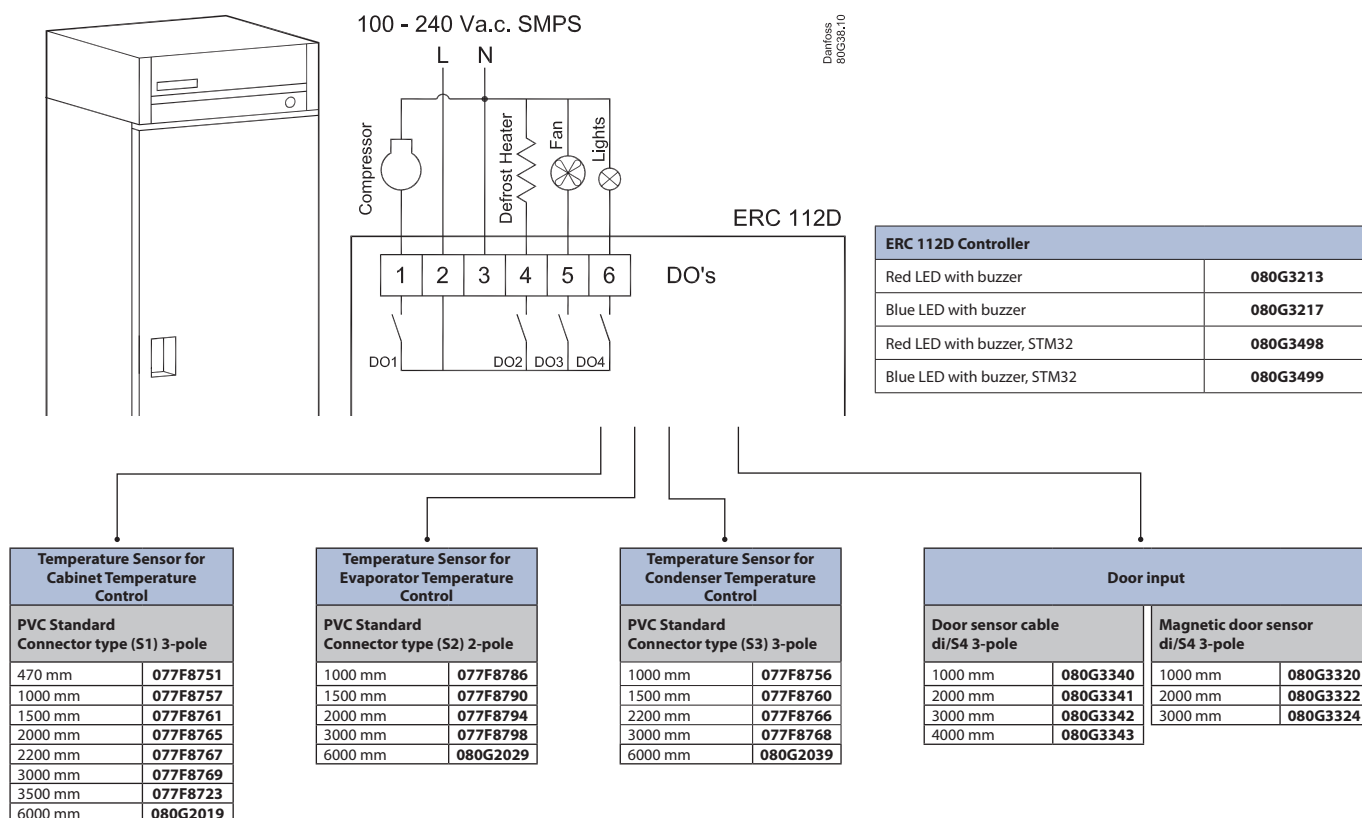

Gastro Cooler

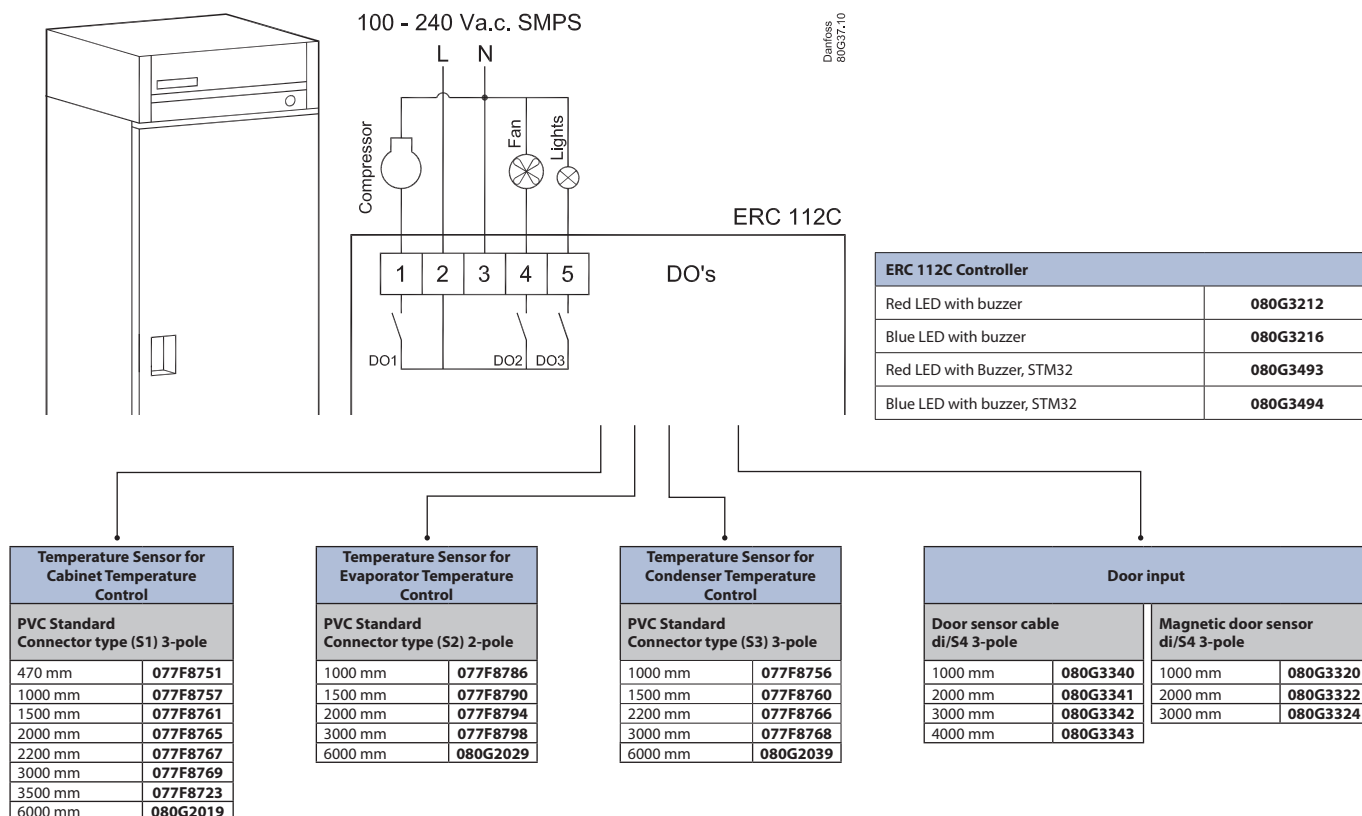

Application Matrix

ERC 112		Output				Input				
Application	ERC type	DO1	DO2	DO3	DO4	S1	S2	S3	S4	Di
Standard beverage cooler	ERC 112C	Comp	Fan	Lamp		Control	Defrost	Condenser or Ambient Light or Motion detection		Door or Motion detection
Sub-zero beverage cooler	ERC 112D	Comp	Heater	Fan	Lamp	Control	Defrost	Condenser or Ambient Light or Motion detection		Door or Motion detection
Out-door beverage cooler	ERC 112D	Comp	Heater	Fan	Lamp	Control	Condenser	Ambient Light or Motion detection		Door or Motion detection
Nofrost freezer w. glassdoor	ERC 112D	Comp	Heater	Fan	Lamp	Control	Evaporator	Condenser or Ambient Light or Motion detection		Door or Motion detection
CFF refrigerator	ERC 112C	Comp	Fan	Lamp		Control	Defrost	Condenser		Door
CFF freezer	ERC 112D	Comp	Heater	Fan	Lamp	Control	Defrost	Condenser		Door

S: connector position




NOTE:

- Select only one function per input, e.g. condenser sensor or ambient light sensor.
- Make sure that the accessory you select has a matching connector to the input, e.g. a sensor for input "S2" must have "S2" connector.
- Condenser sensor or light sensor are optional and can be omitted.
- Defrost sensor is mandatory when electrical heater is used for defrost. For natural defrost it can be omitted.

Sensor placement

Control sensor

Control sensor

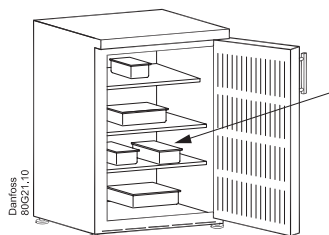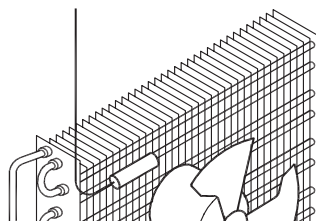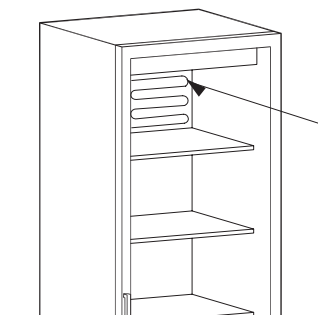

The control sensor must always be connected and is used for controlling the cut-in and cut-out of the compressor according to the set point. The sensor is also used for the displayed temperature.

Vertical coolers with fan

Most common placement is in the return air to the evaporator. The sensor can be placed close to the fan – even when the fan is pulsed during compressor OFF periods: the updating of the temperature is blocked when the fan is stopped and only updated when the fan has been running for a while, so that the heat from the fan does not affect the temperature reading.

For applications sensitive to sub-zero temperatures, sensor placement in the evaporator outlet air can be considered.

Vertical freezers with fan


Placement in the return air or in the freezer compartment.

Coolers without fan

The best results are normally obtained when the sensor is placed at the side-wall, 10 cm from the back and approximately at 1/3 from the bottom or where the evaporator ends.

The control sensor must always be connected and is used for controlling the cut-in and cut-out of the compressor according to the set point. The sensor is also used for the displayed temperature.

Evaporator sensor

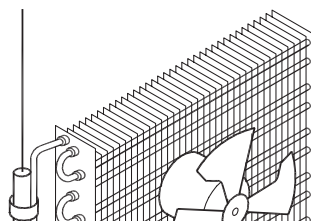


The evaporator sensor is only used for de-icing of the evaporator and has no control purpose.

Placement of sensor

Place the sensor where the ice melts last. Please be aware of that sharp fins can damage the cable.


Condenser sensor

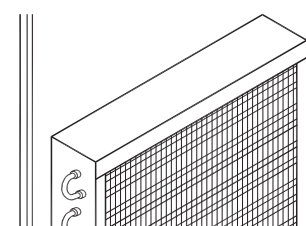

The condenser sensor is used to protect the compressor against high pressure when the condenser is blocked or the condenser fan fails.

Condenser sensor


Place the sensor at the liquid side of the condenser. Use a metal bracket or metal tape to ensure good thermal conductivity. Be sure that the cable does not pass hot spots at the compressor or condenser that exceeds 80°C.

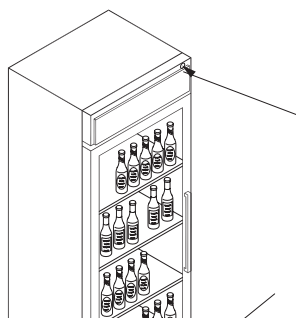Ambient light sensor

The ambient light sensor is used to detect opening hours of the shop.

Placement of sensor

The sensor must be placed so that the interior light does not affect the sensor.
Possible placement could be in the front of the cooler or at the top.

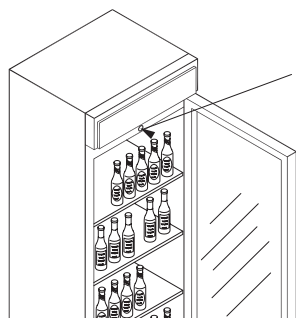Door sensor

The door sensor is used to detect buying activity and to stop the fan when the door is opened.

Door sensor

Danfoss does not supply the door-switch. Use the door-switch you have and connect it to the cable supplied by Danfoss.

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.