

UPRIGHT PIANO

Assembly Instructions

for bottom winding music box

Music expresses that which cannot be said and on which it is impossible to be silent.

Victor Hugo



The world is fluffy enough already, isn't it?



UPRIGHT PIANO




PART LIST



PRINTED PARTS


You will need the following parts for the model. The parts are divided into groups of letters (A,B,C,D) that represent the colors of the parts.

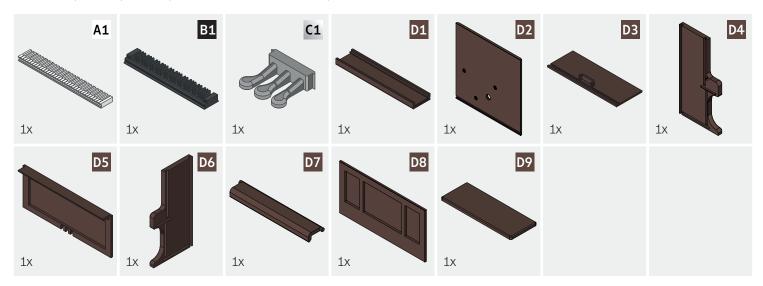

NOT PRINTED PARTS

 Z1 Wind-up Music Box 1x



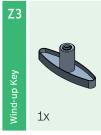








ASSEMBLY

UPRIGHT PIANO



NEEDED PARTS

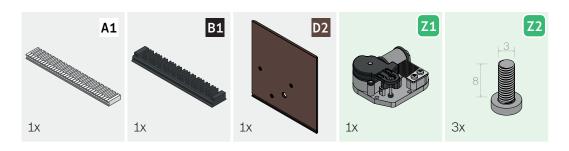



Insert the white keys [A1] into the black keys [B1]. Hold the white keys at an angle to make it easier to insert them into the black keys. Press at the rear end of the white keys to secure them in place.




Position the music box **Z1** on the back panel **D2**. Ensure that the mounting holes on the back panel align with those on the music box.

Using the screwdriver 11, attach the music box 21 to the back panel 22 with the three screws 22.

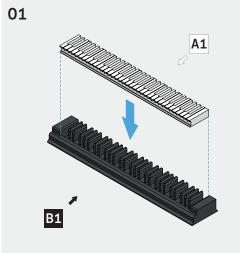


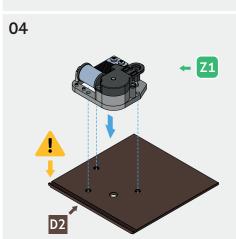


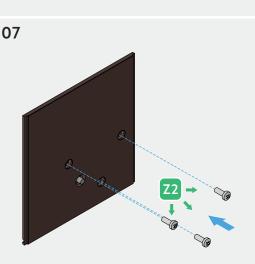






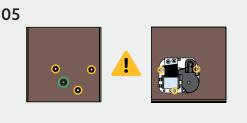

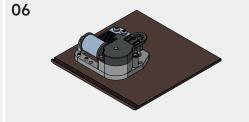

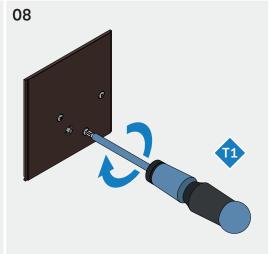


ASSEMBLY


UPRIGHT PIANO



NEEDED PARTS

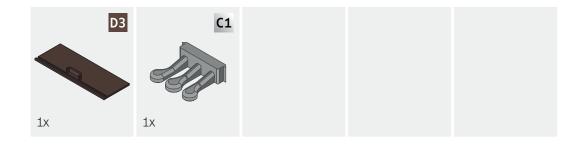


Apply a thin layer of superglue M1 to the slot below the music box.

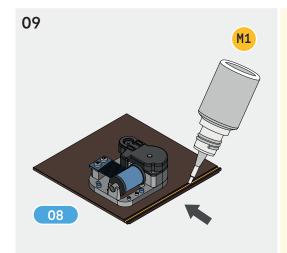




The areas where
the glue should be
applied are marked in yellow.
Make sure that you only use a thin
layer, otherwise the adhesive will
run out of the joints and the adhesive
residue will not look nice on the
model.


Attach the base plate D3 to the rear panel.

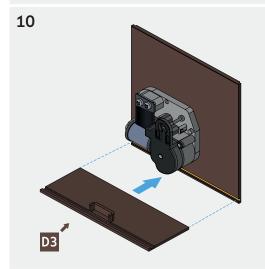


11

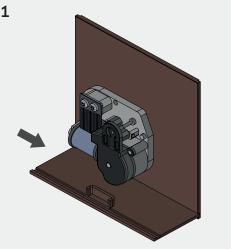

Place the pedals **C1** in their designated position on the base plate **D3**.

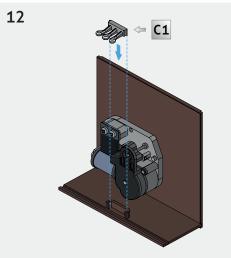

13

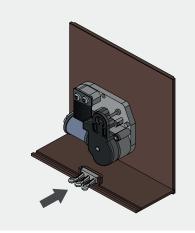

ASSEMBLY





NEEDED PARTS




Apply a thin layer of superglue M1 to the slot in the base plate.


Attach the front bottom panel **D5** to the base plate.

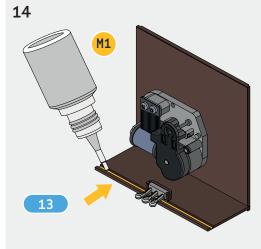

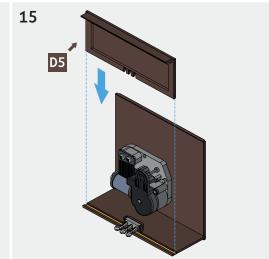



Apply a thin layer of superglue M1 to the left side panel D6.

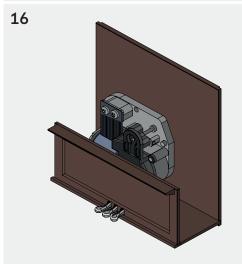

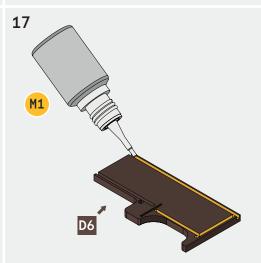

Attach the left side panel **D6**.

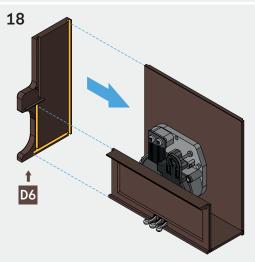

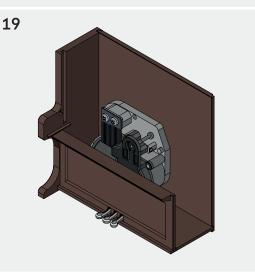

ASSEMBLY


UPRIGHT PIANO




NEEDED PARTS




Slide the keyboard lid **D7** into the left side panel.

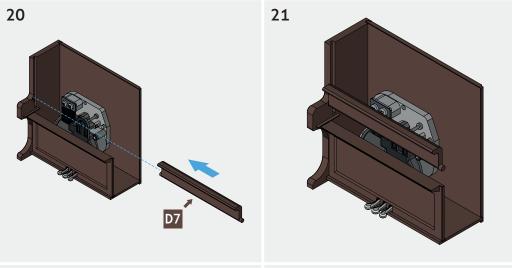

Apply a thin layer of superglue M1 to the right side panel D4 and attach it to the piano.

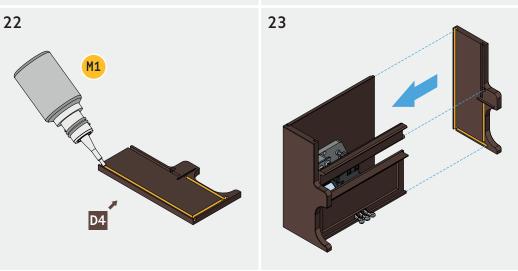

Slide the keyboard from step 03 into the keyboard bay 11.

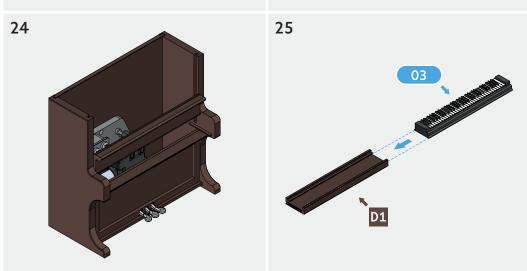


ASSEMBLY


UPRIGHT PIANO




NEEDED PARTS

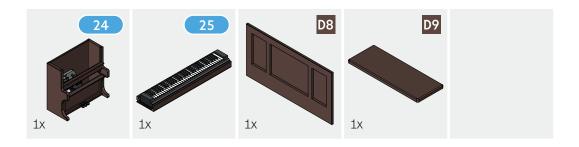


Slide the keyboard bay from step 25 into the piano.

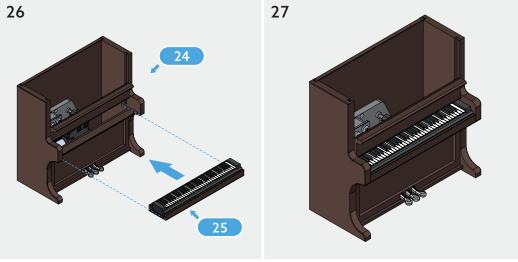

Slide the upper front panel **D8** into the piano.

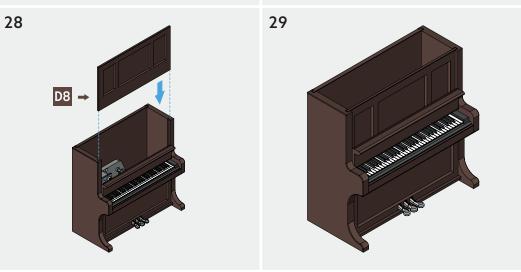

Apply a thin layer of superglue M1 to top lid D9 and attach it to the piano.

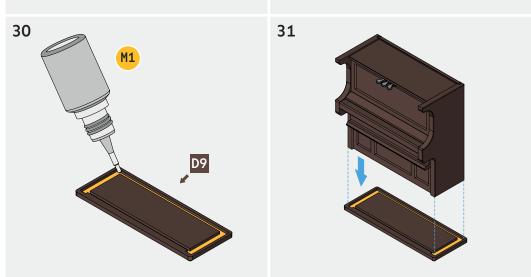

ASSEMBLY

UPRIGHT PIANO



NEEDED PARTS



Install the wind-up key 3 at the music box wind-up mechanism.

