


STC-200 Thermostat

Quick Start Guide

(Version 21.08.02GEN)

STC-200+ thermostat with just one relay to control the power supply status of the wired heater or cooler or output alarm.

1. Wiring Diagram

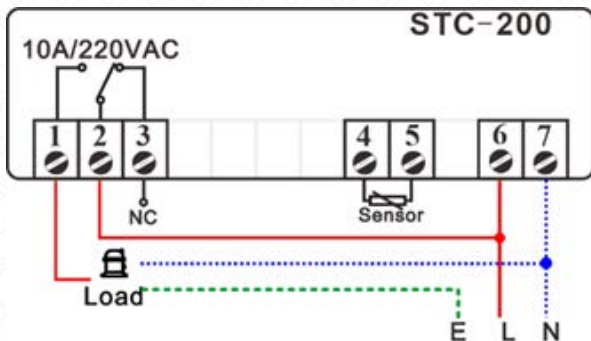




2. Set the Aimed Temp Range

The aimed temperature range was defined from “SP” to “SP + ΔT ”; hence you need to set both the “SP” and the “ ΔT ” value.





3. Function Menu

| Code | Function |
|-----------|--|
| F0 | Temperature Hysteresis / Difference |
| F1 | Protection Delay Time for the Compressor |
| F2 | Lower Limit for SP Setting |
| F3 | Upper Limit for SP Setting |
| F4 | Refrigeration or Heating or Alarm Mode |
| F5 | Calibration = Real. - Measured. |

3.1. Set the “SP” value

- 1) Press the  key, shows the exists SP value;
- 2) Press the  or  keys to change SP, which F2 and F3 limited;
- 3) It will back to normal status from the setting interface in the 30s if without operation.

3.2. Set the “Hysteresis” Value?

- 1) Hold the  +  keys simultaneously for 4s, and you will see the code **F0**.
- 2) Next, press the  key again to see the current value and press the direction key to change it.
- 3) At last, press the  key to save the new data and

back to the menu list.

- 4) Hold the **Set** key for 3s to save data and back to normal monitor status.
- 5) Repeat steps 2,3,4 to change others.
- 6) Hold the **Set** key for 3s to quit from setting or leave it alone; it will back to normal status in the 30s if without operation.

This is not a step-by-step user manual;

It just shows the key points.

The new user should read the Full-Content Version User
Manual



Haswill Electronics

[STC-200+ Thermostat](#)

Copyright Haswill-Haswell All Rights Reserved