



Installation Instructions

Adaptive Cruise Control (ACC)



Contents

| 1 | Liability Exclusion | 3 |
|------------|--|-----------|
| 2 | Copyright | 4 |
| 3 | General notes | 4 |
| 4 | Safety Instructions | 5 |
| 5 | Requirements for the intended use | 5 |
| 6 | How to connect a cable to another | 6 |
| 7 | Note Cable Inscription/Color | 7 |
| 8 | Assembly Instructions | 8 |
| 9 | Assembly Note | 9 |
| 10 | Safety Instructions for working on Airbags | 10 |
| 11 | Note for the assembly of the ACC sensor | 11 |
| 12 | Disassembly bumper | 12 |
| 13 | Disassembly / Modification bumper | 13 |
| 14 | Disassembly impact protection | 14 |
| 15 | Assembly / Connection sensor | 15 |
| 16 | Disassembly covering parts driver's side | 16 |
| 17 | Laying cable set | 18 |
| 18 | Connection CAN High & Low / ignition plus | 19 |
| 19 | Connection ground / separation point | 20 |
| 20 | Note | 21 |
| 2 1 | Disassembly covering front camera | 22 |
| 22 | Laying / Connection additional cable | 23 |
| 23 | Disassembly steering wheel airbag | 24 |
| 24 | Disassembly steering wheel | 25 |
| 25 | Replacement buttons | 26 |
| 26 | Note | 27 |
| 27 | Disassembly steering column covering | 28 |
| 28 | Disassembly slip ring | 29 |
| 29 | Disassembly steering column switch | 30 |
| 30 | Modification steering wheel lever | 31 |
| | | |



8 Assembly Instructions

The following illustration shows the cable routing as well as the position of the individual components.

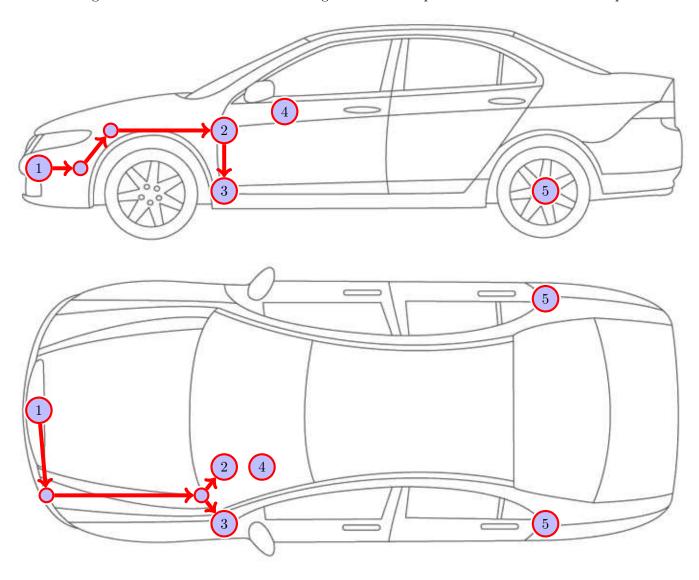


Figure 3: Vehicle Overview

- 1 Sensor
- 2 Connection CAN High & Low / ignition plus
- 3 Connection separation point / ground
- 4 Steering wheel button or steering column switch
- 5 Rotational speed sensor

Please be aware that this overview is only for illustration purposes. Always lay the cable set in the most convenient and shortest way possible. For a detailed description of the cable routing, please refer to the relevant sections of the following manual.