

Instant Pot®

AIR FRYER LID

Welcome

Product Overview

Initial Setup

Getting Started

More Controls

Smart Programs

Cooking Timetable

Support and Contact Information



Getting Started Guide

Full Manual, How-to Videos and Recipes available online at instantpot.com/airfryerlid.
Register your product today at instantpot.com/support/register.

Only use the Instant Pot®
Air Fryer Lid with a compatible
Instant Pot® branded Multi-Use
Electric Pressure Cooker.
See **Page 19** for compatible
Instant Pot pressure cookers.

Welcome to the world of Instant cooking.

Hello! Thank you for welcoming us into your kitchen.

Having families ourselves, we developed the Instant Pot® Air Fryer Lid to allow busy families and professionals alike to cook healthy, delicious meals more easily and in less time.

We have partnered with chefs, authors and bloggers to compile a collection of recipes that we hope you enjoy!

Happy cooking,



Robert J. Wang
Founder & Chief Innovation Officer

Download the Instant Pot App

- Original Recipes
- New User Tips
- Getting Started Videos



Initial Setup

- Read all important safeguards in the *Safety, Maintenance and Warranty* booklet before use. Failure to do so may result in property damage and/or personal injury.
- **ONLY** use Air Fryer Lid with a compatible Instant Pot multi-use pressure cooker. You must use an Instant Pot stainless steel inner pot.
- Remove all packaging material from the appliance and ensure all parts and accessories are accounted for.
- Follow Care and Cleaning instructions in the *Safety, Maintenance and Warranty* booklet to clean the appliance before first use.
- Leave at least 5" / 13 cm of space around the appliance, and do not block the air vents.
- Do not remove safety warning stickers from the appliance.



⚠ WARNING

Overloading electrical circuits can lead to fire, burns and injury. Do NOT plug in Air Fryer Lid and the Instant Pot Multi-Use Pressure Cooker base at the same time. Always unplug Instant Pot Multi-Use Pressure Cooker base BEFORE plugging in Air Fryer Lid.

⚠ CAUTION


To avoid personal injury or damage to property, only place the appliance on the protective pad provided, or on the Instant Pot® Multi-Use Pressure Cooker base.




Product Overview

Product Overview


Front

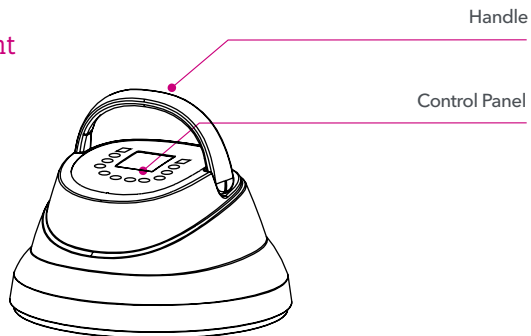


Back

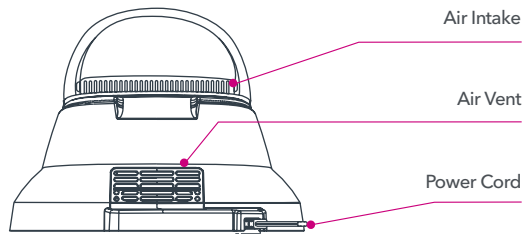 

Interior

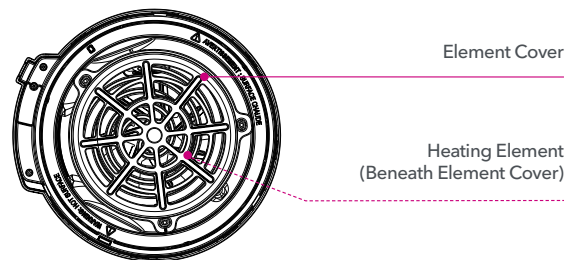 

Accessories

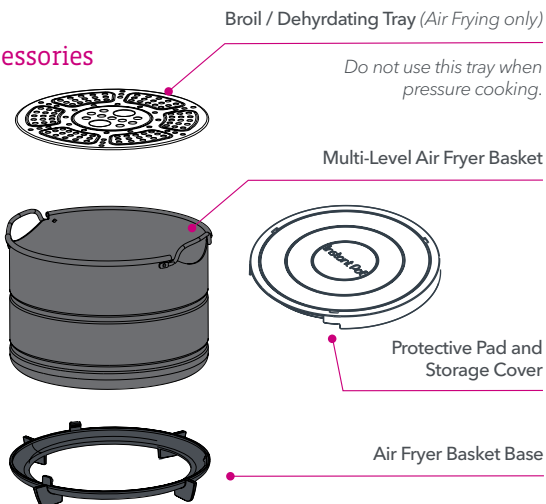 

Images are for reference only. Refer to actual product.



Getting Started Pressure Cooking

A

Pressure Cook Your Food First


Place food into the stainless steel inner pot then insert inner pot into Instant Pot cooker base. Follow cooking instructions from your **Instant Pot Multi-Use Pressure Cooker** manual.

When pressure cooking is complete and you have released all pressure, remove the pressure cooker lid.


Always unplug Instant Pot multi-use pressure cooker base BEFORE plugging in Air Fryer Lid.

Place the Air Fryer Lid on the Instant Pot cooker base.

Note: Only use an Instant Pot stainless steel inner pot when using the Air Fryer Lid. **Do not use a ceramic coated inner pot.**

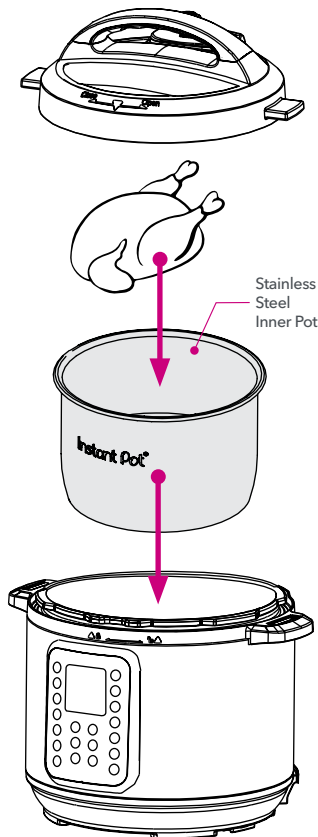

Follow the steps starting on Page 10 to finish off your recipe with the Air Fryer Lid.

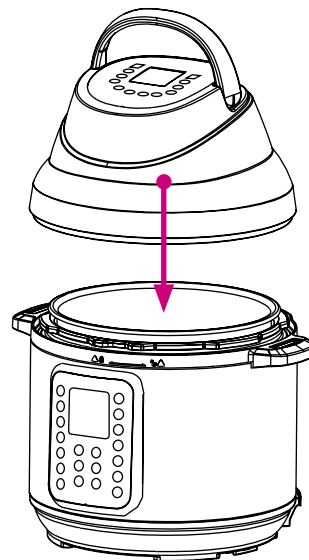



Getting Started Air Frying



B

Air Fry Only

If not pressure cooking first, attach the air fryer basket to the air fryer basket base and insert them (or other oven-safe cookware) into the stainless steel inner pot, then add your food.

Always unplug Instant Pot multi-use pressure cooker base BEFORE plugging in Air Fryer Lid.


Note: The provided air fryer basket features multiple levels to suit your cooking needs. Refer to the full User Manual on [instantpot.com/airfryerlid](https://www.instantpot.com/airfryerlid) for detailed cooking instructions.

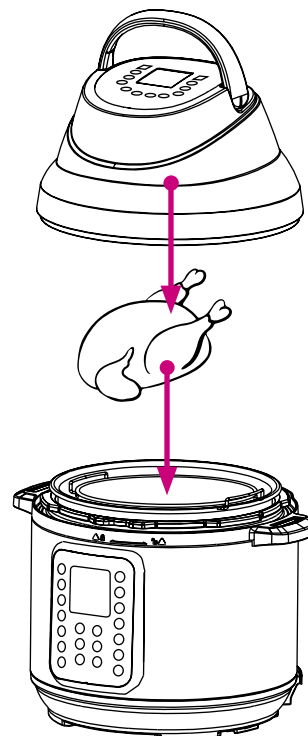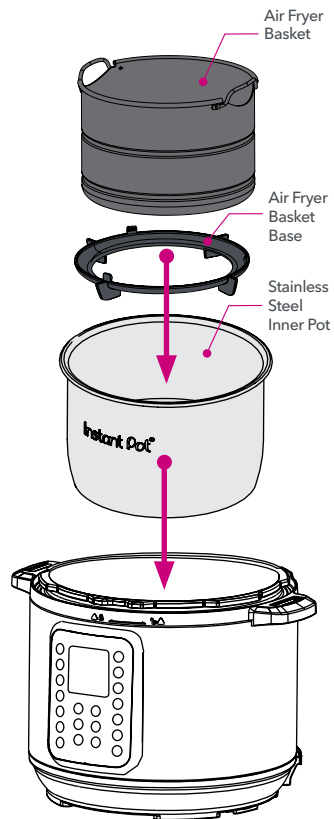

1

Place the Air Fryer Lid on the Instant Pot cooker base.

Note: A jingle plays when the Air Fryer Lid is placed correctly.

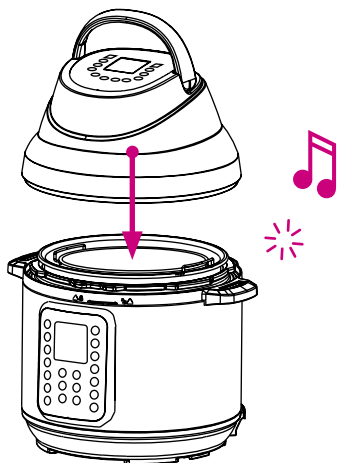


⚠ WARNING

Overloading electrical circuits can lead to fire, burns and injury. Do NOT plug in Air Fryer Lid and the Instant Pot multi-use pressure cooker base at the same time. Always unplug Instant Pot multi-use pressure cooker base BEFORE plugging in Air Fryer Lid.

2

Connect Air Fryer Lid power cord to a 120 V power source.

Display indicates **OFF** and the lid will beep once.

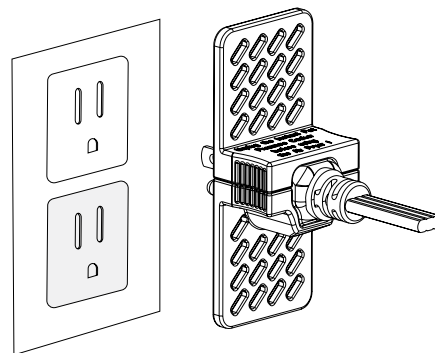


⚠ WARNING

Do not remove plug cover. Pressure Cooker must be unplugged and only the Air Fryer Lid should be plugged in.

3

Select a Smart Program:


Air Fry, Broil, Bake, Roast, Reheat
or Dehydrate.

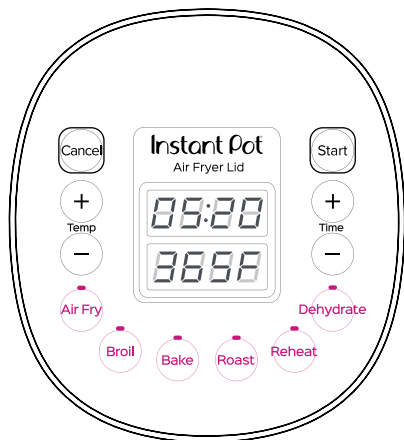

4

Use the **+** / **-** keys to adjust the **Time**
and **Temperature**.

Note: The Air Fryer Lid will save any customization made to the cook time or temperature once you selected **Start**.

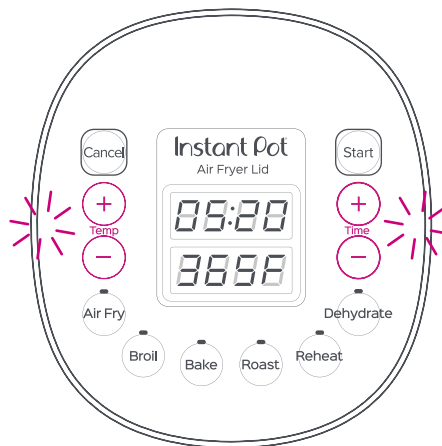

5


Press **Start**.

The display indicates **On** as the Air Fryer Lid **Preheats**.



6

Part way through the cooking cycle the lid beeps and the display indicates **turn Food**.

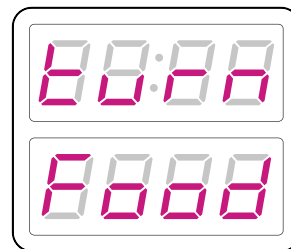


⚠ CAUTION

The inner pot and accessories will be hot. Exercise caution when placing food in a preheated air fryer basket.

7

Lift the Air Fryer Lid off the Instant Pot cooker base and place it on the protection pad provided.

Lifting the lid automatically pauses cooking. Cooking will resume if the lid is put back on the cooker base within 3 minutes. If not, the lid will go into standby mode and display **OFF**.

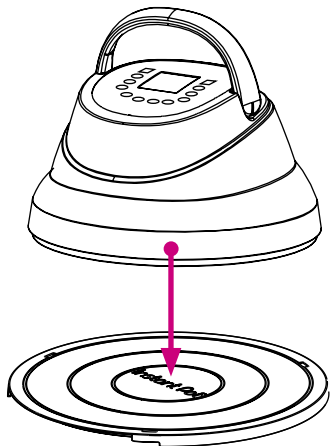


8

Turn, flip, or rotate your food, then place the Air Fryer Lid on the Instant Pot cooker base to resume cooking.

A jingle plays when the Air Fryer Lid is placed correctly, and cooking will continue.


***Note:** Some food does not require turning. If the lid is not removed after the **turn Food** indicator appears, cooking will proceed after 10 seconds.*

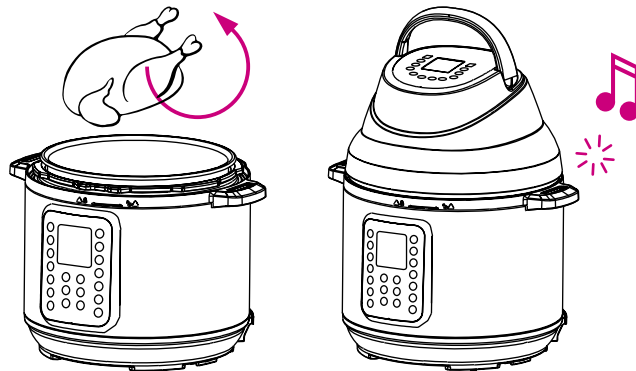

9

When the Smart Program (**Air Fry**, **Bake**, **Roast**, and **Broil**) completes, the lid beeps and the display indicates **End** and **Cool**. The fan will continue to run for 5 minutes or stop immediately when you lift the lid off. The display will indicate **OFF**.

For **Reheat** and **Dehydrate** Smart Programs, when the program finishes, the lid beeps and the display indicates **End**.

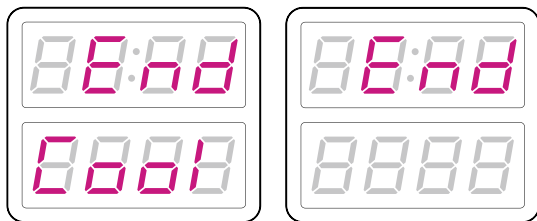


Note: If **Cancel** is pressed during the cooking program, the display will indicate **OFF** and you can select another program. The display will also indicate **Cool** and the fan will run for 5 minutes or until you change the program.

10

Lift the Air Fryer Lid off the Instant Pot cooker base and place it on the protective pad, or let the Air Fryer Lid keep your food warm for up to 1 hour.

Note: The Air Fryer Lid will beep to remind you that cooking has ended 5 minutes, 20 minutes and 60 minutes after cooking has completed.

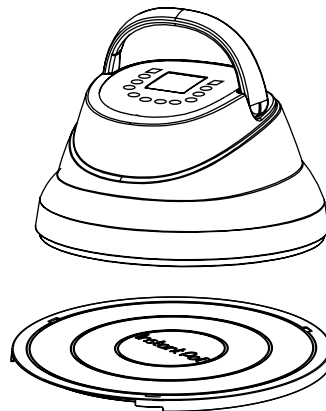


CAUTION

To avoid personal injury or damage to property, only place the appliance on the protective pad provided, or on the Instant Pot® multi-use pressure cooker base.

11

Carefully remove your food, serve and enjoy!

To store your Air Fryer Lid, flip the protective pad so the grooved side is up and attach it to the Air Fryer Lid.

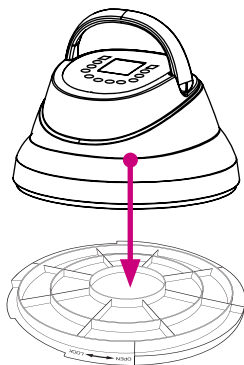

For further operation instructions, refer to the full User Manual online at [instantpot.com/airfryerlid](https://www.instantpot.com/airfryerlid).



CAUTION

The inner accessories pot will be hot during and after cooking. To avoid injury, use oven mitts and do not touch the inner pot or other accessories with bare skin.

A close-up photograph of a metal wire basket filled with golden-brown, wavy-cut french fries. The fries are piled high and appear to be served on a piece of white parchment paper. In the background, slightly out of focus, is a small metal bowl containing a red tomato-based dipping sauce. The overall lighting is warm and focused on the fries, with a dark, textured surface visible at the bottom and right edges.

More Controls

More Controls

Cancel	Press to stop a Smart Program at any time. Display returns to Standby and indicates OFF .
Sound On/Off	Press and hold + over Time until the display indicates S On (Sound On) or SOFF (Sound Off). <i>Note: Error alerts cannot be silenced.</i>
Temp. Display °F/ °C	When in Standby (OFF), press and hold + above Temp until the display indicates F or C . The unit indicated is the current selection.
Smart Program Functional Reset	When in Standby, press and hold one of the Smart Program functional keys (Air Fry, Broil, Roast, Reheat, Dehydrate) until the Air Fryer Lid beeps. The desired function is reset to default setting.
Full Reset	When in Standby (OFF), press and hold Cancel until the Air Fryer Lid beeps. All Smart Programs are reset to default settings.

A close-up photograph of a white bowl filled with thick-cut, purple potato chips. The chips are a vibrant purple color with some golden-brown edges, suggesting they are baked or fried. The text "Smart Programs" is overlaid in the center of the image in a white, serif font. In the bottom right corner, a small portion of another white bowl containing pink Himalayan salt is visible.

Smart Programs

Smart Programs

Depending on your recipe, food may be placed in the multi-level air fryer basket, or directly in the inner pot. Smart Programs are preset to specific times and temperatures. These can be changed by pressing **+** / **-** of **Temp** and **Time**. The default setting and change range of each Smart Program function is as follows:

Smart Programs	Time Default	Time Range	Temp Default	Temp Range	Recommended Accessory
Air Fry	20 mins	1-45 mins	400°F / 204°C	300-400°F / 149-204°C	Air Fryer Basket
Roast	40 mins	1-45 mins	380°F / 193°C	250-380°F / 121-193°C	Air Fryer Basket
Broil	10 mins	1-20 mins	400°F / 204°C	No Temperature Range	Air Fryer Basket, on Broil Tray
Bake	30 mins	1-60 mins	365°F / 185°C	180-380°F / 82-193°C	Air Fryer Basket, under Broil/Dehydrating Tray
Reheat	15 mins	1-60 mins	280°F / 138°C	120-360°F / 49-182°C	Air Fryer Basket, on Broil/Dehydrating Tray
Dehydrate	6 hrs	1-72 hrs	125°F / 52°C	105-165°F / 41-74°C	Air Fryer Basket, with Dehydrating Tray

These preset times and temperatures are based on common cooking times. Always follow a trusted recipe, as time and temperature will vary based on food type and quantity.

Compatibility

Use only with the following Instant Pot branded 6 QT Electric Multi-Use Pressure Cookers.

Use only with Instant Pot stainless steel inner pots. **Never use** with ceramic coated inner pots.

Model: Duo 60 (IP-DUO60, IP-DUO60 V2, IP-DUO60 V2.1, IP-DUO60-ENW, IP-DUO60 V3, Duo 60 V3, Duo Frontier Rose 60, Duo Dazzling Dahlia 60, Duo White 60, Duo Teal 60, Duo Red 60, Duo Black SS 60, Duo Red SS 60, Duo Nova Black SS 60). **Lux 60** (IP-LUX60, Lux Blue 60, Lux Red 60, IP-LUX60 V2, IP-LUX60-ENW, IP-LUX60-ENW-MM, IP-LUX60 V3, Lux Breezy Blossoms 60, Lux Vintage Floral 60, Lux Black SS 60, Lux Red SS 60, Lux 60 V3). **Duo Plus 60** (Duo Plus 60, Duo Plus Cinnamon SS 60, Duo Plus Blue SS 60, Duo Plus Copper SS 60, Duo Plus Black SS 60). **Ultra 60** (Ultra 60). **Viva 60** (Viva, Viva 60, Viva Cinnamon 60, Viva Cobalt 60, Viva Eggplant 60, Viva Red SS 60, Viva Black SS 60). **Nova Plus 60** (Nova Plus 60). **Duo Nova 60** (Duo Nova 60).

Air Fryer Lid is **NOT compatible** with (model) Smart WiFi 60, Duo Evo Plus 6, Duo Evo Plus 60, Duo SV 60 or Max 60. **View full manual online for updated list.**

Find your model number: The number is listed on the rating label at the back on your pressure cooker.

If you are unsure of your model, contact customer service at support@instantpot.com or 1-800-828-7280.



Enjoy time well spent with
the Instant family of small appliances.

Instant Pot

Register your product today at:

instantpot.com/support/register

Instant Brands Inc.
11-300 Earl Grey Dr., Suite 383
Ottawa, Ontario
K2T 1C1
Canada

1-800-828-7280
support@instantpot.com
instantpot.com/#Chat

instantpot.com
store.instantpot.com