

AV RECEIVER

Operating Instructions

GB

Mode d'emploi

FR

Manual de instrucciones

ES

Owner's Record

The model and serial numbers are located on the bottom of the

Record the serial number in the space provided below.

Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. XAV-AX8100

Serial No.

To cancel the demonstration (Demo) display, see page 7.

Pour annuler l'affichage de démonstration (Démo), reportezvous à la page 7.

Para cancelar la pantalla de demostración (Demostración), consulte la página 7.







XAV-AX8100(UC)

https://rd1.sony.net/help/ev/xav-ax81/h zz/



Warning

For safety, be sure to install this unit in the dashboard of the car as the rear side of the unit becomes hot during use.

For details, see "Connection/Installation" (page 11).

The nameplate indicating operating voltage, etc., is located on the bottom of the chassis.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area) and Switzerland.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF OUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC.

This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with part 15 of FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules as this equipment has very low levels of RF energy.

If you have any questions about this product:

Visit: https://www.sony.com/electronics/support **Contact:** Sony Customer Information Service Center at 1-800-222-7669

Write: Sony Customer Information Service Center 12451 Gateway Blvd., Fort Myers, FL 33913 Supplier's Declaration of Conformity Trade Name: SONY

Model: XAV-AX8100

Responsible Party: Sony Electronics Inc. Address: 16535 Via Esprillo, San Diego, CA 92127

Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For the State of California, USA only

Perchlorate Material – special handling may apply, See

www.dtsc.ca.gov/hazardouswaste/perchlorate

\triangle

WARNING: Do not ingest battery, Chemical Burn Hazard.

The remote commander contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Note on the lithium battery

Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

Warning if your car's ignition has no ACC position

Do not install this unit in a car that has no ACC position. The display of the unit does not turn off even after turning the ignition off, and this causes battery drain.

Disclaimer regarding services offered by third parties

Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Important notice

Caution

IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

Dear customer, this product includes a radio transmitter.

Please check your vehicle operation manual or contact the manufacturer of your vehicle or your vehicle dealer, before you install this product into your vehicle.

Emergency calls

This BLUETOOTH car handsfree and the electronic device connected to the handsfree operate using radio signals, cellular, and landline networks as well as user-programmed function, which cannot guarantee connection under all conditions. Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies).


On BLUETOOTH communication

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident.
- where inflammable gas is present, in a hospital, train, airplane, or petrol station
- near automatic doors or a fire alarm
- This unit supports security capabilities that comply with the BLUETOOTH standard to provide a secure connection when the BLUETOOTH wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using BLUETOOTH wireless technology.
- We do not take any responsibility for the leakage of information during BLUETOOTH communication.

If you have any questions or problems concerning your unit that are not covered in this manual, consult your nearest Sony dealer.

Main Unit and Remote Commander

Main unit

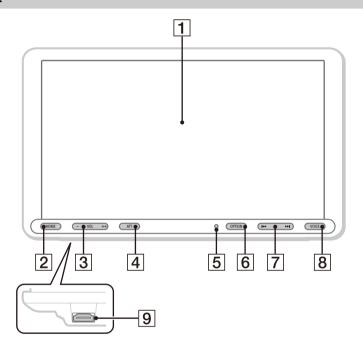

The VOL (volume) + button has a tactile dot.

1 Display/touch screen

2 HOME

Displays the HOME screen (page 6).

STANDBY

Press and hold to turn the unit to standby mode (USB charging is still available). To resume, press any button.

3 VOL (volume) +/-

4 ATT (attenuate)

Attenuates the sound.

To cancel, press again, or press VOL +.

- MONITOR OFF

Press and hold to turn off the monitor.

To turn back on, touch any part of the display.

5 Receptor for the remote commander

6 OPTION

Displays the OPTION screen (page 6).

7 I◄◄/▶►I (previous/next)

Functions differently depending on the selected source:

- [Radio]: select a preset station.
- [SXM] (SiriusXM): select a preset channel.
- [USB]/[Bluetooth]: move to the previous/next file

Press and hold to:

- [Radio]: tune into a station automatically (SEEK+/SEEK-).
- [USB]/[Bluetooth]: fast-reverse/fast-forward.


8 VOICE

Activates the voice command function for Apple CarPlay and Android Auto $^{\rm TM}$.

9 HDMI terminal (input)

RM-X170 remote commander

The remote commander can be used to operate the audio controls. For menu operations, use the touch screen.

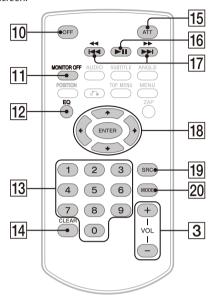

Note

The white buttons in the illustration above are not supported.

10 OFF

Turns the source off.

11 MONITOR OFF

Turns off the monitor. To turn back on, press again.

12 EQ (equalizer)

Selects an equalizer curve.

13 Number buttons (0 to 9)

14 CLEAR

15 ATT (attenuate)

Attenuates the sound. Press again to cancel the attenuation.

16 ►II (play/pause)

17 I◀◀ /▶▶I (previous/next)

◄◄/▶► (fast-reverse/fast-forward)

Functions differently depending on the selected source:

- [Radio]: select a preset station.
- [SXM] (SiriusXM): select a preset channel.
- [USB]/[Bluetooth]: move to the previous/next file.

Press and hold to:

- [Radio]: tune into a station automatically (SEEK+/SEEK-).
- [USB]/[Bluetooth]: fast-reverse/fast-forward.

18 ←/1/↓/→

Functions differently depending on the selected source.

- [Radio]: select a preset station or tune into a station automatically.
- [SXM] (SiriusXM): select a preset channel or move to the previous/next channel.
- [USB]: select a folder or move to the previous/ next file.

ENTER

Enters the selected item.

19 SRC (source)

Changes the source. Each time you press this button, a selectable source is displayed in a popup on the current display.

20 MODE


Selects the radio band.

Remove the insulation film before use.




Screen Displays


Playback screen:

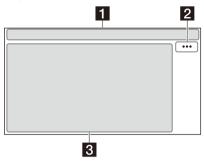

HOME screen:

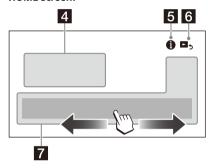

OPTION screen:

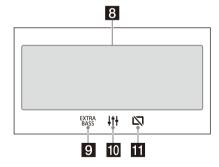

Status indication

Indicates the signal strength status of the connected SiriusXM Connect Vehicle Tuner. Lights up when the Bluetooth® signal is on. Flashes when the connection is in progress. Lights up when the audio device is playable by enabling the A2DP (Advanced Audio Distribution Profile). Lights up when handsfree calling is available by enabling the HFP (Handsfree Profile). Yatll Indicates the signal strength status of the connected mobile phone.	■ ATT	Lights up when the sound is attenuated.
on. Flashes when the connection is in progress. Lights up when the audio device is playable by enabling the A2DP (Advanced Audio Distribution Profile). Lights up when handsfree calling is available by enabling the HFP (Handsfree Profile). Yull Indicates the signal strength status of	SXM ,I	the connected SiriusXM Connect Vehicle
playable by enabling the A2DP (Advanced Audio Distribution Profile). Lights up when handsfree calling is available by enabling the HFP (Handsfree Profile). Yull Indicates the signal strength status of	8	on. Flashes when the connection is in
available by enabling the HFP (Handsfree Profile). Yall Indicates the signal strength status of	ν _ν	playable by enabling the A2DP
·····	Ū,	available by enabling the HFP (Handsfree
	YII	

2 · · · (source option)

7777

Opens the source option menu. The available items differ depending on the source.

the connected mobile phone.

Indicates the remaining battery status of

3 Application specific area

Displays playback controls/indications or show the unit's status. Displayed items differ depending on the source.

4 Clock

Displays the time which are set on the Date/ Time setting.

5 (instruction for smartphone connection)

Displays the instruction for connecting Apple CarPlay, Android Auto or WebLink™.

6 (return to the playback screen)

Switches from the HOME screen to the playback screen.

7 Sources and Settings select keys

Changes the source or make various settings. Flick to select the setting icon and other icons. Touch the source icon you want to select.

Ø	Android Auto	\odot	Apple CarPlay	4	Radio
((Coxm Sanous))	SXM	ς	Bluetooth	ń	HDMI
0	Rear Camera	В	USB	(WebLink
6	Phone	[}	Settings		

8 Sound select keys

Changes the sound.

9 EXTRA (EXTRA BASS)

Changes the EXTRA BASS setting.

10 Lt+ (EQ10/Subwoofer)

Changes the EQ10/Subwoofer setting.

11 🔯 (monitor off)

Turns off the monitor. When the monitor is turned off, touch any part of the display to turn it back on.

Basic Operations

Pairing with a BLUETOOTH Device

When connecting a BLUETOOTH device for the first time, mutual registration (called "pairing") is required. Pairing enables this unit and other devices to recognize each other.



- 1 Press HOME, then touch [Settings] → [Bluetooth] → [Bluetooth Connection] → [ON] → [Pairing].
 - § flashes while the unit is in pairing standby mode.
- **2** Perform pairing on the BLUETOOTH device so it detects this unit.
- 3 Select your model name shown on the display of the BLUETOOTH device*.

 When pairing is made, § stays lit.
 - * If passkey input is required on the BLUETOOTH device, input [0000].

Connecting Rear View Camera

By connecting the optional rear view camera to the CAMERA IN terminal, you can display the picture from the rear view camera. For details, see "Connection/Installation" (page 11).

To display the picture from the rear view camera

Press HOME, then touch [Rear Camera].

Canceling the Demonstration Mode

- 1 Press HOME, then touch [Settings].
- 2 Touch [General], then touch [Demo] to set to [OFF].
- 3 To exit the setup menu, touch **(back)** twice.

Updating the Firmware

To update the firmware, visit the support site, then follow the online instructions.

URL: https://www.sony.com/am/support

Note

During the update, do not remove the USB device.

Additional Information

Precautions

- Power antenna (aerial) extends automatically.
- When you transfer ownership or dispose of your car with the unit installed, initialize all the settings to the factory settings by performing the factory reset.
- Do not splash liquid onto the unit.

Notes on safety

- Comply with your local traffic rules, laws, and regulations.
- While driving
- Do not watch or operate the unit, as it may lead to distraction and cause an accident. Park your car in a safe place to watch or operate the unit.
- Do not use the setup feature or any other function which could divert your attention from the road.
- When backing up your car, be sure to look back and watch the surroundings carefully for your safety even if the rear view camera is connected. Do not depend on the rear view camera exclusively.
- · While operating
- Do not insert your hands, fingers, or foreign objects into the unit as it may cause injury or damage to the unit.
- Keep small articles out of the reach of children.
- Be sure to fasten seatbelts to avoid injury in the event of sudden movement of the car.

Preventing an accident

Pictures appear only after you park the car and set the parking brake.

If the car starts moving during video playback, the following caution is displayed and you cannot watch the video.

[Video blocked for your safety.]

Do not operate the unit or watch the monitor while driving.

Notes on LCD panel

- Do not get the LCD panel wet or expose it to liquids. This may cause a malfunction.
- Do not press down hard on the LCD panel as doing so can distort the picture or cause a malfunction (i.e., the picture may become unclear or the LCD panel may be damaged).



- Do not touch the panel with objects other than with your finger as it may damage or break the LCD panel.
- Clean the LCD panel with a dry soft cloth. Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray.
- Do not use the unit outside the temperature range 0 °C to 40 °C (32 °F to 104 °F).
- If your car was parked in a cold or hot place, the picture may not be clear. However, the monitor is not damaged and the picture will become clear after the temperature in your car becomes normal.
- Some stationary blue, red, or green dots may appear on the monitor. These are called "bright spots" and can happen with any LCD. The LCD panel is precision-manufactured with more than 99.99% of its segments functional. However, it is possible that a small percentage (typically 0.01%) of the segments may not light up properly. This will not, however, interfere with your viewing.

Notes on the touch screen

- This unit uses a resistive touch screen. Touch the screen directly with your fingertip.
- Multi-touch operation is not supported on this unit.
- Do not touch the screen with sharp objects such as a needle, pen, or fingernail. Operation with a stylus is not supported on this unit.
- Do not let any objects contact the touch screen. If the screen is touched by an object other than your fingertip, the unit may not respond correctly.
- Since glass material is used for the screen, do not subject the unit to strong shock. If cracking or chipping occurs on the screen, do not touch the damaged part as it may cause injury.
- Keep other electrical devices away from the touch screen. They may cause the touch screen to malfunction.

About iPhone

Compatible iPhone models:

iPhone SE (2nd generation), iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8 Plus, iPhone 8, iPhone 7 Plus, iPhone 7, iPhone SE, iPhone 6s Plus, iPhone 6s, iPhone 6 Plus, iPhone 6.

 Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with an Apple product may affect wireless performance.

Notice on license

This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software.

For details on software licenses, select [Settings] → [General] → [Open Source Licenses].

Notice on GNU GPL/LGPL applied software

This product contains software that is subject to the following GNU General Public License (hereinafter referred to as "GPL") or GNU Lesser General Public License (hereinafter referred to as "LGPL"). These establish that customers have the right to acquire, modify, and redistribute the source code of said software in accordance with the terms of the GPL or LGPL displayed on this unit.

The source code for the above-listed software is available on the Web.

To download, please access the following URL, then select the model name "XAV-AX8100."

URL: http://www.sony.net/Products/Linux/ Please note that Sony cannot answer or respond to any inquiries regarding the content of the source code.

If you have any questions or problems concerning your unit that are not covered in this Operating Instructions, consult your nearest Sony dealer.


Maintenance

Replacing the lithium battery (CR2025) of the remote commander

When the battery becomes weak, the range of the remote commander becomes shorter.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

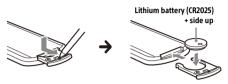

Note on the lithium battery

Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.

Specifications

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF OUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE OUÉBEC.

AUDIO POWER SPECIFICATIONS



CTA2006 Standard Power Output: 20 Watts RMS × 4 at

4 Ohms < 1% THD+N

SN Ratio: 80 dBA (reference: 1 Watt into 4 Ohms)

Monitor section

Display type: Wide LCD color monitor

Dimensions: 8.95 in/227 mm System: TFT active matrix

Number of pixels:

1,152,000 pixels (800 × 3 (RGB) × 480)

Color system:

PAL/NTSC automatic select for CAMERA IN

terminal

Radio section

FΜ

Tuning range: 87.5 MHz - 107.9 MHz

Usable sensitivity: 7 dBf

Signal-to-noise ratio: 70 dB (mono)

Separation at 1 kHz: 45 dB

AM

Tuning range: 530 kHz - 1,710 kHz

Sensitivity: 32 µV

USB player section

Interface:

USB port: USB (Hi-speed) Maximum current: 1.5 A

HDMI section*

Input format: 480p, 576p, 720p
* HDMI output is not available.

Wireless communication

Communication System:

BLUETOOTH Standard version 3.0

Output:

BLUETOOTH Standard Power Class 2 (Max. Conducted +1 dBm)

Maximum communication range*1:

Line of sight approx. 10 m (33 ft)

Frequency band:

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Modulation method: FHSS

Compatible BLUETOOTH Profiles*2:

A2DP (Advanced Audio Distribution Profile) 1.3
AVRCP (Audio Video Remote Control Profile) 1.3

HFP (Handsfree Profile) 1.6

PBAP (Phone Book Access Profile) 1.1 Corresponding codec: SBC, AAC

- *1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna (aerial) performance, operating system, software application, etc.
- *2 BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

Power amplifier section

Outputs: Speaker outputs Speaker impedance: $4 \Omega - 8 \Omega$

Maximum power output: 55 W \times 4 (at 4 Ω)

General

Power requirements: 12 V DC car battery

(negative ground (earth))
Rated current consumption: 10 A
Dimensions (maximum):

Approx. 229 mm \times 136 mm \times 253 mm (9 $^{1}/8$ in \times 5 $^{3}/8$ in \times 10 in) (w/h/d)

Mounting dimensions:

Approx. 182 mm \times 53 mm \times 160 mm (7 1/4 in \times 2 1/8 in \times 6 3/8 in) (w/h/d)

Mass: Approx. 2.4 kg (5 lb 5 oz)

Package contents:

Main unit (1)

Parts for installation and connections (1 set)

Remote commander (1): RM-X170 Optional accessories/equipment:

SiriusXM Connect Vehicle Tuner: SXV100, SXV200,

SXV300

Ask the dealer for detailed information.

Design and specifications are subject to change without notice.

Copyrights

(((SiriusXM)))

SiriusXM-Ready® allows you to Listen to ad-free music, plus all the sports, talk, comedy, news coverage, all in one place. (SiriusXM Connect Tuner and subscription required. Sold separately.) For more information, visit www.siriusxm.com. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Apple CarPlay is a trademark of Apple Inc.

Android Auto is a trademark of Google LLC.

WebLink is a registered trademark of Abalta Technologies, Inc. in the U.S. and a trademark in the other countries.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other trademarks are trademarks of their respective owners.

Connection/Installation

Cautions

- Do not install this unit in a car that has no ACC position. The display of the unit does not turn off even after turning the ignition off, and this causes battery drain.
- Run all ground (earth) leads to a common ground (earth) point.
- Do not get the leads trapped under a screw or caught in moving parts (e.g., seat railing).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the yellow and red power supply leads only after all other leads have been connected.
- Be sure to insulate any loose unconnected leads with electrical tape for safety.
- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.
- Be sure to use the supplied USB extension cables.
- This unit may not be installed properly depending on the car type. For details on the mounting space, see "Ensuring the mounting location of the unit" (page 12).
- To avoid injury, be careful not to drop the display during installation.
- When installing, be careful not to cut off your fingers with the metal parts of the brackets and mounting base.
- Do not pinch your fingers when attaching the display to the unit.
- Do not install the unit in a position where the unit interferes with driving operations (such as in positions where the shift lever hits the unit, or the hazard button cannot be pressed).
- When using the unit for a long period of time, there may be a possibility that the screws securing the display may come loose. Periodically tighten these screws.
- Do not make any changes or modifications to the unit other than those described in this manual.

Note on the power supply lead (yellow)

When connecting this unit in combination with other stereo components, the amperage rating of the car circuit to which the unit is connected must be higher than the sum of each component's fuse amperage rating.

Note on installing in cars with a start-stop system The unit may restart when starting the engine from startstop. In this case, turn off the start-stop system of your car.

Note on installing in cars with electric parking brake system

For cars with electric parking brakes, some related functions (such as video blocking function) may not work properly.

Mounting angle adjustment

Adjust the mounting angle to less than 30°.

Ensuring the mounting location of the unit

Before installing the unit, consult the installer for details on the installation of the unit and the display.

 Make sure that the distance from the front surface (reference surface) of the mounted unit to the surface of your car's center cluster is within 22 mm (7/8 in). If exceeded, the unit cannot be installed properly.


Front surface of the unit (reference surface)

Center cluster panel of your car

Screw hole positions (for securing the display and the unit)

- A 22 mm (7/8 in) 3 51 mm to 71 mm (2 1/8 in to 2 7/8 in)
- For your safety, adjust the mounting location of the unit so that it does not interfere with driving operations such as button (switch) or shift lever operations.

Hidden area even when the display is slid up or down

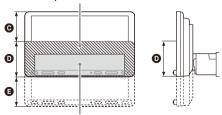

Position of the unit (reference position)

⊙ 60 mm (2 3/8 in) **⊙** 76 mm (3 in) **⑤** 60 mm (2 3/8 in)

Parts List for Installation

- ① Power supply leads (1)
- ② Mounting screw (5 × max. 9 mm (7/32 × max. 3/8 in)) (4)





③ Microphone (1)







⑤ Double-sided tape (1)



(6) USB extension cable (long) (1)



USB extension cable (short)(1)



® Cable tie (1)



Connection cable RC-SR1 (1)



(1) Rear panel cover (left/right)



① Joint cover (1)



(12) Fixing screw (for the joint cover) (3 × 8 mm (1/8 × 11/32 in)) (1)




(3) Fixing screw (for the joint part) (4 × 6 mm (3/16 × 1/4 in)) (4)




This parts list does not include all the package contents.

Connection

- To prevent short circuits, insulate leads with a cover or tape.
- Note that the unit may be damaged if it is connected incorrectly or by short circuits at the leads.

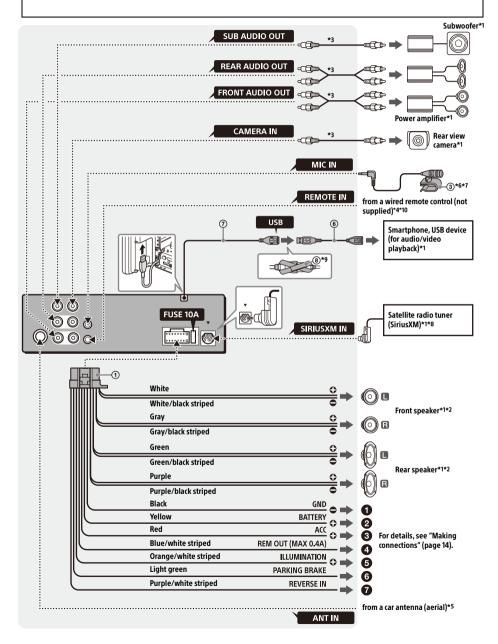

- *1 Not supplied
- *2 Speaker impedance: 4Ω to $8 \Omega \times 4$
- *3 RCA pin cord (not supplied)
- *4 Depending on the type of car, use an adaptor for a wired remote control (not supplied). For details on using the wired remote control, see "Using the wired remote control" (page 15).
- *5 Depending on the type of car, use an adaptor (not supplied) if the antenna (aerial) connector does not fit.
- *6 Whether in use or not, route the microphone input cord so it does not interfere with driving operations. Secure the cord with a clamp, etc., if it is installed around your feet
- *7 For details on installing the microphone, see "Installing the microphone" (page 14).
- *8 For more information on how to install the SiriusXM Connect Vehicle Tuner, consult the installation guide included with the tuner.

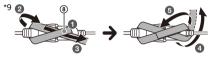

*10 When using the steering wheel remote control, use the connection cable RC-SR1 (a) as necessary.

Making connections

1 To a common ground (earth) point

First connect the black ground (earth) lead then connect the yellow and red power supply leads.

2 To the +12 V power terminal which is energized at all times

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

To the +12 V power terminal which is energized when the ignition switch is set to the accessory position

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

To the power antenna (aerial) control lead or the power supply lead of the antenna (aerial) booster

It is not necessary to connect this lead if there is no power antenna (aerial) or antenna (aerial) booster, or with a manually-operated telescopic antenna (aerial).

To AMP REMOTE IN of an optional power amplifier

This connection is only for amplifiers and a power antenna (aerial). Connecting any other system may damage the unit.

Note

It will take about 10 seconds to shut down the output of REM OUT after the unit is turned off.


To a car's illumination signal

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

To the parking brake switch lead

The mounting position of the parking brake switch lead depends on your car.

Be sure to connect the parking brake lead (light green) of the power supply leads ① to the parking brake switch lead.

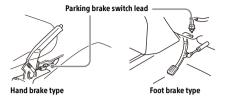

To the +12 V power terminal of the car's rear lamp lead (only when connecting the rear view camera)

Memory hold connection


When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 Ω to 8 Ω , and with adequate power handling capacities to avoid damage.

Installing the microphone

To capture your voice during handsfree calling, you need to install the microphone ③.

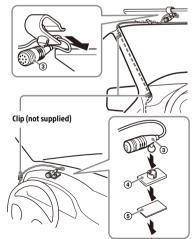

Cautions

- It is extremely dangerous if the cord becomes wound around the steering column or gearstick.
 Be sure to keep it and other parts from interfering with your driving operations.
- If airbags or any other shock-absorbing equipment are in your car, contact the store where you purchased this unit or the car dealer before installation.

Notes

- When mounting on the dashboard, remove the visor clip carefully from the microphone ③, then attach the flatmount base ④ to the microphone ③.
- Before attaching the double-sided tape (5), clean the surface of the dashboard with a dry cloth.

Using the wired remote control

When using the steering wheel remote control

Installation of the connection cable RC-SR1 (1) is required before use.

1 To enable the steering wheel remote control, select [General] → [Steering Control] → [Custom] → ② to make the registration.

When the registration is complete, the steering wheel remote control becomes available.

Notes on installing the connection cable RC-SR1 (9)

- Refer to the support site for details then connect each lead properly to the appropriate leads. Making an improper connection may damage the unit.
- URL: https://www.sony.com/am/support
 Consulting the dealer or an experienced technician for

help is recommended.

When using the wired remote control

1 To enable the wired remote control, set [Steering Control] in [General] to [Preset].

Using the rear view camera

Installation of the rear view camera (not supplied) is required before use.

The picture from a rear view camera connected to the CAMERA IN terminal is displayed when:

- the back lamp of your car lights up (or the shift lever is set to the R (reverse) position).
- you press HOME, then touch [Rear Camera].

Installation

To install the unit and the display securely, be sure to follow the steps 1 to 7 in order.

- 1 Before mounting the unit (page 15)
- 2 Mounting the unit in the dashboard (page 16)
- 3 Attaching the joint cover (page 16)
- 4 Setting up the display (page 16)
- Making sure the mounting positions of the display (page 18)
- 6 Organizing the USB cable (page 18)
- Attaching the display to the unit (page 18)


For your safety

After mounting the display to the unit, make sure that the display does not interfere with normal driving operations such as blocking the driver's view or getting the cables tangled.

1 Before mounting the unit


Before mounting the unit in the dashboard, arrange the USB extension cables.

USB cable connection diagram

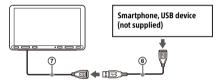

1 Remove the cable cover, store the USB extension cable (short) ① to the groove of the unit, then attach the cable cover.


Position the USB cable so that its connector (male) comes to the front side of the unit.

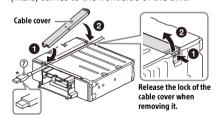

* USB connector (male)

2 Route the USB extension cable (long) (6) inside the dashboard, then connect the USB cable (short) (7) from the unit.

Position the USB cable so that its connector (male) comes out from the center console panel.

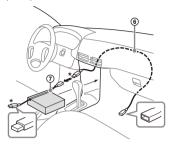


* USB connector (male)

2 Mounting the unit in the dashboard

Using the mounting brackets supplied with your car

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

Example

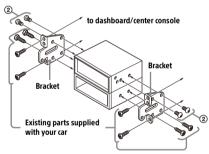


Note

To prevent malfunction, install only with the mounting screws ②.

Attaching the joint cover

1 Attach the joint cover ⁽¹⁾ to the mounting base of the unit, then slide it into the unit temporarily.

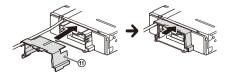

Setting up the display

The mounting positions of the display can be adjusted.



Depth (within 20 mm (¹³/₁₆ in), in 3 steps)




Height (within 60 mm (2 3/8 in), in 7 steps)



Angle (-10° to +10°, in 3 steps)

Adjusting the depth of the display position

1 Loosen the 3 pre-installed screws for depth adjustment (on top and both sides).

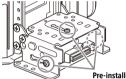


Pre-installed screws

Slightly loosen the screws until you can slide the connector bracket. Do not remove the screws from the bracket. Doing so may damage the parts.

2 Slide the connector bracket to decide the appropriate depth position.


Adjustable depth: within 20 mm ($^{13}/_{16}$ in) ($^{\bullet}$), in 3 steps, in 10 mm ($^{13}/_{32}$ in) pitch ($^{\bullet}$).

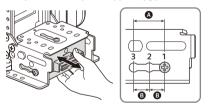

Bracket positions 1 to 3 for the display:

- 1: Slide-out position
- 2: Intermediate position
- 3: Slide-in position

3 At the desired position, tighten the 3 screws firmly to secure the connector bracket.

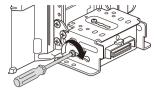


Tighten the screws firmly.

When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be from 1.2 N•m to 1.5 N•m).


Adjusting the height of the display position

1 Remove the 4 pre-installed screws for height adjustment (on both sides).

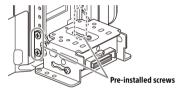


2 Slide the connector bracket up or down to decide the appropriate height position.

Adjustable height: within 60 mm (2 3/8 in) (4), in 7 steps, in 10 mm (13/32 in) pitch (6).

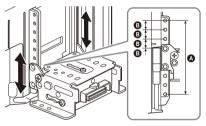


3 At the desired position, tighten the 4 screws firmly to secure the connector bracket.

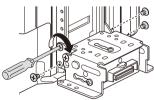


Tighten the screws firmly. When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be from 1.2 N•m to 1.5 N•m).


Adjusting the display angle (tilt)

1 Remove the 2 pre-installed screws for angle adjustment (on both sides).

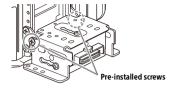


2 Adjust the display angle to decide the appropriate angle.

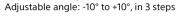


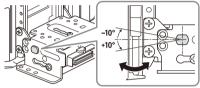

Screw holes to use:

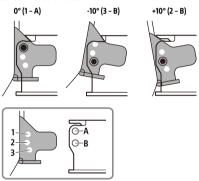

3 At the desired angle, tighten the 2 screws through the screw holes (upper or lower) that match the display angle.

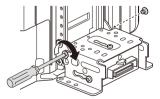


Tighten the screws firmly.
When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be from 1.2 N•m to 1.5 N•m).

6 Making sure the mounting positions of the display

Be careful not to pinch your fingers or scratch the center cluster panel of your car when attaching the display to the unit.

1 Attach the display to the unit temporarily.

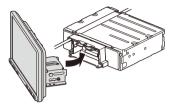


2 Confirm that the display does not block the driver's view or interfere with normal driving operations.

If further adjustment of the mounting position (depth, height, angle) is necessary, remove the display from the unit, then adjust it again accordingly.

6 Organizing the USB cable

1 Connect the USB extension cable (short) to the USB port of the display, then route the cable along the groove.

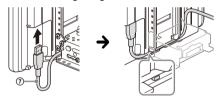


To prevent the extension cable from coming off, be sure to route the USB cable along the groove through the catches inside.

7 Attaching the display to the unit


Be careful not to pinch your fingers or scratch the center cluster panel of your car when attaching the display to the unit.

1 Attach the display to the unit.

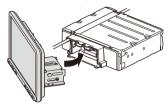


Make sure that the connector brackets of the display is fully inserted to the unit.

2 Tighten 4 screws (3) (on top) to secure the connector bracket to the unit.

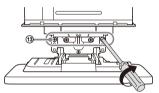


Tighten the screws firmly. When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be from 1.2 N•m to 1.5 N•m).

3 Slide the joint cover ① out to protect the mounting base of the display, then tighten the fixing screw ② to secure the cover.

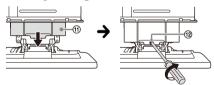

Tighten the screw firmly.
When you tighten a screw, be careful not to apply too much torque as doing so may damage the screw (the torque value should be from 1.2 N•m to 1.5 N•m).

4 Attach the rear panel covers (L, R) ⁽¹⁾ along the guides for protection.

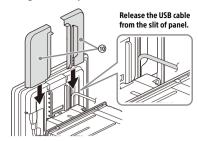

Fuse replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the original fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

If you have any questions/problems regarding this product, try the following:

- 1 Read Troubleshooting in Help Guide (online manual).
- Please contact (U.S.A. only);
 Call 1-800-222-7669
 URL https://www.SONY.com












In-Car Receiver XAV-AX8100/XAV-AX8150



Use this manual if you encounter any problems, or have any questions.

Note: The picture above is for the North America region. Actual product may vary depending on the region.

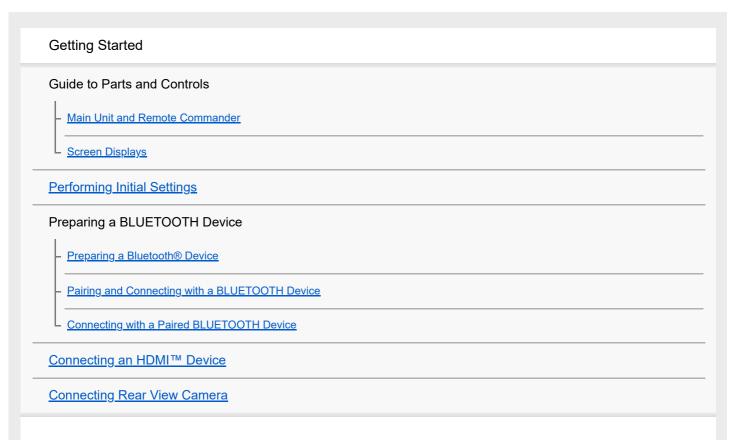

Ra	dio
List	ening to the Radio
-	Listening to the Radio
- 3	<u>Tuning</u>
L	Using Radio Option Functions
List	tening to the SiriusXM Radio (XAV-AX8100(UC))
-	Listening to the SiriusXM Radio
-	Tuning Channels for SiriusXM
- 3	Tuning the Channel by Inputting its Channel Number
-	Tuning the Channel from the Channel List or Category List
-	Setting a Parental Control
L	Using SXM Option Functions
List	ening to the DAB/DAB+ Radio (XAV-AX8150(EUR))
-	Listening to the DAB/DAB+ Radio
-	Searching for Station by Station Group
-	Searching for Station by Station Name
L	Using DAB Option Functions
Pla	yback
<u>Pla</u>	<u>ying a USB Device</u>
Pla	<u>ying an HDMI Device</u>
Pla	<u>ying a BLUETOOTH Device</u>
Sea	arching and Playing Tracks
-	Repeat Play and Shuffle Play
L	Searching for a File from the List Screen
Oth	ner Settings during Playback
На	ndsfree Calling
Pre	paring a Mobile Phone
Red	ceiving a Call
Ma	king a Call

Available Operations during a Call		
Useful Functions		
<u>Apple</u>	<u>e CarPlay</u>	
Andro	oid Auto™	
Webl	<u>Link™</u>	
<u>Using</u>	g Gesture Command	
Setti	ngs	
<u>Basic</u>	c Setting Operation	
<u>Gene</u>	eral Settings (General)	
Soun	nd Settings (Sound)	
Visua	al Settings (Visual)	
BLUE	ETOOTH Settings (Bluetooth)	
Addi	tional Information	
Cano	celing the Demonstration Mode	
<u>Upda</u>	ating the Firmware	
Preca	<u>autions</u>	
<u>Supp</u>	ported Formats for USB Playback	
<u>Abou</u>	<u>it iPhone</u>	
Notic	ee on License	
<u>Main</u>	tenance	
<u>Spec</u>	<u>sifications</u>	
<u>Copy</u>	<u>vrights</u>	
Trou	bleshooting	
Trouk	bleshooting	
Gene	eral	
- <u>T</u>	nere is no beep sound.	
- <u>T</u>	ne fuse has blown. / The unit makes noise when the position of the ignition is switched.	
- <u>Th</u>	ne display disappears from/does not appear on the monitor.	
L M	enu items cannot be selected.	

The unit cannot be operated. Language The clock set automatically is not accurate. Display The display does not turn on. Touch Screen The touch screen does not react to your touch correctly. Multi-touch is not recognized. Radio - The radio reception is poor. / Static noise occurs. L The stations cannot be received. (XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN)) **RDS** PTY displays [PTY not found.]. Seek starts after a few seconds of listening. (XAV-AX8150(EUR)) L There are no traffic announcements. (XAV-AX8150(EUR)) DAB/DAB+ radio (XAV-AX8150(EUR)) Stations cannot be received. No traffic announcements. **Picture** There is no picture or picture noise occurs. L The picture does not fit in the screen. Sound There is no sound, sound skips, or sound cracks. Sound is noisy. USB playback Items cannot be played. - The USB device takes longer to play. Audio files cannot be played. L The smartphone connected to the USB port cannot be played. HDMI playback The connected HDMI device cannot be played.

BLUETOOTH				
- The other BLUETOOTH device cannot detect this unit.				
- Connection is not possible.				
- The name of the detected device does not appear.				
- There is no ringtone.				
- The talker's voice volume is low.				
- The other party says that the volume is too low or high.				
- Echo or noise occurs during call conversations.				
- The phone sound quality is poor.				
- The volume of the connected BLUETOOTH device is low or high.				
- The sound skips during audio streaming or the BLUETOOTH connection fails.				
The connected BLUETOOTH device cannot be controlled during audio streaming.				
- Some functions do not work.				
- A call is answered unintentionally.				
- Pairing failed due to time out.				
- Cannot pair.				
- The BLUETOOTH function cannot be operated.				
No sound is output from the car speakers during a handsfree call.				
SiriusXM Connect Vehicle Tuner (XAV-AX8100(UC))				
A mature channel is not blocked although parental control setting has been made.				
Apple CarPlay				
The Apple CarPlay icon does not appear on the HOME screen.				
Android Auto				
The Android Auto icon does not appear on the HOME screen.				
WebLink™				
– <u>WebLink™ cannot be used.</u>				
There is no sound. / The sound is low.				
Messages				
- General				
- <u>BLUETOOTH</u>				
- <u>General</u>				


SONY

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Main Unit and Remote Commander


Main unit

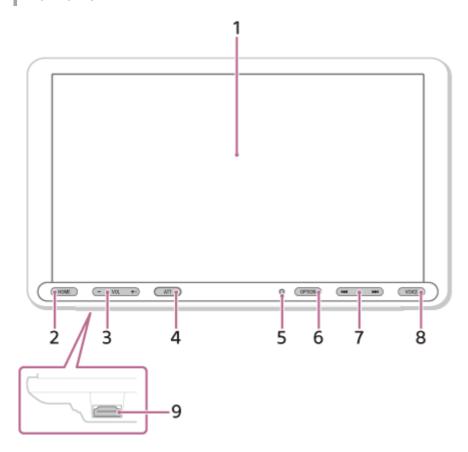

The VOL (volume) + button has a tactile dot.

RM-X170 remote commander (XAV-AX8100(UC)/XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN))

The remote commander can be used to operate the audio controls. For menu operations, use the touch screen.

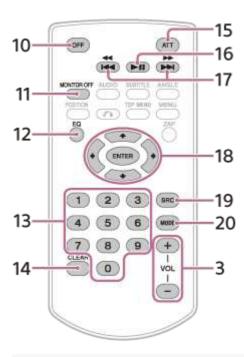

Note

The white buttons in the illustration above are not supported.

Remove the insulation film before use.



- 1. Display/touch screen
- 2. HOME

Displays the HOME screen.

STANDBY

Press and hold to turn the unit to standby mode (USB charging is still available).

To resume, press any button.

- 3. VOL (volume) +/-
- 4. ATT (attenuate)

Attenuates the sound.

To cancel, press again, or press VOL (volume) +.

MONITOR OFF

Press and hold to turn off the monitor.

To turn back on, touch any part of the display.

- 5. Receptor for the remote commander
- 6. OPTION

Displays the OPTION screen.

7. | / | / previous/next)

Functions differently depending on the selected source:

[Radio]: select a preset station.

[SXM] (SiriusXM): select a preset channel.(XAV-AX8100(UC))

[DAB+]: select a preset station.(XAV-AX8150(EUR))

[USB]: move to the previous/next file.

[Bluetooth]: move to the previous/next file.

Press and hold to:

[Radio]: tune into a station automatically (SEEK+/SEEK-).

[DAB+]: select a station (when [Seek By] is set to [A-Z])/search for a station (when [Seek By] is set to [Station Gp]).

(XAV-AX8150(EUR))

[USB]: fast-reverse/fast-forward.

[Bluetooth]: fast-reverse/fast-forward.

8. VOICE

Activates the voice command function for Apple CarPlay and Android Auto.

9. HDMI terminal (input)

10. OFF

Turns the source off.

11. MONITOR OFF

Turns off the monitor.

To turn back on, press again.

12. EQ (equalizer)

Selects an equalizer curve.

13. Number buttons (0 to 9)

14. CLEAR

15. ATT (attenuate)

Attenuates the sound. To cancel, press again.

16. ▶**Ⅲ** (play/pause)

17. | (previous/next)

/ [fast-reverse/fast-forward]

Functions differently depending on the selected source.

[Radio]: select a preset station.

[SXM] (SiriusXM): select a preset channel. (XAV-AX8100(UC))

[DAB+]: select a preset station.(XAV-AX8150(EUR))

[USB]: move to the previous/next file.

[Bluetooth]: move to the previous/next file.

Press and hold to:

[Radio]: tune into a station automatically (SEEK+/SEEK-).

[DAB+]: select a station (when [Seek By] is set to [A-Z])/search for a station (when [Seek By] is set to [Station Gp]).

(XAV-AX8150(EUR))

[USB]: fast-reverse/fast-forward.

[Bluetooth]: fast-reverse/fast-forward.

18. ← / ♣ / ♣ / → (left/up/down/right)

Functions differently depending on the selected source.

[Radio]: select a preset station or tune into a station automatically.

[SXM] (SiriusXM): select a preset channel or move to the previous/next channel. (XAV-AX8100(UC))

[USB]: select a folder or move to the previous/next file.

ENTER

Enters the selected item.

19. SRC (source)

Changes the source. Each time you press this button, a selectable source is displayed in a popup on the current display.

20. MODE

Selects the radio band.

Related Topic

Screen Displays


SONY

Help Guide


In-Car Receiver XAV-AX8100/XAV-AX8150

Screen Displays


Playback screen:

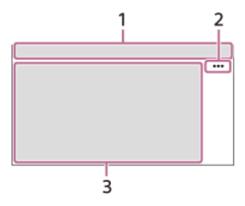

HOME screen:

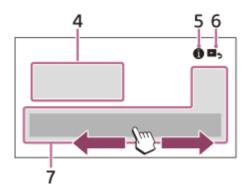

OPTION screen:

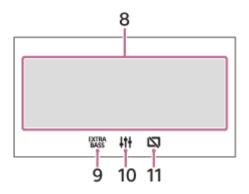

1. Status indication

Icon in the display	Detail
■AIT (attenuate)	Lights up when the sound is attenuated.
(Alternative Frequencies)	Lights up when AF (Alternative Frequencies) is available. (XAV-AX8150(EUR))
(Traffic Announcement)	Lights up when the current traffic information (TA: Traffic Announcement) is available. (XAV-AX8150(EUR))

Icon in the display	Detail
(DAB announcement)	Lights up when a DAB announcement is available. (XAV-AX8150(EUR))
DAB .II (DAB)	Indicates the signal strength status of the DAB radio. (XAV-AX8150(EUR))
SXM.II (SiriusXM)	Indicates the signal strength status of the connected SiriusXM Connect Vehicle Tuner. (XAV-AX8100(UC))
(BLUETOOTH)	Lights up when the BLUETOOTH signal is on. Flashes when the connection is in progress.
(audio)	Lights up when the audio device is playable by enabling the A2DP (Advanced Audio Distribution Profile).
(mobile phone)	Lights up when handsfree calling is available by enabling the HFP (Handsfree Profile).
Titl (antenna)	Indicates the signal strength status of the connected mobile phone.
(battery)	Indicates the remaining battery status of the connected mobile phone.

2. *** (source option)

Opens the source option menu. The available items differ depending on the source.

3. Application specific area

Displays playback controls/indications or shows the unit's status. Displayed items differ depending on the source.

4. Clock

Displays the time which are set on the Date/Time setting.

5. (instruction for smartphone connection) (XAV-AX8100(UC)/XAV-AX8100(E17)/XAV-AX8100(IN))

Displays the instruction for connecting Apple CarPlay, Android Auto or WebLink™.

6. • (return to the playback screen)

Switches from the HOME screen to the playback screen.

7. Sources and Settings select keys

Changes the source or make various settings.

Flick to select the setting icon and other icons.

Touch the source icon you want to select.

XAV-AX8100(UC):

Icon in the display	Name	
0	Android Auto	
©]	Apple CarPlay	
6	Radio	
<u>-2</u>	SXM	
n	Bluetooth	
-	HDMI	
® _	Rear Camera	

Icon in the display	Name	
	USB	
6	WebLink	
6	Phone	
-	Settings	

XAV-AX8150(EUR):

Icon in the display	Name
0	Android Auto
©	Apple CarPlay
6	Radio
∞ +	DAB+
л	Bluetooth
6	Phone
-	USB
0	WebLink
	HDMI
0	Rear Camera
=	Settings

XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN):

Icon in the display	Name
0	Android Auto*
©	Apple CarPlay*
6	Radio
n	Bluetooth
□-	HDMI
6	Phone
	USB
6	WebLink*
8	Rear Camera
*	Settings

 $^{^{\}star}$ It may not be available in your country or region.

8. Sound select keys

Changes the sound.

9. EXTRA (EXTRA BASS)

Changes the EXTRA BASS setting.

10. ‡†‡ (EQ10/Subwoofer)

Changes the EQ10/Subwoofer setting.

11. 📉 (monitor off)

Turns off the monitor. When the monitor is turned off, touch any part of the display to turn it back on.

Related Topic

- General Settings (General)
- Sound Settings (Sound)

SONY

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Performing Initial Settings

You need to perform initial settings before operating the unit for the first time, after replacing the car battery, or changing connections.

If the initial settings screen does not appear when you turn on the unit, perform the factory reset to initialize the unit.

- 1 Touch [Language], then set the display language.
- 2 Touch [Demo] repeatedly to select [OFF] to disable the demonstration mode.
- 3 Touch [Set Date/Time], then set the date and time.

XAV-AX8150(EUR): skip to step 6.

After setting the date and time, touch [OK].

XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN): proceed to step 5. XAV-AX8100(UC): skip to step 6.

- 5 Touch [Tuning Steps], then set the FM/AM tuning step. (XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN))
- 6 To return to the previous display, touch 🛨 (back), then touch [OK].

The startup caution appears.

Read through the startup caution, then if you accept all conditions, touch [Close].

The setting is complete.

This setting can be further configured in the setting menu.

Related Topic

- General Settings (General)
- Sound Settings (Sound)
- Visual Settings (Visual)
- BLUETOOTH Settings (Bluetooth)

SONY

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Preparing a Bluetooth® Device

You can enjoy music or perform handsfree calling depending on the BLUETOOTH compatible device such as smartphones, mobile phones, and audio devices (hereafter "BLUETOOTH device" if not otherwise specified). For details on connecting, refer to the operating instructions supplied with the device. Before connecting the device, turn down the volume of this unit; otherwise, a loud sound may result.


Related Topic

- Pairing and Connecting with a BLUETOOTH Device
- Connecting with a Paired BLUETOOTH Device

In-Car Receiver XAV-AX8100/XAV-AX8150

Pairing and Connecting with a BLUETOOTH Device

When connecting a BLUETOOTH device for the first time, mutual registration (called "pairing") is required. Pairing enables this unit and other devices to recognize each other.

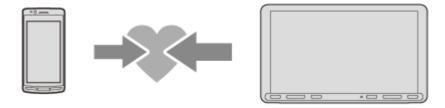

- Place the BLUETOOTH device within 1 m (3 ft) of this unit.
- Press HOME, then touch [Settings].
- Touch [Bluetooth].
- 4 Touch [Bluetooth Connection], then touch [ON].

The BLUETOOTH signal is turned on and [] (BLUETOOTH) lights up on the status bar of the unit.

- 5 Touch [Pairing].
 - (BLUETOOTH) flashes while the unit is in pairing standby mode.
- 6 Perform pairing on the BLUETOOTH device so it detects this unit.
- Select your model name shown in the display of the BLUETOOTH device.

Repeat from step 5 if your model name does not appear.

If the connection confirmation display appears, operate the BLUETOOTH device to approve the connection, then touch [OK] on the unit and/or the BLUETOOTH device.

8 If passkey* input is required on the BLUETOOTH device, input [0000].

When pairing is made, [I] (BLUETOOTH) stays lit.

- * Passkey may be called "passcode", "PIN code", "PIN number", "password", etc., depending on the BLUETOOTH device.
- 9 Select this unit on the BLUETOOTH device to establish the BLUETOOTH connection.

made. (mobile phone) or name (audio) lights up when the connection is made.

Note

- The unit can only be connected with one BLUETOOTH device at a time.
- To disconnect the BLUETOOTH connection, turn the connection off from either the unit or the BLUETOOTH device.
- BLUETOOTH pairing is not possible while Apple CarPlay or Android Auto is running.

In-Car Receiver XAV-AX8100/XAV-AX8150

Connecting with a Paired BLUETOOTH Device

To use a paired device, connection with this unit is required. Some paired devices will connect automatically.



- 1 Press HOME, then touch [Settings].
- 2 Touch [Bluetooth].
- 3 Touch [Bluetooth Connection], then touch [ON].

Make sure that [] (BLUETOOTH) lights up on the status bar of the unit.

- Activate the BLUETOOTH function on the BLUETOOTH device.
- Operate the BLUETOOTH device to connect to this unit.

To connect the last-connected device from this unit

When the ignition is turned to on with the BLUETOOTH signal activated, this unit searches for the last-connected BLUETOOTH device, and connection is made automatically.

Note

While streaming BLUETOOTH audio, you cannot connect from this unit to the mobile phone. Connect from the mobile phone to this unit instead.

To capture your voice during handsfree calling

You need to install the microphone (supplied).


Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Connecting an HDMI™ Device

- 1 Turn off the HDMI device.
- Turn down the volume on the unit.
- 3 Connect the HDMI device to the HDMI terminal on the unit.

To connect the HDMI device, use the HDMI cable (not supplied).

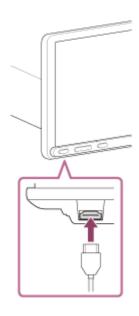

Note


- To connect an Apple device via the HDMI cable, Lightning Digital AV Adapter or USB-C Digital AV Multiport Adapter is required.
- To charge a device when connecting the HDMI cable, connect to the USB port using a multiport adaptor.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Connecting Rear View Camera

By connecting the optional rear view camera to the CAMERA IN terminal, you can display the picture from the rear view camera.

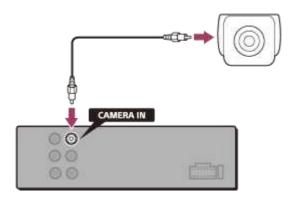

To display the picture from the rear view camera

Press HOME, then touch [Rear Camera].


Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Listening to the Radio

Press HOME, then touch [Radio].

Reception controls/indications

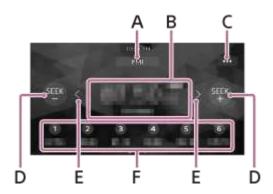

A. Current band

Change the band (FM1, FM2, FM3, AM1 or AM2).

B. Current frequency, program service name*, RDS (Radio Data System) indication*

* Only available during RDS reception.

C. *** (radio option)

Open the radio option menu.

D. SEEK-/SEEK+

Tune in automatically.

E. (/)(left/right)

Tune in manually.

Touch and hold to continuously skip frequencies.

F. Preset numbers

Select a preset station. Swipe right/left to show the other preset stations.

Touch and hold to store the current frequency in that preset.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Tuning



Select the desired band (FM1, FM2, FM3, AM1 or AM2).



2 Perform tuning.

To tune automatically

Touch SEEK-/SEEK+.

Scanning stops when the unit receives a station.

To tune manually

Touch and hold (/) (left/right) to locate the approximate frequency, then touch (/) (left/right) repeatedly to finely adjust to the desired frequency.

To store manually

While receiving the station that you want to store, touch and hold the desired preset number.

To receive stored stations

Select the band, then touch the desired preset number.

Related Topic

Listening to the Radio

Help Guide

In-Car Receiver
XAV-AX8100/XAV-AX8150

Using Radio Option Functions

The following functions are available by touching ***(option) on the top-right of the screen.



[BTM (Best Tuning Memory)]

Stores stations in order of frequency on the preset numbers. 18 stations for FM and 12 stations for AM can be stored as preset stations.

[AF] (XAV-AX8150(EUR))

Selects [ON] to continuously retune the station to the strongest signal in a network. (Only available during FM reception.)

[TA] (XAV-AX8150(EUR))

Selects [ON] to receive current traffic information or traffic programs (TP) if available. (Only available during FM reception.)

[Regional] (XAV-AX8150(EUR))

Selects [ON] to stay with the station you are receiving while the AF function is set to on. If you leave this regional program's reception area, select [OFF]. This function does not work in the UK and some other areas. (Only available during FM reception.)

[PTY]

Selects a program type from the PTY list to search for a station broadcasting the selected program type. (Only available during FM reception.)

To receive emergency announcements (XAV-AX8150(EUR))

With the AF or TA function on, emergency announcements will automatically interrupt the currently selected source.

Related Topic

Listening to the Radio

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Listening to the SiriusXM Radio

Press HOME, then touch [SXM].

To activate your SiriusXM Subscription

Only SiriusXM brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Connect Vehicle Tuner and Subscription are required. For more information, visit www.siriusxm.com

After installing your SiriusXM Connect Vehicle Tuner and antenna (aerial), press HOME, then touch [SXM]. You should be able to hear the SiriusXM preview channel on Channel 1. After verifying that you can hear the preview channel, select Channel 0 to find the Radio ID of your radio. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner and its packaging. You will need this number to activate your subscription. Write the number down for reference.

Note

The SiriusXM Radio ID does not include the letters I, O, S or F.

To display the SiriusXM Radio ID

- 1. Press HOME, then touch [SXM].
- Touch *** (option), then select [Channel Direct Select].
- 3. Input [000], then touch [OK].

In the USA, you can activate online or by calling SiriusXM Listener Care:

- Visit www.siriusxm.com/activatenow
- Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please contact:

- Visit www.siriusxm.ca/activate
- Call SiriusXM Customer Care at 1-888-539-7474

As part of the activation process, the SiriusXM satellites will send an activation message to your radio. When your radio detects that the radio has received the activation message, your radio will display: [Subscription Updated Press Enter to Continue]. Once subscribed, you can tune to channels in your subscription plan.

Note


- The activation process usually takes 10 to 15 minutes, but may take up to an hour.
- Your radio will need to be turned on and receiving the SiriusXM signal to receive the activation message.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Tuning Channels for SiriusXM

Reception controls/indications

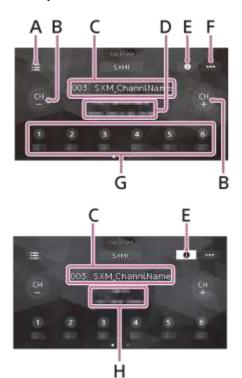

A. \equiv (list)

Open the channel list or category list.

B. CH- (previous channel) /CH+ (next channel)

Select the channel.

C. Channel number, channel name

D. Artist name, song title

E. (information)

Switch the channel information.

F. *** (SXM option)

Open the SXM option menu.

G. Preset numbers

Select a preset channel. Swipe right/left to show the other preset channels. Touch and hold to store the current channel in that preset.

H. Category name, content information

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Tuning the Channel by Inputting its Channel Number

Touch the area with the channel number and channel name on the SiriusXM radio screen.



Alternatively, press ENTER on the remote commander.

2 Input the channel number, then touch [OK].

Alternatively, input with the number buttons (0 to 9) and press ENTER on the remote commander.

Related Topic

Tuning Channels for SiriusXM

In-Car Receiver XAV-AX8100/XAV-AX8150

Tuning the Channel from the Channel List or Category List

1 Touch ≒ (list) on the SiriusXM radio screen.



The category list appears.

2 Touch the desired category.

To tune from the channel list, touch [All Channels].

3 Touch the desired channel.

Help Guide

In-Car Receiver
XAV-AX8100/XAV-AX8150

Setting a Parental Control

The parental control feature allows you to limit access to SiriusXM channels with mature content. When enabled, the parental control feature requires you to enter a passcode to tune to the locked channels. Information on setting up the passcode and locking channels can be found below.

Touch *** (option) on the SiriusXM radio screen, then touch [Parental Control].



The passcode input display appears.

2 Enter your 4-digit passcode by touching the number keys, then touch [OK].

The passcode confirmation display appears.

3 Enter the 4-digit passcode again, then touch [OK].

The parental control is applied, and the channels are locked.

To unlock the channels/To lock the channels again

- 1. Touch *** (option), then touch [Parental Control]. The passcode input display appears.
- 2. Enter your 4-digit passcode by touching the number keys, then touch [OK].

To change the passcode

- 1. Touch *** (option), touch [Pass Code Change], then enter your current passcode.
- **2.** Enter your new passcode, then touch [OK]. The passcode confirmation display appears.
- 3. Enter your new passcode again, then touch [OK].

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Using SXM Option Functions

The following functions are available by touching ••• (option) on the SiriusXM radio screen.



[Channel Direct Select]

Tunes the desired channel by inputting its channel number directly.

[Parental Control]

Sets the parental lock to on or off.

[Pass Code Change]

Changes the passcode for the Parental Control feature.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150


Listening to the DAB/DAB+ Radio

Press HOME, then touch [DAB+].

Hint

- Set [Antenna Power] to [ON] (default) or [OFF] depending on the type of DAB antenna (aerial) (not supplied).
- When [DAB+] is selected for the first time after performing the factory reset, the auto tune starts automatically. Allow the auto tune to finish. (If interrupted, the auto tune will start again the next time you select [DAB+].) If no DAB station is stored by the auto tune, tune by touching [Auto Tune] of [Iist].

Reception controls/indications

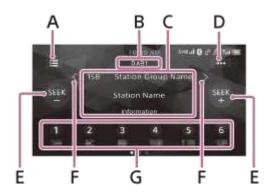

A. \equiv (list)

Open the station list.

B. Current band

Change the band (DAB1, DAB2 or DAB3).

C. Station group name, station name

D. *** (DAB Options)

Open the DAB Options menu.

E. SEEK-/SEEK+

Search for stations.

F. (/) (left/right)

Search for station groups.

(Available only when [Seek By] is set to [Station Gp].)

G. Preset numbers

Select a preset station. Swipe right/left to show the other preset stations.

Touch and hold to store the current station in that preset.

Related Topic

Using DAB Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Searching for Station by Station Group

Before operation, set [Seek By] to [Station Gp] for searching by station groups.



Touch SEEK+/- to search for a station.

Scanning stops when the unit receives a station. Search until the desired station is received.

To search for a station group

Touch and hold (/) (left/right) to search for a station group and release when the desired station group is displayed.

To store a station manually

While receiving the station that you want to store, touch and hold the desired preset number.

To receive stored stations

Touch the desired preset number.

Related Topic

Using DAB Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Searching for Station by Station Name

Before operation, set [Seek By] to [A-Z] for searching by station name.



The station list appears.

Touch the desired station.

To search from playback screen

Touch SEEK+/- to switch to the previous/next station.

To update the station list

Touch [Auto Tune].

Related Topic

Using DAB Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Using DAB Option Functions

The following functions are available by touching ••• (option) on the DAB/DAB+ radio screen.



[Seek By]

Sets the station search mode: [A-Z] (Search by station name), [Station Gp] (Search by station group).

[Announce]

Enables DAB announcements with interrupting the currently selected source: [ON], [OFF]. During a DAB announcement, the volume is adjusted to the level set for TA in RDS.

[Soft Link]

Searches for and tunes to the same or similar program automatically when the signal of the current program is too weak to receive: [ON], [OFF].

"Hard Link" follows the same program, and "Soft Link" follows a similar program.

Soft Link	DAB/FM
OFF	Hard Link only
ON	Hard Link/Soft Link

[Information]

Displays the currently selected station group name, station name, PTY type of the station, etc.

[Antenna Power]

Supplies power to the DAB antenna (aerial) input terminal: [ON], [OFF].

Related Topic

Using Radio Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Playing a USB Device

MSC (Mass Storage Class) type USB devices* compliant with the USB standard can be used.

* e.g., a USB flash drive, digital media player

Note

- For details on the compatibility of your USB device, visit the support site.
- Check the supported file formats for USB playback.
- Turn down the volume on the unit.
- 2 Connect the USB device to the USB port.
- Press HOME, then touch [USB].
 Playback starts.

To remove the USB device

Turn the unit off or turn the ignition switch to the ACC off position, then remove the USB device.

Related Topic

- Supported Formats for USB Playback
- Customer Support Websites

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Playing an HDMI Device

Turn off the HDMI device	1	Turn	off t	the	HDMI	device
--------------------------	---	------	-------	-----	------	--------

- Turn down the volume on the unit.
- Connect the HDMI device to the HDMI terminal on the unit.
- Press HOME, then touch [HDMI].
- 5 Turn on the HDMI device.

Playback starts.

Note

- BLUETOOTH audio is not available when HDMI device is played.
- Do not disconnect the device during playback.
- The supplied remote commander works for some of the operations on the unit. (XAV-AX8100(UC)/XAV-AX8100(E)/XAV-AX8100(E)/XAV-AX8100(IN))
- For HDMI connection, the supplied remote commander only works for this unit. (XAV-AX8100(UC)/XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN))
- The image may show up differently on the unit's display compared to the one on the display of the connected HDMI device.
- This unit is compatible with 480p, 576p, and 720p.

Related Topic

■ Connecting an HDMI[™] Device

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Playing a BLUETOOTH Device

You can play contents on a connected device that supports BLUETOOTH A2DP (Advanced Audio Distribution Profile).



- Make a BLUETOOTH connection with the audio device.
- Press HOME, then touch [Bluetooth].
- Operate the audio device to start playback.

Note

- Depending on the audio device, information such as title, track number/time, and playback status may not be displayed on this unit
- Even if the source is changed on this unit, playback of the audio device does not stop.
- BLUETOOTH pairing is not possible while Apple CarPlay is running.

To match the volume level of the BLUETOOTH device to other sources

You can reduce the volume level differences between this unit and the BLUETOOTH device: During playback, touch ***(option), then set [Input Level] between -6 and +6.

Related Topic

Connecting with a Paired BLUETOOTH Device

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Repeat Play and Shuffle Play



During playback, touch 🖵 (repeat) or 🗂 (shuffle) repeatedly until the desired play mode appears.

Playback in the selected play mode may take time to start.

Available play modes differ depending on the selected sound source and connected device.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Searching for a File from the List Screen

1 During USB playback, touch 🧮 (list).

The list screen of the currently played item appears.

When connecting the USB device to the USB port, touch (audio) or (video) to list up by file type.



2 Touch the desired item.

Playback starts.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Other Settings during Playback

When playing back a video from an HDMI device connected to the HDMI terminal, or from a USB device connected to the USB port, further settings are available by touching *** (option).

Picture EQ

Adjusts the picture quality according to your taste: [Dynamic], [Standard], [Theater], [Custom]. (Available only when the parking brake is applied.)

Aspect

Selects an aspect ratio for the screen of the unit. (Available only when the parking brake is applied.)

Item	Detail
Normal	Displays a 4:3 picture in its original size, with side bars to fill the 16:9 screen.
Zoom	Displays a 16:9 picture that has been converted into 4:3 letter box format.
Full	Displays a 16:9 picture in its original size.
Captions	Enlarges the picture horizontally, while fitting captions in the screen.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Preparing a Mobile Phone

To use a mobile phone, connect it with this unit.



Note

The handsfree calling functions are not available when the Apple CarPlay or Android Auto function is activated. In this case, use the handsfree calling functions of the application.

Related Topic

Preparing a Bluetooth® Device

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Receiving a Call



Touch (call) when a call is received.

The phone call starts.

Note

The ringtone and talker's voice are output from the front speakers. To select the speakers for handsfree calling, press HOME, then touch [Settings] and select [Phone Call Sound] in [Sound].

To reject/end a call

Touch \rightarrow (end a call).

Related Topic

Preparing a Mobile Phone


Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Making a Call

1 Press HOME, then touch [Phone].

2 Touch one of the call icons on the BLUETOOTH phone display.

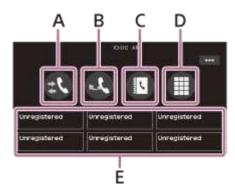

A. • (call history)*

Select a contact from the call history list. The unit stores the last 20 calls.

B. J. (redial)

Make a call automatically to the last contact you made.

C. (contacts)*

Select a contact from the name list/number list. To search for the desired contact in alphabetical order from the name list, touch (alphabetical search).

D. [iii (dialpad)

Enter the phone number.

E. Favorites (favorites)

Select the stored contact.

To store the contact, see "To add phone numbers to Favorites" below.

* The mobile phone needs to support PBAP (Phone Book Access Profile).

3 Touch (call).

The phone call starts.

To add phone numbers to Favorites

You can store up to 6 contacts in the Favorites.

- 1. On the phone screen, touch (contacts) and select a phone number you want to store in the Favorites. The confirmation display appears.
- 2. Touch [Add to Favorites].
- 3. Touch the desired preset in the Favorites to store the phone number.

The contact is stored in the Favorites.

Related Topic

Preparing a Mobile Phone

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Available Operations during a Call

To adjust the ringtone volume

Press VOL (volume) +/- while receiving a call.

To adjust the talker's voice volume

Press VOL (volume) +/- during a call.

To adjust the volume for the other party (Mic gain adjustment)

During a handsfree call, touch *** (option), then set [MIC Gain] to [High], [Middle], or [Low].

To reduce echo and noise (Echo/noise canceler mode)

During a call, touch ***(option), then set [Speech Quality] to [Mode 1] or [Mode 2].

To switch between handsfree mode and handheld mode

During a call, touch - (speaker/phone) to switch the phone call audio between the unit and mobile phone.

Note

Depending on the mobile phone, this operation may not be available.

To answer an incoming call automatically

Touch *** (option), then set [Auto Answer] to [ON].

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Apple CarPlay

Apple CarPlay lets you use your iPhone in the car in a way that allows you to stay focused on the road.

Notes on using Apple CarPlay

- Check the Apple CarPlay website for supported iOS versions. Update to the latest iOS version before use.
- For details about Apple CarPlay, refer to the manual supplied with your iPhone, or visit the Apple CarPlay website.
- Since the GPS on your iPhone is used, place your iPhone where it can easily receive a GPS signal.
- 1 Connect your iPhone to the USB port.

To connect an iPhone, use a USB connection cable for iPhone (not supplied).

2 Press HOME, then touch the Apple CarPlay icon.

Your iPhone's display appears on the display of the unit. Touch and control the applications.

Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone may affect wireless performance.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Android Auto™

Android Auto extends the Android platform into the car in a way that's purpose-built for driving.

Notes on using Android Auto

- Check the Android Auto website for supported OS versions. Update to the latest OS version before use.
- Your Android phone needs to support Android Auto.
- Download the Android Auto app on Google Play.
- For details about Android Auto, refer to the manual supplied with your Android phone, or visit the Android Auto website.
- Since the GPS on your Android phone is used, place your Android phone where it can easily receive a GPS signal.
- Android Auto may not be available in your country or region.
- Connect your Android phone to the USB port.

To connect an Android phone, use an appropriate connection cable (not supplied).

2 Press HOME, then touch the Android Auto icon.

The Android Auto interface will be displayed full-screen on the display of the unit. Touch and control the applications.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

WebLink™

The "WebLink Host" app allows you to enjoy the "WebLink Apps" such as a video or music player on the connected iPhone/Android phone.

Notes on using WebLink™

- Check the WebLink™ website for supported OS versions. Update to the latest OS version before use.
- For details on compatible models, refer to the compatibility list on the following site: http://abaltatech.com/WL
- Download the "WebLink Host" app available on Google Play for your Android phone, and available on the App Store for your iPhone.
- A network connection may be required when configuring settings, such as during the initial connection setup. Make sure that a network connection is available on your iPhone/Android phone.
- When using the Cast function, settings on your iPhone/Android phone may be required.
- For details about the "WebLink Apps", visit the website for the "WebLink Apps".
- The WebLink™ function and/or a certain "WebLink Apps" may not be available in your country or region.
- When using the Cast function and connecting the iPhone, the display direction is the same as the display of the iPhone.
- 1 Connect your iPhone/Android phone with main unit via BLUETOOTH.
- 2 Connect your iPhone/Android phone to the USB port.

To connect an iPhone, use a USB connection cable for iPhone (not supplied). To connect an Android phone, use an appropriate connection cable (not supplied).

3 Press HOME, then touch the WebLink™ icon.

The WebLink™ display appears on the display of the unit. Touch and control the applications.

Hint

You can switch the app between Apple CarPlay/Android Auto and WebLink™ if these apps are installed on your iPhone/Android phone.

Help Guide

In-Car Receiver
XAV-AX8100/XAV-AX8150

Using Gesture Command

You can perform frequently-used operations by swiping your finger on the reception/playback display.

Note

■ The gesture commands explained below are not available on the screens of Apple CarPlay, Android Auto and WebLink™.

Swipe left to right

Radio reception:

seek forward stations. (The same as pressing and holding | (next).)

SiriusXM reception (XAV-AX8100(UC)):

tune the next channel (channel +).

Video/audio playback:

skip forward a file/track. (The same as (next).)

Swipe right to left

Radio reception:

seek backward stations. (The same as pressing and holding [44 (previous).)

SiriusXM reception (XAV-AX8100(UC)):

tune the previous channel (channel -).

Video/audio playback:

skip backward a file/track. (The same as | (previous).)

Swipe upwards

Radio reception:

receive stored stations (go forward).

SiriusXM reception (XAV-AX8100(UC)):

tune the next preset (preset +).

Swipe downwards

Radio reception:

receive stored stations (go backward).

SiriusXM reception (XAV-AX8100(UC)):

tune the previous preset (preset -).

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Basic Setting Operation

You can set items in the following setup categories: General Settings (General), Sound Settings (Sound), Visual Settings (Visual), BLUETOOTH Settings (Bluetooth).

- Press HOME, then touch [Settings].
- 2 Touch one of the setup category.

The items that can be set differ depending on the source and settings.

Move the scrollbar up and down to select the desired item.

To return to the previous display

Touch **†** (back).

To switch to the playback screen

Touch [15] (return to the playback screen).

Related Topic

- General Settings (General)
- Sound Settings (Sound)
- Visual Settings (Visual)
- BLUETOOTH Settings (Bluetooth)
- Canceling the Demonstration Mode

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

General Settings (General)

Language

Selects the display language: [English], [Español], [Français], [Deutsch], [Italiano], [Português], [Русский], [ไทย], [董仲文], [繁體中文], [한국어], [Indonesia].

Demo

Activates the demonstration: [OFF], [ON].

Date/Time


Item	Detail
Set Date/Time	Sets the date and clock time: [Auto(RDS)], [Manual]. (XAV-AX8150(EUR)): [Auto(DAB)], [Manual].
Date Format	Selects the format: [DD-MM-YYYY], [MM-DD-YYYY], [YYYY-MM-DD].
Time Format	Selects the format: [12-hour], [24-hour].

Beep

Activates the operation sound: [OFF], [ON].

Rear View Camera

Selects the image from the rear view camera: [OFF], [Normal], [Reverse] (mirror image). [Guide Line Adjust] adjusts the guide on the picture from the rear view camera. Touch the near side (a) or far side (b) (red portions) of the guide to adjust.

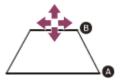

Touch $\langle \ / \ \rangle / \ \rangle$ (left/up/right/down) to adjust the guide position, and touch \rightarrow (inward) or \leftarrow \rightarrow (outward) to adjust the guide width.

Steering Control

Selects the input mode for the connected remote control. To prevent a malfunction, be sure to match the input mode with the connected remote control before use.

Item	Detail
------	--------

Item	Detail
Custom	Input mode for the steering wheel remote control (follow the procedures of register/setup) to register functions on the connected remote control).
Preset	Input mode for the wired remote control excluding the steering wheel remote control.
(register/setup)	The steering button screen appears. Press and hold the button you want to assign to the steering wheel. The button on the screen lights up (standby). Press and hold the button on the steering wheel you want to assign the function to. The button on the screen will change the color (highlighted or encircled by an orange line). To register other functions, repeat steps and a. (Available only when [Steering Control] is set to [Custom].)

Note

- While making settings, the connected remote control cannot be used even though some functions have already been registered. Use the buttons on the unit.
- If an error occurs while registering, all the registered information is cleared. Restart registration from the beginning.
- This function may not be available on some vehicles. For details on the compatibility of your vehicle, visit the support site.

Driving Position

Selects the driving position to optimize usability of Apple CarPlay and Android Auto: [Left Side], [Right Side].

Tuning Steps (XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN))

Sets the FM/AM tuning step of your country: [50kHz/9kHz], [100kHz/10kHz], [200kHz/10kHz].

SXM Reset (XAV-AX8100(UC))

Initializes the SiriusXM Connect Vehicle Tuner settings (preset channels/parental lock): [Reset], [Cancel].

Factory Reset

Initializes all the settings to the factory settings.

Firmware Version

Updates and confirms the firmware version.

Open Source Licenses

Displays the software licenses.

Related Topic

- Basic Setting Operation
- Customer Support Websites

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Sound Settings (Sound)

EXTRA BASS

Reinforces bass sound in synchronization with the volume level: [OFF], [1], [2].

EQ10/Subwoofer

Selects an equalizer curve and adjusts the subwoofer level. (Available when any source is selected.)

Item	Detail
EQ10	Selects the equalizer curve: XAV-AX8100(UC)/XAV-AX8150(EUR) [OFF], [R&B], [Rock], [Pop], [Hip-Hop], [Dance], [EDM], [Jazz], [Soul], [Country], [Custom] XAV-AX8100(E)/XAV-AX8100(E17) [OFF], [R&B], [Rock], [Pop], [Hip-Hop], [Dance], [EDM], [Jazz], [Regueton], [Salsa], [Custom] XAV-AX8100(IN) [Bollywood], [R&B], [Rock], [Pop], [Hip-Hop], [Dance], [EDM], [Jazz], [Regueton], [Custom], [OFF] [Custom] adjusts the equalizer curve: -6 to +6.
Subwoofer	Adjusts the volume level of the subwoofer: [OFF], -10 to +10.

Balance/Fader

Adjusts the balance/fader level.

Item	Detail	
Balance	Adjusts the sound balance between the left and right speakers: [L15] to [R15].	
Fader	Adjusts the sound balance between the front and rear speakers: [Front 15] to [Rear 15].	

Crossover

Adjusts the cut-off frequency and subwoofer phase.

Item	Detail	
High Pass Filter	Selects the cut-off frequency of the front/rear speakers: [OFF], [50Hz], [60Hz], [80Hz], [100Hz], [120Hz].	
Low Pass Filter	Selects the cut-off frequency of the subwoofer: [OFF], [50Hz], [60Hz], [80Hz], [100Hz], [120Hz].	
Subwoofer Phase	Selects the subwooter phase: [Normall, [Reverse].	

DSO (Dynamic Stage Organizer)

Enhances audio output: [OFF], [Low], [Middle], [High].

Volume Settings

Adjusts the volume level of each source.

Item	Detail
Media	Adjusts the volume of media: 0 to 50.
Radio Announcements (XAV-AX8150(EUR))	Adjusts the volume of radio announcements: 0 to 50.
Phone Call	Adjusts the volume of phone calls: 0 to 50.
Ring Tone	Adjusts the volume of the ring tone: 0 to 50.
Voice Recognition	Adjusts the volume of voice recognition: 0 to 50.
Navigation Guidance	Adjusts the volume of navigation guidance: 0 to 50.

Note

When adjusting the volume settings, park your car in a safe place as it may be too loud to hear the surrounding sounds.

Phone Call Sound

Selects the speakers for handsfree calling: [Front], [Rear], [All].

Guidance during Call

Activates the notices of Apple CarPlay through navigation guidance or alert sounds during a phone call: [ON], [OFF]. (Not available when Android Auto is connected.)

Related Topic

Basic Setting Operation

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Visual Settings (Visual)

Wallpaper

Changes the wallpaper by touching the desired color or sets your favorite photo data in a MSC (Mass Storage Class) type USB device as a wallpaper.

(Available only when photo data are JPEG files of 6 MB or less.)

To set a photo data

When connecting the USB device to the USB port, [You can import a photo from a USB device] appears on the screen. Touch [Import], and select your favorite photo.

Dimmer for Monitor & Illum.

Dims the display and the button illumination: [OFF], [Auto], [ON].

([Auto] is available only when the illumination control lead is connected and works when the head light is turned on.)

(register/setup) adjusts the brightness level when the dimmer is activated: -5 to +5.

Illum. Level on Monitor OFF

Dims the button illumination when the monitor is turned off: [OFF], [1], [2], [3], [4].

Touch Screen Adjust

Adjusts the touch screen calibration if the touching position does not correspond with the proper item.

Related Topic

Basic Setting Operation

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

BLUETOOTH Settings (Bluetooth)

Bluetooth Connection

Activates the BLUETOOTH signal: [OFF], [ON], [Pairing] (enters into pairing standby mode).

Bluetooth Device Info

Displays the information of the BLUETOOTH device connected to the unit. (Available only when [Bluetooth Connection] is set to [ON] and a BLUETOOTH device is connected to the unit.)

Bluetooth Reset

Initializes all BLUETOOTH-related settings such as pairing information, call history, history of connected BLUETOOTH devices, etc.

Related Topic

Basic Setting Operation

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Canceling the Demonstration Mode

- 1 Press HOME, then touch [Settings].
- Touch [General], then touch [Demo] to set to [OFF].
- To exit the setup menu, touch (back) twice.

Related Topic

General Settings (General)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Updating the Firmware

To update the firmware, visit the support site, then follow the online instructions.

Note

During the update, do not remove the USB device.

Related Topic

Customer Support Websites

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Precautions

- Power antenna (aerial) extends automatically.
- When you transfer ownership or dispose of your car with the unit installed, initialize all the settings to the factory settings by performing the factory reset.
- Do not splash liquid onto the unit.

Notes on safety

- Comply with your local traffic rules, laws, and regulations.
- While driving
 - Do not watch or operate the unit, as it may lead to distraction and cause an accident. Park your car in a safe place to watch or operate the unit.
 - Do not use the setup feature or any other function which could divert your attention from the road.
 - When backing up your car, be sure to look back and watch the surroundings carefully for your safety even if the rear view camera is connected. Do not depend on the rear view camera exclusively.
- While operating
 - Do not insert your hands, fingers, or foreign objects into the unit as it may cause injury or damage to the unit.
 - Keep small articles out of the reach of children.
 - Be sure to fasten seatbelts to avoid injury in the event of sudden movement of the car.

Preventing an accident

Pictures appear only after you park the car and set the parking brake. If the car starts moving during video playback, the following caution is displayed and you cannot watch the video.

[Video blocked for your safety.]

Do not operate the unit or watch the monitor while driving.

Notes on LCD panel

Do not get the LCD panel wet or expose it to liquids. This may cause a malfunction.



- Do not press down hard on the LCD panel as doing so can distort the picture or cause a malfunction (i.e., the picture may become unclear or the LCD panel may be damaged).
- Do not touch the panel with objects other than with your finger as it may damage or break the LCD panel.
- Clean the LCD panel with a dry soft cloth. Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray.
- \bullet Do not use the unit outside the temperature range 0 °C to 40 °C (32 °F to 104 °F).
- If your car was parked in a cold or hot place, the picture may not be clear. However, the monitor is not damaged and the picture will become clear after the temperature in your car becomes normal.
- Some stationary blue, red, or green dots may appear on the monitor. These are called "bright spots" and can happen
 with any LCD. The LCD panel is precision-manufactured with more than 99.99% of its segments functional. However,

it is possible that a small percentage (typically 0.01%) of the segments may not light up properly. This will not, however, interfere with your viewing.

Notes on the touch screen

- This unit uses a resistive touch screen. Touch the screen directly with your fingertip.
- Multi-touch operation is not supported on this unit.
- Do not touch the screen with sharp objects such as a needle, pen, or fingernail. Operation with a stylus is not supported on this unit.
- Do not let any objects contact the touch screen. If the screen is touched by an object other than your fingertip, the unit may not respond correctly.
- Since glass material is used for the screen, do not subject the unit to strong shock. If cracking or chipping occurs on the screen, do not touch the damaged part as it may cause injury.
- Keep other electrical devices away from the touch screen. They may cause the touch screen to malfunction.

If you have any questions or problems concerning your unit that are not covered in this Help Guide, consult your nearest Sony dealer.

Related Topic

General Settings (General)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Supported Formats for USB Playback

WMA (.wma)*1 *2

Bit rate: 48 kbps – 192 kbps (Supports variable bit rate (VBR))*3

Sampling frequency*4: 44.1 kHz

MP3 (.mp3)*1 *2

Bit rate: 48 kbps – 320 kbps (Supports variable bit rate (VBR))*3

Sampling frequency*4: 32 kHz, 44.1 kHz, 48 kHz

AAC (.m4a)*1 *2

Bit rate: 40 kbps – 320 kbps (Supports variable bit rate (VBR))*3

Sampling frequency*4: 8 kHz – 48 kHz Bit per sample (Quantization bit): 16 bits

FLAC (.flac)*1 *6

Sampling frequency*4: 8 kHz – 48 kHz Bit per sample (Quantization bit): 16 bits

WAV (.wav)*1

Sampling frequency*4: 8 kHz – 48 kHz

Bit per sample (Quantization bit): 16 bits, 24 bits

Xvid (.avi)

Video codec: MPEG-4 Advanced Simple Profile

Audio codec: MP3 (MPEG-1 Layer3)

Bit rate: Max. 4 Mbps

Frame rate: Max. 30 fps (30p/60i) Resolution: Max. 1280 × 720*5

MPEG-4 (.mp4)

Video codec: MPEG-4 Advanced Simple Profile, AVC Baseline Profile

Audio codec: AAC Bit rate: Max. 4 Mbps

Frame rate: Max. 30 fps (30p/60i) Resolution: Max. 1280 × 720*5

WMV (.wmv, .avi)*1

Video codec: WMV3, WVC1 Audio codec: MP3, WMA Bit rate: Max. 6 Mbps Frame rate: Max. 30 fps

Resolution: Max. 720 × 480*5

MKV (.mkv)

Video codec: MPEG-4 Advanced Simple Profile, AVC Baseline Profile

Audio codec: MP3, AAC Bit rate: Max. 5 Mbps Frame rate: Max. 30 fps

Resolution: Max. 1280 × 720*5

^{*1} Copyright-protected files and multi-channel audio files cannot be played back.

^{*2} DRM (Digital Rights Management) files cannot be played back

^{*3} Non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency.

^{*4} Sampling frequency may not correspond to all encoders.

^{*5} These numbers indicate the maximum resolution of playable video and do not indicate the player's display resolution. The display resolution is

^{*6} Displaying the tag information is not supported.

Note

Some files may not be played back even though their file formats are supported by the unit.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

About iPhone

- Compatible iPhone models:
 - iPhone SE (2nd generation), iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8 Plus, iPhone 8, iPhone 7 Plus, iPhone 7, iPhone SE, iPhone 6s Plus, iPhone 6s, iPhone 6s, iPhone 5s
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Notice on License

This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. For details on software licenses, select [Settings] \rightarrow [General] \rightarrow [Open Source Licenses].

If you have any questions or problems concerning your unit that are not covered in this Help Guide, consult your nearest Sony dealer.

Related Topic

General Settings (General)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150


Maintenance

Replacing the lithium battery (CR2025) of the remote commander (XAV-AX8100(UC)/XAV-AX8100(E17)/XAV-AX8100(IN))

When the battery becomes weak, the range of the remote commander becomes shorter.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

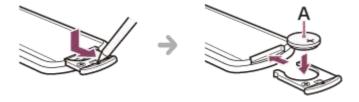

A: Lithium battery (CR2025) + side up

Note

Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Specifications

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC.

AUDIO POWER SPECIFICATIONS



CTA2006 Standard

Power Output: 20 Watts RMS × 4 at 4 Ohms < 1% THD+N

SN Ratio: 80 dBA (reference: 1 Watt into 4 Ohms)

Monitor section

Display type	Wide LCD color monitor
Dimensions	8.95 in/227 mm
System	TFT active matrix
Number of pixels	1,152,000 pixels (800 × 3 (RGB) × 480)
Color system	PAL/NTSC automatic select for CAMERA IN terminal

Radio section

XAV-AX8100(UC):

FM

Tuning range	87.5 MHz – 107.9 MHz
Usable sensitivity	7 dBf
Signal-to-noise ratio	70 dB (mono)
Separation at 1 kHz	45 dB

ΑM

Tuning range	530 kHz – 1,710 kHz
Sensitivity	32 μV

XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN):

FΜ

Tuning range	87.5 MHz – 108.0 MHz (at 50 kHz step) 87.5 MHz – 108.0 MHz (at 100 kHz step) 87.5 MHz – 107.9 MHz (at 200 kHz step)
FM tuning step	50 kHz/100 kHz/200 kHz switchable
Usable sensitivity	7 dBf
Signal-to-noise ratio	70 dB (mono)
Separation at 1 kHz	45 dB

AM

Tuning range	531 kHz – 1,602 kHz (at 9 kHz step) 530 kHz – 1,710 kHz (at 10 kHz step)
AM tuning step	9 kHz/10 kHz switchable
Sensitivity	32 µV

XAV-AX8150(EUR):

DAB/DAB+

Tuning range	174.928 MHz – 239.200 MHz	
Antenna (aerial) terminal	External antenna (aerial) connector	

FΜ

Tuning range	87.5 MHz – 108.0 MHz
Usable sensitivity	7 dBf
Signal-to-noise ratio	70 dB (mono)
Separation at 1 kHz	45 dB

AM

Tuning range	531 kHz – 1,602 kHz
Sensitivity	32 µV

USB player section

Interface	USB port: USB (Hi-speed)

HDMI section*

Input format	480p, 576p, 720p

^{*} HDMI output is not available.

Wireless communication

Communication System	BLUETOOTH Standard version 3.0
Output	BLUETOOTH Standard Power Class 2 (Max. Conducted +1 dBm)
Maximum communication range*1	Line of sight approx. 10 m (33 ft)
Frequency band	2.4 GHz band (2.4000 GHz – 2.4835 GHz)
Modulation method	FHSS
Compatible BLUETOOTH Profiles*2	A2DP (Advanced Audio Distribution Profile) 1.3 AVRCP (Audio Video Remote Control Profile) 1.3 HFP (Handsfree Profile) 1.6 PBAP (Phone Book Access Profile) 1.1
Corresponding codec	SBC, AAC

^{*1} The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna (aerial) performance, operating system, software application, etc.

Power amplifier section

Outputs	Speaker outputs
Speaker impedance	4 Ω – 8 Ω
Maximum power output	55 W × 4 (at 4 Ω)

General

Power requirements	12 V DC car battery (negative ground (earth))
Rated current consumption	10 A
Dimensions (maximum)	Approx. 229 mm × 136 mm × 253 mm (9 1/8 in × 5 3/8 in × 10 in) (w/h/d)
Mounting dimensions	Approx. 182 mm × 53 mm × 160 mm (7 1/4 in × 2 1/8 in × 6 3/8 in) (w/h/d)
Mass	Approx. 2.4 kg (5 lb 5 oz)
Package contents	Main unit (1) Parts for installation and connections (1 set) Remote commander (1): RM-X170 (XAV-AX8100(UC)/XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN))

^{*2} BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

Optional	
accessories/equipment	

SiriusXM Connect Vehicle Tuner: SXV100, SXV200, SXV300 (XAV-AX8100(UC))

Ask the dealer for detailed information.

Design and specifications are subject to change without notice.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Copyrights



SiriusXM-Ready® allows you to Listen to ad-free music, plus all the sports, talk, comedy, news coverage, all in one place. (SiriusXM Connect Tuner and subscription required. Sold separately.) For more information, visit www.siriusxm.com.

Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Apple, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android, Android Auto, Google and Google Play are trademarks of Google LLC.

WebLink is a registered trademark of Abalta Technologies, Inc. in the U.S. and a trademark in the other countries.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE

HTTP://WWW.MPEGLA.COM

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO

(i)ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR

(ii)DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE

HTTP://WWW.MPEGLA.COM

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE AND VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO DECODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR THE VC-1 STANDARD ("VC-1 VIDEO") THAT

WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO AND/OR VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE

HTTP://WWW.MPEGLA.COM

All other trademarks are trademarks of their respective owners.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Troubleshooting

Do the following before you request a repair service.

- Read the relevant instruction and troubleshooting topics in this Help Guide.
- Issues may be resolved by updating the software. When you install the "Support by Sony" app on your smartphone, you can get software update information conveniently.
- Visit our customer support home page.

If none of the above works, consult your nearest Sony dealer.

Related Topic

- Customer Support Websites
- About the "Support by Sony" App

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

There is no beep sound.

• An optional power amplifier is connected and you are not using the built-in amplifier.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The fuse has blown. / The unit makes noise when the position of the ignition is switched.

• The power supply leads are not matched correctly with the car's accessory power connector.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The display disappears from/does not appear on the monitor.

- The monitor off function is activated.
 - Touch anywhere on the display to turn the display back on.

Related Topic

- Main Unit and Remote Commander
- Screen Displays

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Menu items cannot be selected.

Unavailable menu items are displayed in gray.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The unit cannot be operated.

Press and hold HOME for more than 10 seconds to restart the unit. For your safety, do not restart the unit while you
are driving.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The clock set automatically is not accurate.

- The clock data on radio waves is not accurate.
 - Press HOME, select [Settings] → [General] → [Date/Time] → [Set Date/Time], then set to [Manual]. After that, touch (register/setup) and adjust the clock manually.

Related Topic

General Settings (General)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The display does not turn on.

- The display may not be mounted properly.
 - Check that the installation and connection of the display are appropriately applied to the unit.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The touch screen does not react to your touch correctly.

- Touch one part of the touch screen at a time. If two or more parts are touched simultaneously, the touch screen will
 not react correctly.
- Calibrate the touch screen of the display.
- Touch the pressure sensitive screen firmly.

Related Topic

Visual Settings (Visual)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Multi-touch is not recognized.

• Multi-touch operation is not supported on this unit.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The radio reception is poor. / Static noise occurs.

Connect the antenna (aerial) firmly.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The stations cannot be received. (XAV-AX8100(E)/XAV-AX8100(E17)/XAV-AX8100(IN))

- The tuning step setting has been erased.
 - Set the tuning step again.

Related Topic

General Settings (General)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

PTY displays [PTY not found.].

• The current station is not an RDS station, or the radio reception is poor.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Seek starts after a few seconds of listening. (XAV-AX8150(EUR))

- The station is non-TP or has a weak signal.
 - Deactivate TA.

Related Topic

Using Radio Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

There are no traffic announcements. (XAV-AX8150(EUR))

- Activate TA.
- The station does not broadcast any traffic announcements despite being TP.
 - Tune into another station.

Related Topic

Using Radio Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Stations cannot be received.

See [No Station] for details when the DAB signal cannot be received.

Related Topic

DAB radio (XAV-AX8150(EUR))

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

No traffic announcements.

- Disable DAB announcements.
 - Traffic announcements (TA) are not available while DAB announcements are enabled.

Related Topic

Using DAB Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

There is no picture or picture noise occurs.

- A connection has not been made correctly.
 - Check the connection between this unit and other equipment, and set the input selector of the equipment to the source corresponding to this unit.
- Installation is not correct.
 - Install the unit at an angle of less than 30° in a sturdy part of the car.
- The parking lead (light green) is not connected to the parking brake switch lead, or the parking brake is not applied.
 - Check that the parking lead is firmly connected to the parking brake switch lead, then apply the parking brake.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The picture does not fit in the screen.

The aspect ratio is fixed on the playback source.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

There is no sound, sound skips, or sound cracks.

- A connection has not been made correctly.
- Check the connection between this unit and the connected equipment and set the input selector of the equipment to the source corresponding to this unit.
- Installation is not correct.
 - Install the unit at an angle of less than 30° in a sturdy part of the car.
- The unit is in pause/reverse/fast-forward mode.
- The settings for the outputs are not made correctly.
- The volume is too low.
- The ATT function is activated.
- The format is not supported.
 - Check if the format is supported by this unit.

Related Topic

Supported Formats for USB Playback

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Sound is noisy.

Keep cords and cables away from each other.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Items cannot be played.

Reconnect the USB device.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The USB device takes longer to play.

• The USB device contains large-sized files or files with a complicated tree structure.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Audio files cannot be played.

- USB devices formatted with file systems other than FAT12, FAT16, FAT32 or exFAT are unsupported.*
- * This unit supports FAT12, FAT16, FAT32 and exFAT, but some USB device may not support all of these. For details, refer to the operating instructions of each USB device or contact the manufacturer.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The smartphone connected to the USB port cannot be played.

• The USB connection is only available for Android phones and USB devices in MSC mode. When using a smartphone other than an Android phone, make a BLUETOOTH connection.

Related Topic

Preparing a Bluetooth® Device

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The connected HDMI device cannot be played.

- Check the supported file formats for the connected HDMI device.
 - HDMI devices formatted with file systems other than 480p, 576p, or 720p are unsupported.
- If [No Video Signal] appears on the display, set the resolution of the HDMI device to match the resolution of the unit.
- Check that the HDMI cable is firmly inserted to the unit. It is also recommended to use a certified HDMI cable.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The other BLUETOOTH device cannot detect this unit.

- Set [Bluetooth Connection] to [ON].
- While connecting to a BLUETOOTH device, this unit cannot be detected by another device. Terminate the current connection and search for this unit from the other device.
- Depending on your smartphone or mobile phone, you may need to delete this unit from the history of the connected smartphone or mobile phone, then pair them again.

Related Topic

- Preparing a Bluetooth® Device
- BLUETOOTH Settings (Bluetooth)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Connection is not possible.

• Check the pairing and connection procedures in the manual of the other device, etc., and perform the operation again.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The name of the detected device does not appear.

Depending on the status of the other device, it may not be possible to obtain the name.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

There is no ringtone.

- Raise the volume while receiving a call.
- The speakers are not connected to the unit.
 - Connect the speakers to the unit. To select the speakers for ringtone, press HOME, then touch [Settings] and select [Phone Call Sound] in [Sound].

Related Topic

Sound Settings (Sound)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The talker's voice volume is low.

Raise the volume during a call.

SONY Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The other party says that the volume is too low or high.

Adjust the [MIC Gain] level.

Related Topic

Available Operations during a Call

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Echo or noise occurs during call conversations.

- Reduce the volume.
- Set [Speech Quality] to [Mode 1] or [Mode 2].
- If ambient noise other than the phone call sound is loud, try reducing this noise.
 - Shut the window if road noise is loud.
 - Lower the air conditioner if the air conditioner is loud.

Related Topic

Available Operations during a Call

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The phone sound quality is poor.

- Phone sound quality depends on reception conditions of the mobile phone.
 - Move your car to a place where you can enhance the mobile phone's signal if the reception is poor.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The volume of the connected BLUETOOTH device is low or high.

- Volume level will differ depending on the BLUETOOTH device.
 - Reduce the volume level differences between this unit and the BLUETOOTH device.

Related Topic

Playing a BLUETOOTH Device

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The sound skips during audio streaming or the BLUETOOTH connection fails.

- Reduce the distance between the unit and the BLUETOOTH device.
- If the BLUETOOTH device is stored in a case which interrupts the signal, remove the case while using the device.
- Several BLUETOOTH devices or other devices (e.g. ham radio devices) which emit radio waves are used nearby.
 - Turn off the other devices.
 - Increase the distance between the unit and other devices.
- Playback sound stops momentarily when this unit is connecting to a mobile phone. This is not a malfunction.

SONY Help Guide

l- 0-- D---i---

In-Car Receiver XAV-AX8100/XAV-AX8150

The connected BLUETOOTH device cannot be controlled during audio streaming.

• Check that the connected BLUETOOTH device supports AVRCP.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Some functions do not work.

Check that the connecting device supports the functions in question.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

A call is answered unintentionally.

- The connecting phone is set to start a call automatically.
- [Auto Answer] of this unit is set to [ON].

Related Topic

Available Operations during a Call

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Pairing failed due to time out.

 Depending on the connecting device, the time limit for pairing may be short. Try completing the pairing within the time.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Cannot pair.

• The unit may not be able to pair with a previously paired BLUETOOTH device after initializing the unit if the pairing information of the unit is on the BLUETOOTH device. In this case, delete the pairing information of the unit from the BLUETOOTH device, and then pair them again.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The BLUETOOTH function cannot be operated.

• Turn the ignition off. Wait for a while, then turn the ignition to the ACC position.

SONY Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

No sound is output from the car speakers during a handsfree call.

• If the sound is output from the mobile phone, set the mobile phone to output the sound from the car speakers.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

A mature channel is not blocked although parental control setting has been made.

• If you tune to a mature channel, the passcode display will appear. Once you have entered the passcode, you will have unblocked parental control for all channels until the unit is powered down or you turn parental control back on. Set [Parental Control] to [Locked] in the SXM option (***) again.

Related Topic

Using SXM Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The Apple CarPlay icon does not appear on the HOME screen.

- Your iPhone is not compatible with Apple CarPlay.
 - Refer to the manual supplied with your iPhone, or visit the Apple CarPlay website.
- Disconnect your iPhone from the USB port and reconnect it again.
- Apple CarPlay may not be available in your country or region.
- Make sure a certified Lightning cable is used to connect your iPhone and the unit.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

The Android Auto icon does not appear on the HOME screen.

- Check your Android phone and accept the disclaimers and permission requests required to use Android Auto on your Android phone.
- There is no Android Auto application installed on your Android phone.
 - Download and install the Android Auto application onto your Android phone.
- Your Android phone is not compatible with Android Auto.
 - Your Android phone needs to support Android Auto. Refer to the manual supplied with your Android phone, or visit the Android Auto website.
- Disconnect your Android phone from the USB port and reconnect it again.
- Android Auto may not be available in your country or region.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

WebLink™ cannot be used.

- Installing the "WebLink Host" app to your iPhone/Android phone is required.
 - Check the following site and install the "WebLink Host" app. http://abaltatech.com/WL
 - Check your iPhone/Android phone and accept the disclaimers and permission to use WebLink™ on your iPhone/Android phone.
- Disconnect your iPhone/Android phone from the USB port and reconnect it again.
- Restart your iPhone/Android phone.
- WebLink™ may not be available in your country or region.

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

There is no sound. / The sound is low.

- Your iPhone/Android phone is not connected to the unit via BLUETOOTH.
 - Make a BLUETOOTH connection.
- The volume level of [Bluetooth] is low.
 - Adjust the volume level of [Bluetooth].

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

General

Cannot play this content.

For USB source:

- The currently selected content cannot be played back, or skipped to the next one.
 - The content is not in a supported file format. Check supported file formats.

For HDMI source:

- The unit receives unsupported input signal.
- There may be malfunction of connection cable.
 - Replace the cable.

Device no response

- The unit does not recognize the connected USB device.
 - Reconnect the USB device.
 - Check that the USB device is supported by the unit.

No Playable Data

- The USB device has no playable data.
 - Load music data/files into the USB device.

Overcurrent caution on USB.

- The USB device is overloaded.
 - Disconnect the USB device.
 - The USB device has a fault, or an unsupported device is connected.

USB device not supported

• For details on the compatibility of your USB device, visit the support site.

USB hub not supported

USB hubs are not supported on this unit.

Related Topic

- Sound Settings (Sound)
- Supported Formats for USB Playback

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

BLUETOOTH

Bluetooth device is not found.

- The unit cannot detect a connectable BLUETOOTH device.
 - Check the BLUETOOTH setting of the connecting device.
- No device is in the list of registered BLUETOOTH devices.
 - Perform pairing with a BLUETOOTH device.

Handsfree device is not available.

- A mobile phone is not connected.
 - Connect a mobile phone.

Related Topic

- Pairing and Connecting with a BLUETOOTH Device
- Connecting with a Paired BLUETOOTH Device

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

SiriusXM Connect Vehicle Tuner (XAV-AX8100(UC))

Channel Locked Please Enter the Lock Code

The channel that you have requested is Locked by the radio Parental Control feature. See "Setting a Parental Control" for more information on the Parental Control feature and how to access locked channels.

Channel Not Available

- The channel that you have requested is not a valid SiriusXM channel or the channel that you were listening to is no longer available.
- You may also see this message briefly when first connecting a new SiriusXM Connect Vehicle Tuner.
 Visit www.siriusxm.com in the USA or www.siriusxm.ca in Canada for SiriusXM channel lineup information.

Channel Not Subscribed Call SiriusXM to Subscribe

The channel that you have requested is not included in your SiriusXM subscription package or the channel that you were listening to is no longer included in your SiriusXM subscription package.
 If you have questions about your subscription package or would like to subscribe to this channel, please contact

In the USA, you can activate online or by calling SiriusXM Listener Care:

- Visit www.siriusxm.com/activatenow
- Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please contact:

- Visit www.siriusxm.ca/activate
- Call SiriusXM Customer Care at 1-888-539-7474

Check Antenna

SiriusXM.

- The radio has detected a fault with the SiriusXM antenna (aerial).
- The antenna (aerial) cable may be either disconnected or damaged.
 - Verify that the antenna (aerial) cable is connected to the SiriusXM Connect Vehicle Tuner.
 - Inspect the antenna (aerial) cable for damage and kinks.
 - Replace the antenna (aerial) if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at

https://shop.siriusxm.com/all-parts/

Check Tuner

- The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner.
- The tuner may be disconnected or damaged.
 - Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio.

Incorrect Pass Code entered

- Passcode input failed.
 - Check that the passcode has been entered correctly.
 - If you forget your passcode, perform [SXM Reset] in [General].
 Note that performing [SXM Reset] will initialize all the SiriusXM settings and stored contents in the SiriusXM Connect Vehicle Tuner.

No Signal

- SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.
 - Verify that your vehicle is outdoors with a clear view of the sky.

- Verify that the SiriusXM magnetic mount antenna (aerial) is mounted on a metal surface on the outside of the vehicle.
- Move the SiriusXM antenna (aerial) away from any obstructions.
- Inspect the antenna (aerial) cable for damage and kinks.
- Consult the SiriusXM Connect Vehicle Tuner installation manual for more information on antenna (aerial) installation.
- Replace the antenna (aerial) if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at

https://shop.siriusxm.com/all-parts/

Subscription Updated Press Enter to Continue

- The radio has detected a change in your SiriusXM subscription status.
 - Press Enter to clear the message.

If you have questions about your subscription, please contact SiriusXM.

In the USA, you can activate online or by calling SiriusXM Listener Care:

Visit www.siriusxm.com/activatenow

Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please contact:

Visit www.siriusxm.ca/activate

Call SiriusXM Customer Care at 1-888-539-7474

Related Topic

- Setting a Parental Control
- General Settings (General)

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

WebLink™

Please install and start the WebLink Host app on your phone. For more information visit www.abaltatech.com/wl

Visit www.abaltatech.com/wl, and check the detail.

Related Topic

■ WebLink[™]

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

DAB radio (XAV-AX8150(EUR))

No Station

- The DAB signal cannot be received.
 - Perform an auto tune.
 - Check the connection of the DAB antenna (aerial) (not supplied).
 - Check that [Antenna Power] is set to [ON].

Receiving

The unit is waiting to receive a DAB station.

Related Topic

- Listening to the DAB/DAB+ Radio
- Using DAB Option Functions

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

Customer Support Websites

You can access the following customer support websites to get support information about your system.

For customers in the USA/Canada/Latin America:

https://www.sony.com/am/support

For customers in European countries:

https://www.sony.eu/support

For customers in other countries/regions:

https://www.sony-asia.com/support

For customers in the USA

If you have any questions/problems regarding this product, try the following:

- 1. Read Troubleshooting in this Help Guide.
- 2. Please contact (U.S.A. only); Call 1-800-222-7669 URL https://www.SONY.com

For customers in European countries

Register your product online now at:

https://www.sony.eu/mysony

Help Guide

In-Car Receiver XAV-AX8100/XAV-AX8150

About the "Support by Sony" App

When you install the "Support by Sony" app on your smartphone, you can get software update information conveniently.

"Support by Sony" app - Find information and get notifications about your product:






- ✓ News & Alerts
- ✓ Software updates
- ✓ Tutorials
- ✓ Tips & Tricks

https://sony.net/SBS

Visit the "Support by Sony" website at sony.net/SBS, and bookmark the model name of the unit, "XAV-AX8100" or "XAV-AX8150", when you visit the website.



XAV-AX8000/XAV-AX8050D

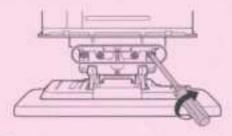

English

- . Tighten the screws firmly.
- When using the unit for a long period of time, there may be a possibility that the screws securing the display may come loose. Periodically tighten these screws.
- Do not pinch your fingers when attaching the display to the unit.

Français

- . Serrez les vis fermement.
- Après une longue période d'utilisation, les vis qui maintiennent l'écran peuvent se desserrer. Serrez périodiquement ces vis.
- Ne vous pincez pas les doigts lorsque vous fixez l'écran à l'appareil.

Deutsch

- Ziehen Sie die Schrauben fest an.
- Wenn Sie das Gerät längere Zeit verwenden, besteht die Möglichkeit, dass sich die Schrauben, mit denen das Display befestigt ist, lösen. Ziehen Sie diese Schrauben regelmäßig an.
- Klemmen Sie sich nicht die Finger, wenn Sie das Display am Gerät anbringen.

Español

- Apriete los tornillos con firmeza.
- Al utilizar la unidad durante un periodo de tiempo prolongado, existe la posibilidad de que se aflojen los tornillos que mantienen la pantalla en posición. Apriete estos tornillos de forma periódica.
- Tenga cuidado para evitar pellizcarse los dedos al conectar la pantalla a la unidad.

Nederlands

- Draai de schroeven stevig vast.
- Na langdurig gebruik van het toestel is het mogelijk dat de schroeven die het scherm op zijn plaats houden, loskomen. Span deze schroeven regelmatig aan.
- Wees voorzichtig dat uw vingers niet geklemd raken bij het bevestigen van het scherm aan het toestel.

Svenska

- · Dra åt skruvarna ordentligt.
- Om enheten används under längre tidsperioder kan det hända att skruvarna som fäster displayen kan lossna. Dra regelbundet åt dessa skruvar.
- Var f\u00f6rsiktig s\u00e5 att du inte kl\u00e4mmer fingrama n\u00e4r du f\u00e4ster displayen p\u00e5 enheten.

Italiano

- · Serrare saldamente le viti.
- Quando si utilizza l'apparecchio per un periodo di tempo prolungato, è possibile che le viti che fissano il display si allentino. Serrare regolarmente queste viti.
- Prestare attenzione affinché le dita non vengano pizzicate durante il fissaggio del display all'apparecchio.


Portugués

- · Aperte firmemente os parafusos.
- Ao utilizar a unidade durante periodos de tempo prolongados, os parafusos que fixam o ecrá podem soltar-se. Aperte periodicamente estes parafusos.
- Não entale os dedos ao colocar o ecrá na unidade.

Dansk

- Spænd skruerne ordentligt.
- Når enheden bruges i en længere periode, er det muligt, at skruerne, som sikrer displayet, kan løsne sig. Spænd regelmæssigt disse skruer.
- Pas på ikke at klemme fingrene, når displayet skal fastgøres til enheden.

XAV-AX8000/XAV-AX8050D

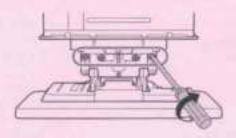

Suomi

- · Kirista ruuvit.
- Kun laitetta käytetään pitkäjaksoisesti, on olemassa mahdollisuus, että näytön kiinnitysruuvit voivat löystyä. Kiristä nämä ruuvit säännöllisesti.
- Ålä jätä sormiasi puristuksiin, kun kiinnität näytön laitteeseen.

Norsk

- . Stram skruene godt til.
- Når enheten brukes over lengre tid er det mulig at skruene som holder displayet på plass blir løse.
 Stram til skruene av og til.
- Ikke klem fingrene når du fester displayet på enheten.

Polski

- Mocno dokręcić śruby.
- Po dłuższej eksploatacji urządzenia śruby mocujące wyświetlacz mogą się poluzować. Należy okresowo dokręcać te śruby.
- Należy uważać, aby nie przyszczypnąć palców podczas mocowania wyświetlacza do urządzenia.

Ελληνικά

- Εφίξτε καλά τις βίδες.
- Κατά τη χρήση της μονάδας για μεγάλο χρονικό διάστημα, οι βίδες που ασφαλίζουν την οθόνη ενδέχεται να χαλαρώσουν. Να σφίγγετε κατά διαστήματα αυτές τις βίδες.
- Προσέξτε να μην μαγκώσετε τα δάχτυλά σας κατά την προσάρτηση της οθόνης στη μονάδα.

Česky

- · Dotáhněte šrouby pevně.
- Když budete jednotku používat delší dobu, může dojit k tomu, že se šrouby upevňující displej uvolní.
 Proto tyto šrouby pravidelně dotahujte.
- Při upevňování displeje jednotky si neskřípněte prsty.

Magyar

- · Erősen húzza meg a csavarokat.
- Az egység hosszas használata során lehetséges, hogy a kijelzőt tartó csavarok kilazulhatnak.
 Rendszeresen húzza meg ezeket a csavarokat.
- A kijelző és az egység csatlakoztatásakor ne csípje be az ujját.

Български

- Здраво затегнете винтовете.
- При използване на устройството за дълъг период от време има вероятност поддържащите дисплея винтове да се разхлабят. Периодично затягайте винтовете.
- Внимавайте да не си прищипете пръстите, когато монтирате дисплея към устройството.

Slovensky

- . Skrutky pevne dotiahnite.
- Po dlhšom čase používania je možné, že sa skrutky držiace displej uvoľnia. Skrutky pravidelne dofahujte.
- Pri nasadzovaní displeja na zariadenie dávajte pozor, aby ste si nepricvikli prsty.

Română

- · Strångeti bine suruburile.
- Când utilizați unitatea pentru o perioadă îndelungată de timp, este posibil ca șuruburile care fixează afișajul să se slăbească. Străngeți periodic aceste suruburi.
- Aveţi grijă să nu vă prindeţi degetele atunci când ataşaţi afişajul la unitate.

緊懼中文

- 程固旋聚螺絲。
- 長時間使用本機時、用於固定顯示幕的螺絲可能會監 股。請定期旋緊這些螺絡。
- 將顯示幕連接本機時。請勿夾傷手指。

اللغة العربية

- ثبت المسامير بإحكام.
- عند استخدام الوحدة لفترة طويلة من الزمن، قد يكون هناك احتمال أن تصبح المسامير التي تثبت الشاشة طليقة، اربط هذه المسامير بإحكام بشكل دوري.
 - * لا تضغط بأصابعك عند توصيل الشاشة بالوحدة.

فارسى

- يبج ها را محكم ببنديد.
- هنگام استفاده از دستگاه برای مدت زمان طولانی، احتمال شل شدن پیچ هایی که صفحه نمایش را بسته اند وجود دارد، در فواصل معینی، پیچ ها را محکم کنید.
- منگام وصل کردن صفحه نمایش به دستگاه، مراقب باشید انگشتانتان در دستگاه گیر نکند.



LIMITED WARRANTY

Car Audio

U.S. and Canada only - 3 years

Sony Electronics Inc. solely for purchases made in the United States and Sony of Canada Ltd. solely for purchases made in Canada (obligatively "Sony") warrants this product against defects in material or workmanship for the criginal owner and any subsequent end user owner(s) ("flst" or "flst") for the time period set forth above as set forth remain. Pursuant to this Limited Warranty. Sony will, at its option, (i) repair the product using new or refurbished period or (ii) replace the product with a new or recentified/introbleted product of the same (or similar) model. For purposes of this Limited Warranty, "recentified" or "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are Your exclusive remedies. Sony does not warrant that the operation of the product will be uninterrupted or error-free.

Term: For the time period set forth above from the original date of purchase of the product when purchased directly from Sony or Sony authorized dealer (To determine if a dealer is in the Sony authorized dealer network, please visit US: www.sony.com/retailers; Canada: https://dealerlocator.sony.ca/locator; or contact Sony directly). Sony will, at its option, repair or replace with a new, recertified or returbished product or part, any product or part determined to be defective.

This Limited Warranty covers only the hardware components packaged with the product. It does not cover separate accessories, technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the product, and other included contant, any such software or other included contant is provided "AS IS" unless expressly provided for in any enclosed software Umited Warranty or End User License Agreement, Please refer to the End User License Agreement(s) included with the product for Your rights and obligations with respect to the software or other included contant. If You purchased an extended service plan, please refer to the service plan for the coverage, duration and terms of service. Extended service plans are not governed by this Limited Warranty.

To obtain warranty service, You must deliver the product, in either its original packaging or packaging affording an equal slegrer of protection to a Sony authorized service center together with a stated purchase receipt in order to obtain warranty service. Sony cannot guarantee that it will be able to repair any product under this warranty or make a product exchange without risk to or loss of software or data. It is Your responsibility to remove or backup any removable media or parts, data, software or other materials You may have stored or preserved on Your product. It is likely that any media or parts, data, software, or other materials (like pictures, music, videos, etc.) will be lost or reformatted. during service and Sony will not be responsible for any such damage or loss. Contact the following for specific instructions on how to obtain warranty service for Your product:

For purchases made in the UNITED STATES:

Visit Sony's Website: www.sony.com/support Or call the Customer Experience Center: 1-800-222-SONY (7569) To register Your product or for contact information to purchase accessories or parts go to Sony's Website

For purchases made in CANADA:

Visit Sony's Website: www.sony.ca/support
Or call the Gustomer Experience Center: 1-877-899-SONY (7668)

To register Your product or for contact information to purchase accessories or parts go to Sony's Website On-sits service for televisions of certain dimensions may be available to a customer living within a 50km radius of an authorized Sony service facility, provided the residence can be accessed by an on-road service vehicle.

Repair/Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement, recertified or refurbished product for the remainder of the original Limited Warranty period or for metry (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony. Any replacement, recertified or refurbished product provided under this Limited Warranty may, at Sony's option, vary in color and/or control. design from the original product and may not include any original engraving or similar customization/personalization

Sony is not responsible for, and this Limited Watmarty does not cover, any damage arising from a failure to operate the product within its chiended uses, or otherwise follow the owner's instructions reliating to the product's use and installation. Sony is not responsible for any labor or parts costs you incur reliating to repairs or services from providers services other than from a Sony authorized service center. This Limited Watmarty only covers product issues caused by defects in material or workmanning during ordinary consumer use. This Limited Watmarty does not cover products purchased from sources other than Sony or a Sony authorized dealer (including non-authorized ordine auctions), or issues due to: (i) outdoor exposure and other acts of nature; (ii) power surges, (iii) accidental damage; (iv) abuse, (v) limitations of technology; (vi) cosmetic damage; (vii) contact with liquid, heat, humidity or perspectors, sand, smoke, or long materials; (viii) damage, malfunction and/or failure to product resulting from use of parts or supplies not sold or authorized by Sony, (iii) damage, malfunction and/or failure to product resulting from servicing not authorized or performed by Sony or a Sony authorized service center; (x) computer or interest visues, bugs, worms, or Trojan Horses; (xi) maturicities due to perphensiolacoespories; (xii) modifications to control the behavior of the product or any factory installed operating system, (xiii) modifications to control the behavior of the product or any factory installed operating system, (xiii) modifications to control the behavior of the product or any factory installed operating system, (xiii) modifications to control the behavior of the product or any factory installed operating system, (xiii) modifications to contain the behavior of the product or any factory installed operating system, (xiii) modifications to contain the product incorporates use of a display contains hundreds of thousands of individual pixels, and displays typically contains number of pixels that do not function property. This Limited Warranty does not obver up to .01% pixel outages (annual sol picture elements that are dark or incorrectly illuminated).

This Limited Warranty does not cover Sony products sold "AS IS" or "WITH ALL FAULTS" or consumables (such as fuses or deposable batteries). Sony will not replace missing components from any package purchased "Open Box" or "AS IS". This Limited Warranty is valid only in the United States and Canada (as applicable).

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT, NOR SHALL RECOVERY OF ANY KIND AGAINST SONY BE GREATER THAN THE ORIGINAL PURCHASE PRICE OF THE PRODUCT FROM SONY OR AN AUTHORIZED SONY DEALER.

DURATION OF IMPLIED WARRANTIES OR CONDITIONS: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS LIMITED

Some jurisdictions do not allow the exclusion or irrelation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or each sions may not apply to You. This Limited Wemanty gives You specific legal rights and You may have other rights which very from jurisdiction to jurisdiction.

For purchases made in the U.S.: Read the following Dispute Resolution/Arbitration provision carefully. It details Your rights and instructions should a disputs related to the product arise.

What Happens If We Have A Dispute: Should a dispute or claim arise releted to the product, Your purchase and/or use of the product, the terms of this Limited Warranty (including any repair or replacement) ("Dispute"). You and Sony agree that the Dispute shall be resolved exclusively through binding arbitration. YOU UNDERSTAND AND ACKNOWLEDGE THAT BY AGREEING TO ARBITRATION, YOU ARE GIVING UP THE RIGHT TO LITIGATE (OR PARTICIPATE IN AS A PARTY OR CLASS MEMBER) IN ANY DISPUTES IN COURT, You also agree that ANY DISPUTE RESOLUTION PROCEEDING WILL ONLY CONSIDER YOUR INDIVIDUAL CLAIMS, AND BOTH PARTIES AGREE NOT TO HAVE ANY DISPUTE HEARD AS A CLASS ACTION, REPRESENTATIVE ACTION, CONSOLIDATED ACTION, OR PRIVATE ATTORNEY GENERAL ACTION. Dispute the above, You have the right to Bligate any Dispute on an individual basts in small claims court or other similar court of limited jurisdiction, to the extent the amount at issue does not exceed \$15,000, and as long as such court has proper jurisdiction and all other requirements (including the amount in controversy) are satisfied.

Arbitration Instructions. To begin Arbitration, either You or Sony must make a written demand to the other for arbitration. The Arbitration will be administered in keeping with the Expedited Procedures of the Commercial Arbitration Rules and the Supriementary Proceedings for Consumer-Related disputes ("Rules") of the American Arbitration Association ("AAA"), when applicable and in effect when the claim is field. You may got a copy of AAA's Rules by contacting AAA at (800) 778-7879 or visiting www.ack.org. The filing fees to begin and corry out arbitration will be shared between You and Sony, but in no event shall Your fees ever exceed the amount allowable by the special rules for Consumers Disputes provided for by AAA, at which point Sony will cover all additional administrative fees and expenses. This does not prohibit the Arbitrator from giving the winning party their fees and expenses of the arbitration when appropriate pursuant to the Rules. Unless You and Sony agree differently, the arbitration will take place in the county and state when the substance of any Dispute during the arbitration. However, the Federal Arbitration Act. 9 U.S.C. § 1, at seq., will govern the arbitration Act.

Opt-Out Instructions. IF YOU DO NOT WISH TO BE BOUND BY THE BINDING ARBITRATION PROVISION, THEN: (1) You must notify Sony in writing within 30 days of the date that You purchased the product; (2) Your written notification must be mailed to Sony Electronics Inc., 18535 Via Esprillo, MZ 1106. San Diego CA 92127, Attn: Legal Department; AND (3) Your written notification must include (a) Your NAME, (b) Your ADDRESS, (c) the DATE You purchased the product, and (d) a clear statement that "YOU DO NOT WISH TO RESOLVE DISPUTES WITH ANY SONY ELECTRONICS ENTITY THROUGH ARBITRATION AND/OR BE BOUND BY THE CLASS ACTION WAIVER:

Oping out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and You will continue to enjoy the benefits of the Limited Warranty.



GARANTIE LIMITÉE

È.-U. et Canada uniquement - 3 ans

Sony Electronics Inc. declarivement pour les achats effectués aux États Unis et Sony du Canada Lhée, esclusivement pour les auteus au Canada (coloctivement « Sony ») garantit ce produit contre les défauts de matérieux ou de fatrication peur le propriétaire d'origine et trus les propriétaires utilisateurs tinuas auteurs (« Vous » ou » Vou ») pendant la pércole délinée dessus et comme indiqué dans les présentes. Contiminent à cette Garantie limité. Sony à son get, (i) réplante préduit en utilisant des pêcces neuves de remise et état du nême de la cette des présents des préduit en un produit neuf au recertifié » ou « remise et état du nême de la présent un produit ou une préce qui a retrouvé ses apécifications d'origine. En cas de défaut, ce sont Vos recours exclusités. Sony ne gésentit pas le fondionnement instrument ou sans émeur du produit.

Modelbii: Pendant la période définie di-dessus à compter de la date d'autiat du produit directament chez Sony ou un vendeur autorisé Sony (pour déterminer si un vendeur lait partie du réseau de vendeurs autorisés de Sony, veullez visiter, pour les E.-U. (www.sony.com/retailers; pour le Canada : https://desierlocation.com/cation.

Cette garantie limitée couvre uniquement les composants matéries entraîtés avec le produit. Elle ne couvre pas les accessoires sépants. l'assistance technique pour l'utilisation du matériel ou du logiciel et elle ne couvre pas les produits logiciel ou nurs sans le produit, et tout autre contenu inclut; tout logiciel ou autre contenu inclut est fournir. Elle l'ETAT - avuif indication contenue conformément à la Gassetie limitée du logiciel joint ou à le Licence d'utilisation de l'utilisation final. Veuillez vous reponsir à la Licence d'utilisation de l'utilisation mois la produit pour connaître vous droits et congations en ce qui concerne le logiciel ou tout autre contenu inclut. Si vous avez admité un plan de services étendus ne sont pas régle par cette Garantie limitée.

Pour obtenir un service de garantie, vous devez livrer le produit, dans son ambellage d'origine ou un emballage offrant un riveux de protection équivalent, à un centre de service autorisé Sony accompagné du reçu d'achet daté afin d'accèder au service de garantie. Sony n'est pass en mesure de garantir la réparation d'un produit sui titre de ladrie garantie ou l'échange d'un produit sans risque d'abtèrer le logiciel ou de pérète des données. Il retève de votre responsabilité de retirer ou sauveganter tout média ou toute pièce amovible, houtes données, tout logiciel ou autre matériel sous des données, tout est probabile que tout et données, tout des mages, de la musique, des violes, et c.) soit perdu ou reformaté pendant le service et Sony ne pour responsabile dudit données eu de ladrie perte. Contactez ses services suivants pour responsabile du la toute de garantie pour votre produit.

Pour les achats effectués aux ETATS-UNIS :

Visitez le site Web Sony : www.sony.com/bupport
Ou appelez le centre d'expérience chem : 1-800-222-SONY (7668)
Pour enregistrer votre produit ou obtenir des coordonnées pour acheter des accessoires ou des places, rendez-vous sur le site Web Sony

Pour les achets effectués au CANADA :

Vivilez le site Web Sony : www.aony.ca/support Ou appetez le centre d'expérience clanir : 1-677-899-SONY (7669)

Pour enregistrer votre produit ou ubtenir des coordonnées pour acheter des accessoires ou des princes, rendez-vous sur le site Web Sony.
Un service sur place pour les Méviseurs de certaines dimensions est disponible pour les clients vivent dans un rayon de 50 km d'un local de service Sony autorisé, à condition que le lieu de residence soit accessoire à un véhicule de service.

Garantie de réparation/remplacement : Cette Garantie limitée s'applique à toute réparation, pièce de rechange ou tout produit de remplacement, recentifie ou remis en étut pendant la période restante de la Garantie limitée d'origne ou pour une période de quatre-vingt-div (90) jours, la plus longue date étant celle retenue. Sode pièce ou tout produit remplacé(e) au titre de ladite Garantie limitée sera la propriété de Sony. Tout produit de respiacement, recentifié ou remis en était fourni au titre de ladite Garantie limitée peut, eu gre de Sony, être de couleur et/ou s'aupect déférent par repport au produit d'origine et peut ne pas inclure de gravoire d'origine ou une personnalisation similaire.

Sony n'est pas responsable de, et lastite Garantie limitée ne couvre pas, but dommage surveru suite à une utilisation du produit ne respectant pas ses utilisations prévues, ou autrement le non-mages du produit par passes suite à une réparation ou des services détent par un cerme autre que coux diment autorises par Sony, Ladité Garantie inmée couvre uniquement les dommages causés au produit par des défauts de matériaux ou de tabrication pendant son utilisation normale par le client. Ladité Garantie limitée couvre pas les produits acheires autres de sources autres que Sony ou un vendaux autorise Sony ly compres les ventres aux enchères en ligne non autorisées), ou les dommages causée par (ii) une exposition estrémante sony ly compres les ventres aux enchères en ligne non autorisées), ou les dommages causée par (ii) une exposition estrémante de la technologie (vi) un dommage causée par (ii) une exposition estrémante autres de survers autres de la nature (ii) les autressions attributes (iii) un dommage accidente (iv) un utaux (vi) les limites de la technologie (vi) un dommage causée que condition en liquide. Le challeur l'humidité ou la survers des parties des services au autorisées par Sony, (vi) les dommages, défallances et/ou tout fonctionnement incorrect du produit suite à une réparation effectuée avec des pièces ou autorisées par Sony (vi) les dommages, défallances et/ou tout fonctionnement incorrect du produit autre à des services mon effectuée avec des pièces ou autorisées par Sony (vi) les dommages, défallances et/ou tout fonctionnement incorrect du produit autre à des services mon effectuée avec des pièces ou autorisées par Sony (vi) les dommages, défallances et/ou tout fonctionnement incorrect du produit autre des cerus à la contra des pervises municipales de l'usaines (vii) les dommages, défallances et/ou tout fonctionnement incorrect du produit autre de l'usaines (vii) les dommages, défallances et/ou tout fonctionnement le routes extre à des services au un effectuée du produit du produit de l'usaines de

Laddle Garante Smittle ne pouvre pas les produits Sony ventus - EN LETAT - ou - AVEC DÉFAUTS - ou les consommables (comme les fusibles) ou les piles jetibles). Sony ne remplaces pas les composents manquents d'un emballage acrivéé comme - Both curverte - ou - EN LETAT -. Laddle Garantie limitée est valide uniquement aux États-Unis et su Canada (selon le cas).

LIMITATIONS DES DOMMAGES-INTÉRÊTS: SONY NE PEUT PAS ÊTRE TENU RESPONSABLE DES DOMMAGES ACCESSOIRES OU CONSECUTIFS PÉSULTANT DE L'INEXECUTION D'UNE GARANTIE EXPRESSE OU IMPLICITE OU D'UNE CONDITION SUR CE PRODUIT. TOUT RECOUVRÉMENT DE SONY NE POURRA PAS EXCEDER LE PRIX D'ACHAT D'ORIGINE DU PRODUIT VENDU PAR SONY OU UN VENDEUR SONY AUTORISE.

DURÉE DES GARANTIES OU DES CONDITIONS IMPLICITES I SAUF DANS LA MESURE OÙ CELA EST INTERDIT PAR LA LOI EN VIGUEUR, TOUTE GARANTIE IMPLICITE DE VALEUR MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER SUR CE PRODUIT EST LIMITEE À LA DURÉE DE LADITE GARANTIE LIMITEE.

Certaines surdictions n'autorisent pas l'exclusion ou le limitation des dommages accessores ou consécutés, ou autorisent les limitations de dunée d'une garantie implicite, ainsi les limitations ou exclusions d'essus peuvent ne pas s'appliquer à vous. Ladite Garantie limitée vos octrois des droits spécifiques reconnus par la lei et vous pouvez bénéficier d'autres droits qui varient d'une juridiction à une autre.

Pour les schats effectuée aux États-Unis : Lisez attentivement la clause de résolution/d'arbitrage des litiges suivants. Vos droits et les étapes à suivre en cas de litige lié au produit y sont détaillés.

Que se passe-6-8 en cas de litige : En cas de litige ou de réclamation félie) au produit, à votre achat et/ou à l'utilisation du produit, aux clauses de lactie Garantie limitée, ou à un service fourni conformément aux conditions de lactie Garantie limitée (incluant une répaisson ou un remplacement) (« Litige »), vous et Sony acceptez que le litige soit résolu exclusivement à travers un arbitrage exécutaire. VOUS COMPRENEZ ET RECONNAISSEZ QU'EN ACCEPTANT L'ARBITRAGE VOUS AVEZ LE DROIT D'INTENTER UNE ACTION EN JUSTICE POUR (OU DE PARTICIPER EN TANT QUE PARTIE OU MEMBRE DU RECOURS À) LA RESOLUTION DES LITIGES DEVANT UN TRIBUNAL. Vous acceptez également que TOUTE PROCEDURE DE RÉGLEMENT DES DIFFÉRENDS CONSIDÉRERA UNQUEMENT VOS REVENDICATIONS INDIVIDUELLES, ET LES DEUX PARTIES ACCEPTENT QU'UN LITIGE NE SOIT PAS ENTENDU COMME UN RECOURS COLLECTIF OU UN RECOURS DU PROCUREUR GENERAL. Malgré les indications d'étaux, vous avez le doct d'étainte une accon en justice de manière individualle devant la Cour des petites després expances ou une Cour similaire à la compétence limitée, dans la ministre individualle devant la Cour des petites expances ou une Cour similaire à la compétence limitée, dans la montant en litige soient satisfaire.

Consignes d'arbitrage. Pour commercer l'arbitrage, vous ou Sony devez faire une demande d'arbitrage écrite à l'autre partie. L'arbitrage aura lieu devant un reul arbitrage sera géré en autrent les Procédures accidionnelles (les - Régles -) de l'association américaine d'arbitrage (« AAA ») pour les différence de consommateur, si elles sont applicables et en vigueur au moment sul la réclamation est traité. Vous pouvez demander une copie des Régles de l'AAA en contactant l'AAA au (BOU) 778-7879 ou en visitant le site. Web www.ad.org. Les droits de dépêt pour commercer et ment l'arbitrage serait partagés entre vous et Sony, mais vos trais de devoct en aucun cas excitée le monunt permis par les régles apéciliques de l'AAA pour les Différence de consommaties, après que Sony couvrira tous les frais administratifs et dépenses additionnels. Ce paragraphe n'interdit pas à l'arbitre de restituer à la parise ayant obtenu gain de cause les frais et dépenses qu'elle a engagles dans l'arbitrage lorsque les Régles le permettent. Sout si Sony et vous en conveniez autrement, l'arbitrage aura lieu dans le pays et l'Esta du vous vivez, et la la spéciable régles le fond du différent pendant l'arbitrage. Les décesses du les décesses de l'un d'est d'appel limité conformament às Los aur l'arbitrage. Les discision de l'arbitrage et déterme d'est des les des des d'un d'est d'appel limité conformament às Los aur l'arbitrage.

Consignes d'exclusion. SI VOUS NE SOUHAITEZ PAS ÊTRE CONTRAINT PAR LA CLAUSE D'ARBITRAGE OBLIGATOIRE, ALORS : (1) Viuis divisiz en informer Sony pair écrit dans les 30 jours à comptier de la date d'actual du produit. (3) Voire nutification écrite doit envoyée par courner à Sony Electronics Inc., 1855 Via Equrito, MZ 1195, San Clego CA 92127, à l'attention de : Service juridique; ET (3) Voire nutification écrite doit indium (a) voire NOM (b) voire ADRESSE, (c) la DATE d'actet du produit, et (d) une déclaration chaire silipatent que « VOUS NE SOUHAITEZ PAS RÉSOLICIRE LES DIFFÉRENCS AVEC UNE ENTITE SONY ELECTRONICS À TRAVERS L'ARBITRAGE ET/OU ETRE CONTRAINT PAR LA RENONCIATION À INITIER OU PARTICIPER À UN RECOURS COLLECTIF «

Décider de ne pas adhérer à cette procédure de résolution des différends n'affecters en augun cas la couverture de la Garantie limitée et vous continuentz à bénéficier des avantages de la garantie limitée.

C-2662-619-2