 



SHC6400 Turn off the Windows Keyboard

How to turn off the Windows system keyboard when using Topcon Field to display only the Topcon Keyboard & remove the double or duplicate keyboards.

Topcon Keyboard

This guide will explain how to enable the Topcon Keyboard and disable the Windows keyboard.

- Open Topcon Field.
- Tap  to open the Topcon Menu options.
- Tap .
- Green check mark indicates enabled  Topcon Keyboard

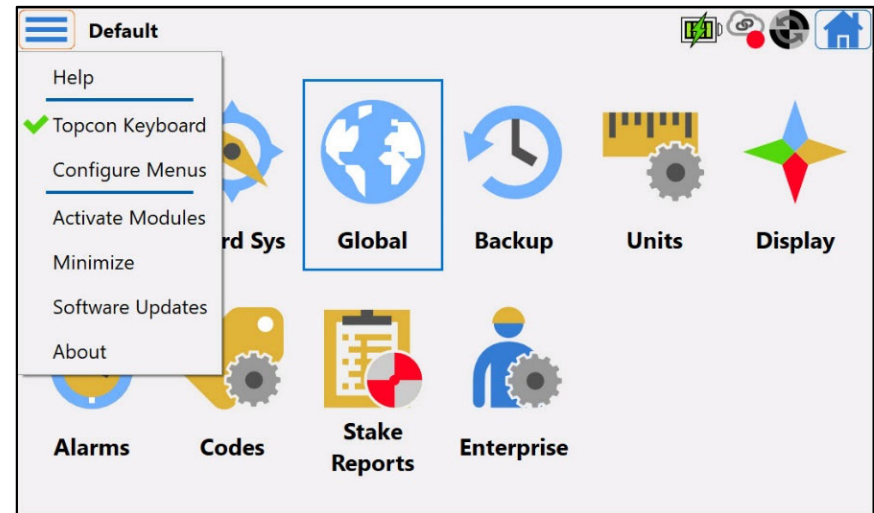


Disable Windows keyboard

When a text field is selected both the Topcon, and the Windows keyboards will be displayed.


To Disable the Windows keyboard.

1. Tap the gear icon  on the Windows Keyboard to open keyboard settings menu.

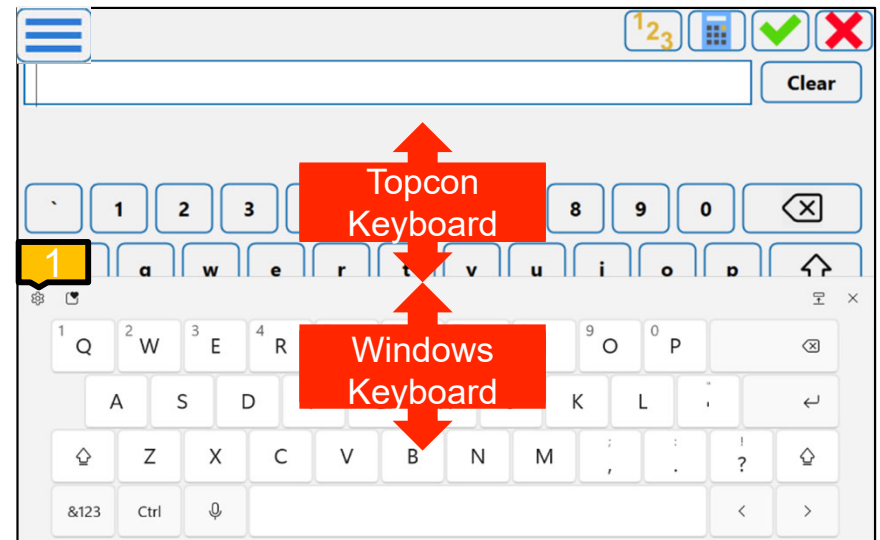


Disable Windows keyboard

 1. Tap the gear icon 


2. Tap More settings 

3. Tap Typing 

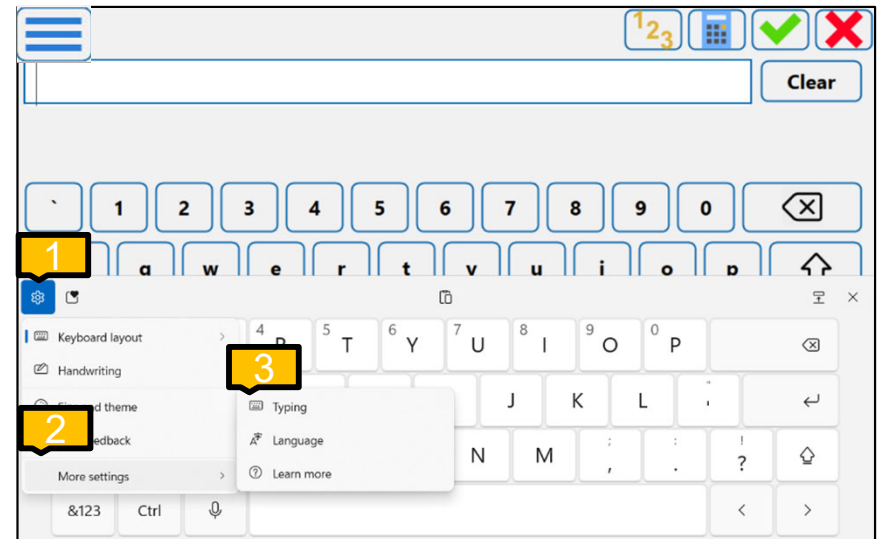


Disable Windows keyboard

- The Time & Language typing menu is opened.
- Tap the Touch keyboard dropdown.
- Tap the Show the touch keyboard dropdown, set to never.
- Tap the X to exit the menu and return to Topcon Field.
- The Windows keyboard is now disabled.
- **Changing this setting will also require a change to the Windows settings** to easily open the Windows keyboard in other applications or using a search engine such as Google.

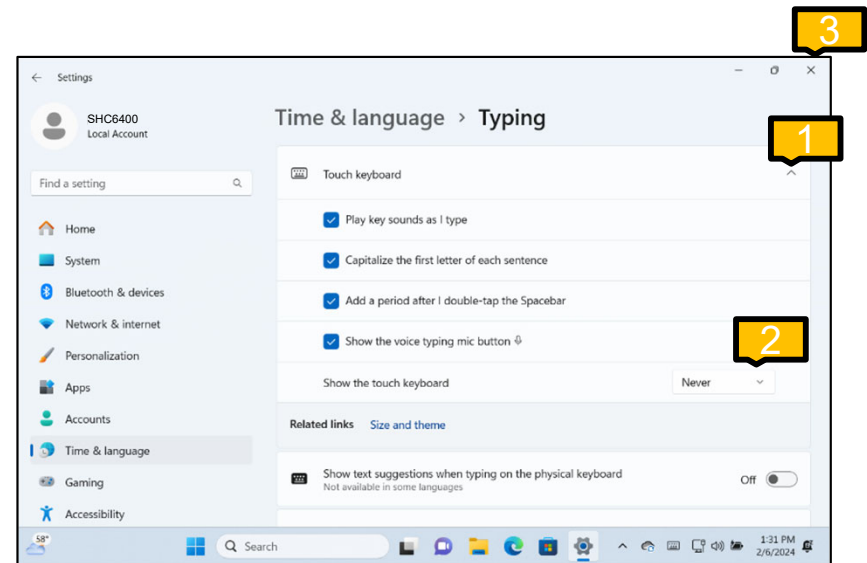

Update Windows system keyboard


- Exit Topcon Field.
- Tap and hold anywhere in the taskbar.
- The Personalization Taskbar menu is opened.

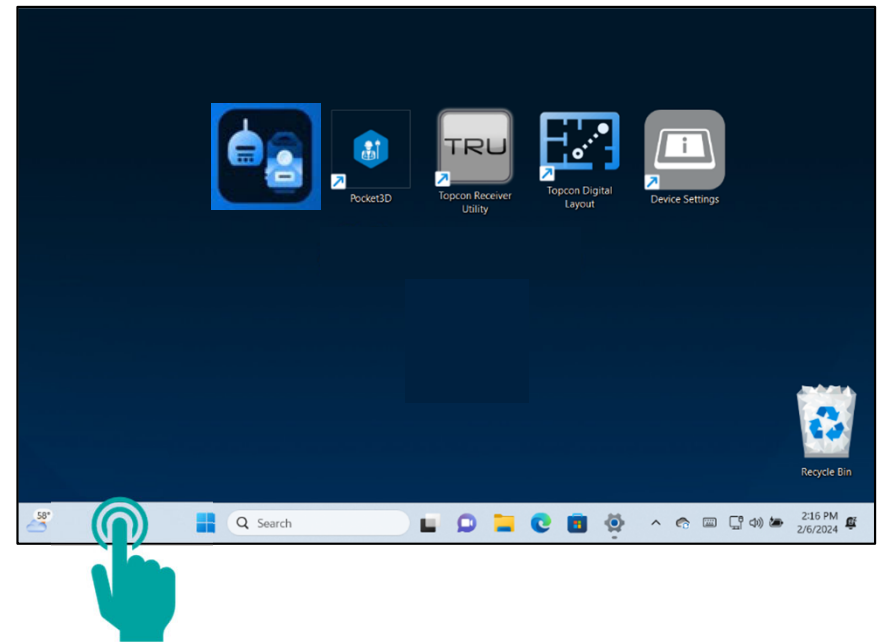

Show Touch Keyboard in taskbar

Under System Tray icons.


- Tap the Touch Keyboard Show touch keyboard icon drop down.
1. Set to Always.
 2. Tap the keyboard icon  in the Taskbar and confirm the keyboard opens.

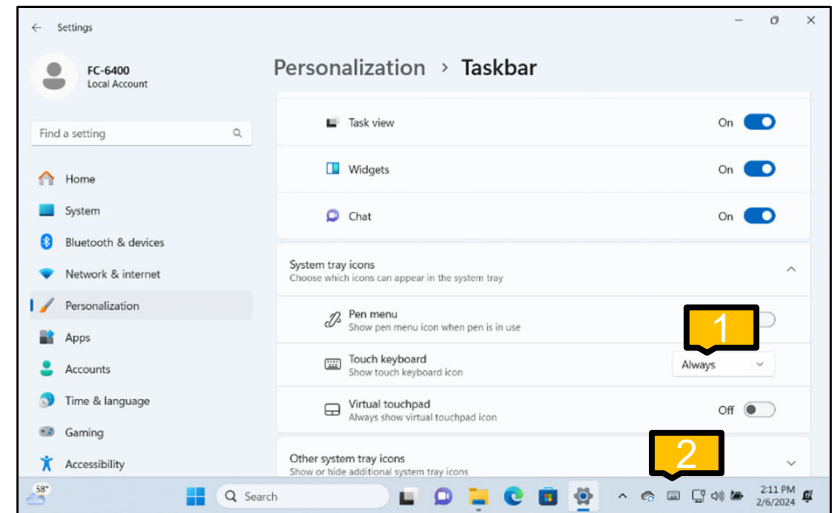

Test it with Google

Open Google Chrome.

1. Tap the keyboard icon  in the Taskbar to open the Windows keyboard.

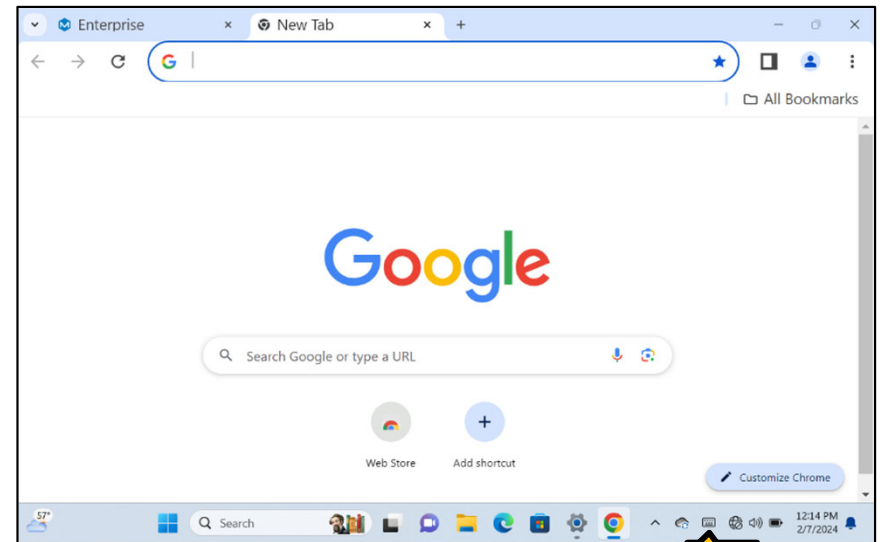

1