 


USER MANUAL

PACKING LIST

- ① LK - TS Master Speaker
- ② LK - TS Slave Speaker
- ③ Glove
- ④ Envelope
- ⑤ User Manual
- ⑥ Wiping Cloth
- ⑦ Warranty Card
- ⑧ Power Cord



SPECIFICATION

- Frequency response 40Hz~23KHz(+/-3dB)
- SNR 15W=100dB(+A) (Mid and Treble) 70W=104dB(+A) (Bass)
- Voltage 100~240V 50/60Hz, 2:1A
- Power handling 100W
- Impedance 4ohm
- Standby power consumption 50,5W
- Bluetooth available distance ≤15m

FUNCTION DESCRIPTION

- LED Light -- Red , White , Blue
 - Solid red - Standby mode
 - Solid white - AUX /OPT input
 - Solid blue - Bluetooth input
 - Fast flash blue - Bluetooth pairing mode
 - Slow flash blue - Speaker Bluetooth is searching for last connected device



INDUCTION AREA

- Put your hand is about 100mm close to the induction area, the LED light will be on. The light will be off 5 seconds later without any operation and 20 seconds later with operation.
- ① The two speakers will be activated after power on.
 - When the master speaker is connected with power, the LED light on top will be red flash for 3 times, then press POWER ON button, you will see the LED on top flash six times, and the LED for pairing at both side of speaker will be slow flash white searching for slave speaker. The LED for pairing at back will be solid white and the top LED light will be solid red after successful pairing.
 - When the slave speaker is connected with power, the LED for pairing at both side of speaker will be fast flash white in 10 seconds searching for master speaker and will be solid white after successful pairing.



FUNCTION DESCRIPTION: MASTER SPEAKER

- ① Input selection (BT/AUX/OPT)
- ② Power button
 - Short press 1 second quite searching
 - Long press 5 seconds to searching the slave speaker for 5 minutes
 - Short press 1 quite paired status
- ③ Volume down
- ④ Volume up
- ⑤ Bluetooth button
 - Long press 3 seconds to disconnect current connection and searching for new device
- ⑥ SUB woofer output
- ⑦ 2.5mm service port
- ⑧ Pair button
 - Short press 1 second quite searching
 - Long press 5 seconds to searching the slave speaker for 5 minutes
 - Short press 1 quite paired status
- ⑨ LED for pairing indication(white)
 - When master speaker is pairing, the white light is slow flash.
 - The white light is off if pairing is failed.
 - Top white light is solid if pairing is succeeded.
- ⑩ AUX 3.5mm input, 3.5 optical input
- ⑪ Power input : AC 100~240V 50/60Hz



• Small Tips for Volume Control

If you still feel the volume is high even you've already adjusted it to the minimal volume level "1" on phone, you can continue to reduce the volume by another 3 beat (0.3, 0.2, 0.1) on master speaker, at this time the mobile phone or APP will show volume level is "1".

FUNCTION DESCRIPTION: SLAVE SPEAKER

- ① Subwoofer output
- ② 2.5mm service port
- ③ Pair button
 - Short press 1 second quite searching
 - Long press 5 seconds to searching the master speaker for 5 minutes
 - Short press 1 quite paired status
- ④ LED for pairing indicator(white)
 - White light is fast flash when slave speaker is pairing.
 - White light is off if pairing is failed.
 - White light is solid on if pairing is succeeded.
- ⑤ Power input: AC 100~240V 50/60Hz



TROUBLESHOOTING

- Press power button, the LED light is not on
 - Check whether the plug is powered on.
 - Check whether the power plug is tightly inserted.
 - Check whether the power cord is properly inserted into the product.
- The button does not work
 - The keys are controlled by touch. When the hands are very dry or the hands are operated with gloves, they will not work.
 - Unplug the power cable, wait 20 seconds, plug it in again, wait another 10 seconds, then press powerbutton.
- The product(Lingke Listening T5) cannot be found by mobile phone Bluetooth
 - Please check whether the Bluetooth on the mobile phone is turned on. If yes, turn off Bluetooth and turn it on again for searching.
 - Long press the Bluetooth button for more than 3 seconds, when you see the blue light flashes, please use phone to search it again.
- The phone volume is out of sync with the product volume(Lingke Listening T5)
 - Please check whether the Bluetooth on the mobile phone is turned on. If yes, turn off Bluetooth and turn it on again for searching.
 - Long press the Bluetooth button for more than 3 seconds, when you see the blue light flashes, please use phone to search it again.

PRECAUTIONS

- The power plug should be placed in a convenient location.
- If the product is not used for a long time, please pull out the power plug from the AC power socket.
- Do not scratch, bend, twist, stretch or heat the power cord, which will cause damage to the power cord, resulting in fire or electric shock. If the power cord is damaged, please contact Lingke Audio for replacement.
- Do not disassemble or modify the structure of this product without authorization, otherwise it may cause fire or electric shock. If you need to repair, please contact Lingke Audio.
- This product shall not be subject to water droplets or splashes, and items filled with liquid such as vases shall not be placed on the product.
- Do not place exposed flame sources, such as lit light candles, on the product.
- The disconnecting device of this product is an electronic coupler. The appliance coupler should be easy to operate and should not be blocked by other objects nearby.
- Please choose CCC certified wire to be used with speaker together.
- Items cannot be placed within 30mm around the product to avoid damage to the product during operation.

Warning

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- RF Exposure Statement
 - To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.