

WHOLE SLOW JUICER

USER MANUAL
AMR8824

SIFENE

NEED HELP ? CONTACT US!

CUSTOMER SUPPORT

✉ Email: support@sifene.com

🌐 Web: <https://sifene.com/>



JUICE.
VITAMINS.
NUTRIENTS.
HEALTH.

Questions or Concerns?

SiFENE supports free replacement for any problems or refund for any dissatisfaction under warranty.

Contact Us!

Email: support@sifene.com

Web: <https://sifene.com/>

Table Of Contents

Important Safeguards	02
Parts	04
How To Assemble	05
Operating Instructions	08
Care And Cleaning	12
Troubleshooting	14
Specifications	16
Package Included	16
Recipes	17
Warranty	21

Important



To avoid injury, read and understand the entire owner's manual before using this appliance.

Important Safeguards



When using electrical appliances, basic safety precautions should always be followed including the following.


- Read All Instructions Before Use And Save For Future Reference.
- The input voltage of this appliance is AC120V~50Hz. Please confirm it before use.
- **Unplug** the appliance from outlet before assembling, before taking off parts, before cleaning and when storing the appliance.
- **Do not** operate appliance with a damaged cord or plug or after the appliance malfunctions has been damaged in any manner. if there is anything wrong, welcome to contact us for adjustment or replacement.
- **Always** ensure the appliance is completely assembled before connecting to the power
- Outlet and operating. Then appliance will not turn on unless properly assembled. Follow the instructions provided in this book.
- **Do not** put your fingers or sharp objects into the feed chute while it is in operation. **Do not** Use any object to replace pusher. **Do not** keep your eyes close to the feed chute to prevent accidents.
- The appliance is equipped with a smart protection chip. It will automatically reverse and stop after 20 minutes of continuous operation. Please **make it stop** working for 20-30 minutes. After the main body(motor) cool down, the appliance can be used again. It is beneficial to extend the life of the appliance and keep it with good performance.
- The appliance has a limited current design. When the current exceeds 1.5A, the machine will automatically reverse for a few seconds before stopping. It can effectively protect the main body (motor) from over current and extend the life of it.
- **The main boy(motor) has overheated protection function. When it continues to work for too long time or with too large load and the temperature rises up to 70℃, the ther-**



When using electrical appliances, basic safety precautions should always be followed including the following.

- mal protector of the motor will automatically disconnect the power supply. And “E0” will be shown on screen. Let the main body(motor) rest 20-30 minutes, the appliance can be used after it has cooled down. It is beneficial to extend the life of the product and keep it with good performance.**
- To disconnect press **OFF** then remove plug from wall outlet. **Make sure** the main body(motor) stops completely before disassembling.
 - **No idling.** If the appliance is operated without ingredients or liquid, the noise will be increasing and also can cause damage.
 - **No overloading.** Overloading will shorten the life time and performance will **be not** so good. It also causes too much pulp inside, disassembling and cleaning will be more difficult. Overloading may cause the appliance damage.
 - After the fruits and vegetables are squeezed, the juice screen, the drum lid, the auger and other components maybe dyed. It is normal and does not affect to use the appliance again and does not hurt health.
 - All parts of the appliance are **not allowed** to be disinfected with hot water and microwave.
 - oven over 80℃ to avoid any damage caused by heat deformation. The materials in contact with the ingredients are in compliance with food hygiene certification, clean, hygienic and reliable.
 - **Do not** immerse cord plug or main body(motor) in water or other liquids, or rinse it with water or any other liquids to avoid damaging the body.
 - **Do not** use steel wool, abrasive cleaners or corrosive liquids such as benzine or acetone to clean the product.
 - Close supervision **is necessary** when any appliance is used by or near children.
 - This appliance is for personal or household use **only, not for** commercial use at all.
 - This appliance is a Class I electrical appliance, and the grounding wire of the socket **must be** well grounded.

Parts

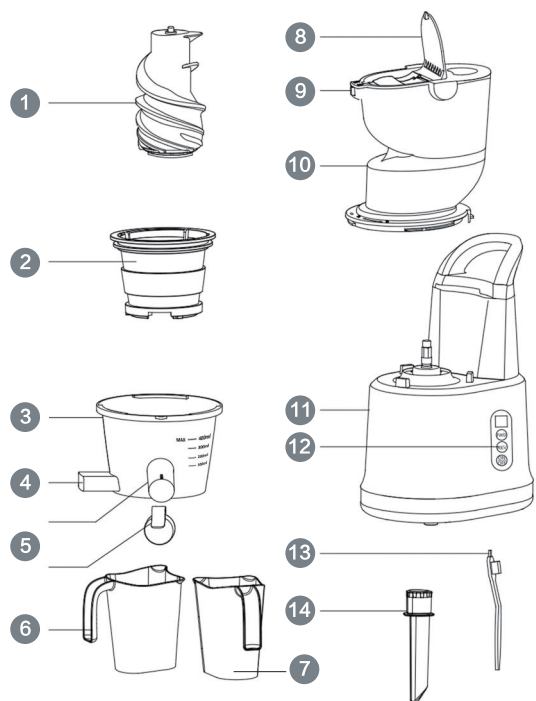


- | | |
|-------------------------|--|
| ① Auger | ⑨ Open/Close button |
| ② Juice screen | ⑩ Drum lid |
| ③ Juice container | ⑪ Main body |
| ④ Pulp outlet | ⑫ Operation panel:
ON/OFF, FWD(forward), REV(reverse) |
| ⑤ Juice outlet with cap | ⑬ Cleaning brush |
| ⑥ Juice cup | ⑭ Pusher |
| ⑦ Pulp cup | |
| ⑧ Safety cover | |

How To Assemble

- ⚠ Wash all parts except the ⑪ main body before first use. Refer to the section "Care And Cleaning"
- ⚠ Ensure that the compression silicone are assembled properly in case of any juice leak.

Step 1

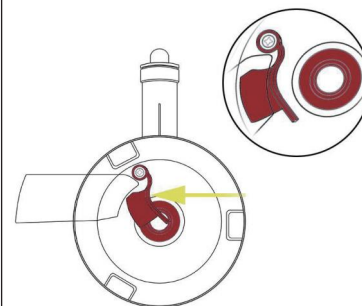


Firmly insert the compression silicone into the slot below ④ the pulp outlet. This silicone is to offer a stop to let pulp goes out. And it makes ④ the pulp outlet can be cleaned easier. Please make sure it is firmly inserted in case of any leak.


- ⚠ Push the silicone into the slot.
Juice may leak if not assembled properly.

Step 2

There are 3 convex on ⑪ main body and one of them is with silver dot. There are 3 concave at the bottom of ③ juice container and one of them is marked with a silver dot also. Make sure the two silver dots are aligned then place ③ juice container on main body.

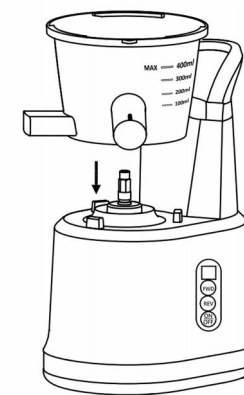


Step 3

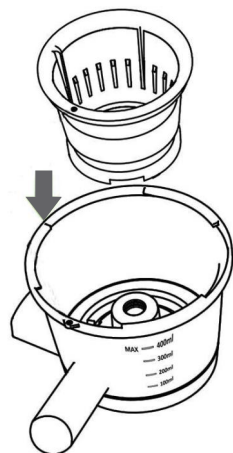

Put the ② juice screen into the ③ juice container ensuring the dot on the ② juice screen is aligned with the dot on the ③ juice container.

Step 5

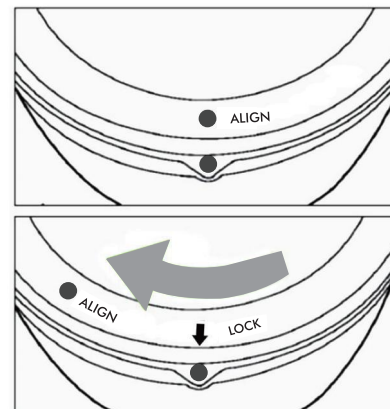

Place the ⑩ Drum lid on to the ③ Juice container aligning the silver dot ● on the drum lid with the dot on the juice container. Turn clockwise rotation to close, aligning the arrow ↓ on the drum lid with the ⑩ dot ● on the container.

⚠ The appliance can not turn on if Drum lid is not assembled properly.

Step 4

Place ① Auger into ② Juice screen. Turn and press it down until ① Auger clicks into place.

⚠ ① Auger needs to be locked in place in order to close ⑩ Drum lid. Otherwise the appliance can not start to work.




Step 6

Place the juice/pulp cup separately under the juice outlet and pulp outlet.

⚠ Ensure ⑤ the cap is closed when ⑥ ⑦ Juice / Pulp cup full or moved away.

⚠ Please do not forget to check if ⑥ ⑦ Juice / Pulp container is full.

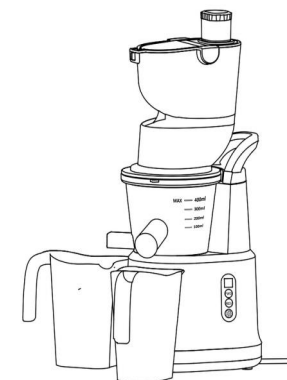

Operating Instructions

Step 1

Plug the power cord into a grounded wall outlet after preparing the ingredients.

When plug in the power, appliance beeps and screen will light up for 1~2 seconds.

WARNING




Electrical Shock Hazard

DO NOT touch the power cord with wet hands.

MAKE SURE the switch is off before turning on the power.

Step 2

Press the ON/OFF button to turn the appliance on.

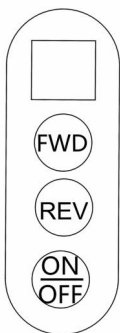

FORWARD: Pulls down and squeeze the ingredients slowly.

⚠ When working, the screen shows a clockwise spinning flash.

⚠ Please use 14 Pusher to press ingredients down rather than fingers in case any hurt when it is needed.



REVERSE: Pushes the ingredients back up if it is stuck.

⚠ The REVERSE mode lasts for 6 seconds only. Please press FORWARD to restart.



ON/OFF: Starts / Stops operation.

⚠ Please do not keep the appliance working more than 20 minutes otherwise it may cause motor damage. Please do not idling or overloading in case any damages also.

Step 3

Insert the prepared ingredients one by one.

⚠ Fibrous leafy vegetables

Celery: Please cut it in short piece in case of bottom part of it is cut by 1 auger and top part can not be pulled down. If celery does can not be pulled down, please use pusher to push or put more celery in.

Parsley: Parsley is not suggested to masticate. The slow juicer will get stuck when masticating parsley.

Kale: Please cut it in small piece and start squeeze.

Wheat grass: Please put it in small bundle by small bundle.

For other fibrous leafy vegetables with thick or tough peel, remove the peel firstly.

Otherwise the appliance may can not show its best performance and the taste of juice may not so good.

⚠ Succulent vegetables and fruits

For the succulent vegetables and fruits such as apple, pineapple, orange, please put them into 10 drum lid slowly in case of juice comes too fast and cause pulp is heaped up on the edge of 10 drum lid and 1 auger. It does influence the rate of juice and cause waste. While if it does happen, please use reverse function. It may help to let pulp drop down from the edge. Put more vegetables or fruits can help much if it is possible.

⚠ Soft and succulent vegetables and fruits

Kindly remind that fruit like tomato, watermelon and grape is too soft and succulent to be extracted, it is normal that the pulp will contain a small percentage of the juice after masticating.

⚠ No sour fruit or vegetables

For fruit or vegetables such as LEMON is not allowed to be extracted by this appliance as too much sour juice may cause it broken.

Step 4



Use the pusher Only when necessary.

Tips of using ⑤ Smart cap.

- ⚠ After juicing, close the ⑤ Smart cap in time to stop the juice from dripping, especially when the ⑥ juice cup is taken off.
- ⚠ Keep the smart cap open before squeezing. Otherwise, there may too much foam mixed in juice (e.g. apples, celery).
- ⚠ Please do not forget to release the smart cap. Juice may overflow if it is beyond the juicing container's capacity. And the pulp may be mixed into the juice.

Small feeder chute

Wide feeder chute

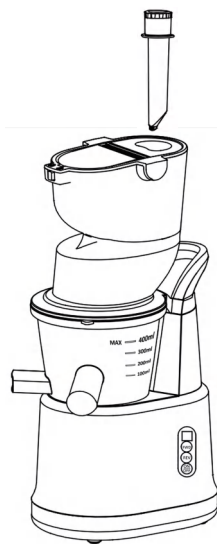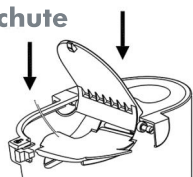

Step 5

Switch the juicer OFF after juice and pulp are completely extracted.

After each extraction, run the appliance for an additional 30 seconds to make sure the remaining pulp be extracted fully. It will be much easier to open the ⑩ drum lid if all ingredients are extracted.

WARNING

- ⚠ Always turn off the switch and disconnect the power before cleaning the product.
- ⚠ Please clean the product in time after use.
- ⚠ The main body must not be washed with water. The stain can only be wiped by a wringed rag or cotton cloth.
- ⚠ Before storing the product, make sure the product is clean and dry.


Step 1

Switch the OFF and unplug the power cord from the wall outlet.

Step 2

Anticlockwise rotate ⑩ drum lid to take it off from juice container.

- ⚠ When moving the appliance, do not lift by grabbing ⑩ drum lid. Always lift the appliance by grabbing the base or handle.
- ⚠ If the Drum Lid is difficult to take off from Juice Container after juicing, start the reverse function for more than 5s to assist disassembly or contact us by: support@sifene.com.
- ⚠ Do not force to disassemble because it would cause personal injury.

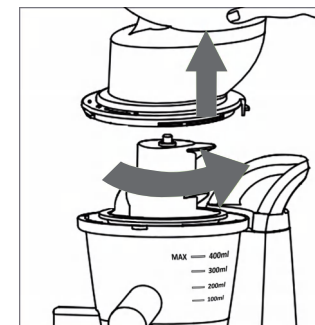

Care And Cleaning

Step 3

Take off the ⑬ auger and ② juice screen

Turn right and left while pulling ① auger from ② juice screen then take off the ② Juice screen from ③ juice container.

⚠ When pull out ① auger, please increase your power slowly in case of it comes out suddenly and cause any hurt.

Step 4

Clean with provided ⑬ Cleaning brush.

1) Sink all parts (except ⑪ Main body) into water a few minutes.

It will be easier to clean all of them.

2) Clean ③ Juice container


Unplug the compression silicone, use the end part of ⑬ cleaning brush to take most part of pulp out from the ④ outlet.

Use the brush to clean ⑤ juice outlet.

Use the end part of ⑬ cleaning brush to dig pulp out the gap at bottom of ③ juice container

Use water to rinse ③ Juice container

Use the cleaning brush to clean the pulp under the silicone.

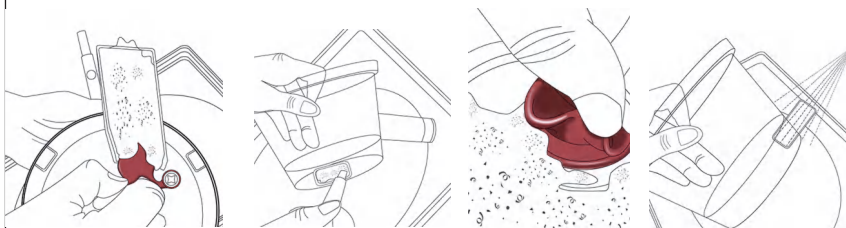

3)Clean ② Juice screen

Use the end part of ⑬ cleaning brush to remove the pulp on outside of stainless stain net.

Use the ⑬ cleaning brush to clean the rest pulp under running water

Clean the juicer immediately after every use.

Once residue dries up in the appliance, it causes disassembling and clean-up difficult.

The more residue left on appliance; the poorer performance caused likely in future uses.

Do not forget to insert the compression silicone again before next using.



4)Clean ① auger

Under running water, clean the outside of the auger with a non- abrasive sponge. Use the tip of the cleaning brush to push out any residue in the crevices on the bottom of the auger.

Please do not use dish-washing machine to wash all parts.



Please read trouble shoot details below if there is any question. You are welcome to contact SiFENE Customer Service by sending mail to **support@sifene.com** for after sales service also.

Problem	Easy Solution
The Appliance Can Not Work	<ul style="list-style-type: none"> • Please check if the power cord is plugged in correctly. • Please check if ⑩ drum lid is assembled correctly. Detailed refer to ASSEMBLE—How to assemble—Step 2 & Step 3 & Step 4 & Step 5. (Page 5-7) ⚠ Only if the appliance are well assembled it can start work as for safety reason. • Make sure all parts are assembled according to the instructions in this manual.Refer to the section “HOW TO ASSEMBLE”. • If the appliance still does not work, please contact SiFENE Customer Service by mail to support@sifene.com for additional support. If you can offer high resolution pictures or video, it will be great helpful.
The Appliance Stops During Normal Operation	<p>Please check if the power cord is plugged in correctly.</p> <p>Please check if stops caused by the low voltage. Make sure the voltage be rated at 120V-.</p> <p>If too many ingredients are inserted at one time, it may also cause appliance stop working.</p> <p>Step 1: press the REVERSE button and let the ingredients go back. Reverse will stop after 6 seconds.</p> <p>Step 2:Press FORWARD to check if the appliance can work well. If not, repeat step 1.</p> <p>If the appliance stops itself after long time continuous working, it is overheating protection possibly (not a fault, the screen shows "E0", motor stops). Turn off the appliance and restart after resting for over 30 minutes.</p>

Problem	Easy Solution
Difficult To Take ⑩ Drum Lid Off From ③ Juice Container Once Finish Squeezing	<p>Please do not make too much pulp inside of ⑩ drum lid and avoid getting stuck.</p> <p>Start the reverse function for more than 5s to assist disassembly.</p> <p>If above method did not help, please contact SiFENE Customer Service: support@sifene.com. Forcing to disassemble would cause personal injury.</p>
Abnormal Noise From The Appliance	<p>Check if all parts ① auger ② juice screen ③ juice container ⑩ drum lid) are assembled correctly. Please reassembling all parts well.</p> <p>If ① auger was taken out after half juicing, the pulp may leak into gaps and after re-installation, abnormal noise may happen.</p> <p>⚠ Do not take ① auger out if juicing is not finished. It may cause by idling or overloading.</p> <p>⚠ Do not start the juicer unless there are ingredients or liquid in it. The friction noise from the auger and juice screen will disappear when ingredients are inserted into the juicer.</p> <p>⚠ Do not overloading. If ingredients are too much, too big, too long, too less liquid, too much crude fiber, noise may increase.</p> <p>Please check OPERATING INSTRUCTIONS—Step 3 for how to prepare ingredients. (Page 8)</p> <p>•Noise can occur if the juicer is operated on an uneven or slanted surface. Place the juicer on a horizontally ⑩ flat surface when operating.</p> <p>Apple peel also cause noise as it is rubbed with drum lid and ① auger.</p>

Specifications

Product Name	SiFENE Whole Slow Juicer
Model Name	AMR8824
Rated Voltage	120V-
Rated Power Consumption	200W
Rated Frequency	60Hz
RPM	40-60rpm
Rated Operating Time	Less than 15 minutes
Intervals	More than 30 minutes (To protect the motor)

Package Included:

- | | |
|---------------------|-------------------|
| 1 x Main body | 1x Juice cup |
| 1 x Juice Container | 1x Pulp cup |
| 1 x Drum lid | 1x Pusher |
| 1 x Auger | 1x Cleaning brush |
| 1 x Juice screen | |



Recipes

Grapefruit-Lime-Ginger

Makes 1 serving

Ingredients

- 1 large grapefruit, peeled and cut into quarters
- ¼ lime, peeled and halved
- 1 ½-inch piece ginger

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Stir and drink immediately, preferably over ice.

Orange PLUS Juice

Makes 2 servings

Ingredients

- 1 medium orange, peeled and cut into quarters
- 3 carrots
- 1 large grapefruit, peeled and cut into quarters
- 1 ½-inch piece ginger
- 1 quarter-inch piece turmeric root
- ¼ lemon, peeled and halved

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Stir and drink immediately.

PineApple Refresh

Makes 2 servings

Ingredients

1 medium green apple, cut to fit the feed tube 3 – 4 tablespoons mint (be sure mint is bunched together between two harder items, like the apple and pineapple)

¼ pineapple, peeled and cut to fit the feed tube, if necessary

¼ lemon, peeled and halved

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Stir and drink immediately.

Bright Apple Juice

Makes 2 servings

Ingredients

2 medium green apples, cut to fit the feed tube

¼ lemon, peeled and halved

1 ½-inch piece ginger

Cayenne (optional), a pinch or more based on personal preference

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients except the cayenne.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Add the cayenne, if using, and then stir and drink immediately.

Green Medley

Makes 2 servings

Ingredients

4 stems kale, tough bottom stems removed

1 cup packed spinach (baby or not)

4 celery stalks, each cut into thirds

½ medium cucumber, halved lengthwise

¼ lemon, peeled

¼ cup fresh parsley leaves and stems, optional

Pinch sea salt, optional

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients, except for the salt.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Add the salt, if using, stir and drink immediately.

Veggie Pick-Me-Up

Makes 1 serving

Ingredients

2 medium to large carrots

¼ cup packed parsley

1 cup packed spinach

½ large beet, cut to fit the feed tube

½ orange, peeled and halved

¼ lemon, peeled

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients, in the order listed.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Stir and drink immediately.

Sweet Zinger

Makes 2 servings

Ingredients

- 2 medium to large carrots
- 1 beet, cut to fit feed tube
- 1 apple, cut to fit feed tube
- 1 ½- to 1-inch piece ginger, based on personal preference

Method

1. Close the juice and pulp spouts.
 2. Turn the juicer to the ON position and process all ingredients.
 3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
 4. Stir and drink immediately.
- Nutritional information per

Apple-Berry Juice

Makes 2 servings

Ingredients

- 1 apple, cut to fit the feed tube
- 1 ½ cups strawberries

Method

1. Close the juice and pulp spouts.
2. Turn the juicer to the ON position and process all ingredients.
3. Once juice has filled the juicing area, slowly open the juice spout to allow it to flow into the Juice Container.
4. Stir and drink immediately.

Warranty



2~4 Years Limited Warranty

Motor: 4-year warranty.

Normal accessories: 2-year warranty.

With lifelong technical support and
24/7 customer service

Your purchase comes with a 100% satisfaction guarantee from SiFENE. SiFENE supports free replacement for any problems or refund for any dissatisfaction under warranty. We will take care of all quality-related issues with a **replacement or full refund** including any return shipping costs. If your product is defective and under warranty, please contact us at Email: support@sifene.com

More SiFENE Products

If you're happy with this juicer, the line doesn't stop here. Check out <https://sifene.com/> for a line of all our beautiful and thoughtfully designed appliances. They might be right at home in your kitchen, too!