 
 


ÄLSKVÄRD

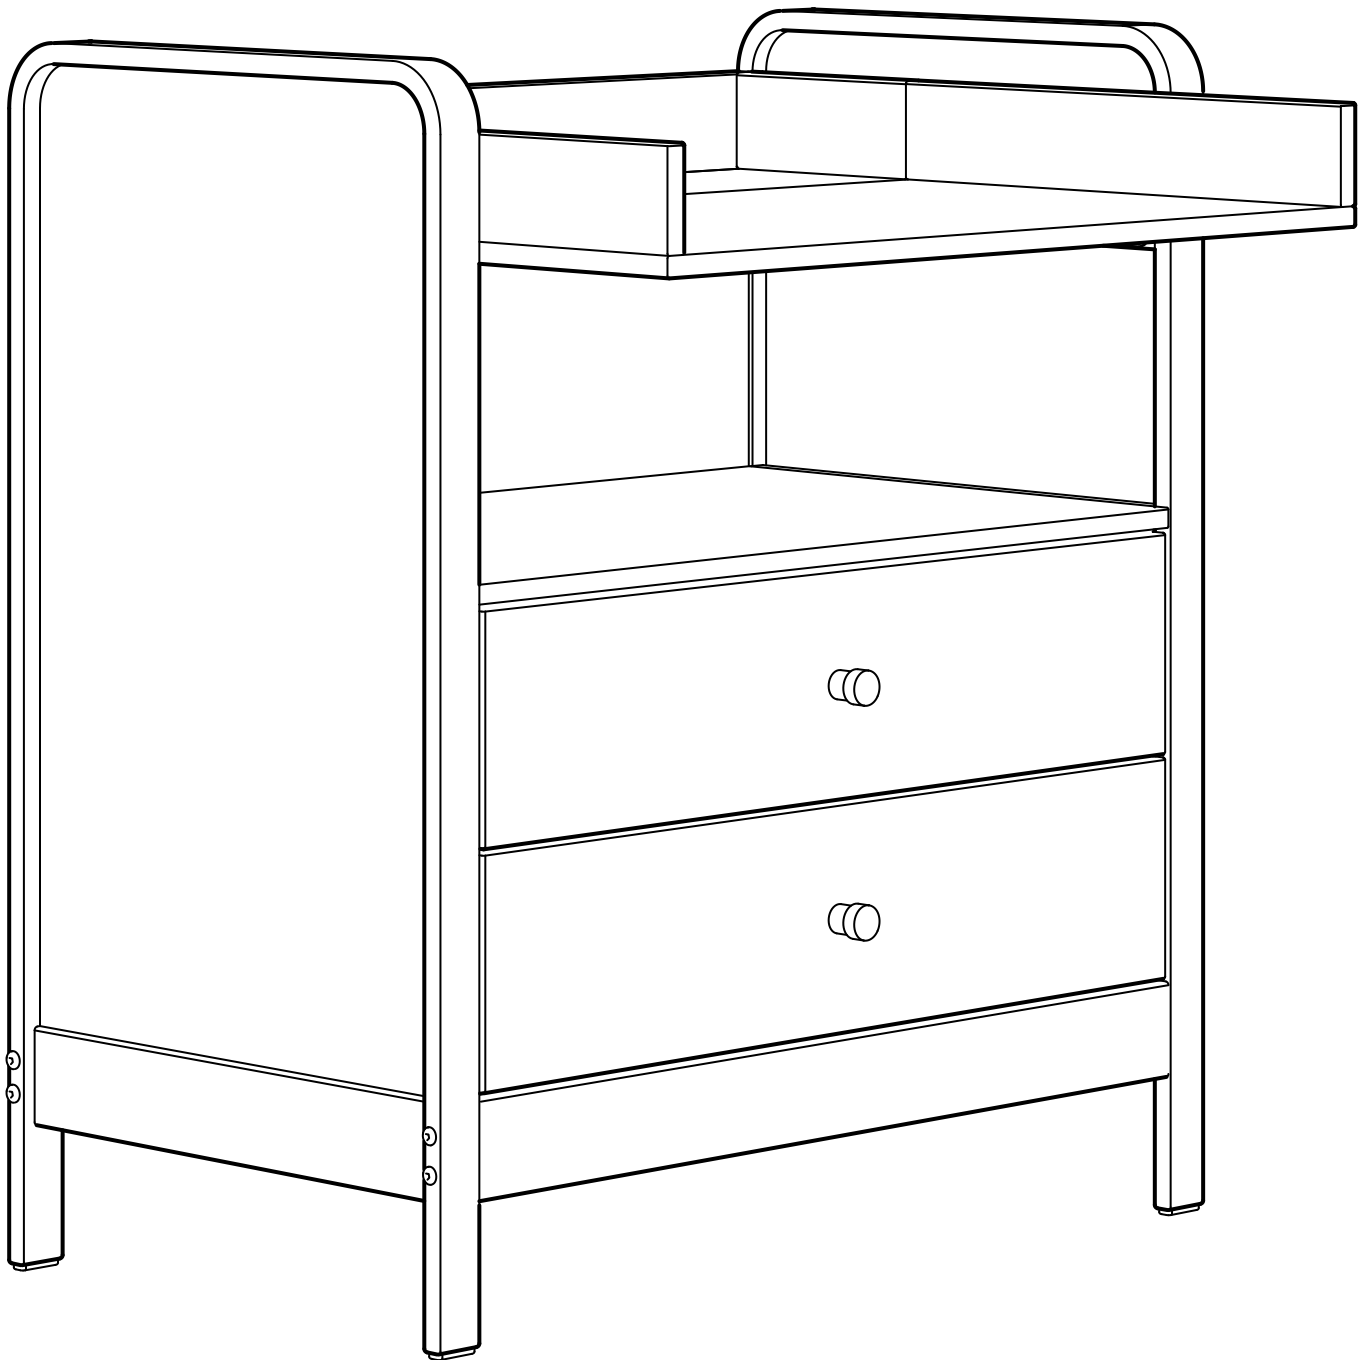

Design and Quality
IKEA of Sweden

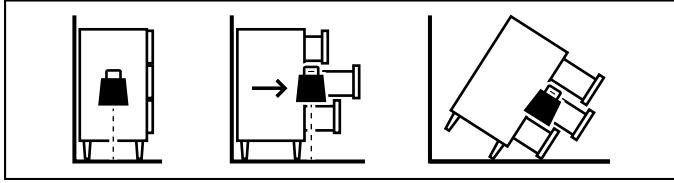

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

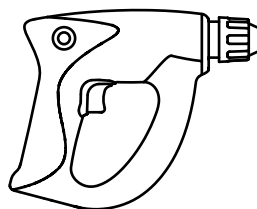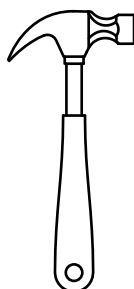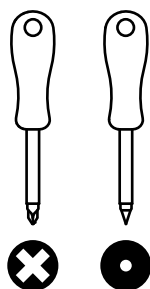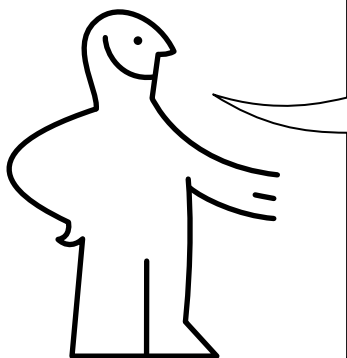


Ø 8 mm
(5/16'')



 
Ø 3 mm
(1/8'')

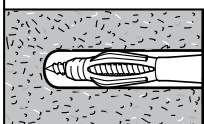


Ø 8 mm
(5/16'')



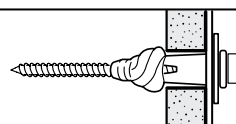 


Ø 8 mm
(5/16'')

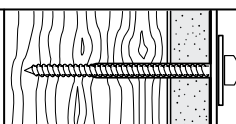 


Ø 3 mm
(1/8'')

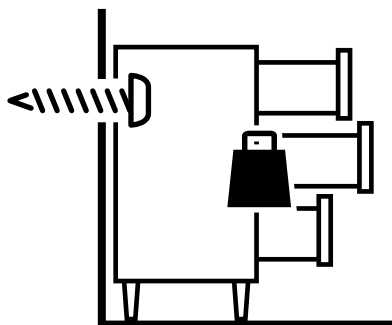 


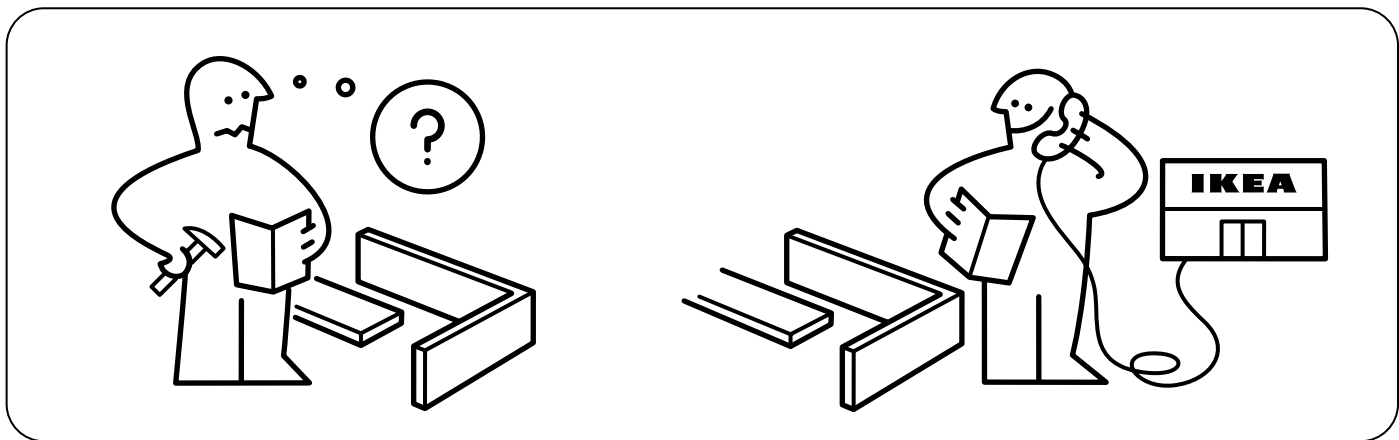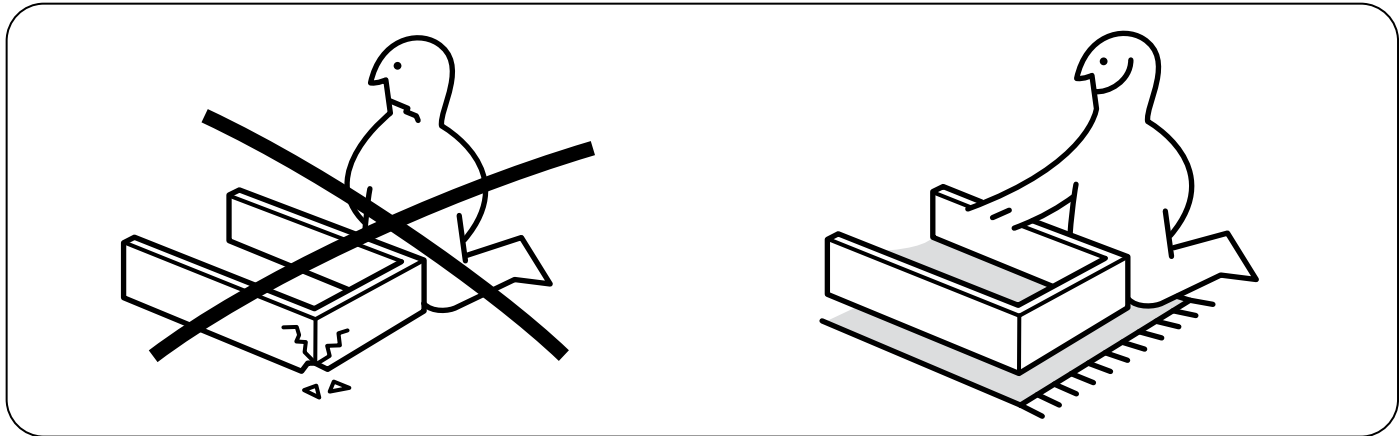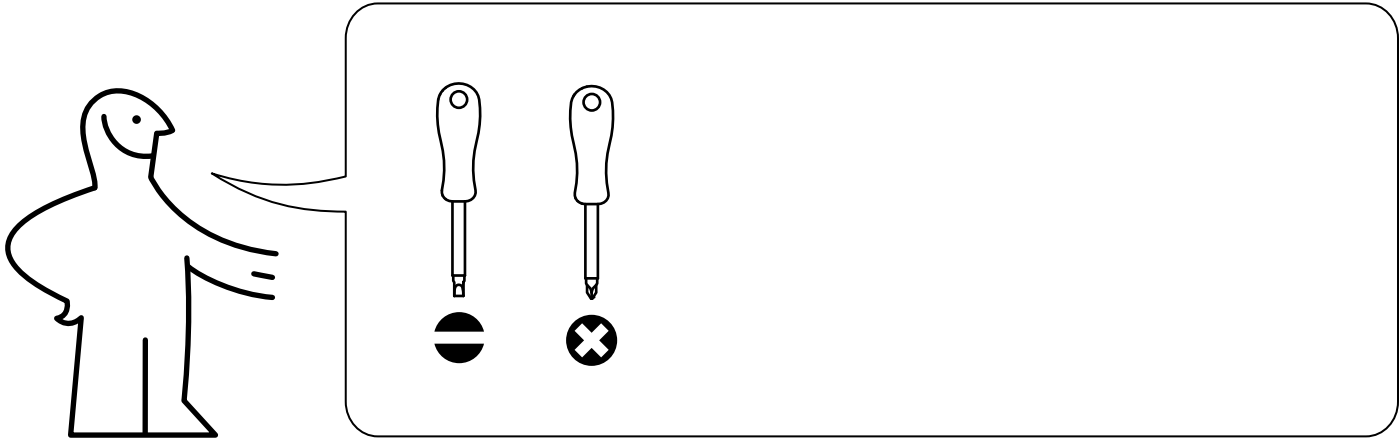   


1

 


2x

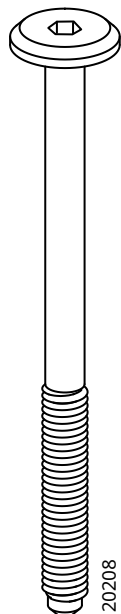 


8x

 


4x

 


2x

 

18x

 

18x

 

8x



 
14x




12x




26x




18x

 


2x

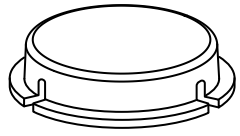 


2x

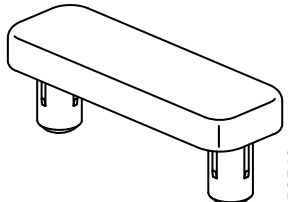 


4x

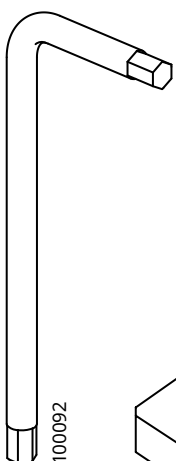 

1x

 


3x

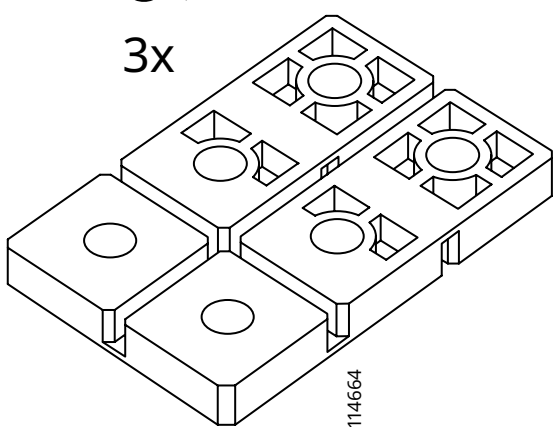 


2x

 
2



8x

 

8x

 


2x




4x



 
12x

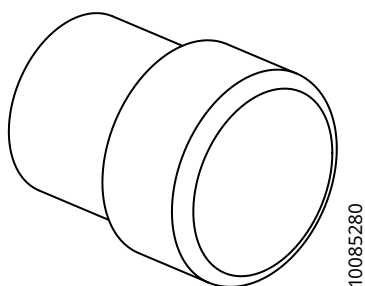


2x

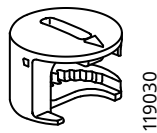 


16x

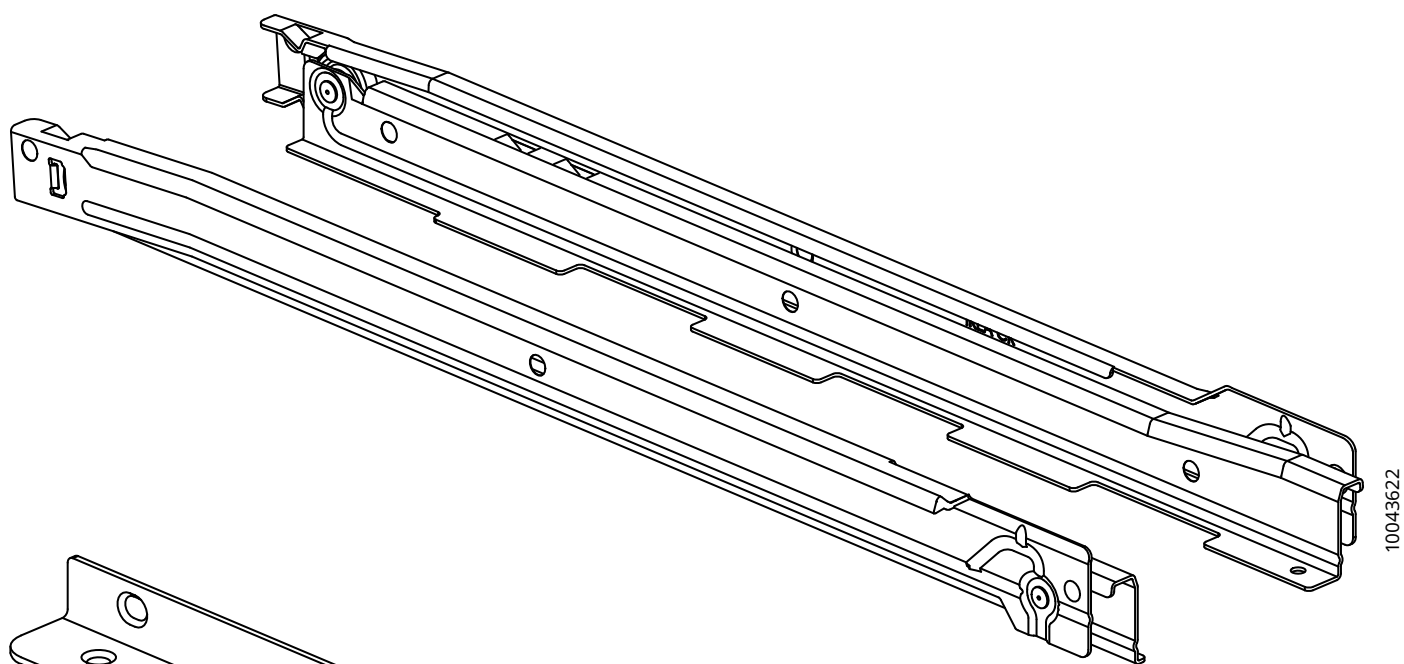 


2x

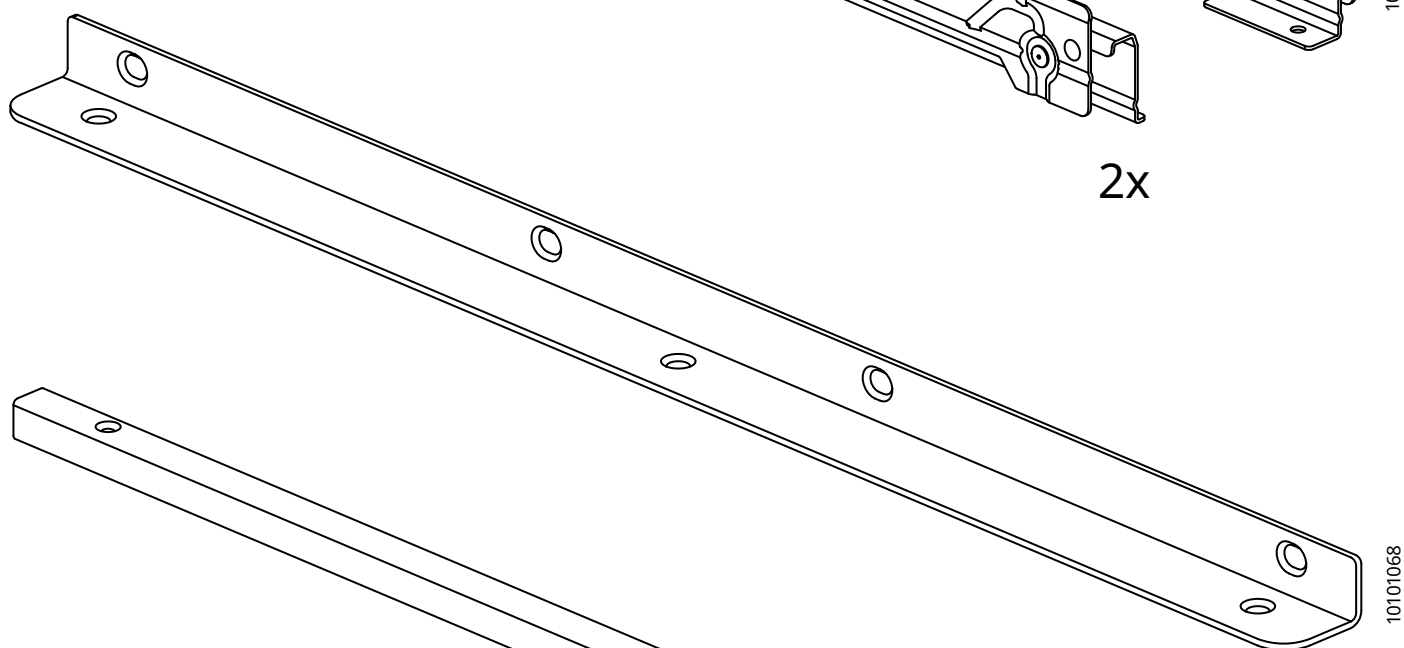 

2x





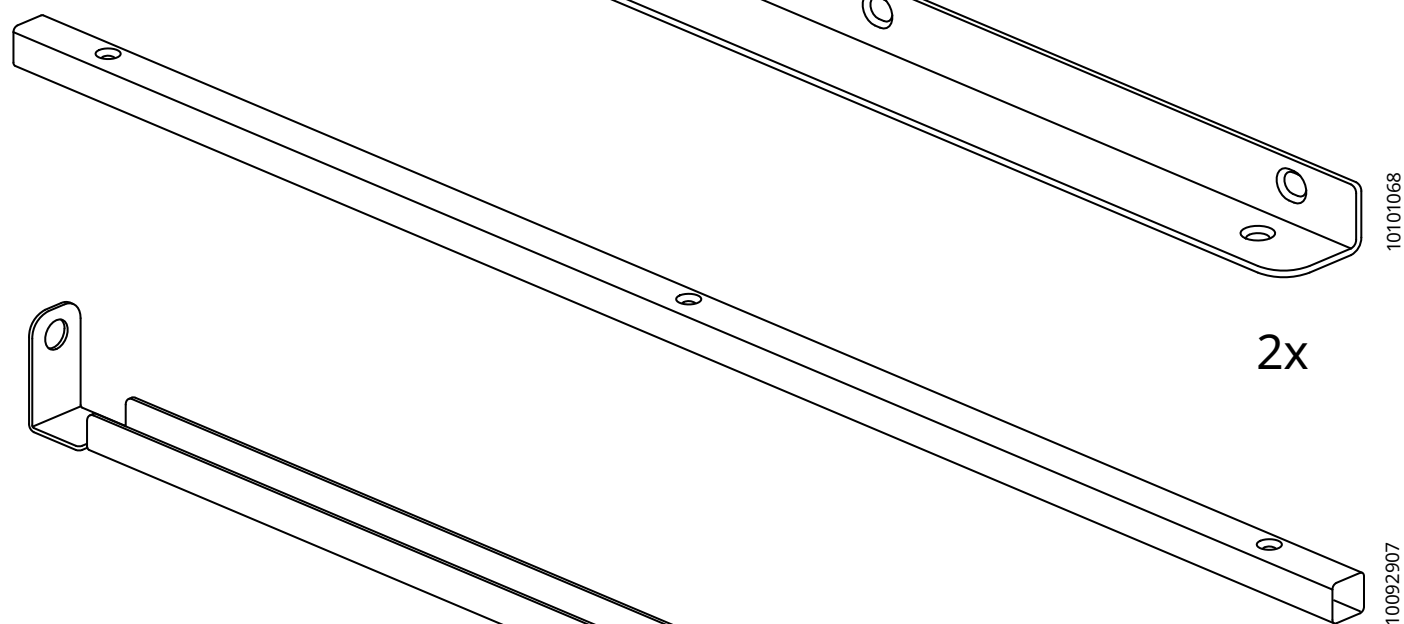 


1x


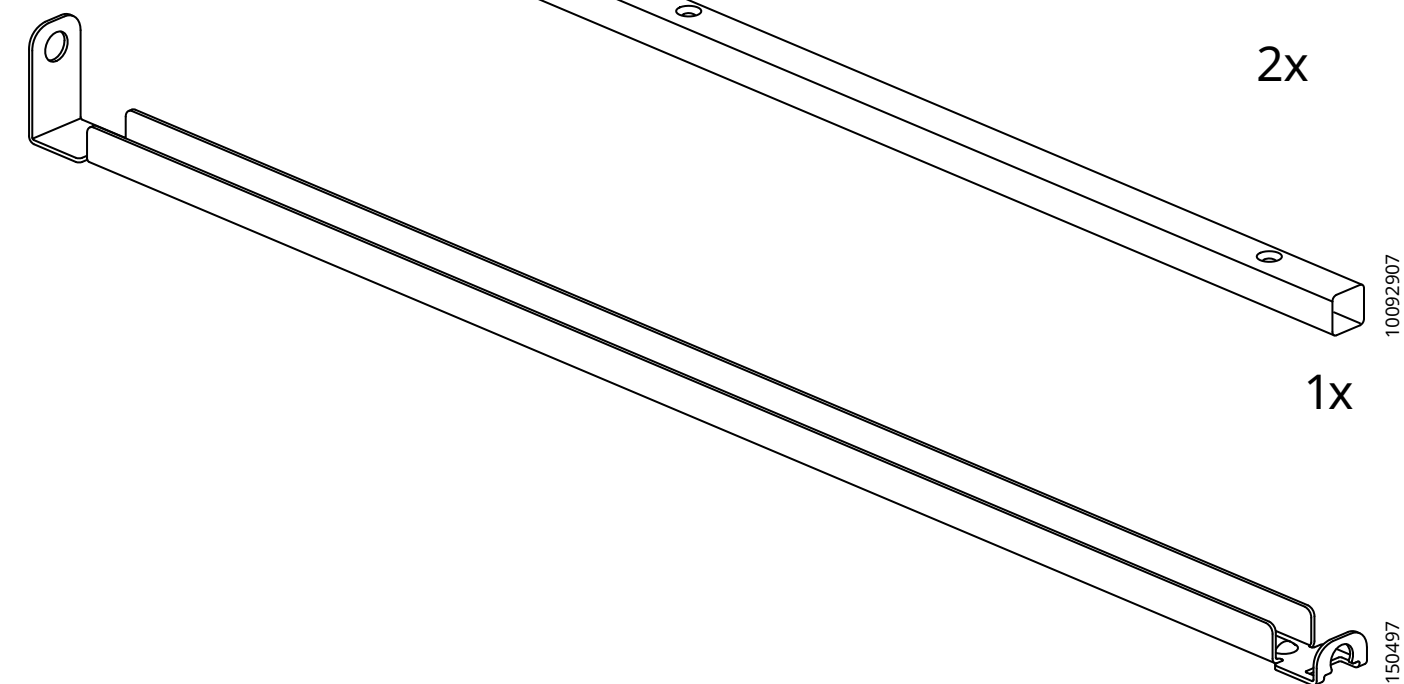 


2x

     
2x

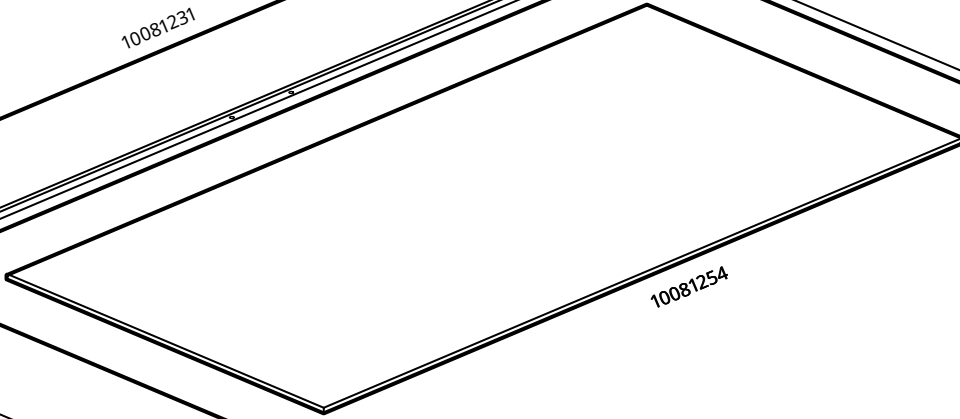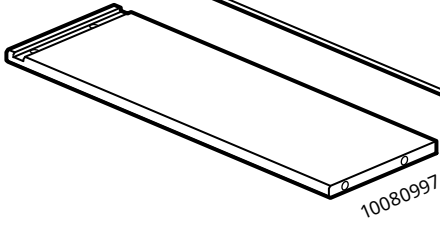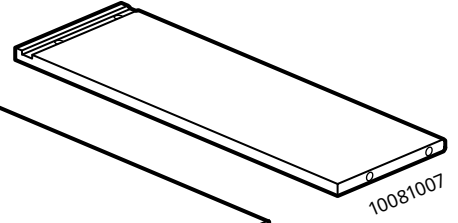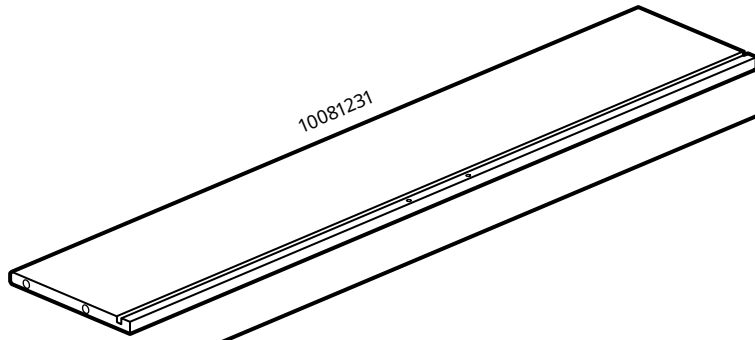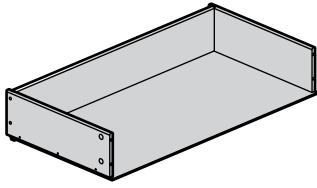


1

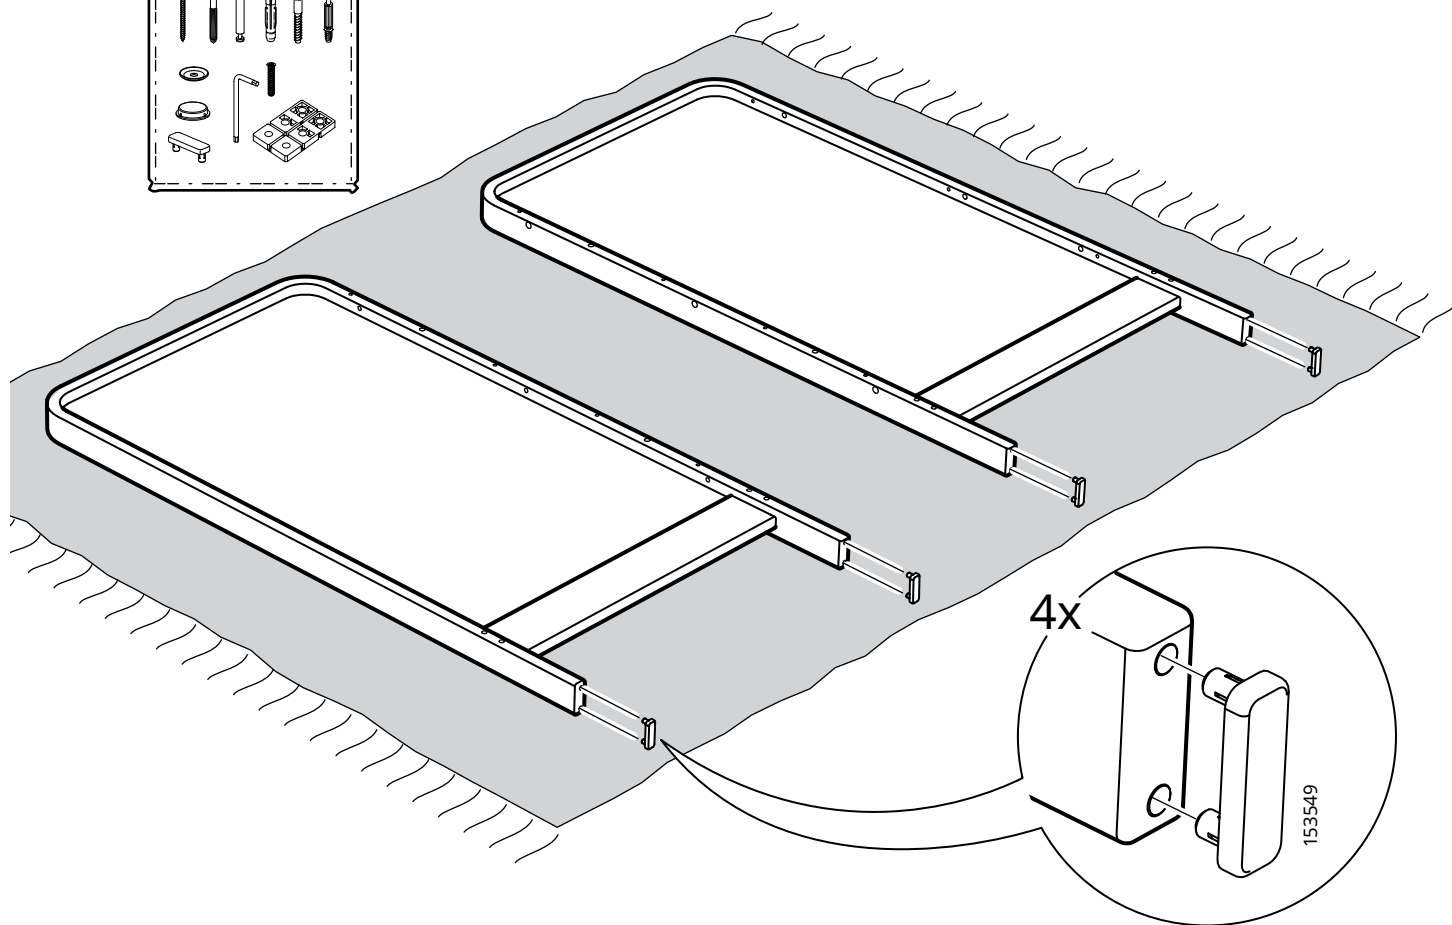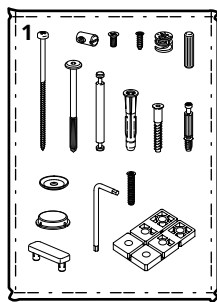  


2

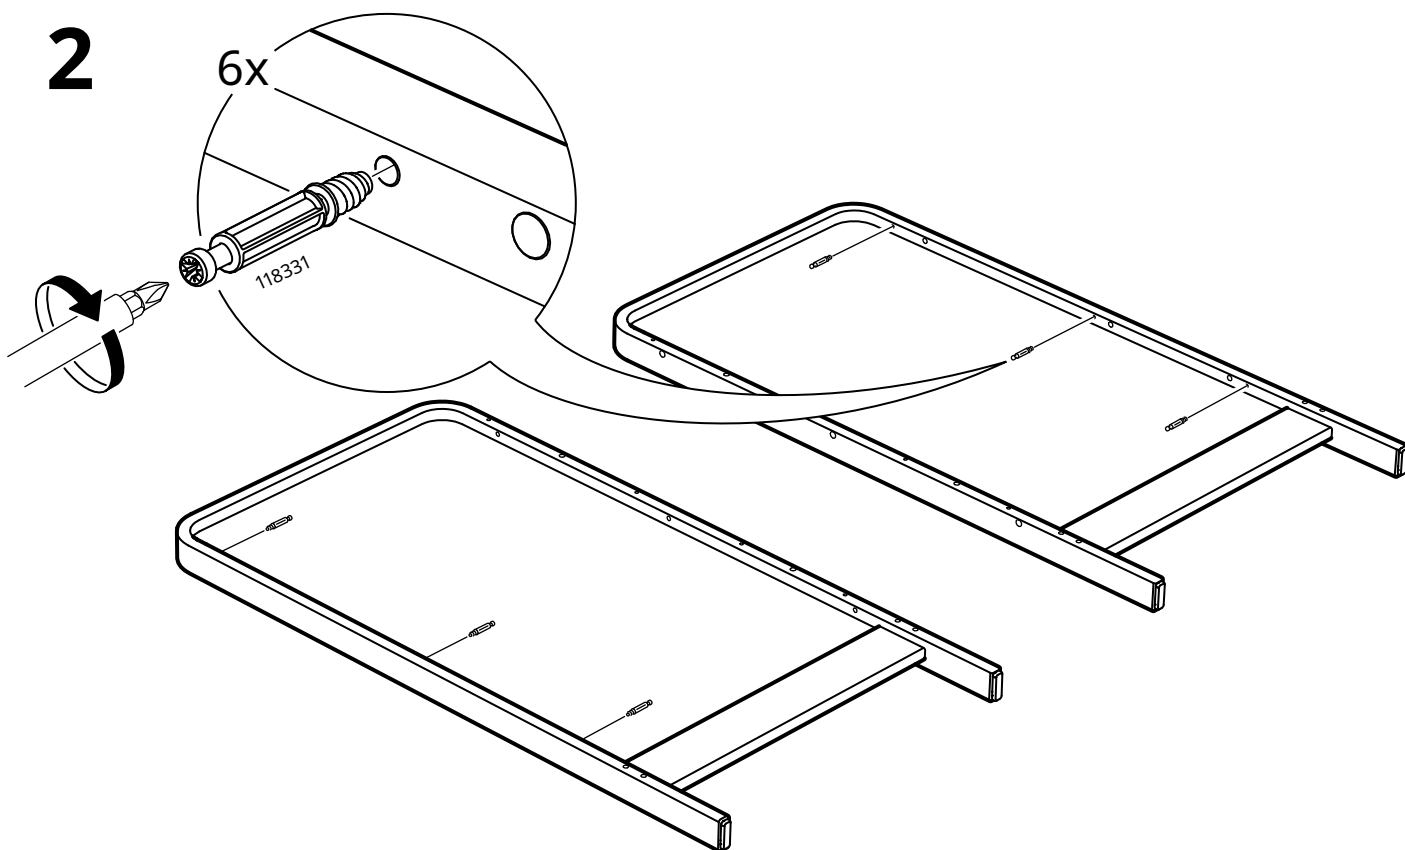 


3

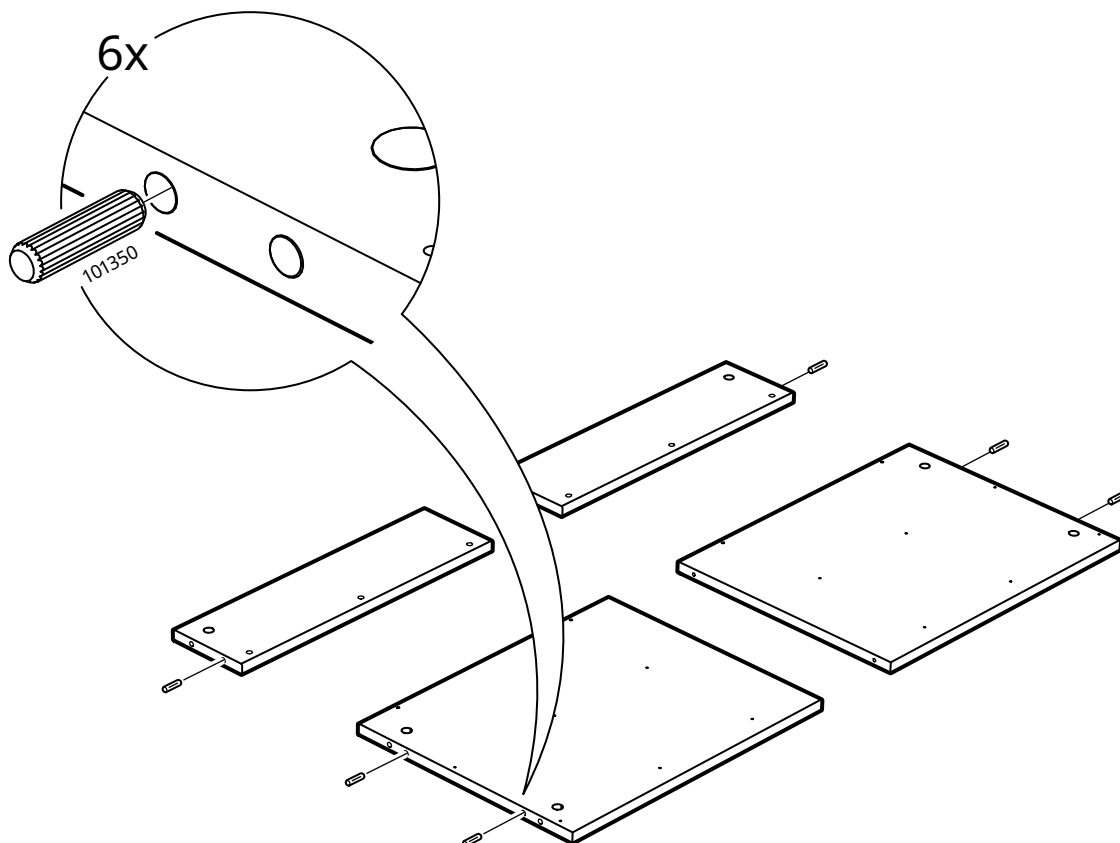 


4

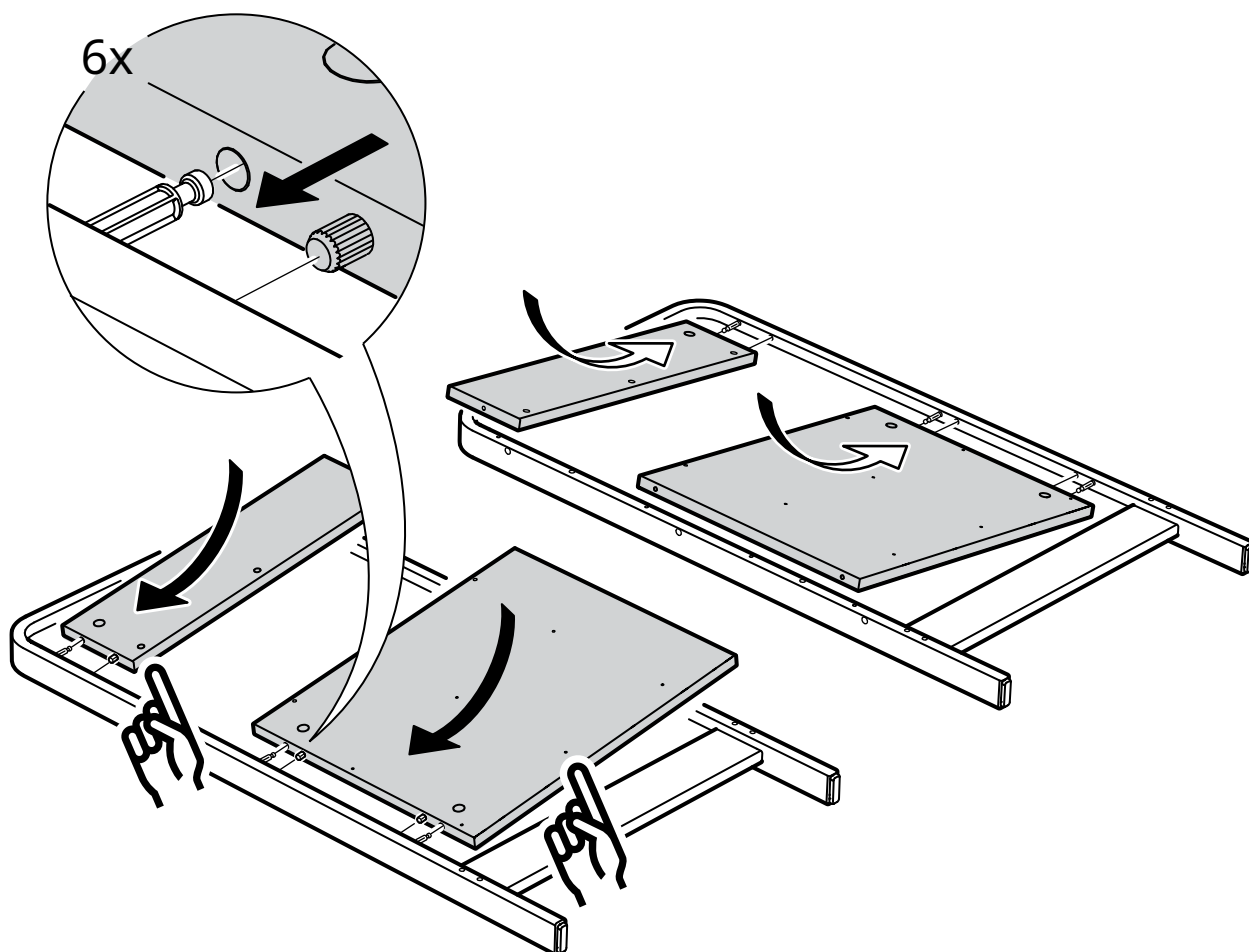 


5

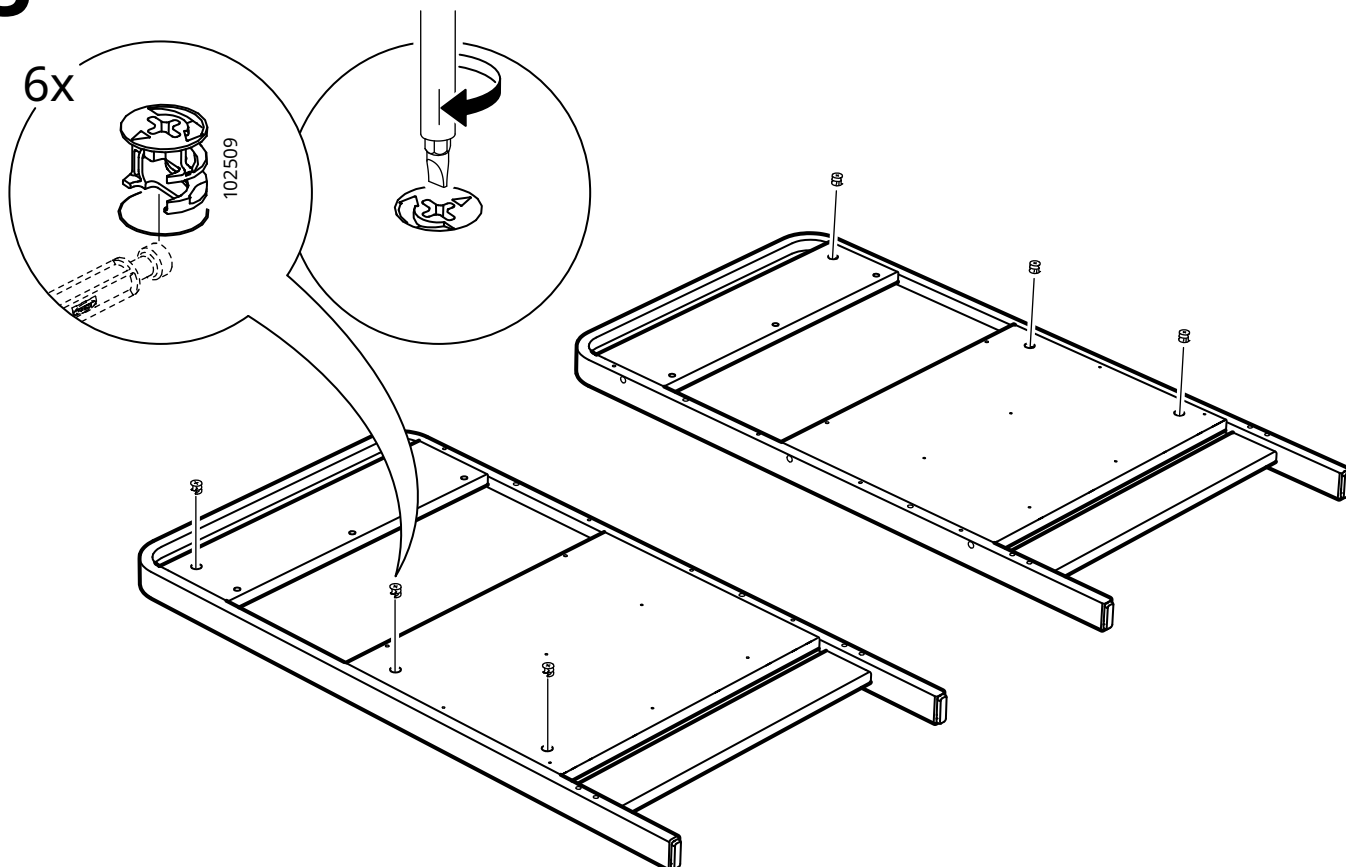 



6

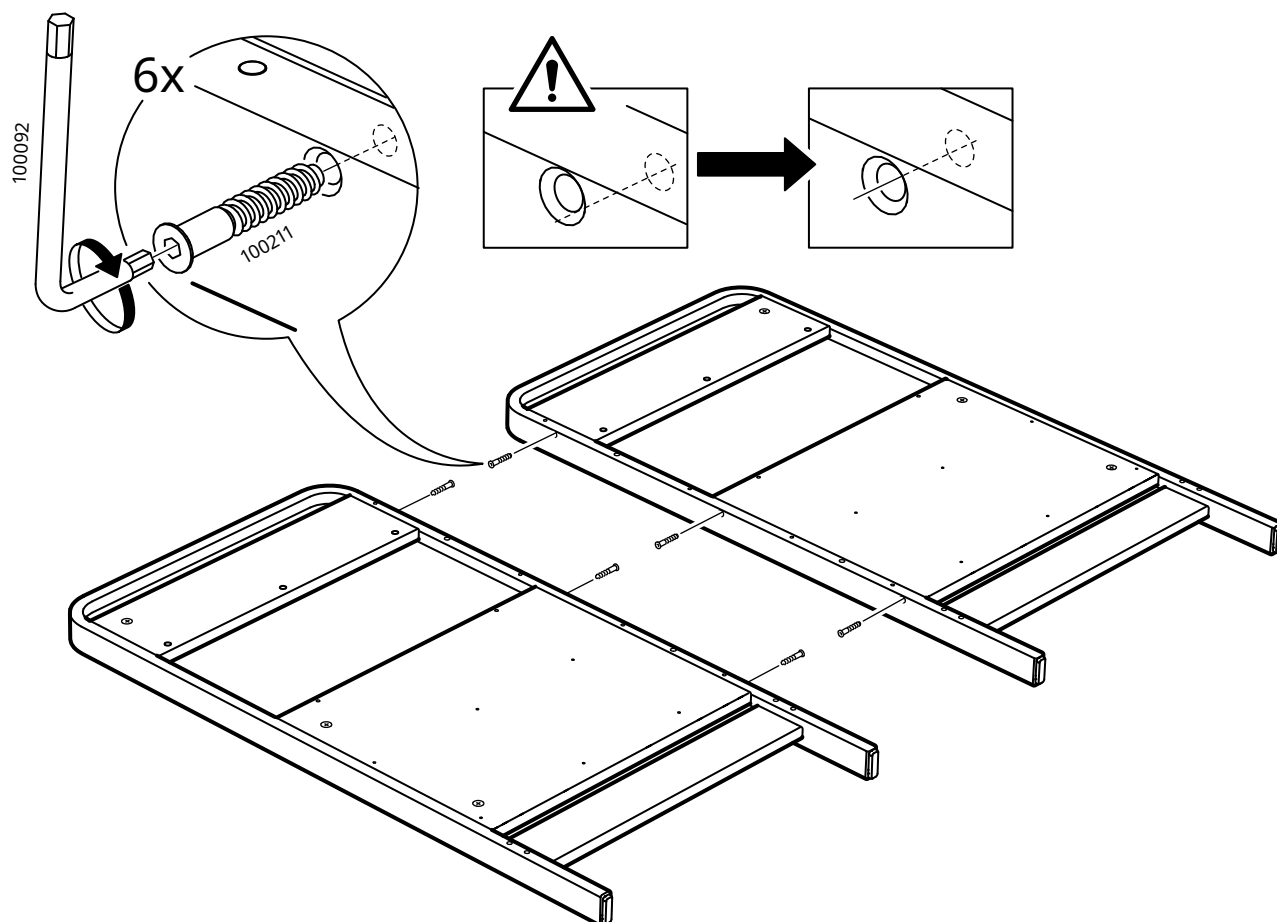 


7

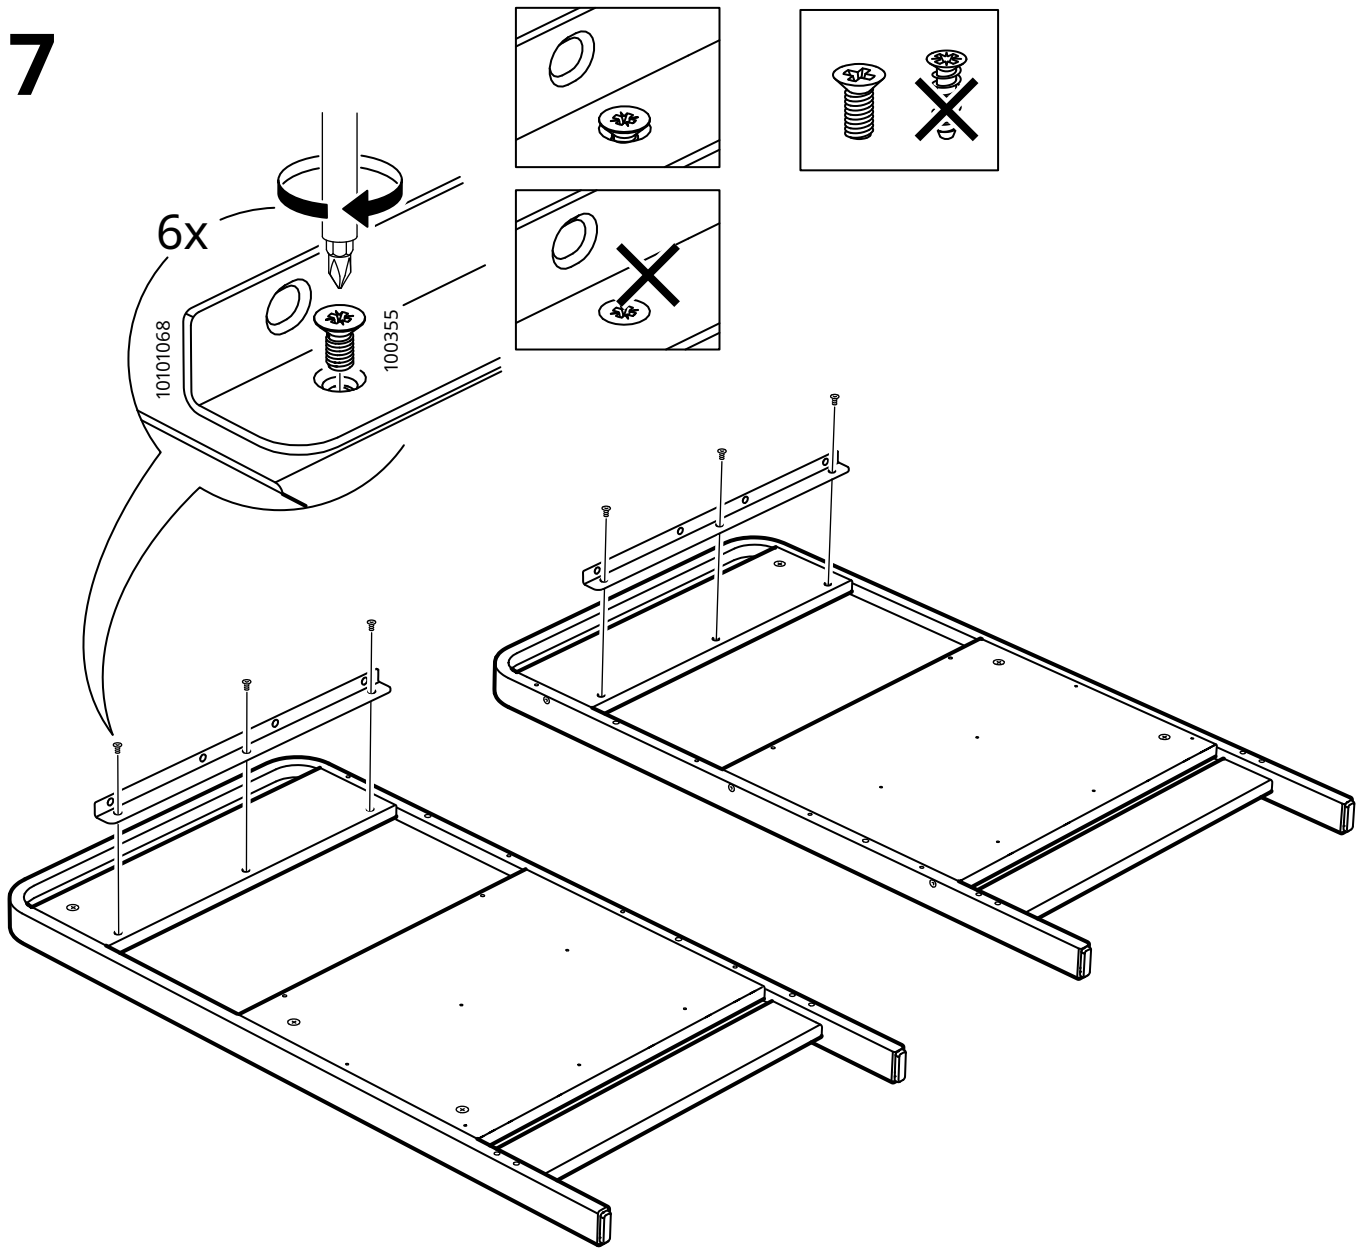 


8

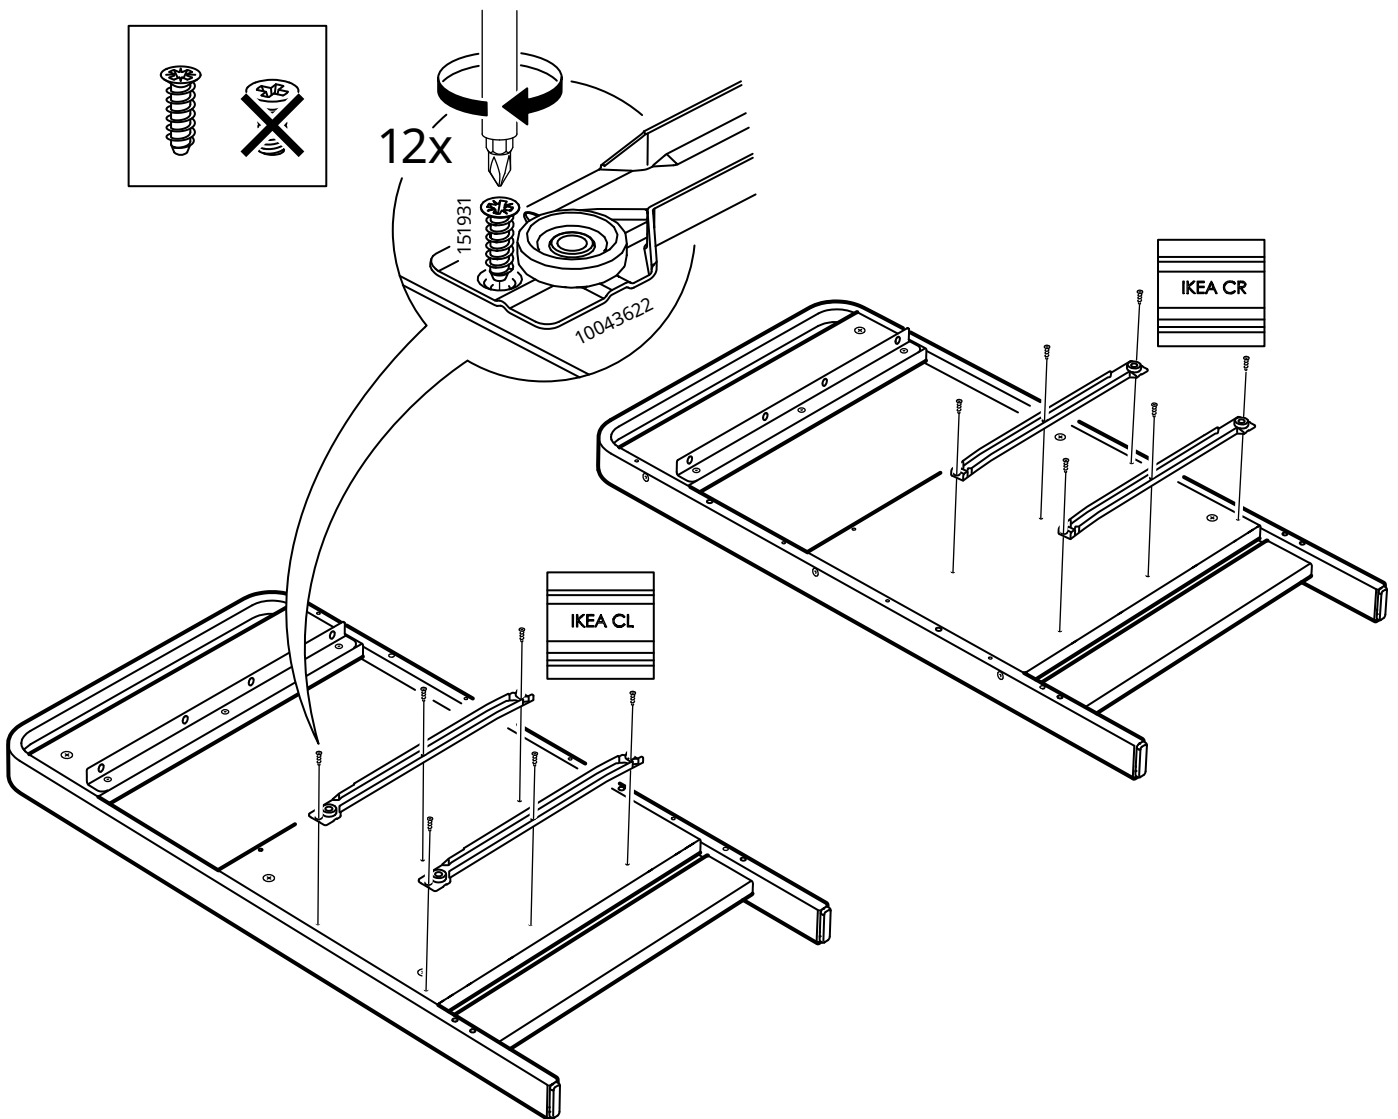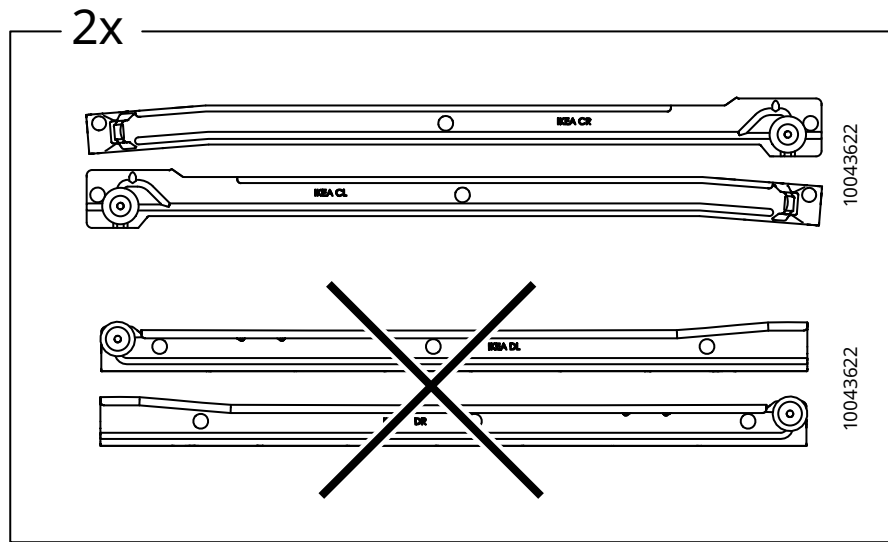  


9

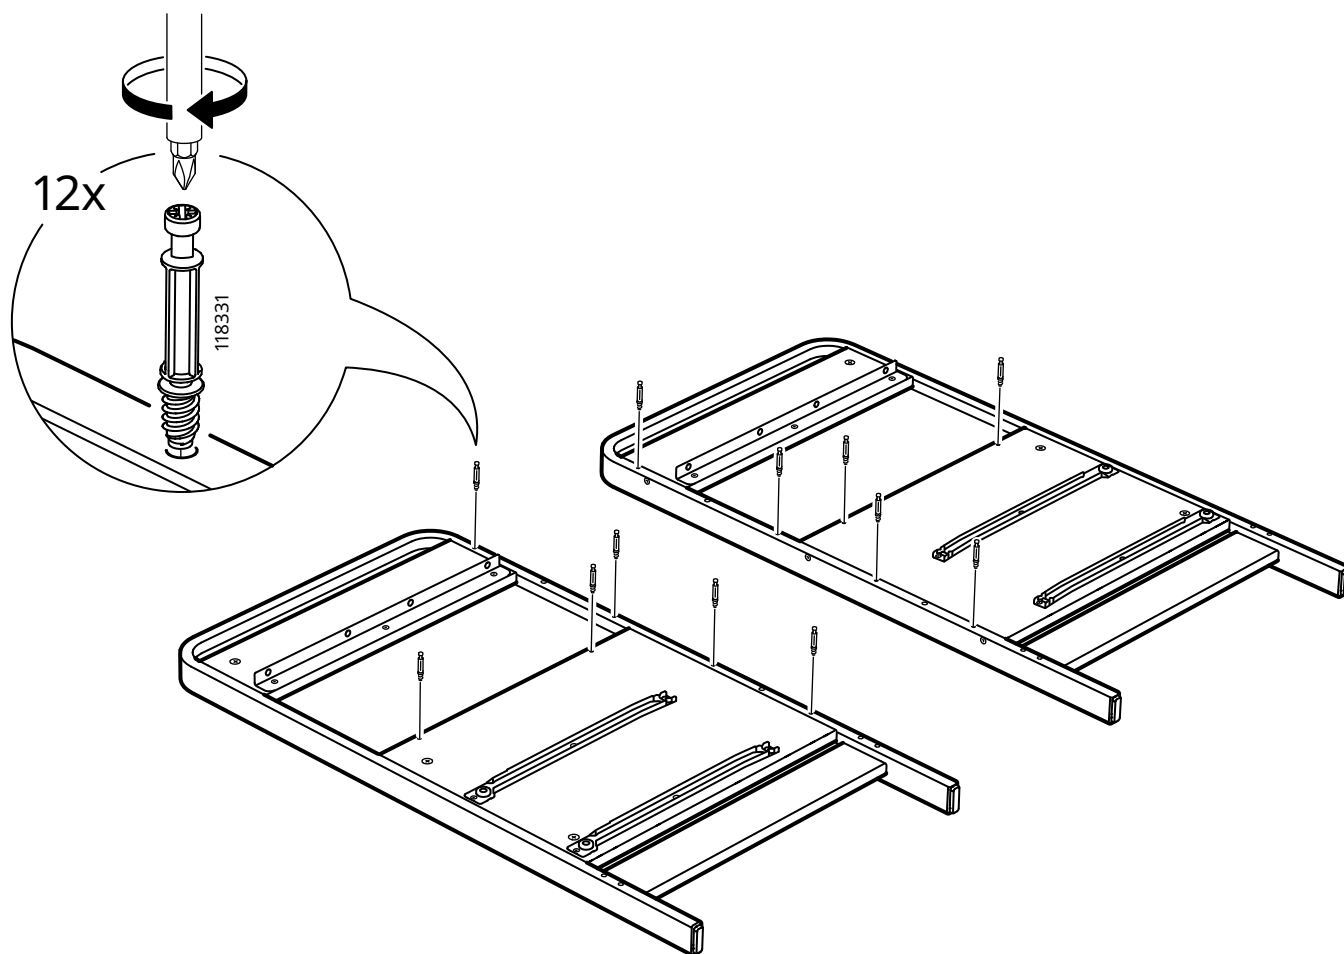 


10

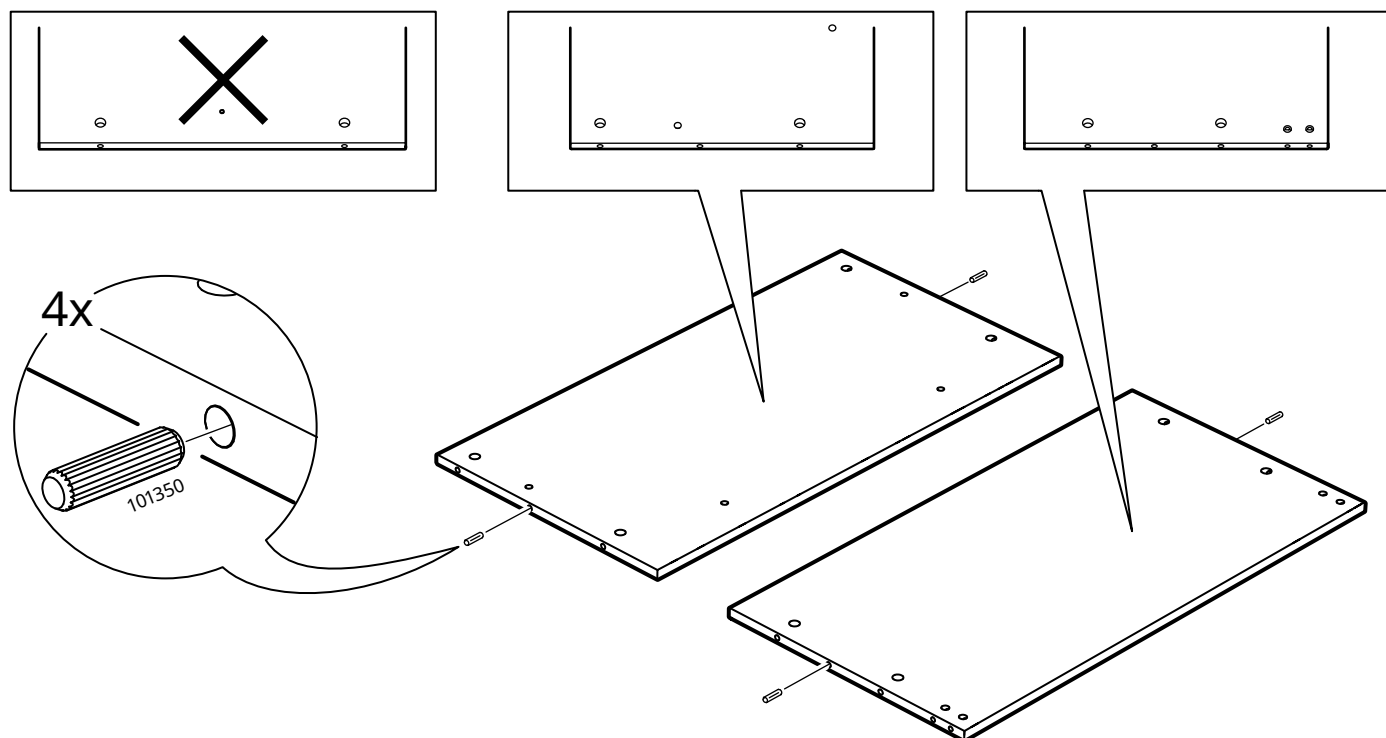 


11

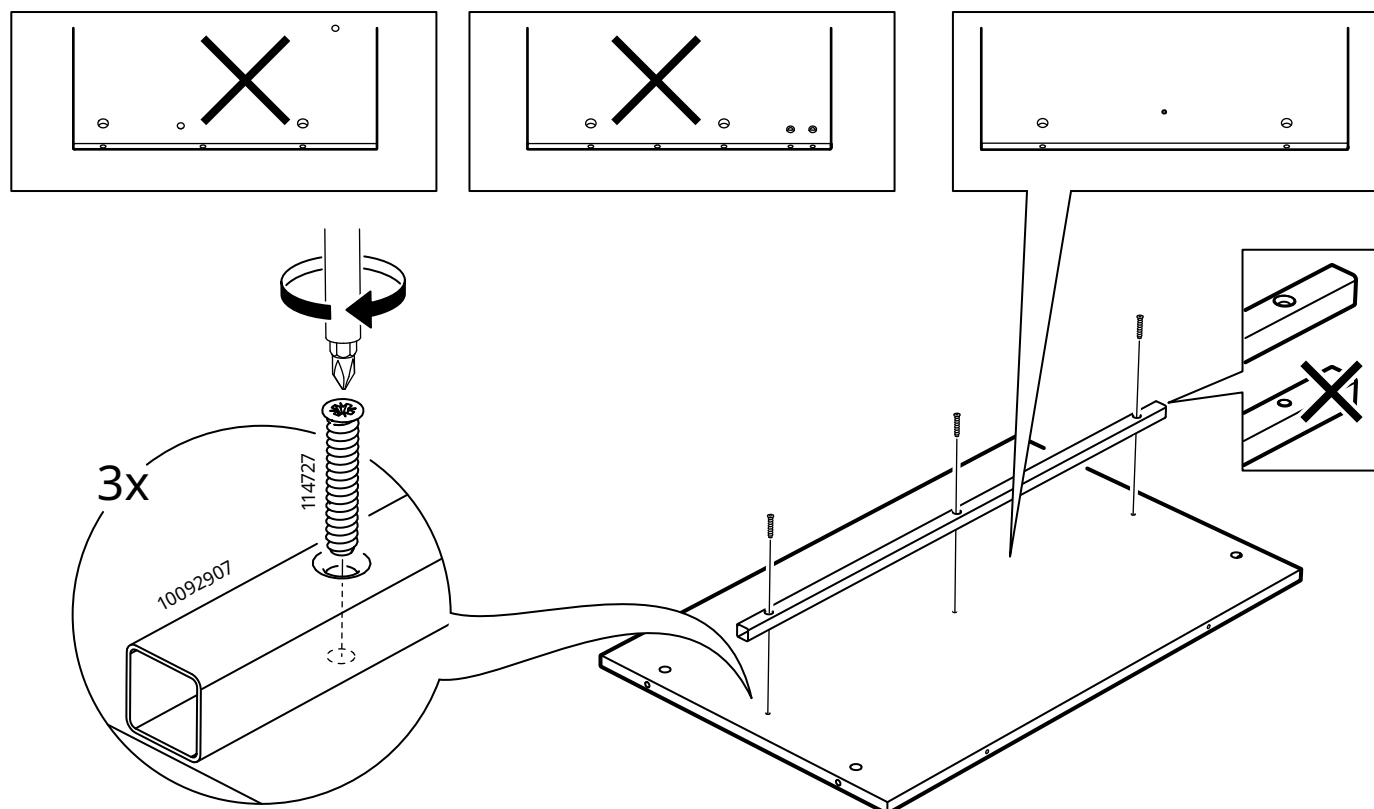 


12

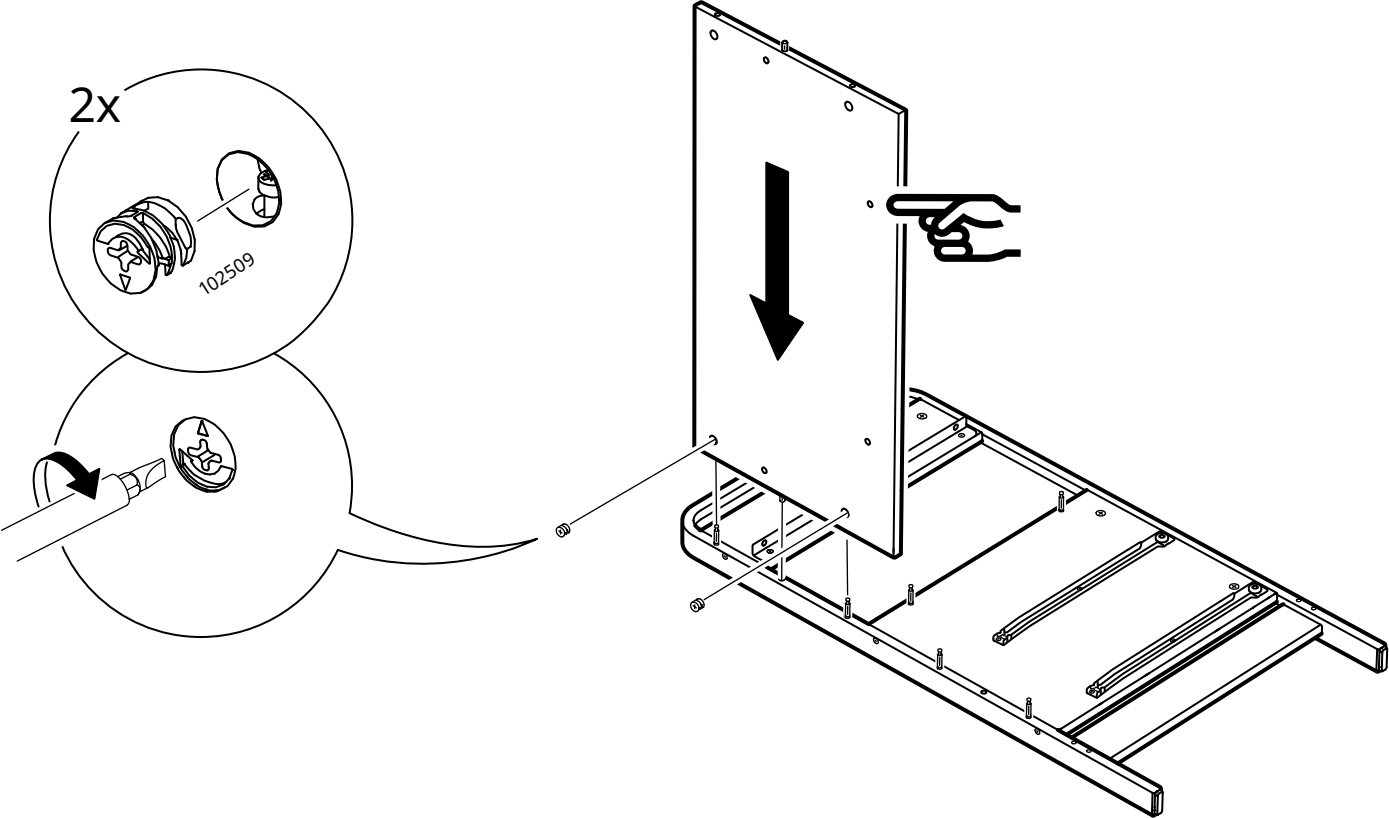 


13

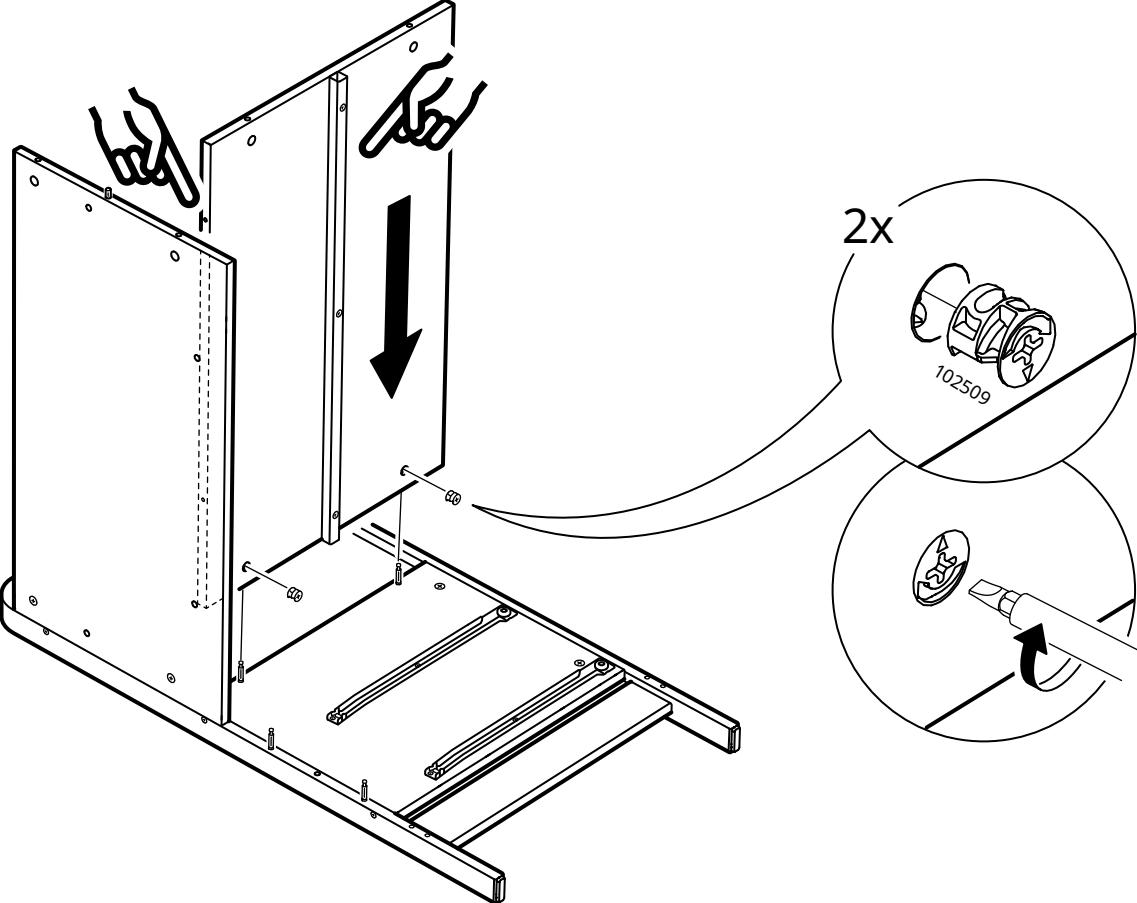 


14

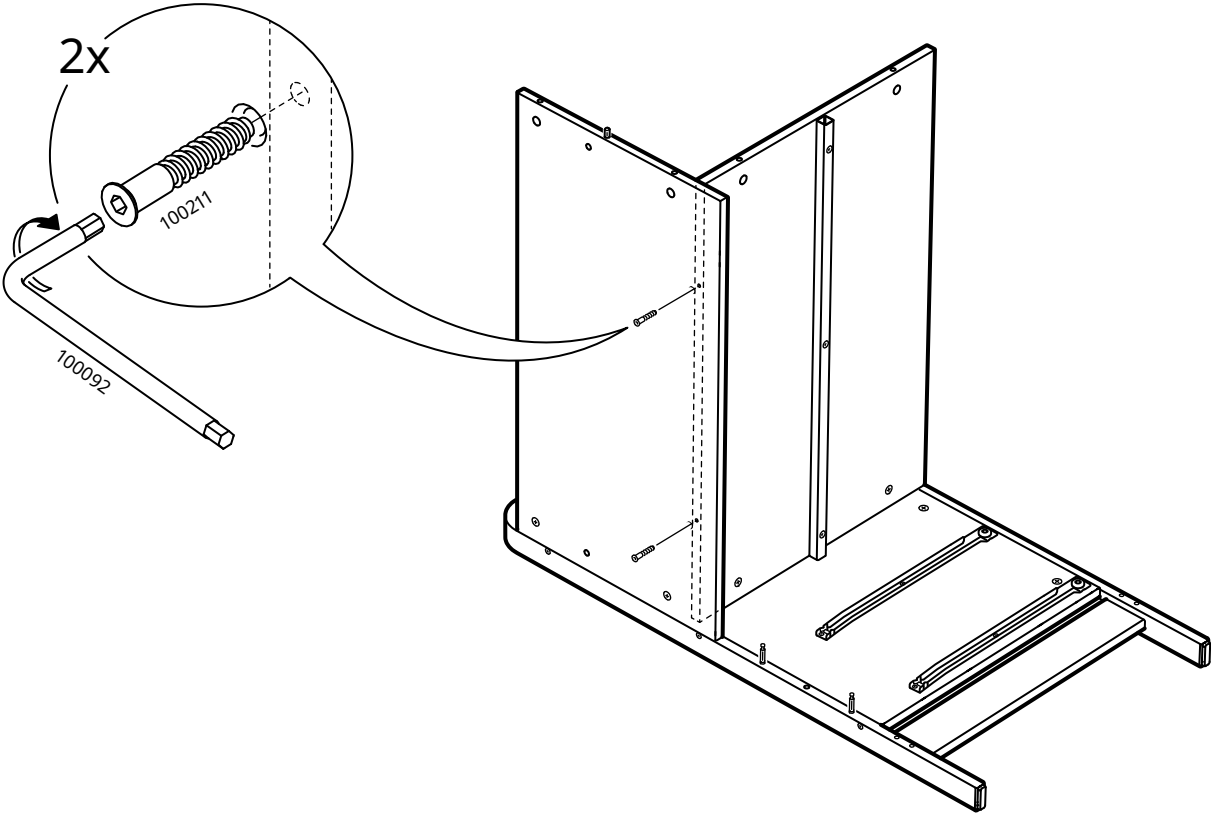 


15


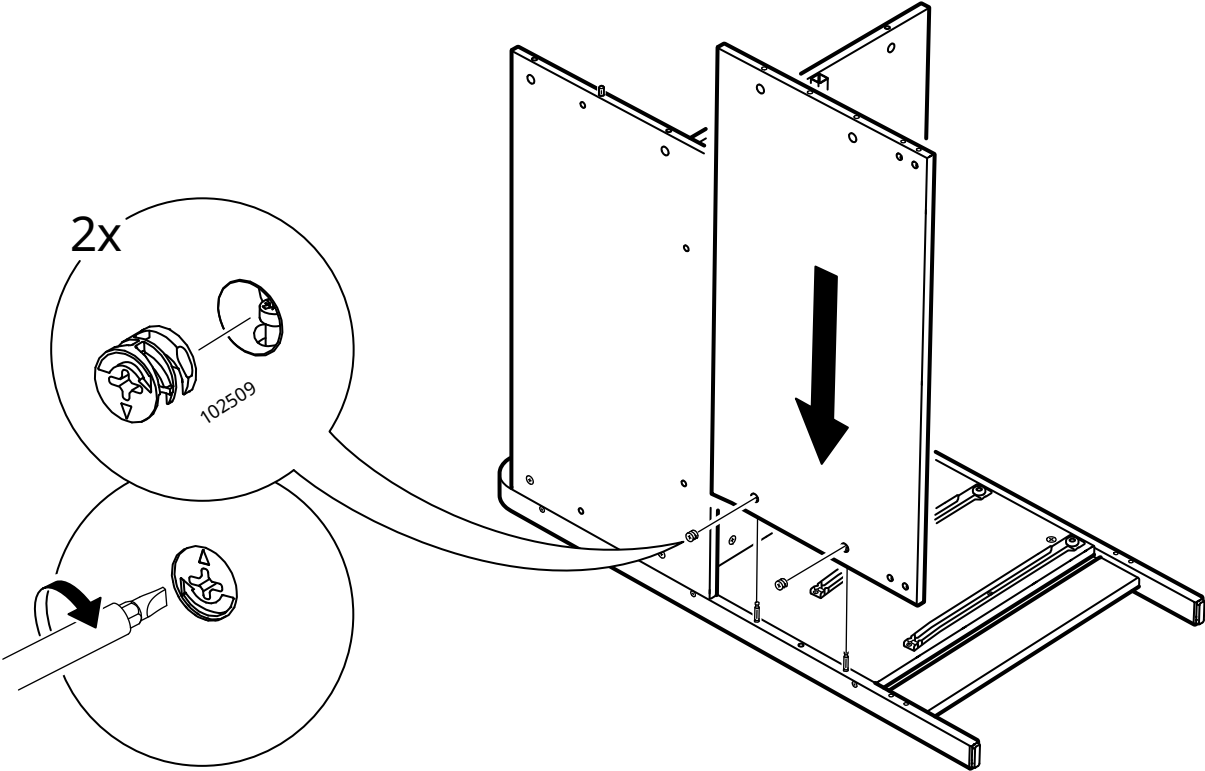 


16


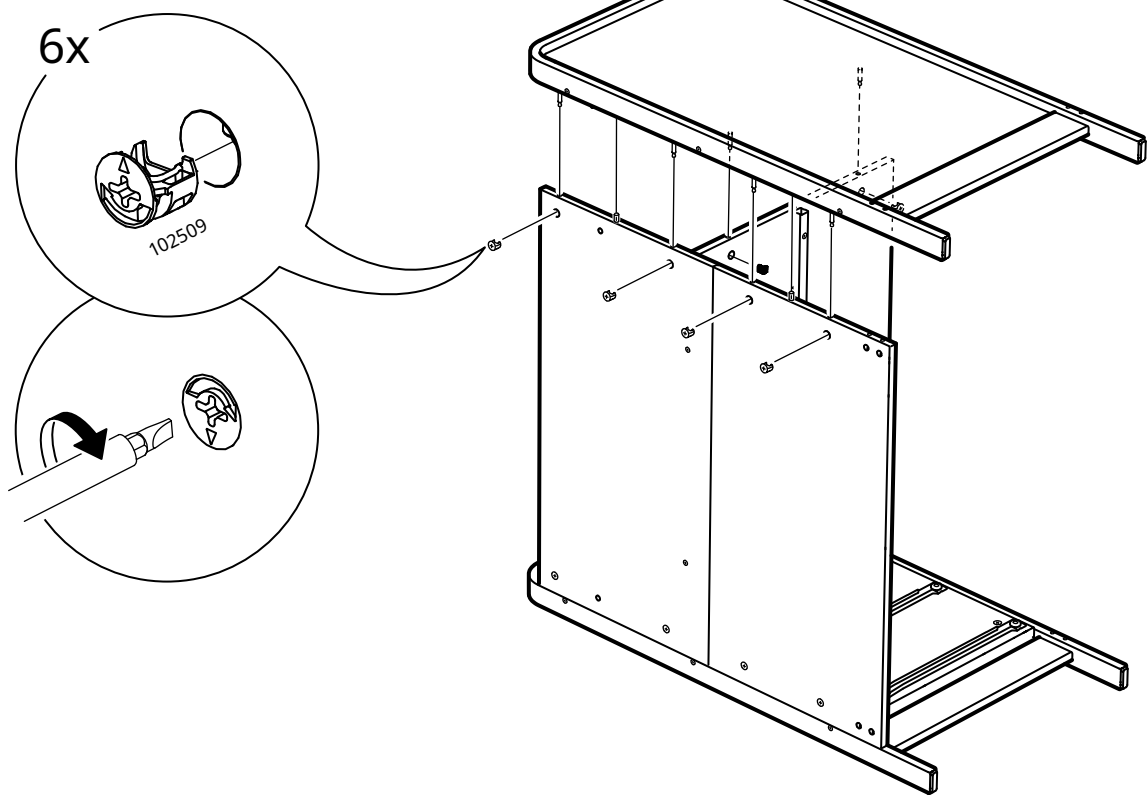 



17

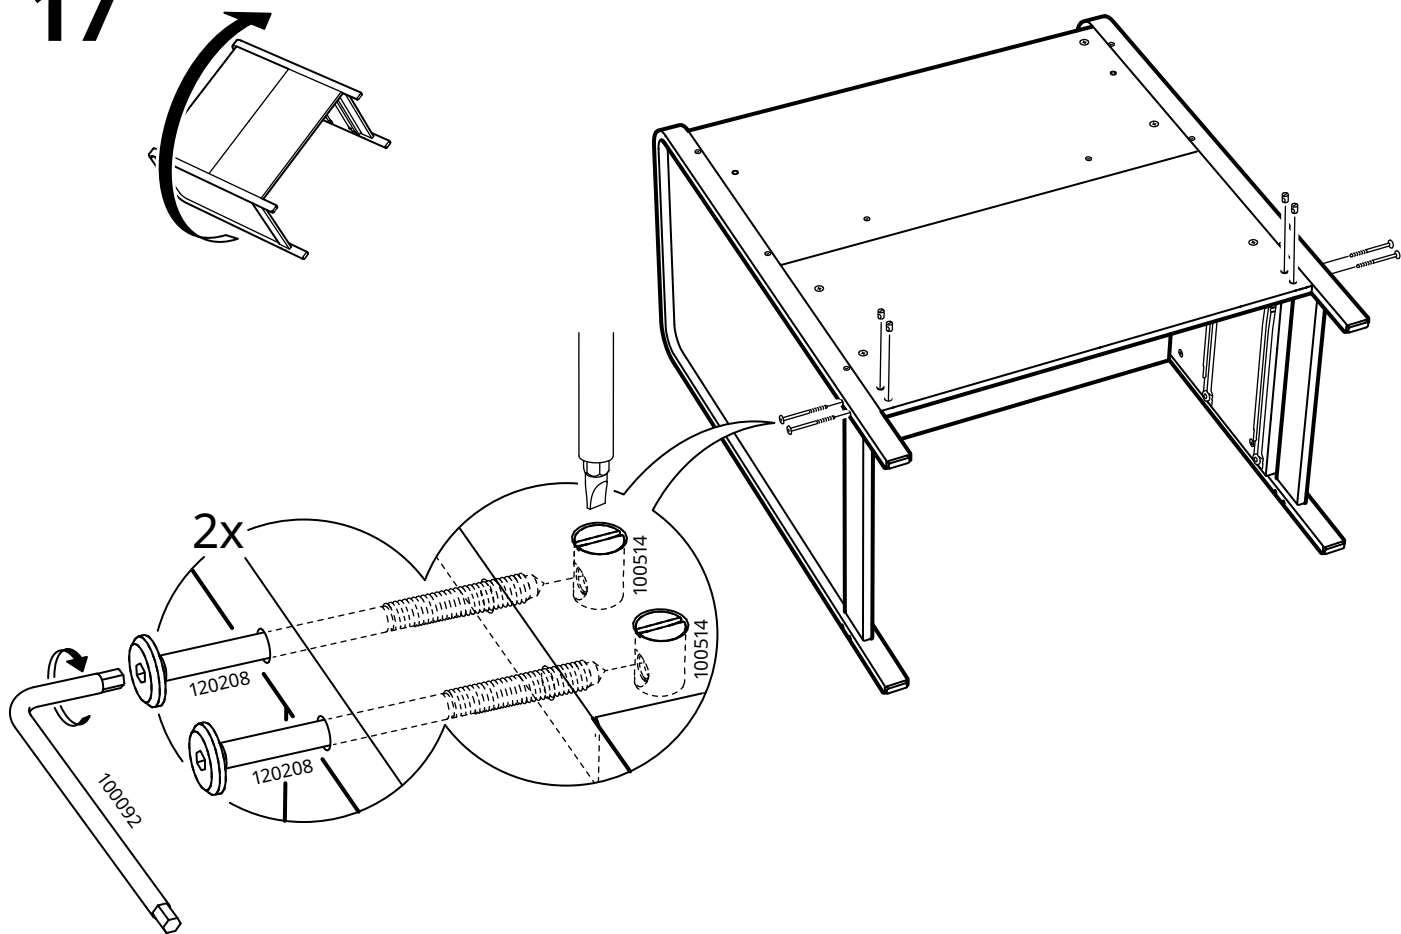 

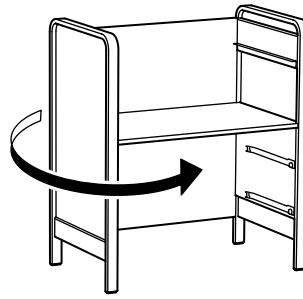 
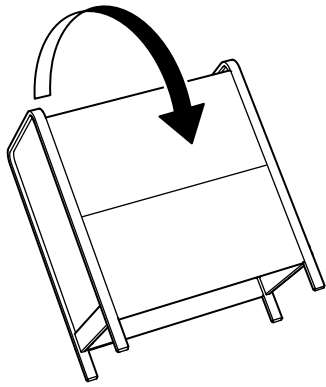 


18

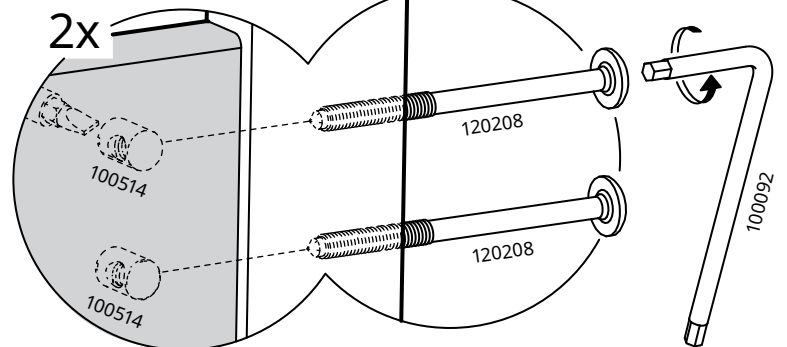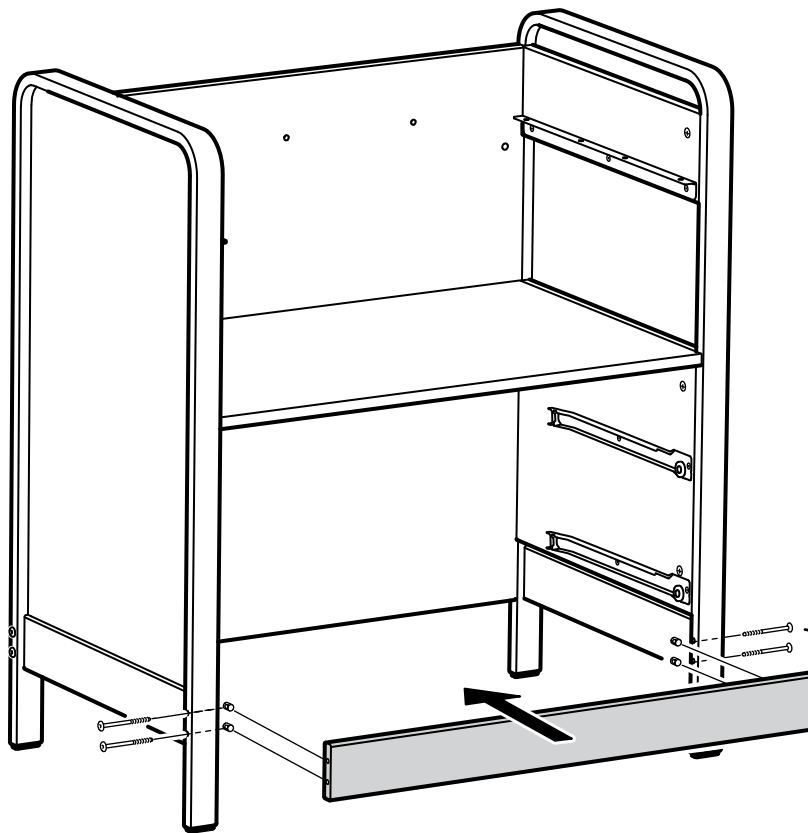  


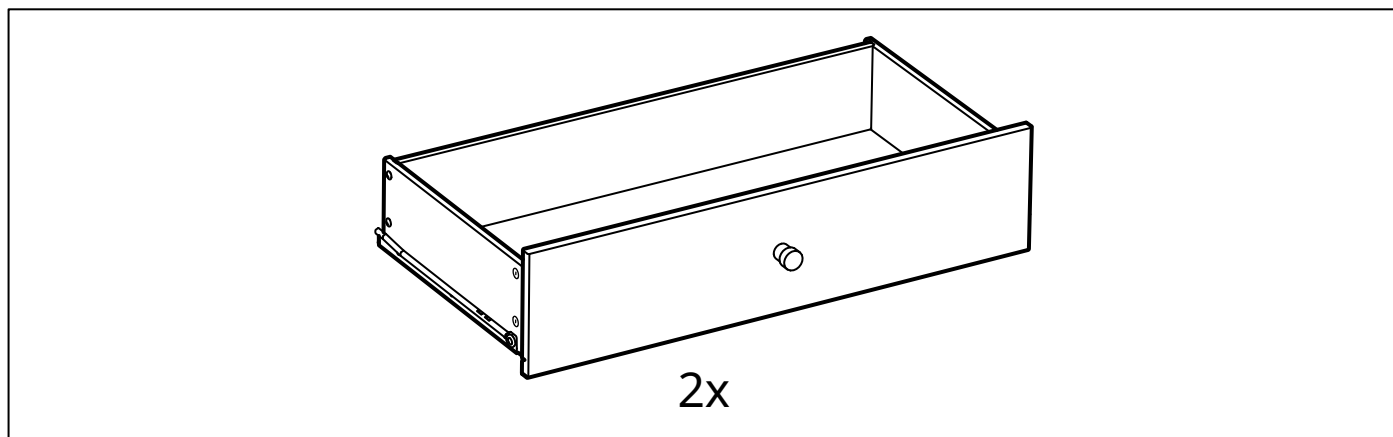 


19

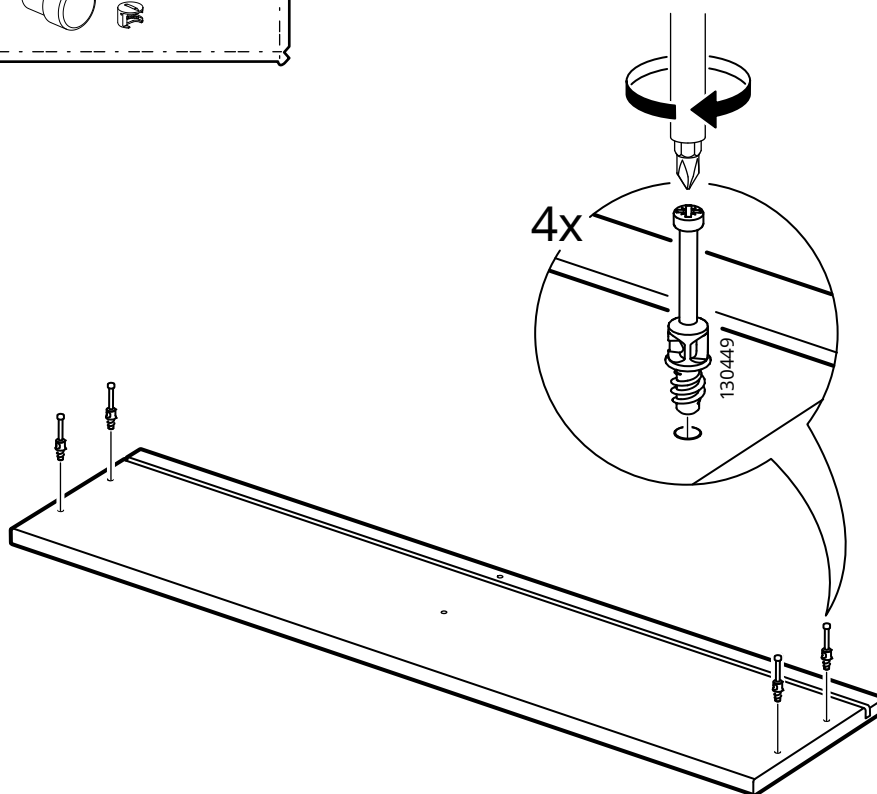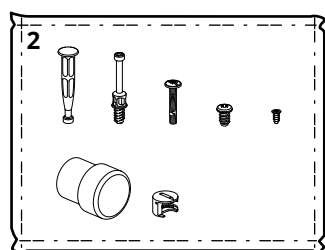  


20

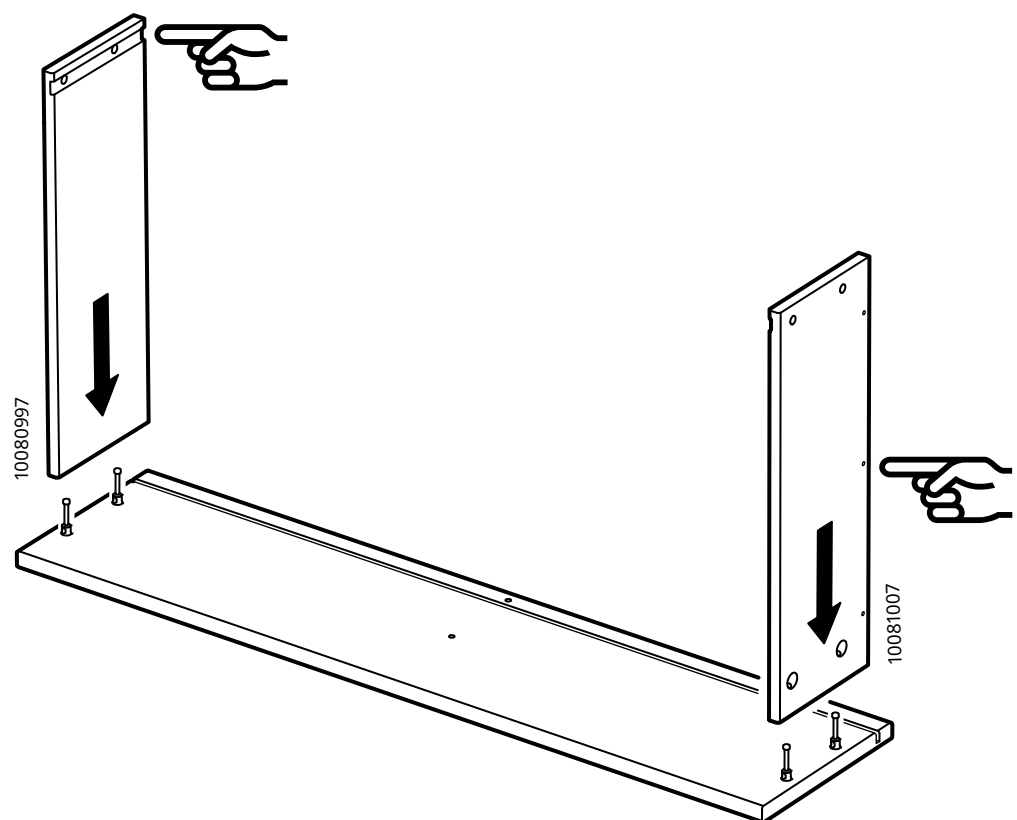 


21

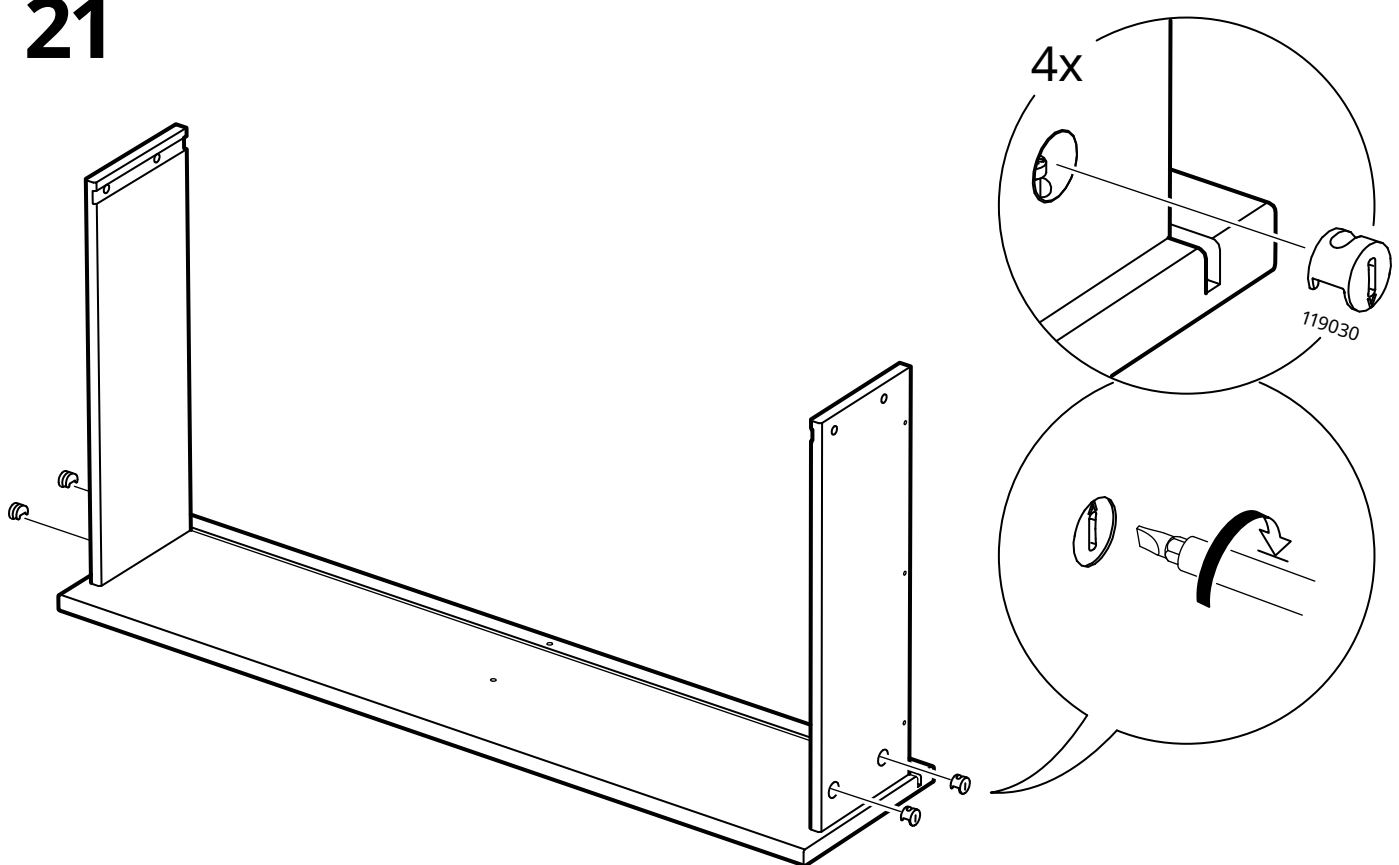 


22

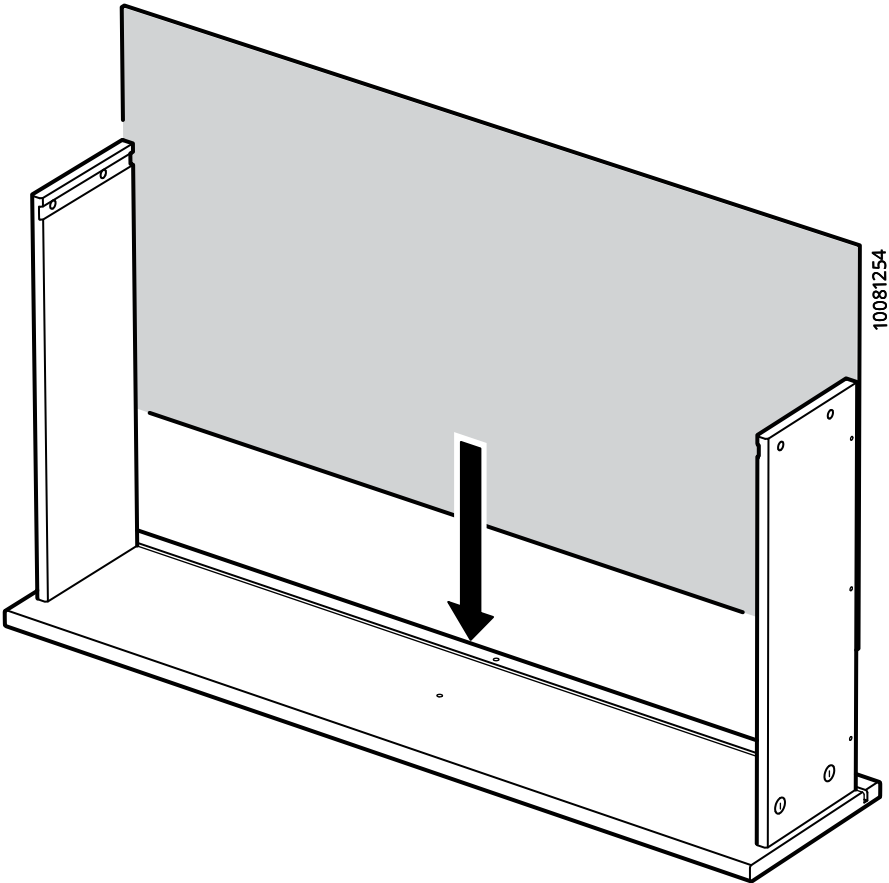 


23

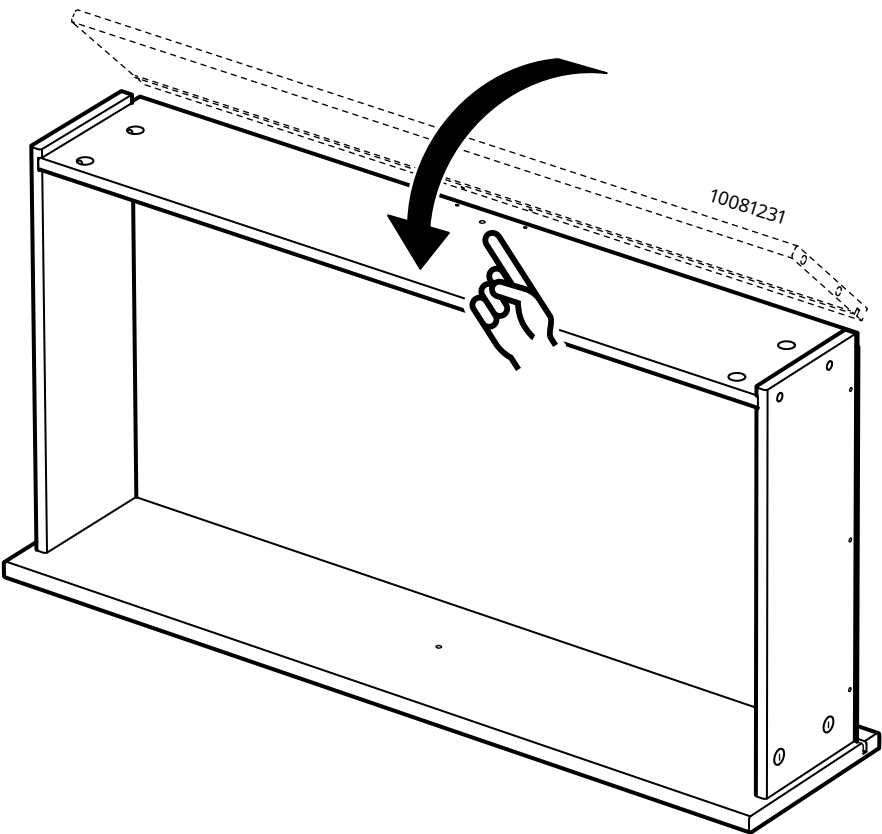 


24

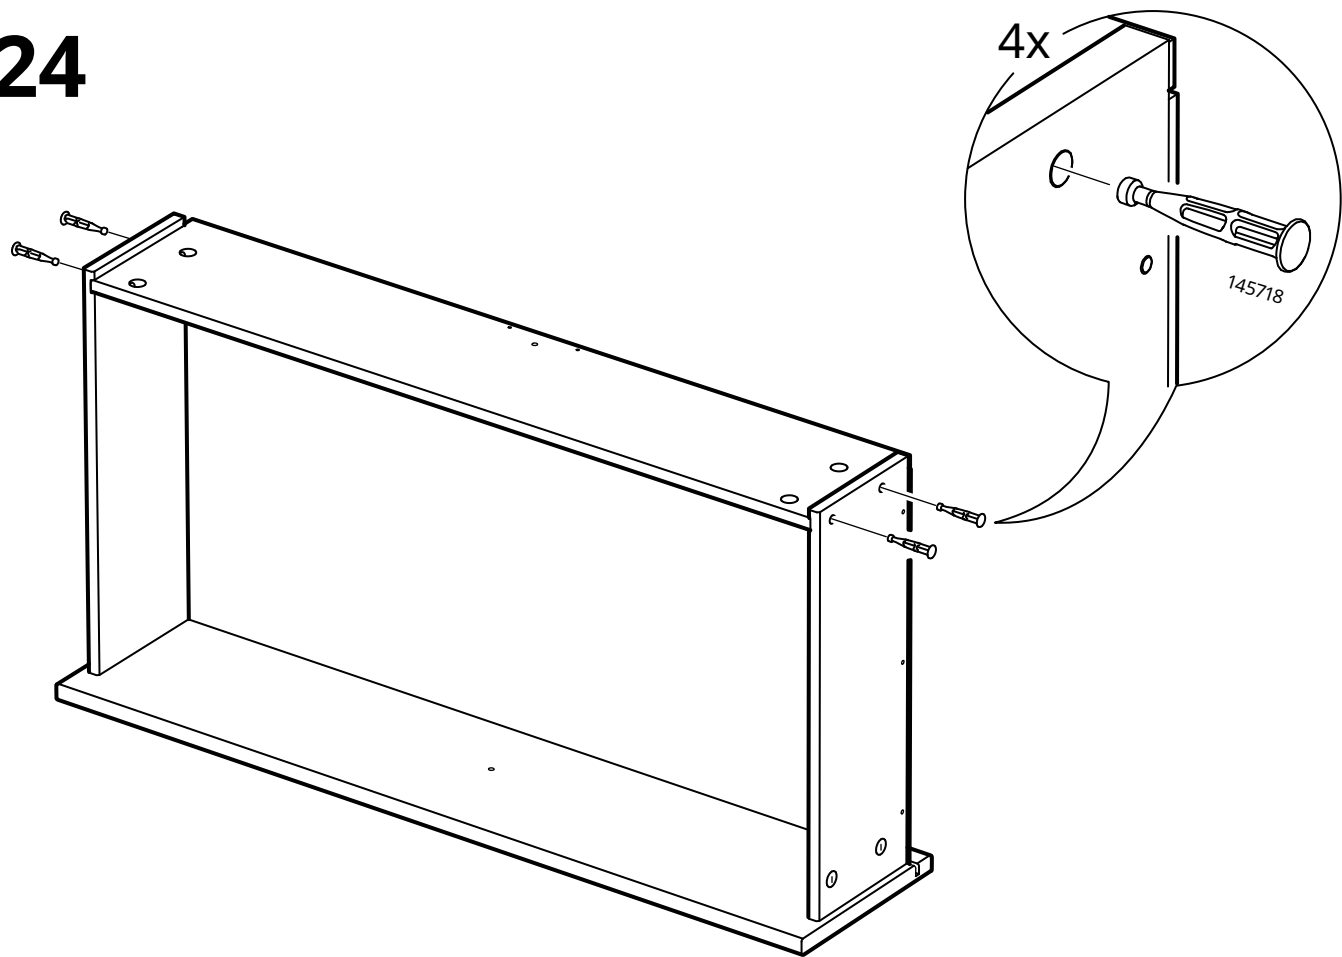 


25

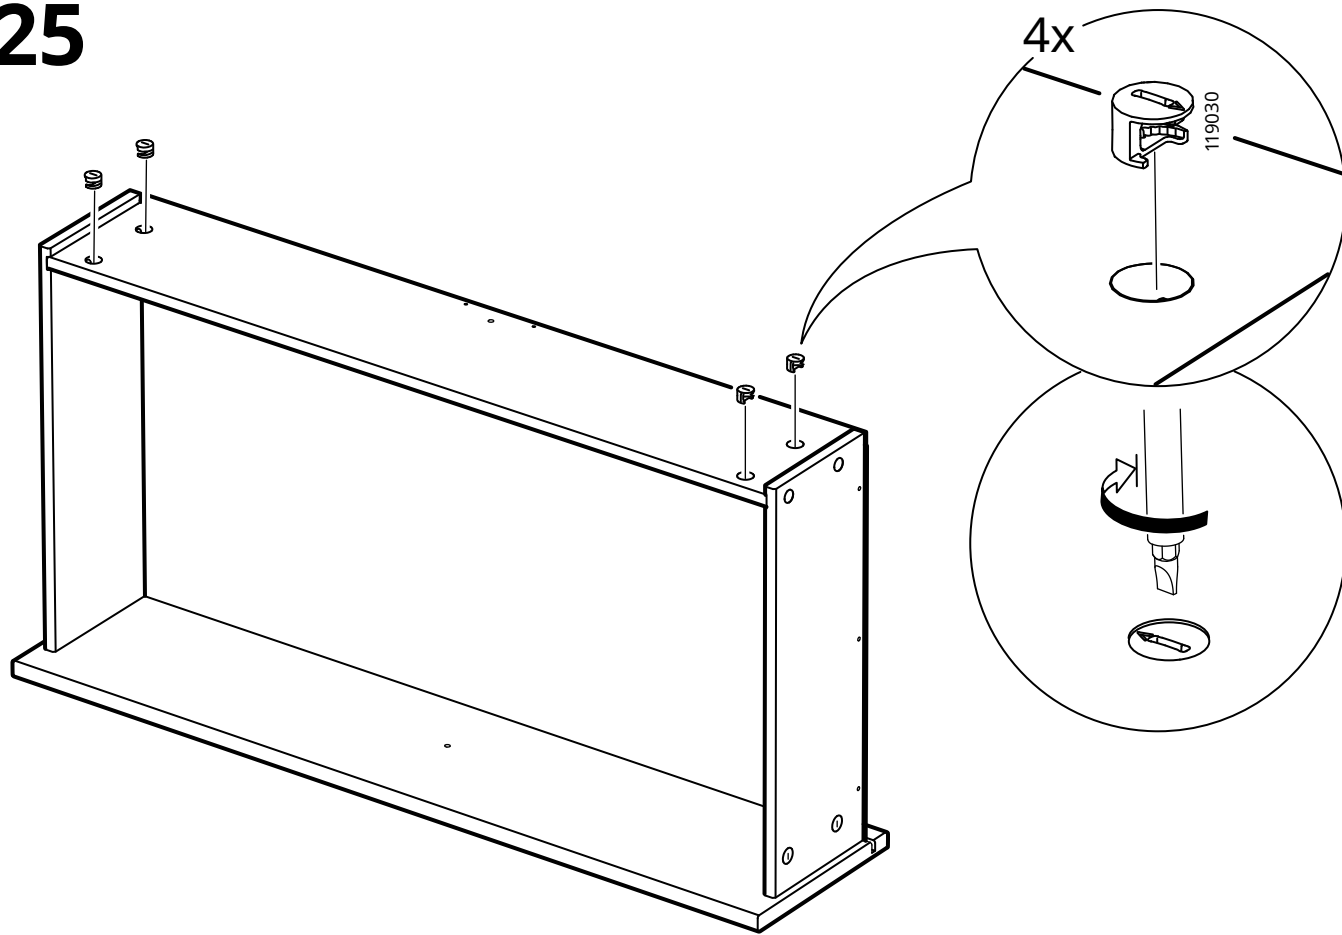 


28

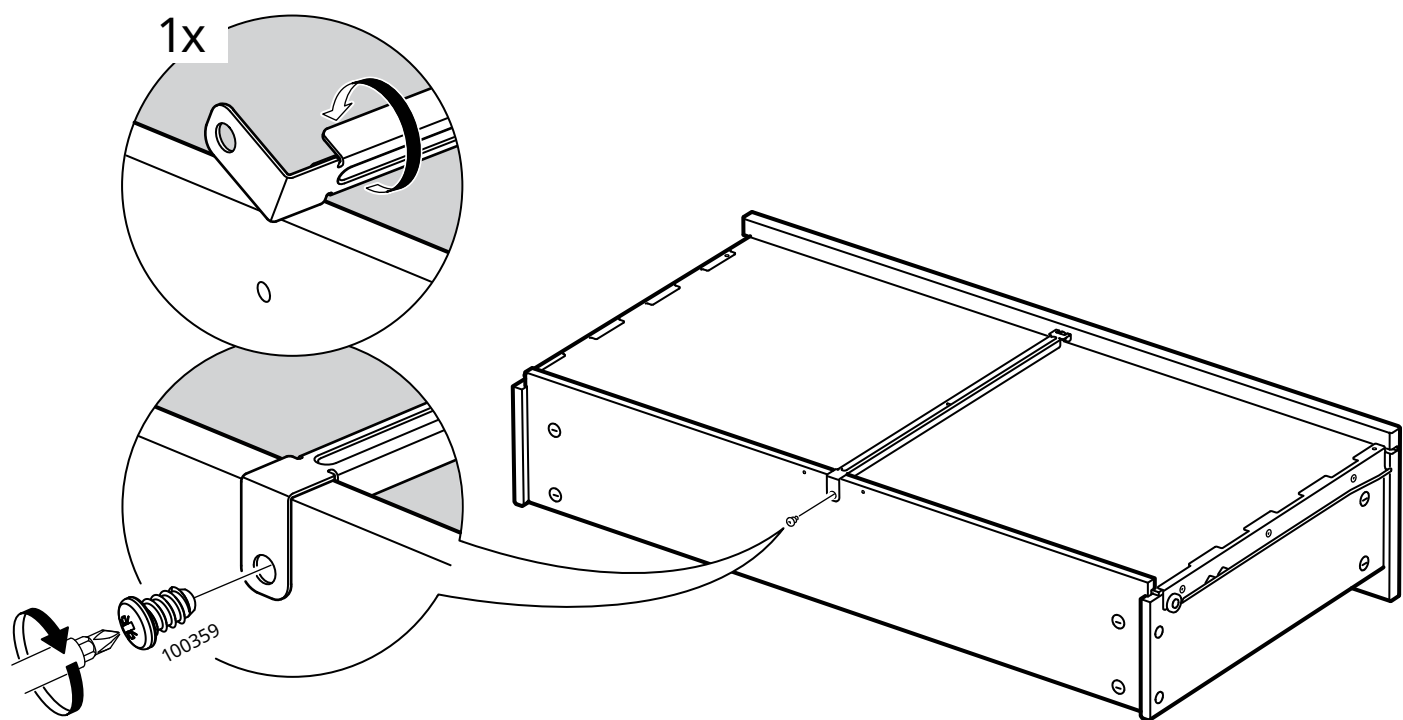 


29

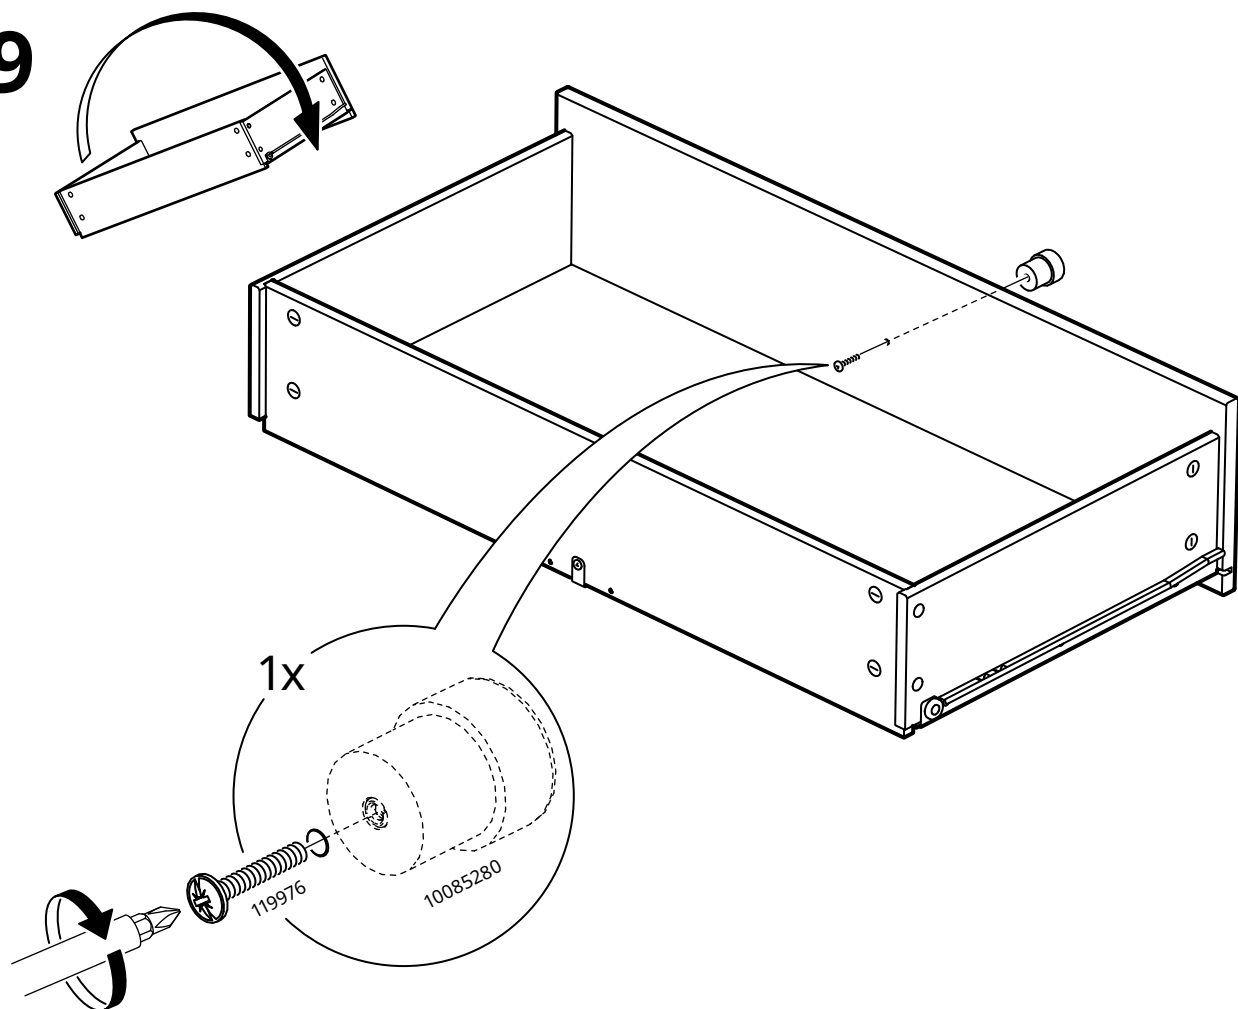 


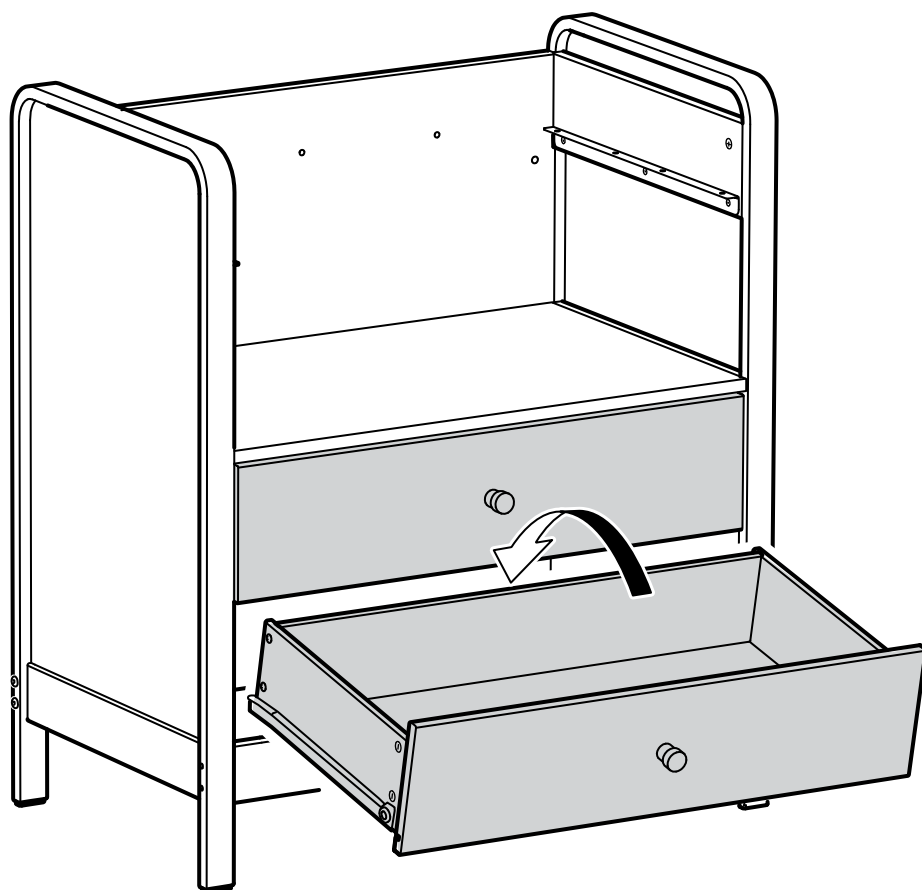 

31

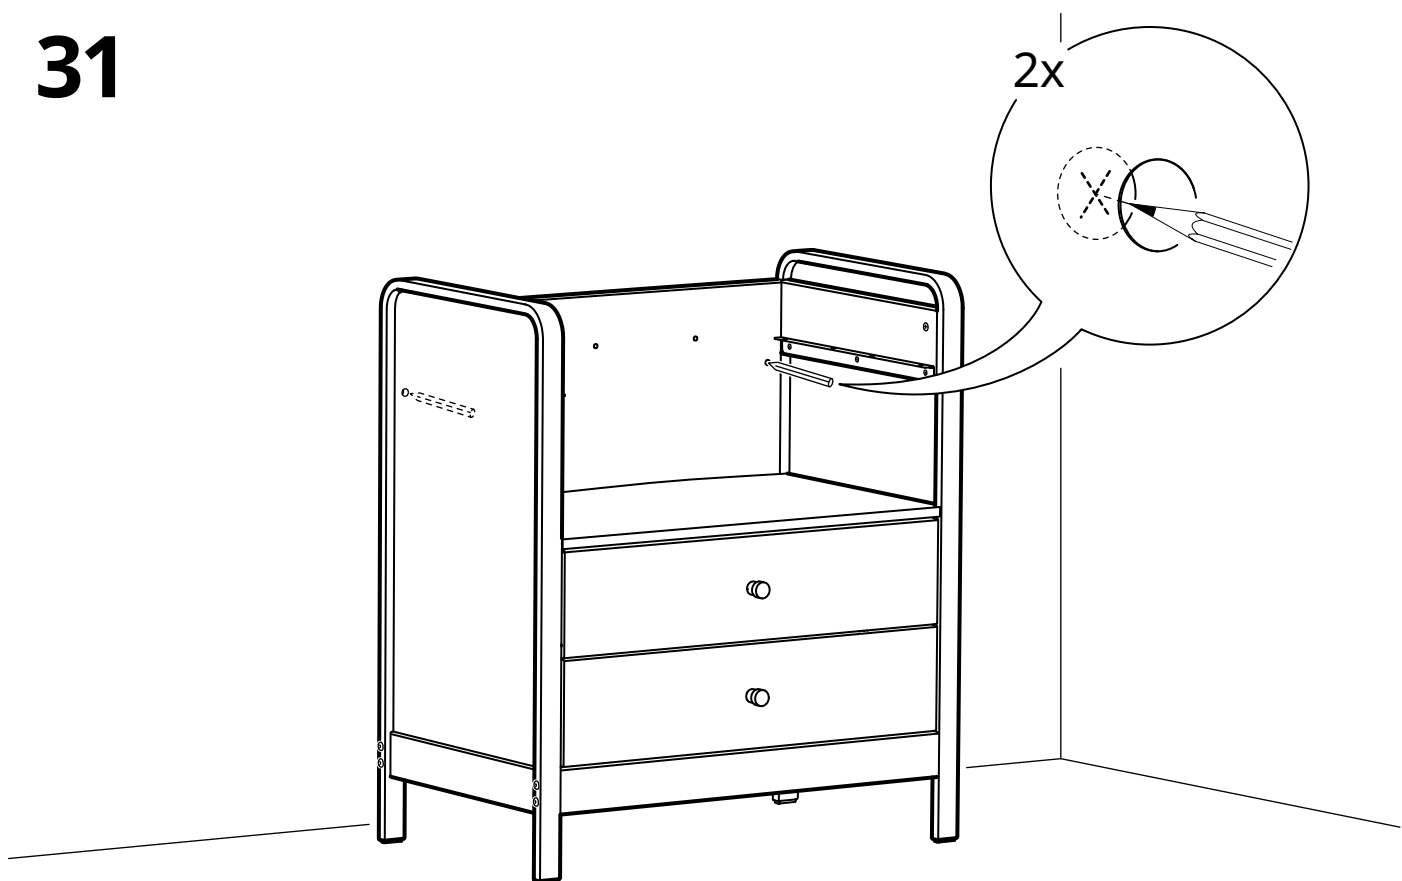 

32

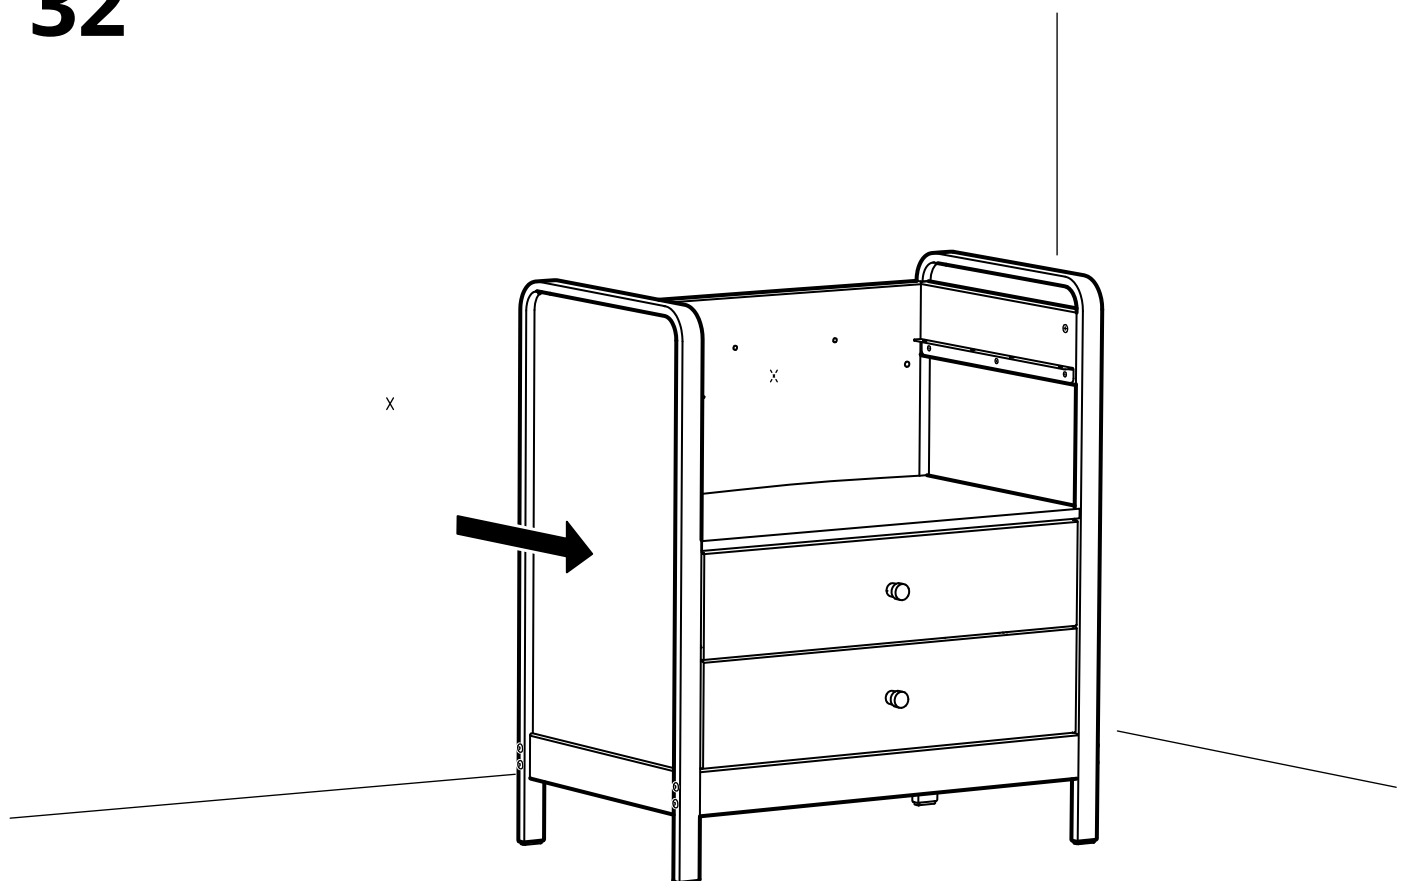 




www.IKEA.com/secure-it











 
www.IKEA.cn/secure-it

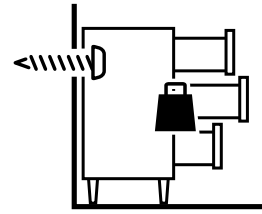


English

          
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

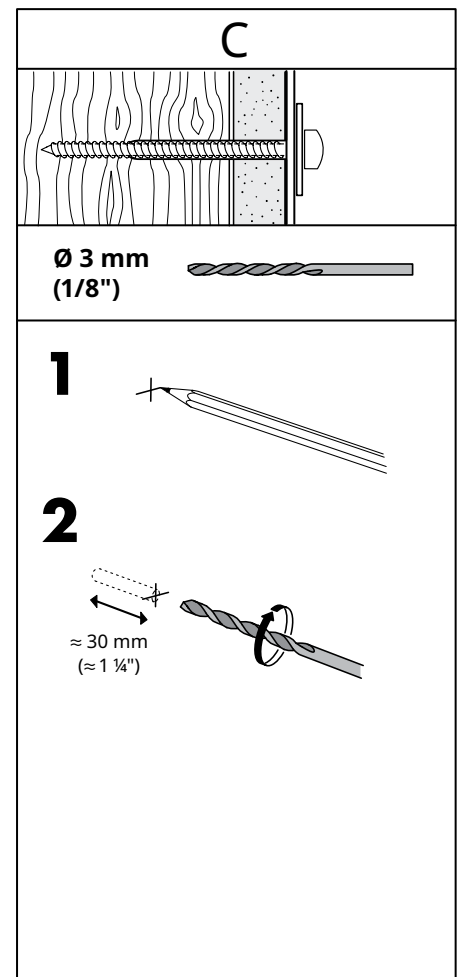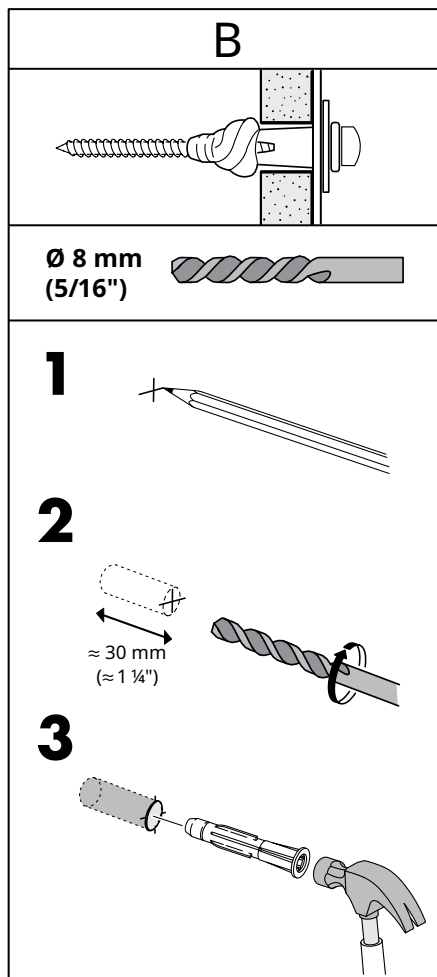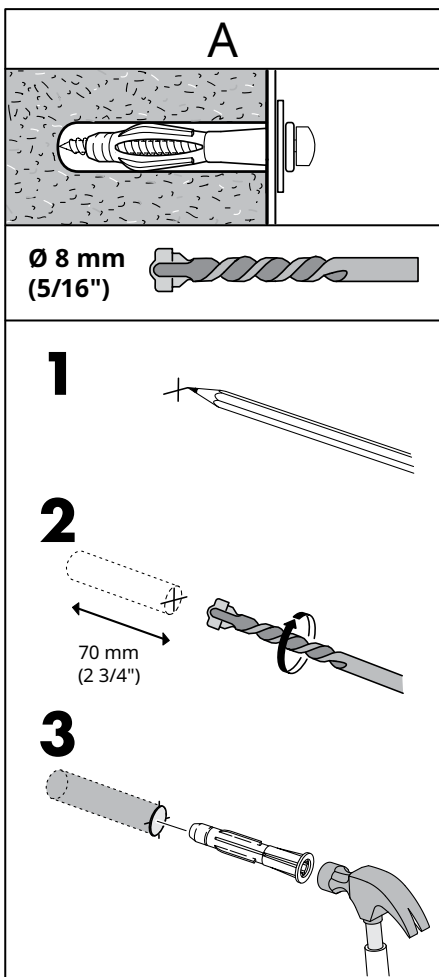


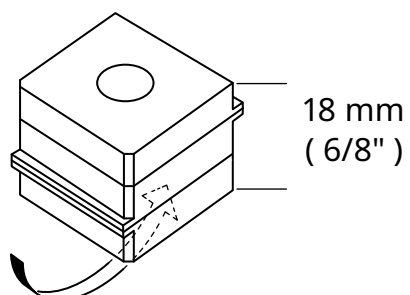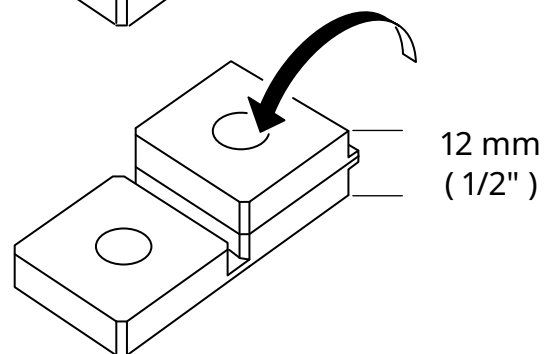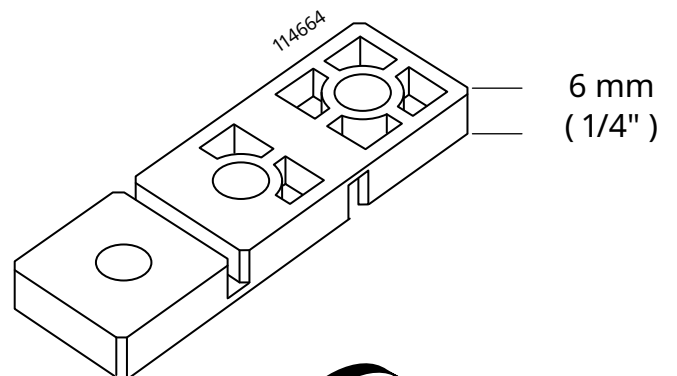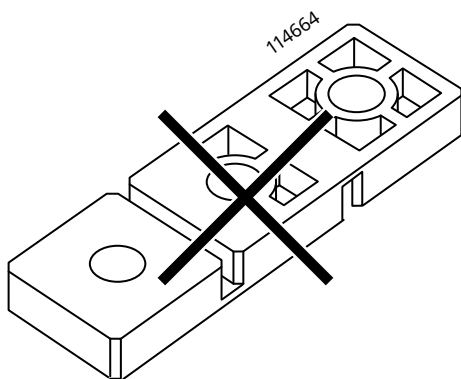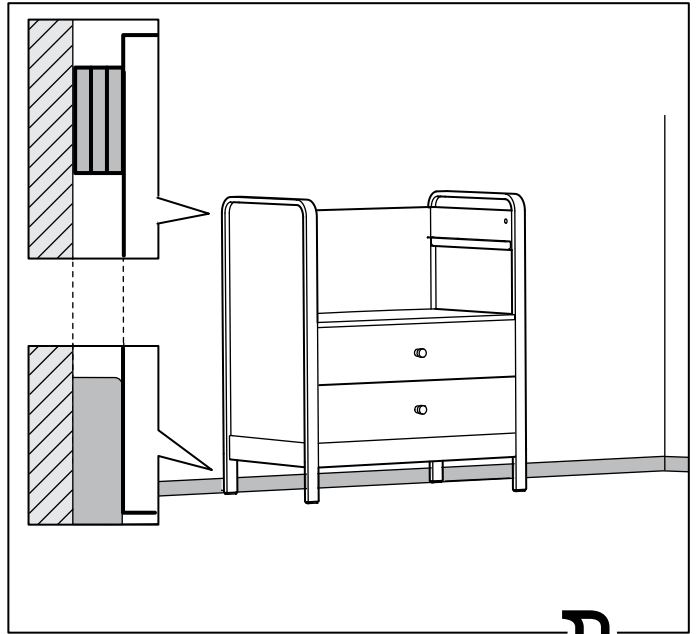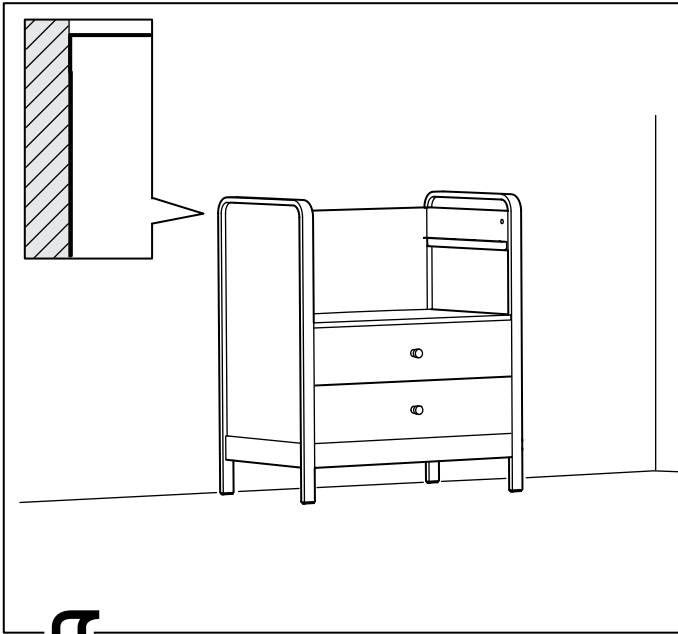

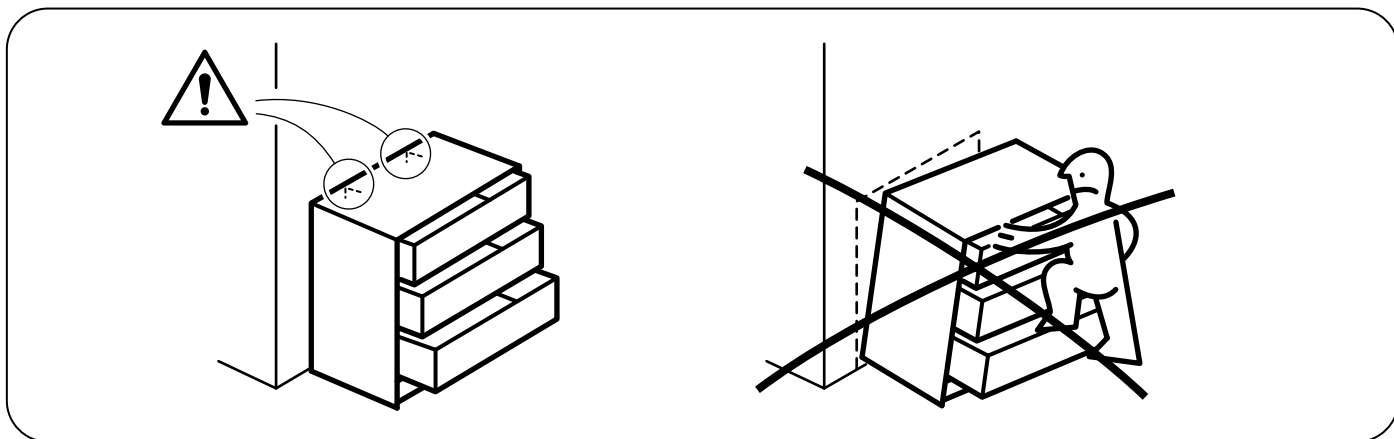


34

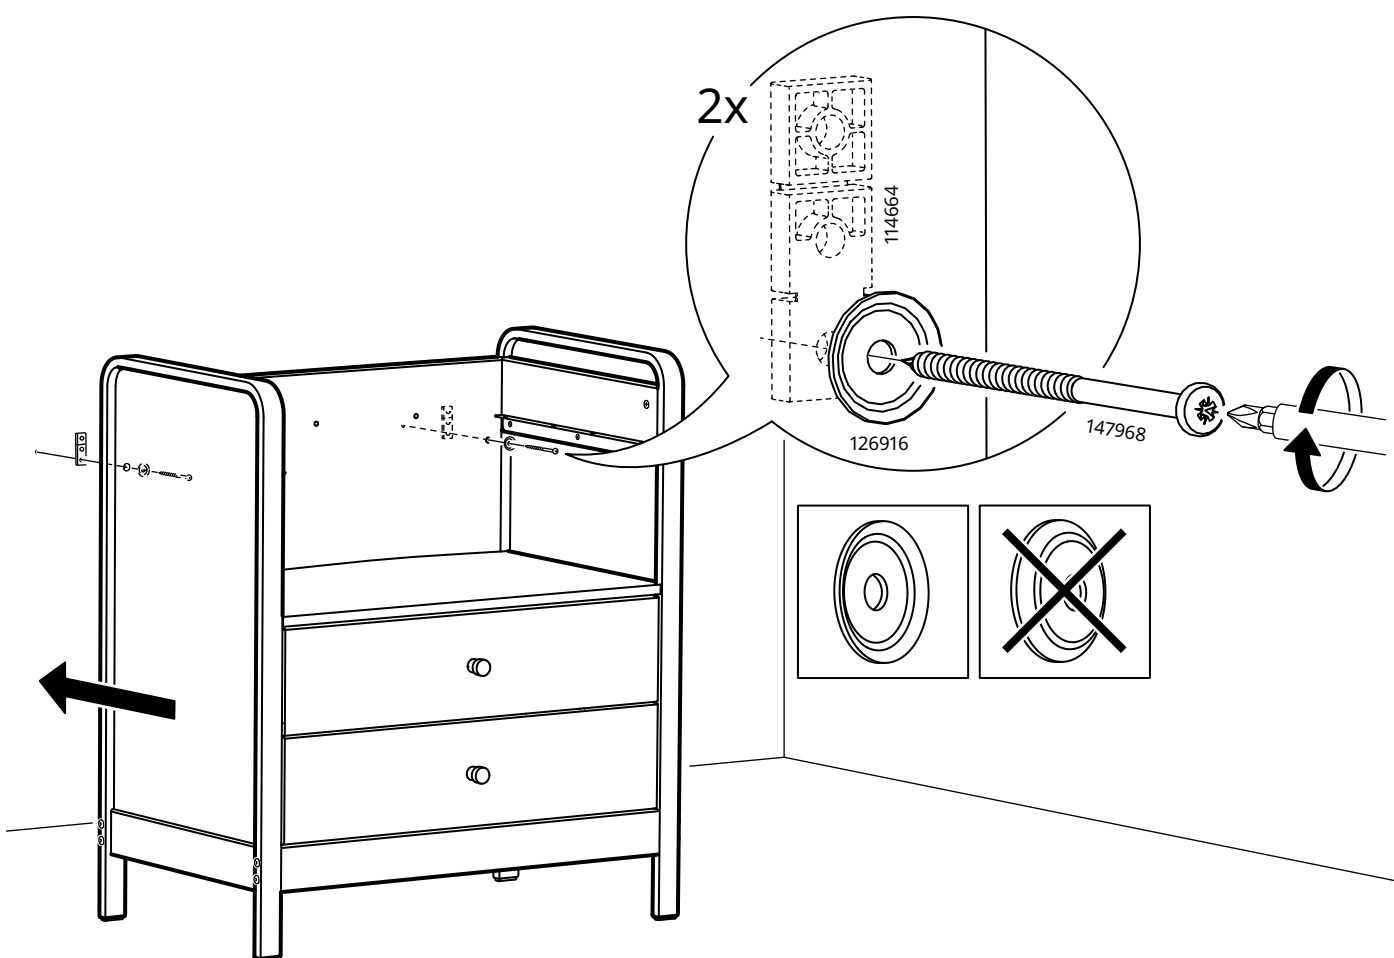 


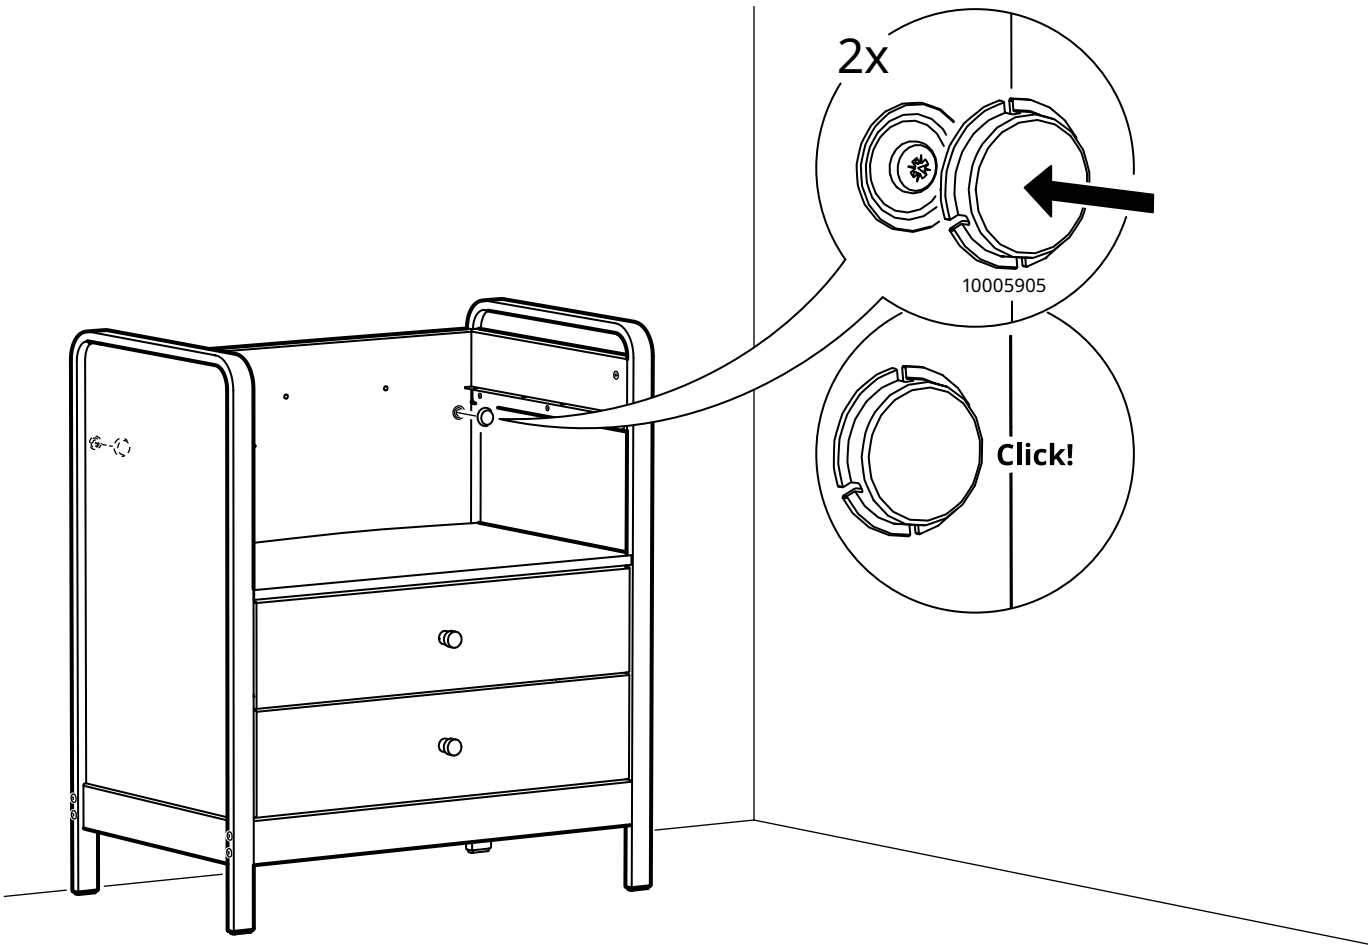 


36

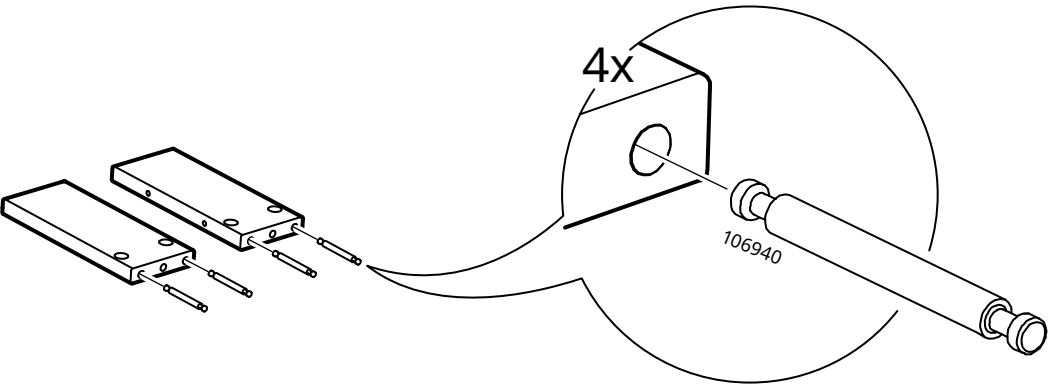 


37

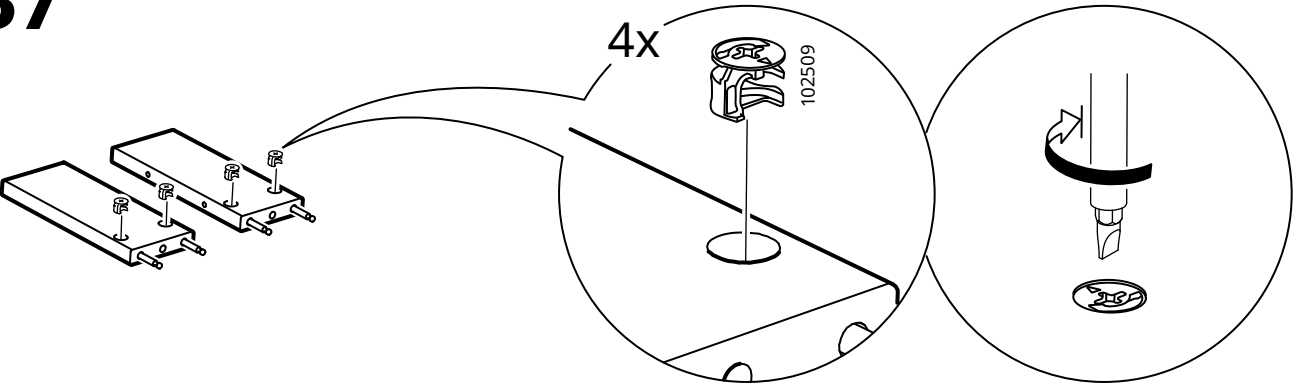 


38

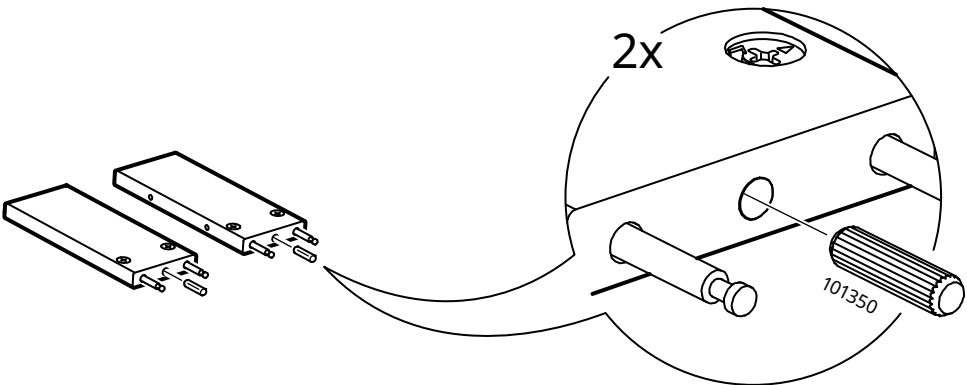 


39

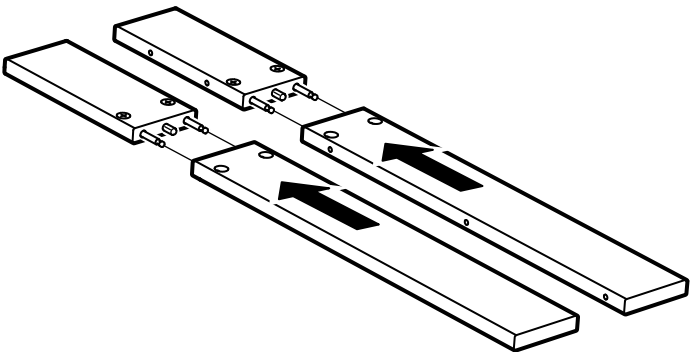 


40

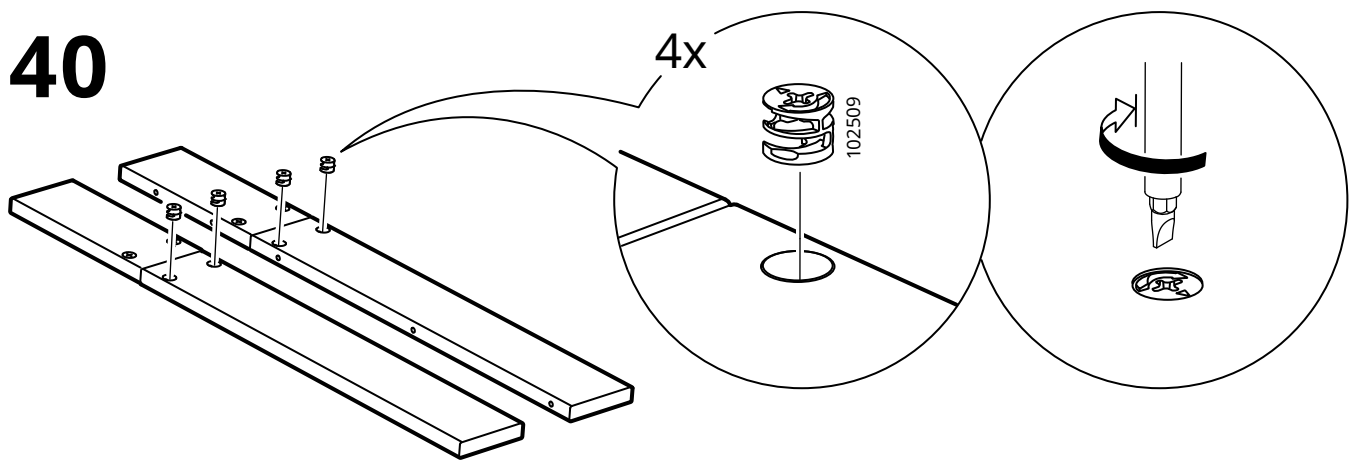 


41

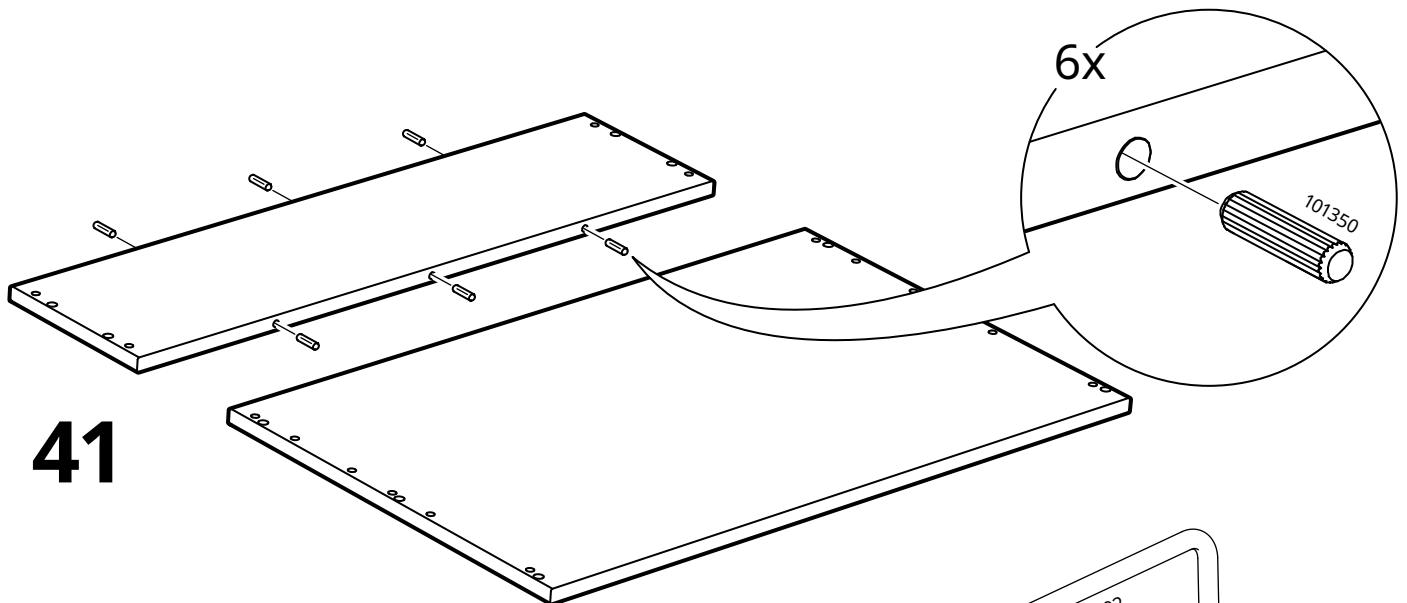 


42

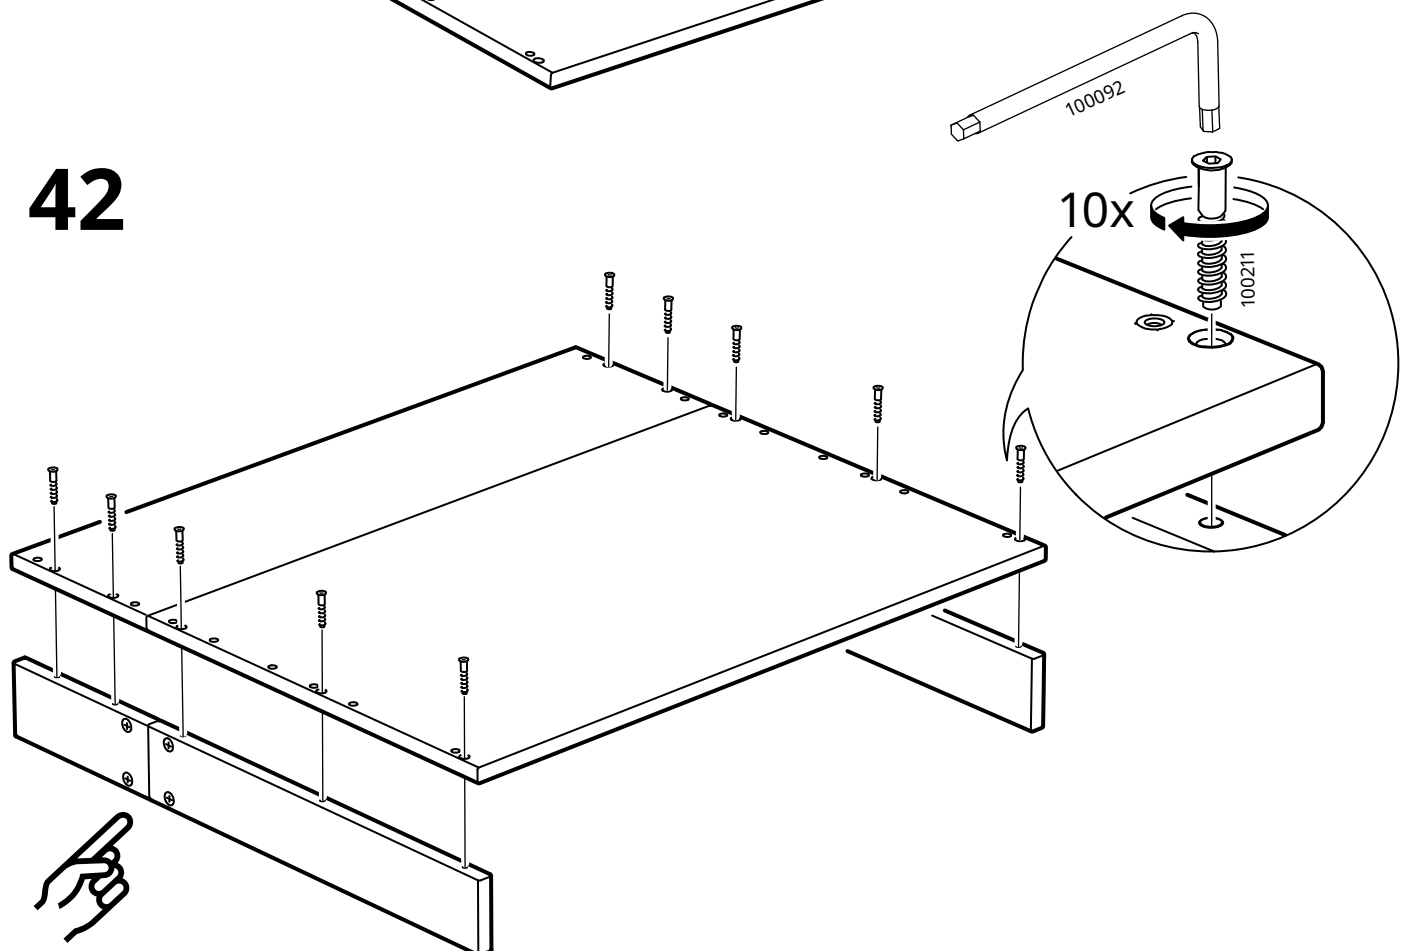 


43

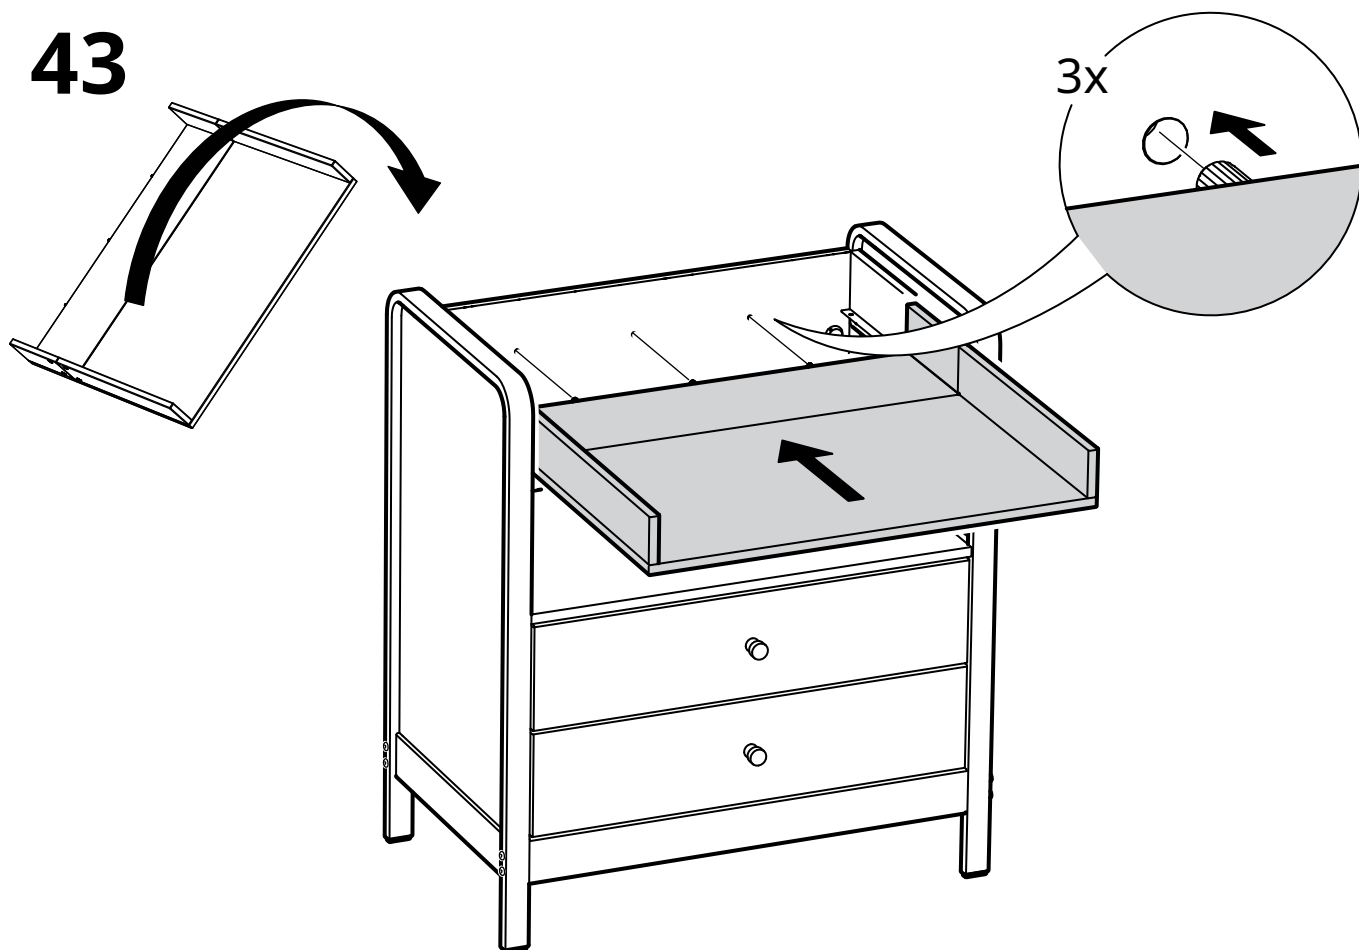 


44

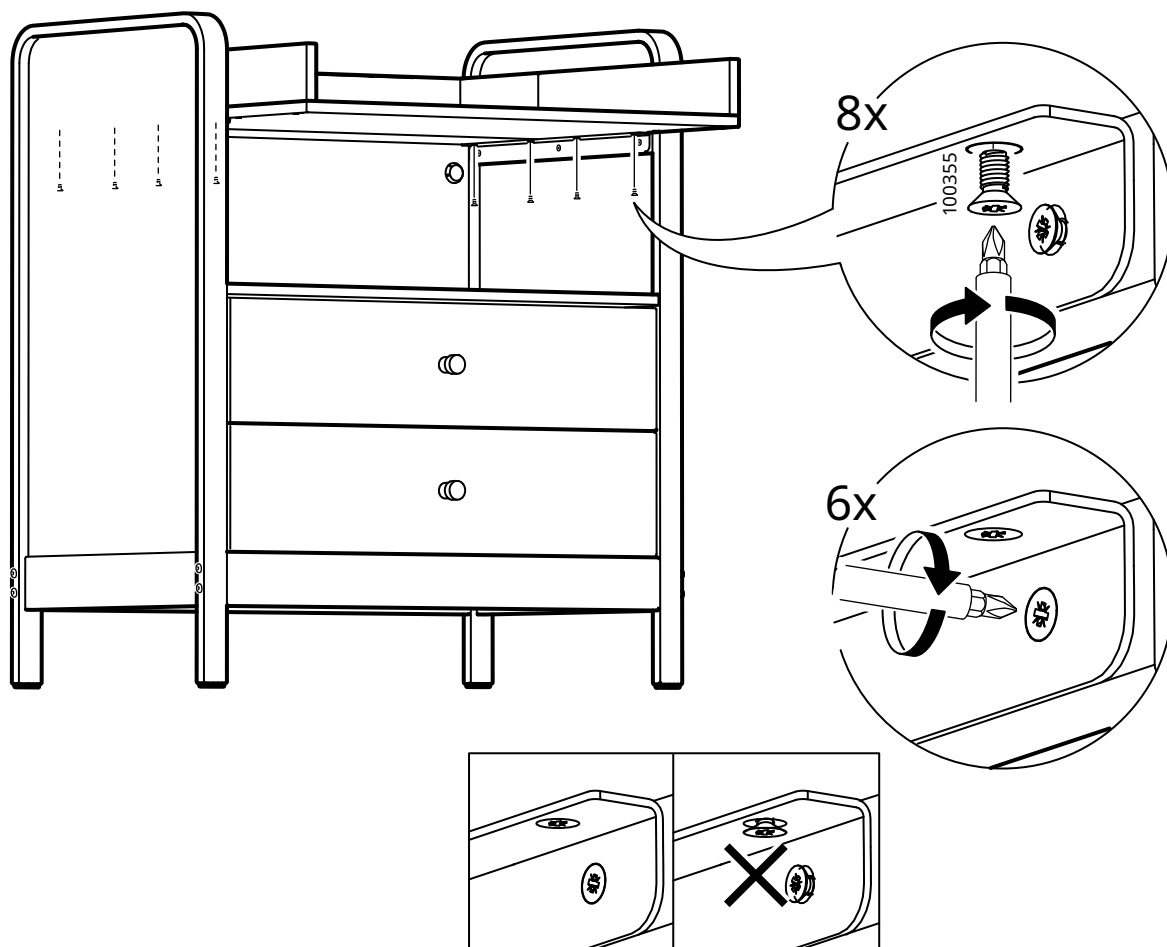 


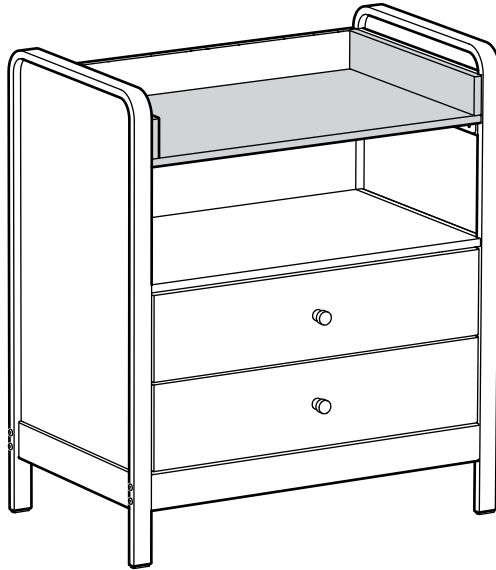 


1

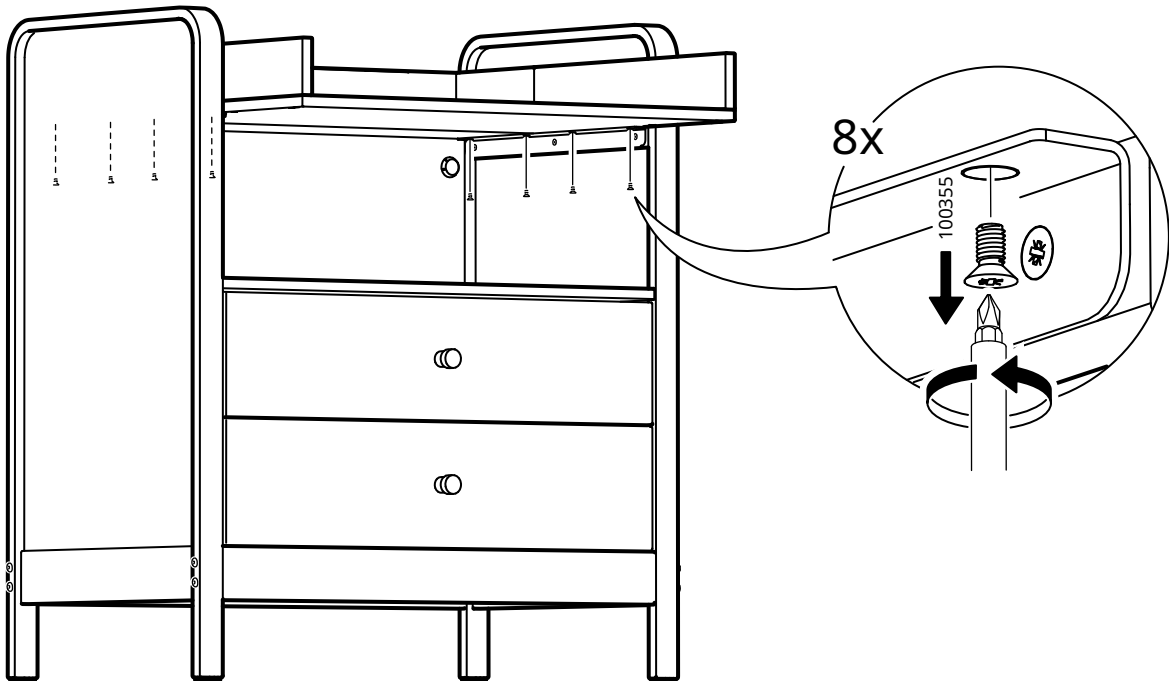 


2

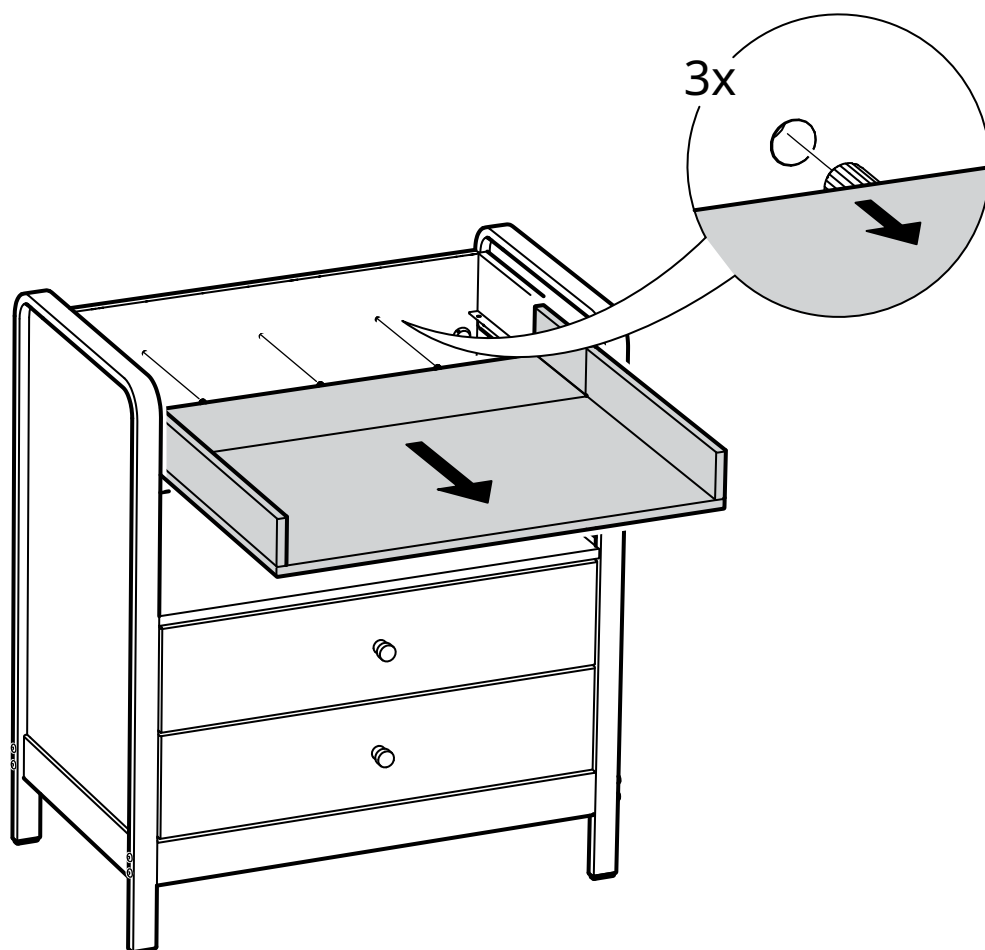 

3

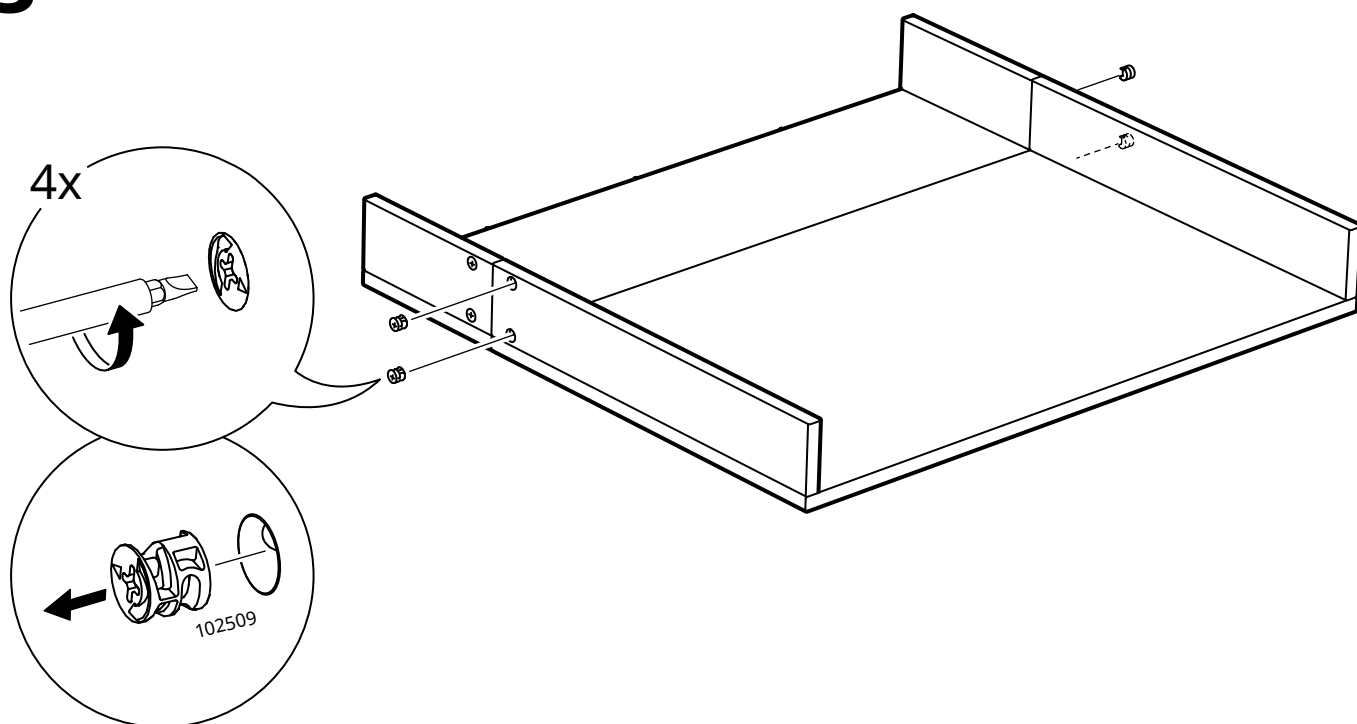 

4

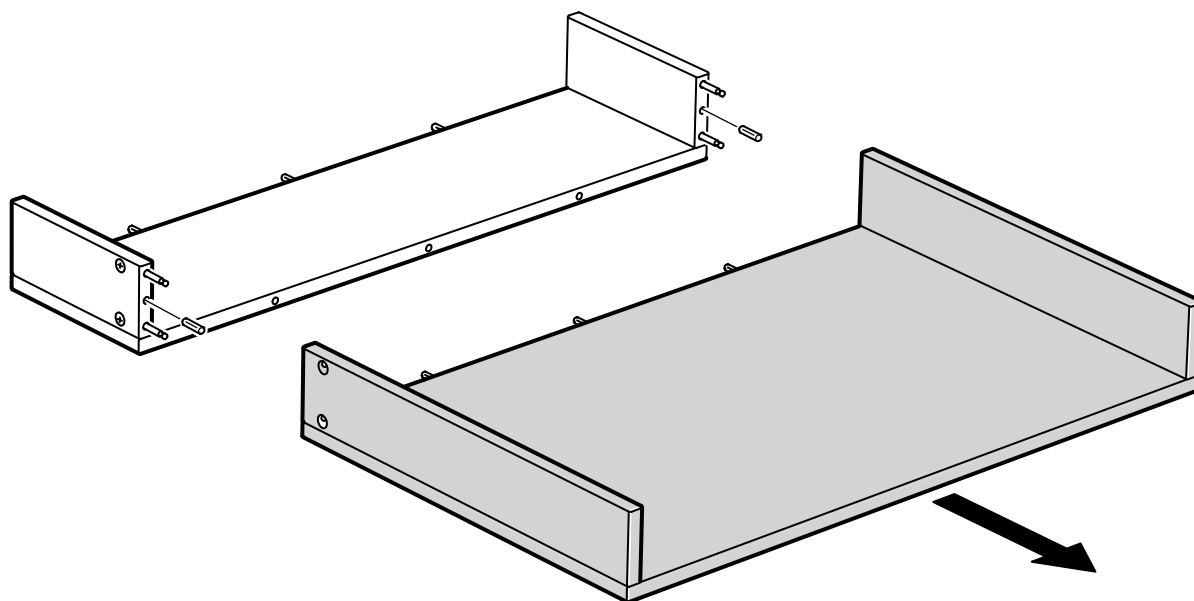 

5

