

 
H2SHelmet Intercom

User Manual

Thank you for choosing MOMAN product. Please read this manual carefully before use and follow all instructions mentioned herein.

- Caring For the MOMAN Product

- Please keep the product in a dry, clean, dust-free environment.
 - Keep corrosive chemicals, liquids, and heat sources away from the product to prevent mechanical damage.
 - Use only a soft and dry cloth for cleaning the product.
 - Malfunction may be caused by dropping or the impact of external force.
 - Do not attempt to disassemble the product. Doing so voids the warranty.
 - Please have the product checked or repaired by authorized technicians if any malfunctions happen.
 - Failure to follow all the instructions may result in mechanical damage.
 - Warranty does not apply to human errors.

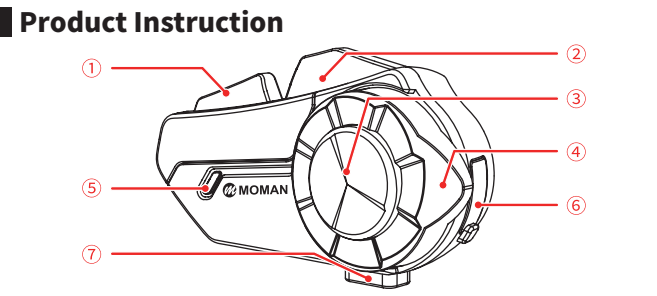

- ① Intercom Button

② On/Off/Music Sharing Button

③ FM Button

④ Knob

⑤ Indicator

⑥ Charging Port

⑦ Speaker/ Microphone Interface

Important Notice:

Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume. If there is a large difference in sound effects and volume after installing it on the helmet, please adjust the position of the speaker in the helmet.

Operation

1. Power On/Off

① **Power On:** Long press the on/ff button for 3 seconds. Wait for the blue indicator to flash slowly.

8. Music Settings

Pause/Play:

Short press the FM button briefly to pause/play music.

Next Song:

Turn the knob clockwise quickly.

Previous Song:


Turn the knob counterclockwise quickly.

Increase Volume:

Turn the knob counterclockwise and hold to increase volume (*Bass Effect: Max.Volume).

Decrease Volume:

Turn the knob clockwise and hold to decrease volume.

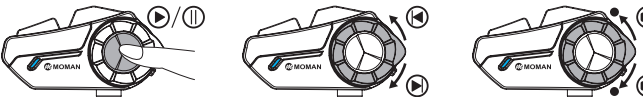

9. FM Radio

Double press the FM button to enter/exit FM mode.

Search Stations: Short press the FM button to start/stop searching for FM stations.

* Radio Station: 76-108MHz

* Will store the stations automatically

* Will delete the saved stations if re-scanning




- Next Station:

Turn the knob clockwise quickly to switch to the next station.
- Previous Station:

Turn the knob counterclockwise quickly to switch to the previous station.
- Increase Volume:

Turn the knob counterclockwise and hold to increase volume (*Bass Effect: Max.Volume).
- Decrease Volume:


Turn the knob clockwise and hold to decrease volume.

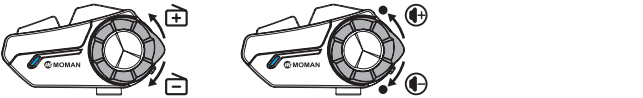

10. Audio Mixing Function

The dual-chip design of the H2S supports simultaneous intercom and Bluetooth operation, allowing you to listen to intercom + music/navigation/FM/voice assistant.

* During intercom calls, music/FM/navigation/voice assistant volume will automatically decrease and return to normal after the call ends.

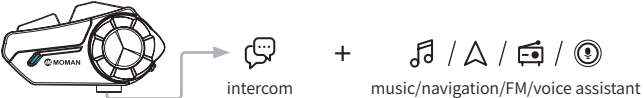

- ② **Power Off:** Long press the on/off button for 3 seconds. The red indicator stays on for 2 seconds then turns off.



* Will automatically turn off when not in use for 10 minutes.

2. Mobile Pairing

① For the first-time use, the blue indicator flashes and the H2S enters Bluetooth mode.

Voice Prompt: Bluetooth Mode On

② Enable Bluetooth on your phone and connect to "H2S".

The blue indicator stays on after the pairing is successful.

Voice Prompt: Bluetooth Connected



*The H2S automatically connects to previously connected and remembered devices.
*You can connect 2 phones simultaneously.
To connect the second phone, disconnect from the first and connect the H2S on the second phone, then re-enable Bluetooth on the first phone to reconnect.

3. Intercom Pairing

3.1 Pairing


① Short press the intercom button on ONE H2S to enter intercom mode (Red and blue lights flash quickly) and search for nearby H2S.

② Wait 2 seconds to enter pairing mode, and the red and blue lights will flash quickly.

③ Once paired, the blue lights on both H2S will stay on.

*Please only operate one H2S at a time; pairing will fail if both are operated simultaneously.

*If pairing fails, short press the intercom button to restart the pairing process.

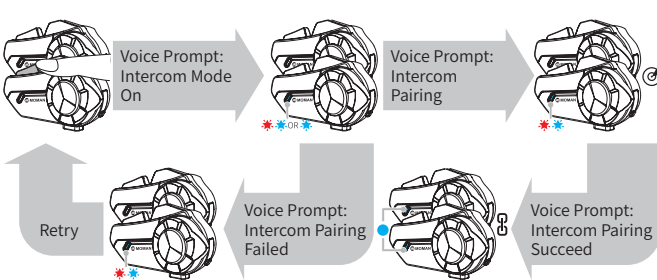

- Operating Instructions

Installation

Method 1: Using the Back Clip(Insert Style)

① Loosen the screws on the clip and separate the front and back parts.


② Open the helmet padding and insert the clip into the rear edge of the helmet (as shown), then close the clip and tighten the screws.

③ Slide the microphone headset into the clip slot and lock it securely.

④ Open the helmet padding at the ear position, clean the EPS surface, and stick the adhesive tape on both sides of the helmet.

⑤ Attach the speakers to the adhesive tape, with the shorter speaker cable placed near the microphone. Secure the speakers and tidy up the helmet padding and cables.

⑥ Plug the headset cable into the microphone port, organize the wires, and secure them inside the helmet.

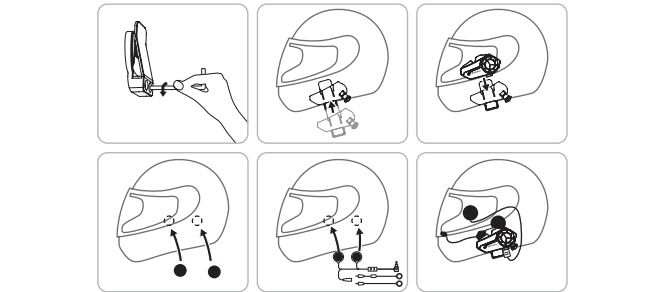

- Installation Method 2: Back Clip(Stick Style)

① Loosen the screws on the clip and separate the front and back parts.


② Apply the adhesive to the back of the clip and stick it to the side of the helmet.

③ Slide the microphone headset into the clip slot and lock it securely.

④ Open the helmet padding at the ear position, clean the EPS surface, and apply the adhesive tape to both sides of the helmet.

⑤ Attach the speakers to the adhesive tape, with the shorter speaker cable placed near the microphone. Secure the speakers and organize the helmet padding and wires.

⑥ Plug the headset cable into the microphone port, organize the wires, and secure them inside the helmet.

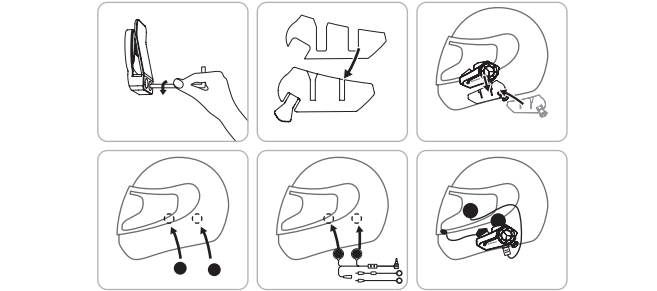

- 3.2 Exit Intercom Mode

Long press the intercom button for 3 seconds to exit intercom mode.



- 3.3 Unpairing

After exiting intercom mode, quickly double-press the intercom button on both paired H2S to unpair. (Red and blue lights flash quickly.)

* Unpairing will not be successful if only one H2S is unpaired.



- 3.4 Auto Reconnect

If the connection is lost due to distance or signal interference, it will enter the auto-reconnect mode.



If reconnection fails after 5 minutes, the device will deem it failed. Please short press the intercom button to retry searching for nearby devices.

- 3.5 Volume Adjustment

Increase Volume:
Quickly rotate the knob counterclockwise twice.

Decrease Volume:
Quickly rotate the knob clockwise twice.

4. Music Sharing Pairing

4.1 Pairing

① After intercom pairing is successful, press the on/off button to enter music sharing mode (red and blue lights flash slowly).

② Wait 2 seconds for pairing (red and blue lights flash quickly).

③ Once paired, blue lights stay on.

* If pairing fails, press the music sharing button to retry. (If no connection is established within 5 minutes, it is considered a failure.)

- Removal

① Remove the microphone cable.

② Press the inner clip bar in the center of the clip with one finger. Slide the microphone out of the clip.

③ For the removal of the speakers and clip, refer to the installation instructions.



- Instruction Warning

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits apply toa residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment to an outlet on a circuit different from that to which the receiver is connected

-Consult the dealer or an experienced radio/TV technician for help.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference. and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Specifications

Connection Distance with Mobile	10m
Wireless Version	5.1 & 5.3
Wireless Protocol	A2DP, AVRCP
Charging Port	Type-C
Battery	800mAh
Charging Time	1.5H
Charging Voltage	5V
Speaker Diameter	40mm
Frequency Range	2.4GHZ
Temperature Range	-20-50°C

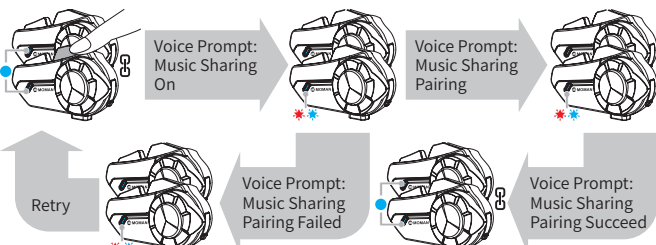

- 4.2 Exit Music Sharing Mode

Short press the power button to exit music sharing mode.



- 4.3 Auto Reconnect

If the connection is lost due to distance or signal interference, it will enter the auto-reconnect mode.



If reconnection fails after 5 minutes, the device will deem it failed and enter the intercom mode automatically. Please short press the intercom button to retry searching for nearby devices.

- 4.4 Volume Adjustment

For Music Sharing Transmitting Device

Increase Volume:
Turn the knob counterclockwise and hold.

Decrease Volume:
Turn the knobclockwise and hold.

For Music Sharing Receiver Device

Increase Volume:
Quickly turn the knobcounterclockwise twice.

Decrease Volume:
Quickly turn the knobclockwise twice.
5. Switch Between Intercom Mode and Music Sharing Mode

① In music sharing mode, short press the intercom button to switch to intercom mode.

② In intercom mode, short press the on/off button to switch to music sharing mode.
-
6. Voice Assistant

Connect the Bluetooth then long press the FM button for 2s to activate/deactivate the voice assistant.
-
7. Phone Settings

Disconnect the Bluetooth connection, long press the FM button and turn the knob counterclockwise simultaneously. Release after hearing "Auto Answer/Manual Answer" to switch between manual and auto answer modes.

The H2S is set to the Auto Answer mode by default.
-
- ① Auto Answer Mode

In auto answer mode, the call will be automatically answered after 10 seconds. Long press the FM button for 2 seconds to reject the call.
-
- ② Manual Answer Mode

In manual answer mode, short press the power button briefly to answer/end the call. Long press the FM button for 2 seconds to reject the call.
-
- ③ Last Number Redial

Double press the power button quickly to redial the last call.
-
- 2-Intercom-Kit


H2S Wireless Helmet Intercom x2	Changeable Hard Mic and Soft Mic x2	Double-Sided Tape x2
Back Clip(Stick Style) x2	Tape Kit (Speaker x4/Hard Mic x2/Soft Mic x2) x2	Type-C Charging Cable x2
Back Clip(Insert Style) x2	Interchangeable Pattern Shells Kit (Yellow/Blue) x2	Hexagon Key x2
		User Manua x1
- Moman (UK) Limited

Unit 25 Basepoint Business Centre, Aviation Park, West Christchurch, United Kingdom BH23 6NX

www.momanx.com

@MomanGlobal

https://moman.co/youtube

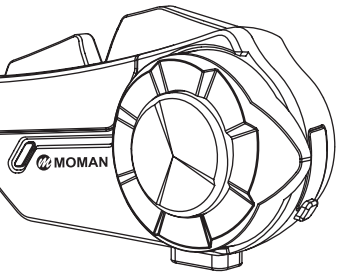[illegible]

-
- 音声案内：電源を
オンにした

インカム + 音楽/ナビ/FM/音声アシスタント

音声案内：インターコムモードオン

音声案内：インターコムベアリング中

音声案内：インターコムベアリング完了

再操作する

音声案内：インターコムベアリングに失敗した

音声案内：インターコムベアリング完了した


音量を上げる：
ノブを反時計回りにすばやく2回回します。

音量を下げる：
ノブを時計回りにすばやく2回回します。

- ① インターホンのベアリングが成功した後、電源ボタンを短く押して音楽共有モードに入ります。赤と青のインジケータライトがゆっくり点滅します。
- ② 2秒後、音楽共有ベアリングモードに入り、赤と青のインジケータライトが速く点滅します。
- ③ ベアリング成功後、両方の青いライトが点灯します。

*ベアリングに失敗した場合、音楽共有ボタンを短く押して再度ベアリングを開始します。(5分以内に連続できないとベアリングが失敗です。)




スマホとの接続距離	10m
ワイヤレスバージョン	5.1 & 5.3
ワイヤレスプロトコル	A2DP, AVRCP
充電ポート	Type-C
バッテリー容量	800mAh
充電時間	1.5H
充電電圧	5V
スピーカー直径	40mm
周波数範囲	2.4GHz
温度範囲	-20~50°C

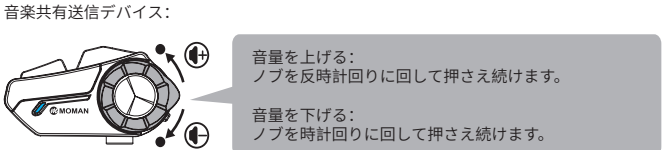

音量を上げる：
ノブを反時計回りにすばやく 2 回回します。

音量を下げる：
ノブを時計回りにすばやく 2 回回します。

インカム x1 交換可能なスピーカー x1 両面粘着テープ x1

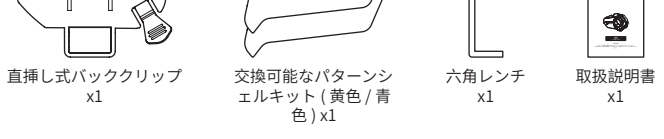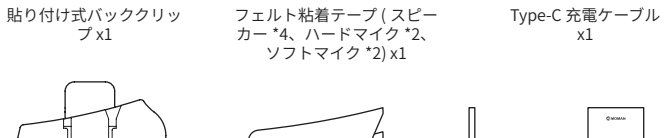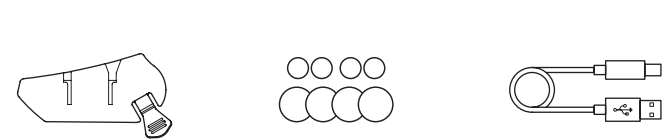

短押し

長押し 2 秒

インカム x2 交換可能なスピーカー x2 両面粘着テープ x2

