


PACKAGE LIST

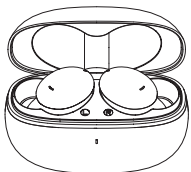

 
Wireless Earbud * 2
Magnetic Charging Case * 1



User Manual * 1



Ear Tips * 6 (S/M/L)



Type-C Charging Cable * 1



IMPORTANT NOTES

- 1 Register your product on www.tranya.com to get an EXTRA three-month warranty for free.
- 2 Before using the T20 wireless earbuds, please charge both the case and earbuds.
- 3 We provide six pairs of rubber eartips (including the set installed on the earbuds), please choose the best fit for you.



- 4 If both earbuds don't sync together, please reset the earbuds.

- 5 If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

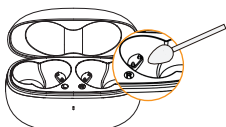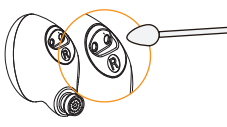

TOUCH CONTROL

Play / Pause



Press and hold for 1 second (L/R)

Next/Previous track



Tap three times (R/L)

Volume up/down



Tap twice (R/L)

Activate Siri/other voice control software



Tap 4 times(L/R)

Reject/End a call



Press and hold for 1 second (R/L)

Answer a call



Tap once (L/R)

Game Mode

(Automatically return to normal mode after power off)



Tap 5 times(R)

Normal Mode/
Bass Boosted Mode




Press 5 times(L)


Switch Sound Effects

Two different sound effects on the T20: Normal Mode and Bass Boosted Mode. The Normal Mode is for those who prefer a sound with bright vocal and crisp treble. The Bass Boosted Mode is for those who prefer a warm, heavy bass.

POWER ON

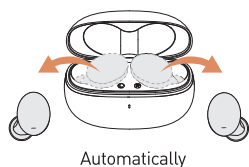


Automatically

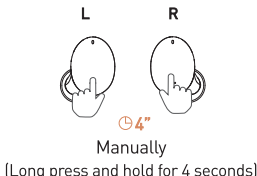


Manually
(Long press and hold for 4 seconds)

POWER OFF

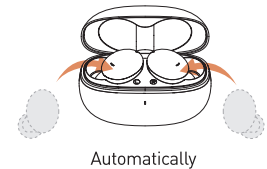


Automatically

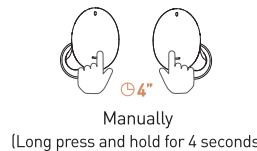

Manually
(Long press and hold for 4 seconds)

Note: When the charging case is at low battery or out of power, the earbuds will not automatically power on/off, please turn them on/off manually.

WEARING

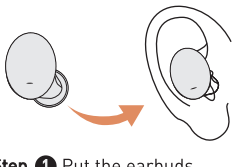


Step 1 Put the earbuds into your ears.




Step 2 Rotate the earbuds to auricle side to fit snugly.

 CONNECT THE EARBUDS



 
Step 1 Power on the earbuds and turn on the Bluetooth in your phone.





Step 2 Select "Tranya T20" and confirm.

CHARGING

1 Charging the Earbuds

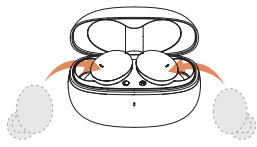

2 Charging the Case

  


The light will be off when it is fully charged.


HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow the below steps to reset the earbuds:

- 1 Pick up both earbuds and turn them off;
- 2 Press and hold BOTH earbuds up to 6-8s until the red lights blink;

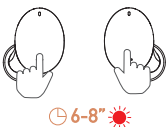

- 3 The earbuds will sync together and enter the pairing mode automatically.

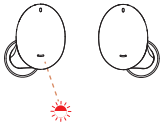

FAQ

 
 
Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electronmagnetic interference and result in the siganal interruption.

Q: My earbuds don't charge, what can I do?

A: Please try to follow the below steps:

- 1. Clean the charging slot on charging case.
- 2. Clean the charging connector on earbuds.



FAQ

Q: Why my earbuds don't power on/off automatically?

A: The earbuds would not power off automatically when the case is at low battery or out of power. Please recharge the case. And you can long press for four seconds to power on and long press for four seconds to power off the earbuds.

Q: Will the Bluetooth mouse cause the signal interference?

A: Perhaps. When your Bluetooth mouse and earbuds are connected to the same device, it might happen.