 


JYX

USER MANUAL

MODEL:JYX-82BT

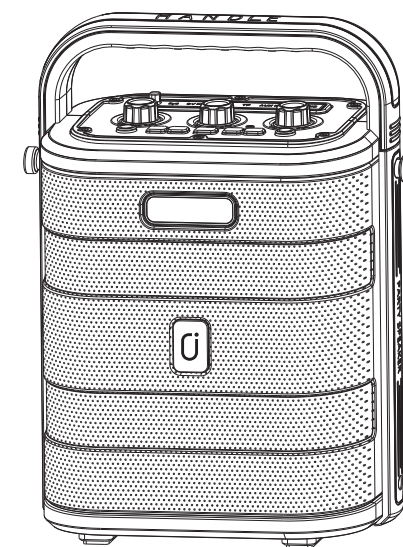

185.00 mm

125.00 mm


2020-10-21



深圳市佳誉祥音响电子有限公司

绘 图：		品 名：	JYX-82BT说明书
电子/结构确认：		版 本：	A/0
业务确认：		规格材质：	
核 准：		物料编号：	440-JYX820-BT1

 GRAPHICAL FUNCTION KEYS

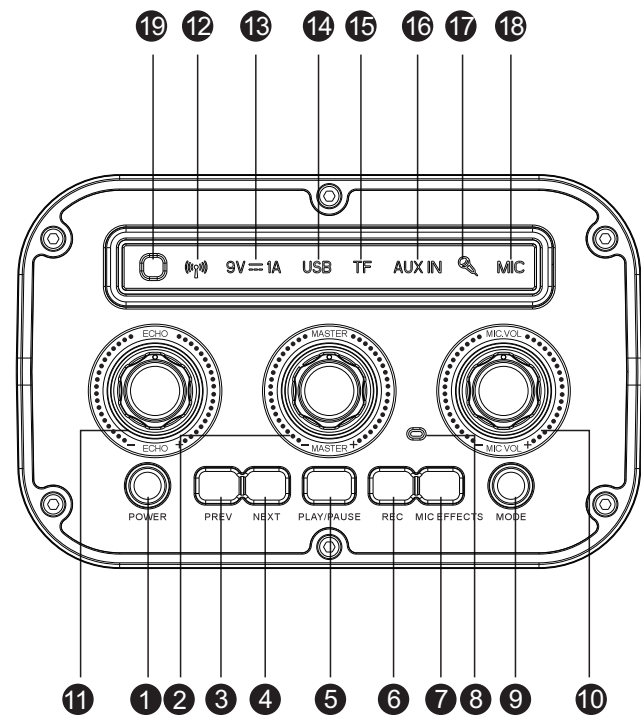

TWS Function

 
To use this feature,two JYX-82BT systems are required.

- 1.Turn on the two JYX-82BT and turn them both into Bluetooth mode.Two machines will flash "BLUE" on screen.
 - 2.Long press the "PLAY/PAUSE" button of either of the two machines(Only need to press one button),the other machine will make a prompt tone and stop flashing. TWS function will be activated by then.
 - 3.Connect your device with the speaker and play music.
 - 4.Long press "PLAY/PAUSE" button again to inactivate TWS function.
- If you're still wondering about these steps, please contact customer service team for a video tutorial:service-us@szjyx.com.cn

INSTRUCTION OF FUNCTION KEYS

- 1.**Power:** Press to turn speaker on/off,long press for 8 seconds to force reset.
- 2.**Master:** Adjust master volume
- 3.**Previous:** Short press to switch to the last program; long press to fast backward.
- 4.**Next:** Short press to switch to the next program; long press to fast forward.
- 5.**Play/Pause:** Short press to play/pause; in radio mode,long press for automatic radio station search; In bluetooth mode,long press for True Wireless Stereo(TWS,only valid for the same model)
- 6.**REC:** Long press to record audio,during this process, short press to stop recording.When there is a recording file in the storage device,short press is to play the recording file.(The recording function is only available when a storage device is plugged in)
- 7.**MIC Effects:** Special Effects of Microphone
- 8.**Recording hole**
- 9.**Mode:** Short press to switch between bluetooth,flash card,TF card and FM radio.In the state that bluetooth has already connected,long press to disconnect.
- 10.**MIC VOL:** Adjust microphone volume
- 11.**REVERB:**Adjust Sound reverberation
- 12.**Radio antenna**
- 13.**9V Charging port**
- 14.**USB port**
- 15.**TF card jack**
- 16.**AUX IN**
- 17.**3.55mm Microphone jack**
- 18.**6.35mm Microphone jack**
19. **Dust-proof cover**


GRAPHICAL REMOTE

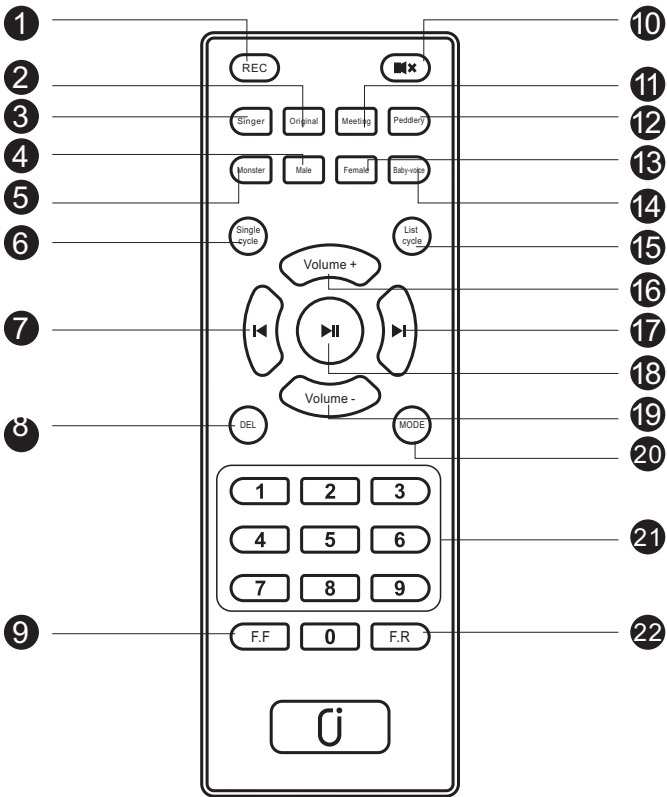

INSTRUCTION OF REMOTE FUNCTIONS

- 1.REC:Long press to record audio(Function only available when USB/TF card is connected)
- 2.Original:Original voice mode(Only workable for microphones)
- 3.Singer:Singer voice mode(Only workable for microphones)
- 4.Male:Male voice mode(only workable for microphones)
- 5.Monster:Monster voice mode(only workable for microphones)
- 6.Single Cycle
- 7.Previous
- 8.DEL>Delete original voice(Only workable for Stereophonic source)
- 9.F.F:Press to fast forward
- 10.Silent
- 11.Meeting:Meeting mode(only workable for microphones)
- 12.Peddery:Peddery mode(only workable for microphones)
- 13.Female:Female voice mode(only workable for microphones)
- 14.Baby-voice:baby voice mode(only workable for microphones)
- 15.List Cycle
- 16.Volume+
- 17.Next
- 18.Play/Pause
- 19.Volume-
- 20.MODE:Press to switch modes
- 21.Number Key:Press to switch to the program with the corresponding serial number
- 22.F.R:Press to fast rewind

 INSTRUCTION OF UHF WIRELESS MICROPHONE

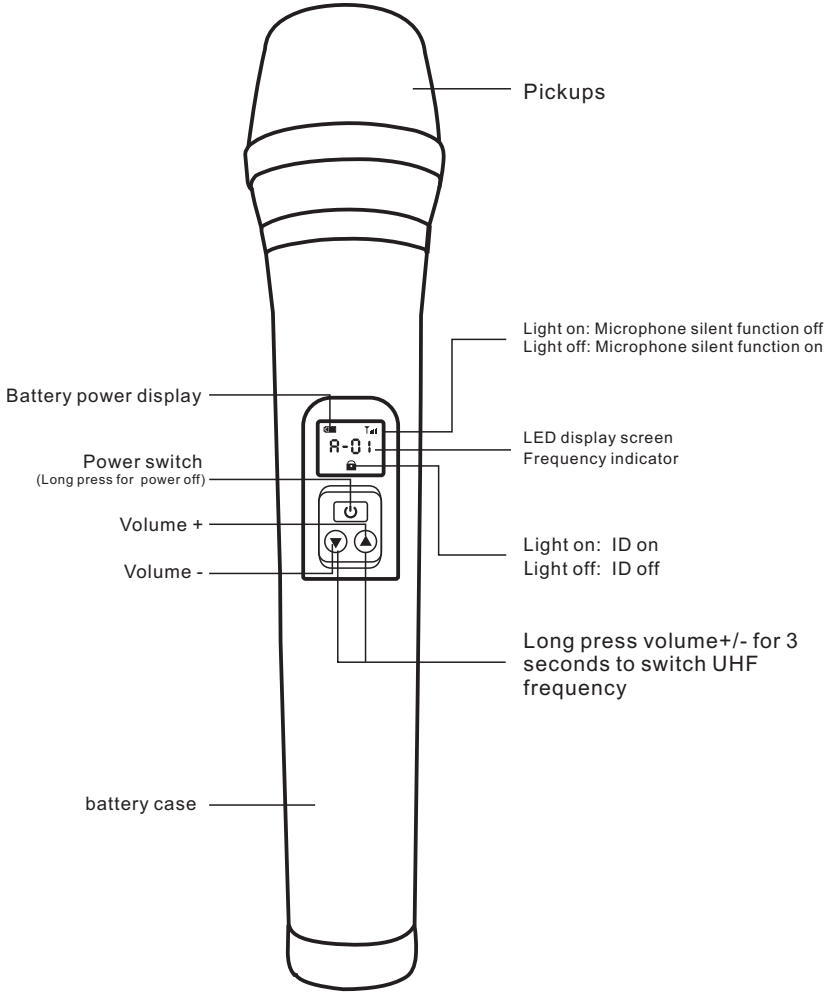


INSTRUCTION OF UHF WIRELESS MICROPHONE


1. Power switch: Long press for power on/off
2. Up/Down key: Adjust volume and frequency

(1). How to adjust volume ?

 Press briefly is for volume-
Press briefly is for volume+

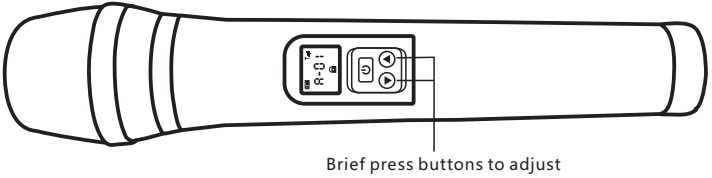

Minimum volume is level 1

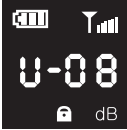 


Maximum volume is level 8
Factory preset volume is level 7

(2). How to adjust the frequency ?

1. Keep an applicable distance within 2 meters between the UHF microphone and speaker




 Keep a distance within 2 meters between the UHF microphone and speaker

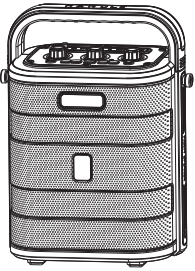


2. Long time press Up/Down for 3 seconds, then short press Up/Down to get a new frequency for UHF microphone

 
INSTRUCTION OF UHF WIRELESS MICROPHONE

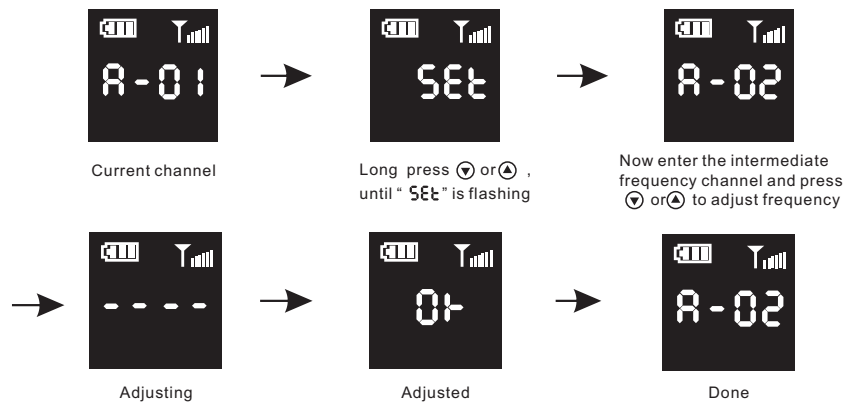

 3. Long press (Power) + (Up) over 3 seconds to lock ID; long press for 3 seconds again is to unlock the ID.

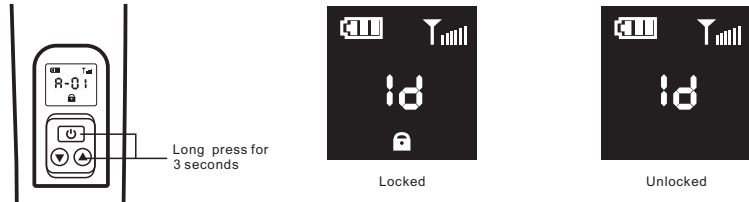

 
(3)、What if the speaker is paired with another UHF wireless microphone or your microphone is not workable

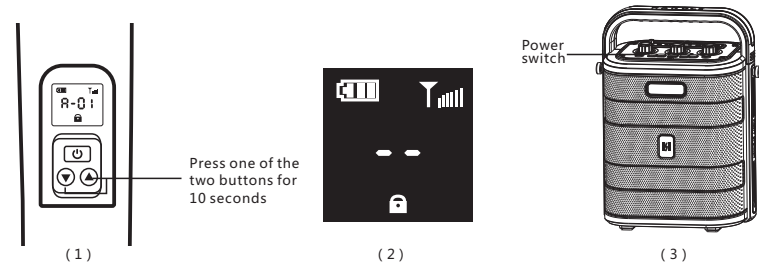

1.Press an d hold one of the two buttons(Do not release)
2.Enter the forced pairing mode after the 10 seconds pressing(Still keep pressing the key).When two lines are flashing,turn off the speaker and re-start.Release the button, then the two will paired automatically.

INSTRUCTION OF UHF WIRELESS MICROPHONE

 (4)、ON/OFF Silent Mode

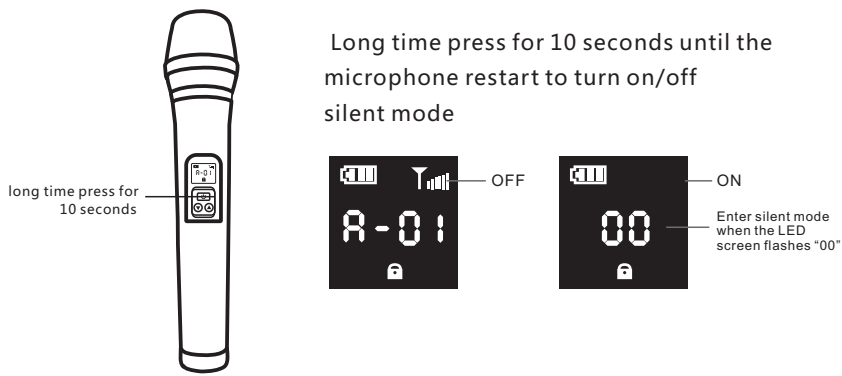

FAQS

1.Q: NO sound out of the speaker at a state that the indicator light is on?
A1: Check the audio source(flash cards or TF cards)and the format of audio.
A2: Check if the volume is the lowest and turn up the volume appropriately.

2.Q: UHF microphone do not work?
A1: Turn up the volume of microphone appropriately.
A2: Check if the batteries have been installed.

3.Q:Unable to turn on?
A:Long time press the power switch for 8 seconds to force the device to power on