

Countertop Dishwasher User manual

Any questions, please give us a chance to make it right and do better!

Contact us:  Email: support@iagreeamall.com

LIST

Model No.: TDQR05

How to use



Product Introduction	01
Control Panel	02
Installation	03
Tableware Loading	04
Operation	05
Function	07

Maintain and repair

Maintain & Clean	08
Fault & problem	09
Safety & Warning	13
Specification	14
RoHs Requirement	15

Product Introduction


Machine

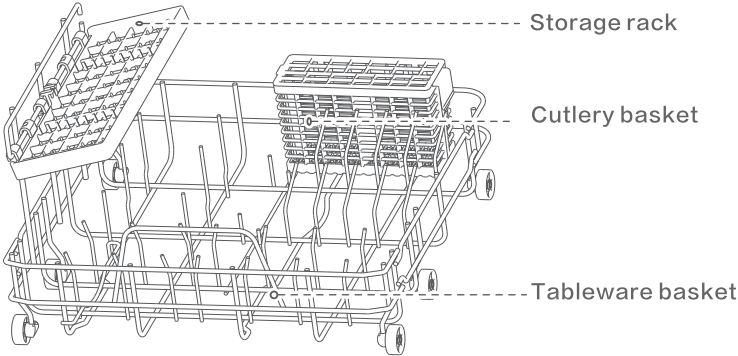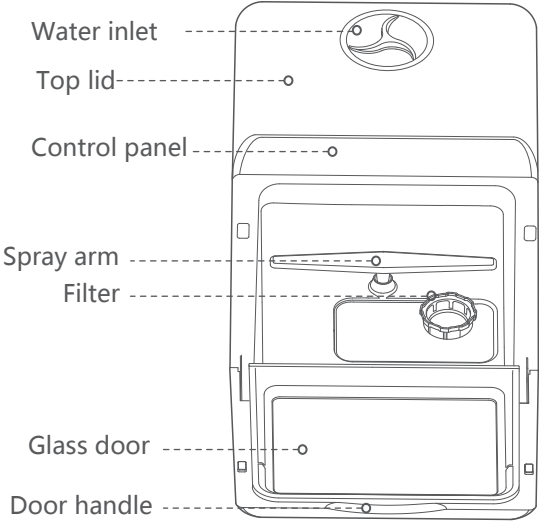

Parts list



Control Panel

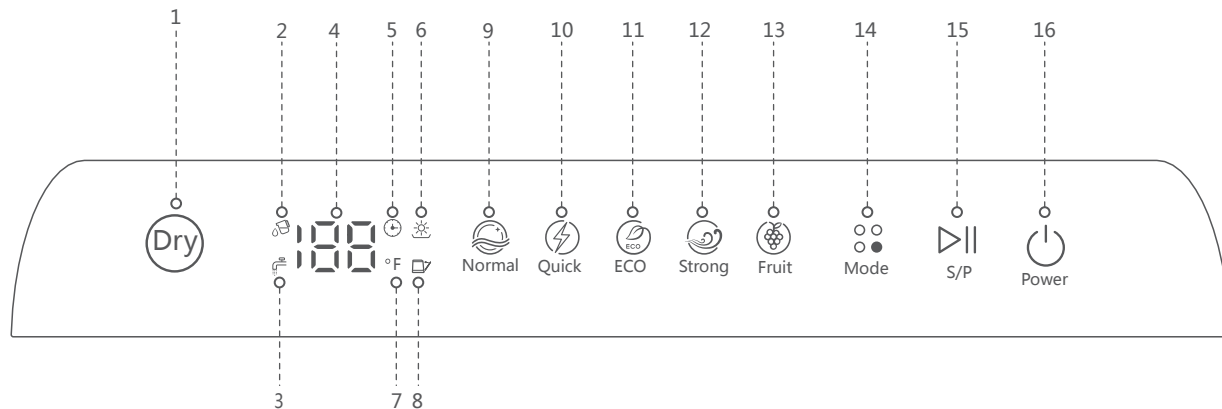

1.Dry
2.Tank model
3.Tap model
4.Display screen

5.Time display
6.Dry indicator
7.Temperature
8.Door open

9.Normal
10.Quick
11.ECO
12.Strong

13.Fruit
14.Program option
15.Start/Pause
16.Power on/off

Installation

1. Inlet hose installation


① connect machine

Insert inlet hose elbow into the water inlet behind machine and tighten the screw.


② connect tap

A、B、C three options for tap connection, but B and C options need make a hole on or behind cabinet in order the hose can go through cabinet.

Note: the size of inlet hose elbow is 1/2' with inner thread, the tap size must be 1/2' with outer thread.

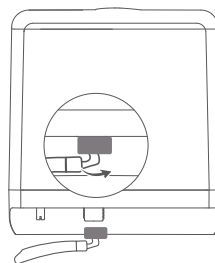

connect machine

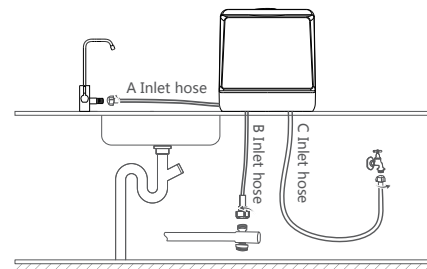

connect tap


2. Drain hose installation

① Connect machine


Insert drain hose elbow to the water outlet behind machine and tighten the collar.

② Connect sewer

A、B、C three options for sewer connection, B and C options need make a hole on or under cabinet in order the hose can go through cabinet.

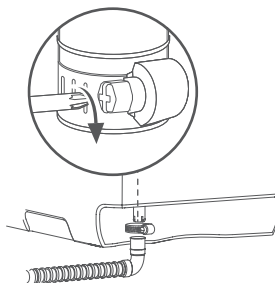


connect machine

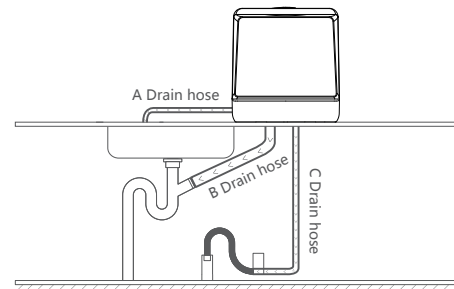

connect sewer

Tableware Loading

- ① Please get rid of large food residue on tableware , avoiding to block water hose.

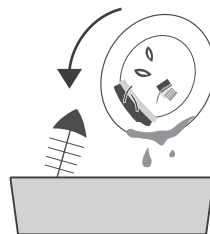

- ② Please make reference to right pictures for tableware display.





Note:

In order to fully clean tableware, please tilt tableware internally or put stained face down.

Tableware	Quantity
190mm Dessert plate	3
130mm Dessert bowl	1
70mm Mug	1
60mm Glass	2
Fork	2
Knife	2
Soup spoon	2
Dessert spoon	2
Tea spoon	2
230mm Soup plate	1
140mm Saucer	1
78mm Cup	1
213mm Melamine bowl	1
Serving Fork	1
195mm Melamine dessert plate	1


Cleaning Program:ECO

Under ECO washing program, add 16g detergent, then start washing. When 18 minutes left before washing finish, pause washing, open the door and add 2ml rinse aid, then close the door to continue the washing till the washing finishes

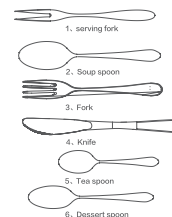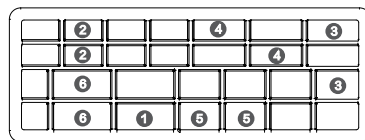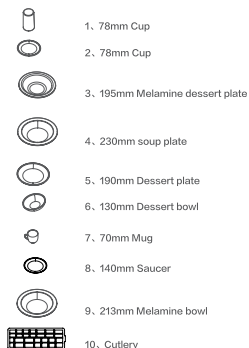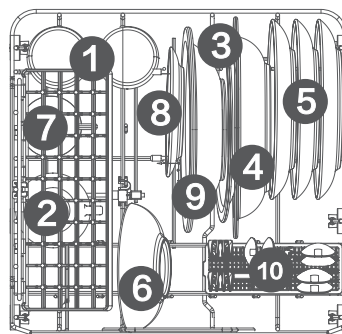



Operation

① Power on

Plug in, touch "  ", turn on the machine.

 Note :

During washing program running, touch "  " for 3 seconds to force the machine to turn off.

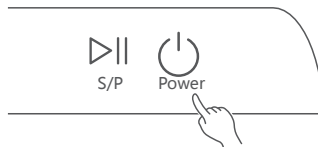


② Add detergent


Open the door, add moderate detergent powder, or 1pc detergent block into the machine, close the door.

Note :

No detergent when fruit washing;
The dosage: 8-10g each washing circle.

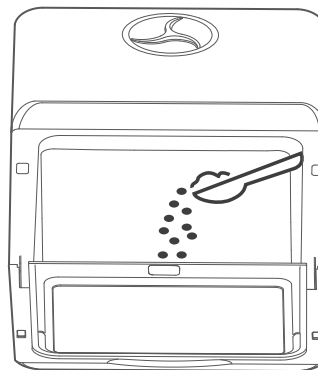

③ Program selection

Touch "  ", each of program indicator will light one by one , select the program you want.



Operation

4 Run program

Touch "▷||"_{S/P} , run selected program , the machine will check water supply automatically.



Note :


- ① Check tap or tank model automatically after running program, if the indicators "☞" "☞" become red , you need open tap or fill tank with water ;
- ② After 5 times checking, there is still no water supply, the machine will enter standby ;
- ③ Touch "▷||"_{S/P} to force to pause machine to add tableware during washing ;
- ④ Touch "⏻" for 3 seconds to quit program , the machine will drain, then turn off ;
- ⑤ Touch "Dry" to add 73 hours' circular wind to keep air fresh inside machine.

5 Wash


The machine has two water supply models, tap model and tank model.

Note :

- ① The indicator "☞" is white , means tank model ;
- ② The indicator "☞" is white, means tap model ;
- ③ If tank is full, the machine will switch into tank model automatically ;
- ④ Fill 3 cups of water into tank, Di,Di,Di will be sound if tank is full, the indicator "☞" will become white ;
- ⑤ If tap model, please open water tap.

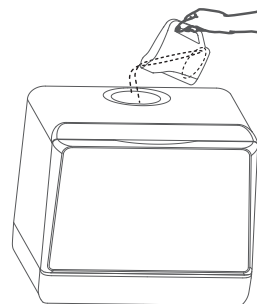

Fill water by hand
(For tank model)

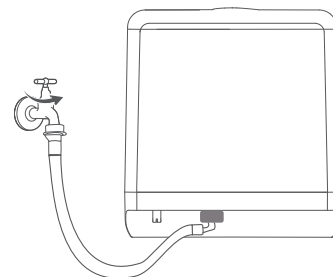

Connect tap
(For tap model)

Function


Program	Program execution	Time	Detergent	Temperature	Drying time	Storage (if selected)
Normal	Hot water washing Cold water rinsing Cold water rinsing Hot water rinsing	69Min	8g	Washing 55°C Rinsing 68°C	60Min	Circulating fresh air 73 hours
Quick	Hot water washing Cold water rinsing Hot water rinsing	29Min	8g	Washing 50°C Rinsing 62°C	60Min	Circulating fresh air 73 hours
Strong	Hot water washing Hot water rinsing Cold water rinsing Hot water rinsing	89Min	12g	Washing 55°C Rinsing 55°C Rinsing 75°C	60Min	Circulating fresh air 73 hours
ECO	Hot water washing Cold water rinsing Hot water rinsing	59Min	8g	Washing 55°C Rinsing 68°C	60Min	Circulating fresh air 73 hours
Fruit	Cold water rinsing Cold water rinsing	19Min	/	/	/	/
Dry	/	/	/	/	60Min	Circulating fresh air 73 hours

Maintain & Clean

1.Clean Filter

① Disassamble.

Rotate anticlockwise to disassamble the filter set, Which have 3 parts, filter mesh, main filter and fine filter.

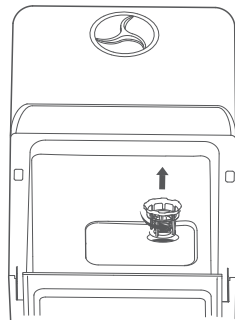


② Clean

Use water to flush and brush each of filter parts



③ Assamble


After cleanning, rotated clockwise to close the filter set.

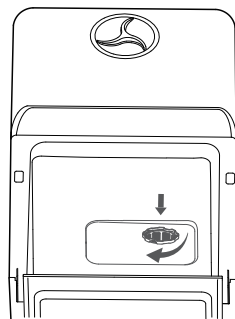

2.Clean spray arms


① Disassamble

Open the door, take out the basket, then pull out up and down spay arm

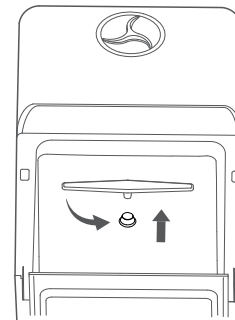


② Clean

Use water to flush and brush each spray arm, use tools with sharp point, like needle to clean holes if needed.

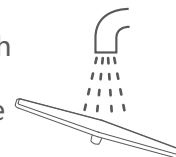

③ Assamble

After cleanning , please press each arms into positions, make sure the arms can move smoothly.

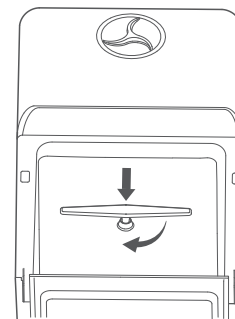

Fault & problem

1.Fault codes

Code	Fault	How to deal with
"E2"	Draining	1.Check drain pipe, be sure the pipe is straight, no bending; 2.Power off, check if anything block filter or drain pipe; 3.Be sure all pipes are not blocked by something.
"E3"	Overflowing	Tilt the machine to 30~45 degree , let water flow out from base of machine, then restart machine, if still fault, contact our serviceman.
"E4"	Temperature	Shutting down and restarting the dishwasher.
"E5"	Massage	
"E6"	Heating	
"E7"	Pressure	

If the error code still exists after you try all the solutions,
please contact us at support@iagreeamall.com

Fault & problem

2.Problem(1)

Problem	Reason	How to deal with
Tableware is not clean	Incorrect tableware loading	be sure enough gap between tableware.
	spray arm trapped	Be sure nothing trap the spray arm.
	Blocked spray arm	Clean spray arm.
	Blocked filter	Clean filter set.
	Incorrect filter installation	Correctly assamble filter set.
	Incorrect program selection	Select appropriate washing program.
	No detergent	Add detergent (block/powder/liquid).
Don' t start the machine	Water shortage	Add water till the indictator light off.
	Door do not close fully	Check the door if anything stop closing fully.
Can not select program	Be washing	Re-select program after stop in-progress program or wait in-progress program finishing .

Fault & problem

2.Problem(2)

Problem	Reason	How to deal with
Tableware is not dry	Inappropriate program	Select appropriate program
	Poor dry effect for plastic tableware	Wipe to dry these plastic tableware by hand
	Incorrect tableware loading	Correct tableware setting in accordance
	Drying program no finishing	Wait the dry program finishing
	Wooden tableware	Wipe to dry these wooden tableware by hand
Discoloration of plastic tableware	Over high washing temperature	Select program with lower temperature
Detergent left	Trapped spray arm, no water flush detergent	Be sure spray arm move smoothly
	Detergent with poor quality	Use qualified detergent

Fault & Problem

2.Problem(3)

Problem	Reason	How deal with
A mount of foam in the machine	Use incorrect detergent	1.Use special detergent for dishwasher ; 2.Open machine, wipe out foam by hand ; 3.Fill 2-3L water into machine , select any program, after 1-2 min, the foam will be drained, can repeat the process if needed.
Abnormal sound in the machine	Spray arm knock tableware	Correctly loading the tableware
	Tableware move slightly	Fix tableware before washing
Egg custard left on the tableware	Portein solidification	wash the tableware with egg custard by hand
Water drops left inside of machine	Drying time is not enough	Selet "Dry" prorogram

Safety and warning

Warning

- 1.Power socket must be grounded , avoiding to possible electric leakage or shock;
- 2.Don' t share one 6A/10A socket with other appliance avoiding to fire.
- 3.Any of new parts or power cord will be replaced by service man after damages ;
- 4.Dispose of the machine in an environmentally friendly manner under local regulations;
- 5.Do not place the machine in the enviroment under 0 °C, like outside door in cold weather ;
- 6.Please use the salt and detergent which is special for automatical dishwasher;
- 7.Don' t place and use the machine in the platform which is not stable, wet, smooth, inflammable avoding to any damage ;
- 8.Don' t place and use the machine within 150mm far from gas stoven or other heating source ;
- 9.Don' t place any heavy object on the door when door open avoiding to the machine turn over;
- 10.Don' t splash water into the machine avoiding to electric shock or fire ;
- 12.Don' t drink the left water in the machine ;
- 13.Don' t let children operate the machine independently avoiding to any danger.

Precaution


- 1.Don' t open the door when washing avoiding to hot water flying out causing any hurts
- 2.Don' t touch or block the side air outlet ;
- 3.Don' t tilt or move the machine when washng ;
- 4.Please be care of the knife or other objects with sharp point when open the door ;
- 5.Please stop washng, power off, and close tap when any faults ;
- 6.Please check and clean the machine time from time in order to the best performance ;
- 7.Please fix the drain hose avoiding to the stained water outflow ;
- 8.Don' t forcely pull power cord, drian hose, press cultery tray avoiding any damage ;
- 9.Don' t use wet hand to operate the machine avoiding electric shock ;
- 10.Children shold be far from the chemical material such as salt, detergent avoiding to any hurt.

Specification

Machine

Model No.:	TDQR05
Voltage	120V~
Hz	60Hz
Power	950W
Inlet pressure	0.04~1MPa
Water consumption	5L
Net weight	13kg
Machine size (WxDxH)	428×425×458(mm)
Carton size (WxDxH)	530×525×560(mm)
Dry	Hot wind

Electrical Drawing

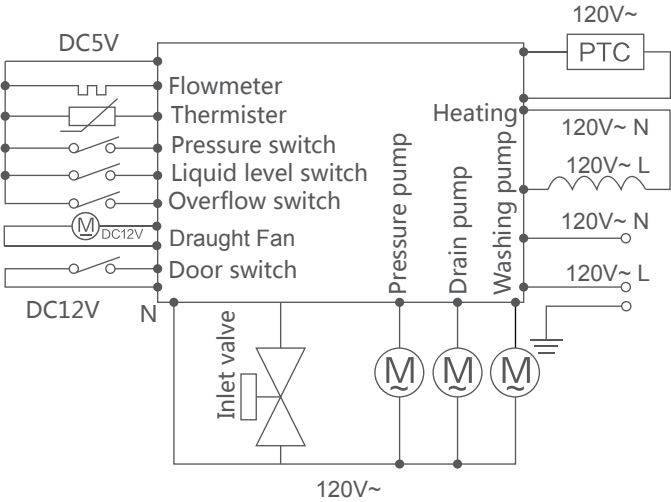

RoHS Requirement

Hazardous substances content						
Components	substances					
	P b	Hg	C d	Cr6+	PBB	PBDE
Plastic parts	O	O	O	O	O	O
Metal parts	O	O	O	O	O	O
Rubber parts	O	O	O	O	O	O
Screws	O	O	O	O	O	O
Stickers	O	O	O	O	O	O
Heat plate	O	O	O	O	O	O
Wire	O	O	O	O	O	O
Water pumps	O	O	O	O	O	O
PCB , Fan	X	O	O	O	O	O
Water valve	O	O	O	O	O	O
Parts of others	O	O	O	O	O	X

The table is made according to SJ/T11364 standards.

O: indicates the hazardous substance contain is below the limitation of GB/T26572 standards.

X: indicates the hazardous substance contain is over the limitation of GB/T26572 standards, but fit for the RoHS order.

The information of the table is offered by suppliers, under the present skills, we will keep the lowest level of hazardous substance in all of machine parts. We promise that we will try our best to low the level of hazardous substance in the machine through improving the technologies constantly



Enjoy IAGREEA, Enjoy Life



iagreea_kitchen



iagreea



iagreea



iagreea_kitchen



support@iagreeamall.com

说明书：80g铜版纸 骑马钉 单色印刷