 



 

 

 









 



 

 

 














 

 

 
 
 

 

 

 

 



Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Setup	 Setup / OPT /
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 A.SRD	 TV/Radio /
 Cinema	 AV / Input / RDS

Original	Replacement
 D.ENH	 Yellow / YouTube / Repeat
 Group	 Mute / Dimmer
 Cancel	 Exit / Cancel / Clear
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 << Slow Search	 << / Tune-
 Slow Search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Top Menu/Direct Navigator	 Smart / List
 Menu/Play List	 Menu / Home
 Display	 Display / Media
 Return	 Back / Return
 Up	 Up
 Down	 Down
 Right	 Right





Original	Replacement
 Left	 Left
 Enter	 OK
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle/Page	 Red / Netflix / Search
 Quick Replay	 D.Menu / Top
 Play Mode	 Shift + Play /
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Memory	 Blue / Prime Video / Random

Original	Replacement

