


Asset Gateway Mini

Installation guide

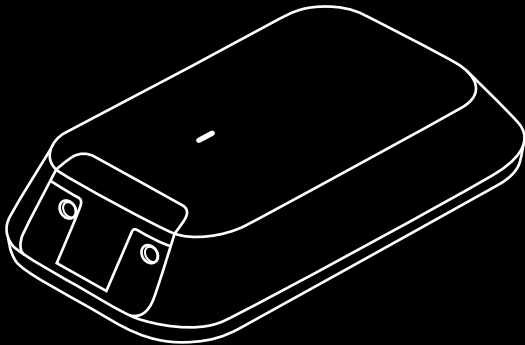

motive

What's in the box



AG Mini



Screws for
Wood mounting (4)



Reset button
pin (1)



Alcohol
wipes (2)



Screws for
Metal mounting (4)

Installation

- 1 Download and log in to the **Motive Fleet App** from Google Play Store or Apple App Store.
- 2 Go to the Devices tab.
- 3 Follow the in-app instructions to guide you through installing the Asset Gateway Mini.
- 4 Visit <http://gomotive.com/ag-mini-install> for detailed information and recommendations on installing and assigning your Asset Gateway Mini.

Understanding the LEDs

Under normal operations, the LED will not flash until the reset button is pressed.



Blinking Blue

Device is setting up



Solid Red

Device has low battery



Solid Blue

Device is working properly



Blinking White

Device is performing a firmware update



Solid Yellow

Device has poor LTE connectivity

Note

This device contains license-exempt transmitters/receivers that comply with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment and RSS 102 RF exposure compliance requirements. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Changes or modifications not expressly approved by Motive could void the user's authority to operate this equipment.

Troubleshooting

855-434-3564

support@gomotive.com

helpcenter.gomotive.com

Resources



Scan this code or visit <http://gomotive.com/ag-mini-install> for detailed information and recommendations on installing and assigning your Asset Gateway.