



SM608英文说明书



SM608

 ENGLISH
GERMAN & FRENCH



Quick Start Guide

Waterproof Sport Headset

Basic Parameters

• BT version: V5.0	• Charging time: 2 hours
• Battery capacity: 230mAh	• Play mode: MP3, BT wireless
• Charging voltage: 5V/1A	• Built-in memory: 16GB

Botton Description

① Indicator light

Different states and different lights

② Magnetic interface

For charging and data transmission

③ Function botton

On / off, play / pause, call operation
Language switching, assistant wake up

④ Volume-

Switch to the previous song, previous folder

⑤ Volume +

Switch to the next song, next folder, and playback mode switch

Precautions

- After using the headphones in water, please make sure the headphones are dry before charging.
- SM608 have been downloaded with test songs before leaving the factory, it's not the second-hand product.
- Please use the original cable and 5V/1A charger, otherwise the headphones battery may be damaged.
- The SM608 does not support data transfer and management with Mac OS computers currently.
- When swimming, it's recommended to fix it with a swimming cap to prevent the headphones from falling off due to the resistance of water.
- SM608 uses bone conduction speakers, it's recommended not to insert the headphones completely into the ear at max volume, to avoid ear discomfort caused by vibration.

Function Operation

Turn On/Off

- Power on: Long press "Function key" for 2 seconds.
- Power off: Long press "Function key" for 5 seconds.

Bluetooth Connection

- After powering on, the red and blue lights flash, headphone enters the pairing state.
- Turn on the device's Bluetooth, find the name of "SM608", and click connect.

Switch MP3/Bluetooth Playback

- Double-click "Volume +" to switch to MP3/Bluetooth playback.

Volume Adjustment

- Turn up volume: Short press "Volume +".
- Turn down volume: Short press "Volume -".

Song Switch

- Switch to previous song: Long press "Volume -" for 2 seconds.
- Switch to next song: Long press "Volume +" for 2 seconds.

Switch MP3 Folder Playback

- Play previous folder: In MP3 mode, long press "Volume -" for 6 seconds.
- Play next folder: In MP3 mode, long press "Volume +" for 6 seconds.

MP3 Play Sequence Switch

- Sequential Play / Shuffle Play: In MP3 mode, quickly triple-click "Function key" to switch music play sequence of MP3 Mode.

Chinese/English Language Switch

- In Bluetooth standby state, double-click the "Function key" quickly.

Activate Phone's Voice Assistant

- In Bluetooth paired state, Long press "Function key" for 2 seconds.

Download/delete headphone memory music

- Connect headphones to computer via original USB cable, the red light of the headphone is on, headphones/disk pops up on computer, and copy the pre-downloaded music in MP3 format to the headphones/disk.
(Temporarily do not support Mac OS computer)

Production Information

- Product name: Bluetooth Headset
- Product model: SM608
- Manufacturer: Shenzhen Cyboris Technology Co., Ltd.
- Manufacturer Address: 3rd Floor, Zhenhuashidai plaza, 21 Heping Road, Longhua District, Shenzhen

Three Guarantees Service

- Within 7 days from the day after you sign for the product, if there is a performance failure listed in the "Headphone Performance Failure Table", the product can be returned or exchanged for free if it is determined by testing.
- Within 8-15 days from the day after you sign the receipt, if this product has a performance failure as listed in the "Headphone Performance Failure Table", it will be determined by the after-sales service center, and you can enjoy free replacement or repair services.
- Within 12 months from the day after you sign for the product, if there is a performance failure listed in the "Headphone Performance Failure Table", it will be determined by the after-sales service center and you can enjoy free maintenance services.

Headphone performance failure table:

- The device cannot be charged, or cannot be turned on normally after charging
- Device keys cannot be used normally
- The device can't make a sound
- The device function cannot be used normally due to other hardware failures

No Three Guarantees Service:

- Unauthorized maintenance, misuse, collision, negligence, abuse, liquid ingress, accident, alteration
- Improper use of accessories other than this product, or tearing up or altering the label;
- The validity period of the three guarantees service has expired;
- Damage caused by force majeure such as fire, flood, lightning strike, etc.;
- Does not meet the performance failures listed in the "Headphone Performance Failure Table";
- Due to human reasons, this product and its accessories have performance failures listed in the "Headphone Performance Failure Table"

Safety Precautions

- The equipment complies with the standard GB 8898-2011: GB13837-2012: GB17625.1-2012
- This product cannot be taken, please keep it out of the reach of children to prevent accidents
- Do not place the machine in a high temperature environment, including direct sunlight
- Do not place the machine near fire sources or other overheated environments
- Do not place the machine in a humid or humid place
- In addition to the provided charging cable, please do not try to use other methods to charge the machine

Danger warning

- Do not disassemble the machine, and prohibit any attempt to repair or modify the machine
- Please pay attention to drops, impacts, scratches or other behaviors that affect the function of the machine. If there is any damage, such as hot, high temperature deformation or corrosion, please stop using the product and equipment immediately and contact the merchant
- If the machine produces abnormal odors, higher than normal temperature, and abnormal changes in color or shape, please stop using the machine immediately and contact the merchant

Kind reminder

- Please use a DC5V 1A charger to charge the machine. Charging the machine with over-voltage charging equipment may damage the machine
- When the machine has not been used for more than 3 months, you need to charge the machine before using it
- When not in use for a long time, it is recommended to charge the machine once every 3 months, which can more effectively protect the battery
- It is recommended to use after receiving the machine fully charged

Charging tips

- When the battery voltage is too low, the red light will flash, and the product will automatically turn off afterwards
- Use the accessory USB charging cable to connect to the USB port that supports 5V/1A charger for charging. At this time, the red indicator light is on, indicating that it is charging
- It takes about 2 hours to fully charge, and the blue light is always on when fully charged

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



www.cyborismall.com

英语