 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
 
 
 
 
 
 
 


Original	Recharge	Original	Recharge
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 Tv Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 4	 Eco	 D.Menu / Top
 AUX1	 Shift + 5	 Volume-	 Vol-
 Tuner	 Shift + 6	 Info	 Info / Angle
 Bluetooth	 Shift + 9	 Up	 Up
 AUX2	 Shift + 7	 Option	 Shift + Setup / OPT / Tools
 Game	 Shift + Guide / EPG / -/--	 Left	 Left
 Phono	 Guide / EPG / -/--	 Enter	 OK
 USB	 Shift + 8	 Right	 Right
 Media Player	 Display / Media	 Back	 Back / Return
 CD	 Shift + 3	 Down	 Down
 .:I.:	 Shift + Fav / Marker / PC	 Setup	 Setup / OPT /
 Internet Radio	 Smart / List	 Home	 Menu / Home
 CH / Page+	 CH+ / Page+	 Stop	 Stop / Hold



[illegible]



 
 
 
 
 
 
 
 
 
 
 
Original	Recharge
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 ::I:	 Shift + Fav / Marker / PC
 Internet Radio	 Smart / List
 CH/Page+	 CH+ / Page+

Original	Recharge
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+







Original	Recharge
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 .:I.:	 Shift + Fav / Marker / PC
 Internet Radio	 Smart / List
 CH/Page+	 CH+ / Page+

Original	Recharge
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-



