



U L T T Y

User Manual

 
Air Purifier Bladeless Fan

Model: SKJ-CR022D

www.u-ultty.com



service@u-ultty.com

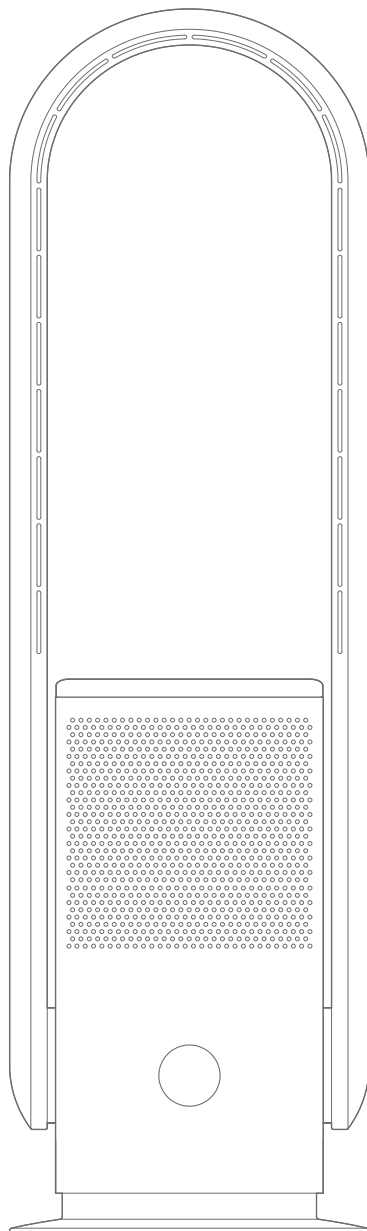

■ Safety Warning

 
WARNING

To avoid fire, electric shock, and injury, you must meet the following requirements. Otherwise, please follow the respective national and local electricity regulations.

- 1.Children, the elderly and people with disabilities or without experience should be looked after by a responsible person when using this product. Children should be supervised to ensure that they do not play with the fan as a toy.
- 2.Please use a separate outlet according to the current / voltage of the fan. Do not use a multi-purpose socket for simultaneous use with other electrical devices.
- 3.If the fan does not work due to a damaged power cord, turn off the power and ask a qualified person for repair.
4. Do not move the fan when you pull the plug out of the socket.
5. Do not pull out the plug by the cable. Pull out the plug and do not grip the cable.
- 6.Do not operate the fan with a damaged cable or connector. Please contact customer service to replace or repair the cable if the cable is damaged.

7. Do not stretch or energize the cable. Keep the cable away from the heat source.
8. Do not run the cable under carpets, do not cover it with carpets or similar covers. Route the cable outside the traffic area to avoid tripping the cable.
9. Turn off all controls before pulling the plug and pull the plug out of the socket if you are not going to use the device for a long time.
10. Do not place any objects on the air inlet or outlet. Make sure that the ventilation openings are free of dust, lint, hair and other obstacles that could impair the air flow.
11. The fan should be set up dry on a horizontal platform and should not be near heat sources, corrosive air and moisture. The fan should be kept a distance of 150 mm around to ensure good air circulation.
12. Do not use the fan outdoors or on a wet surface.
13. Do not immerse the fan, power cord, or plug in water or other liquids to avoid danger. The use of an extension cord is not recommended unless it has been tested by a qualified person.
14. Please do not use an air cleaner or similar product right next to the fan.
15. Do not use any cleaning agents or lubricants for this fan and pull out the power plug before cleaning, transporting and servicing the device.

■ Product introduction

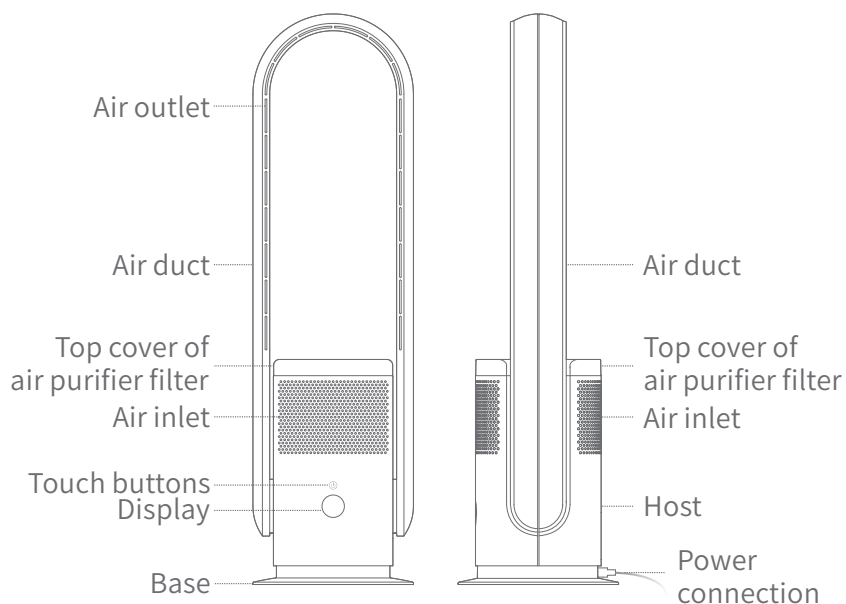

Product Specifications

Product Name: Air Purifier Bladeless Fan

Model: SKJ-CR022D

Operating voltage/Rated frequency: 100-240V~ 50/60Hz

Oscillation: $80 \pm 5^\circ$

Rated power: 35W

Size: 235*235*800mm


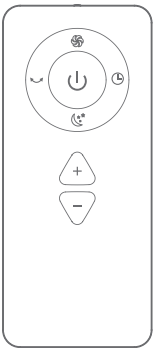 





Timer: 1-8H

Rated Voltage: 24V ---

Weight: 3.45kg

Scope of delivery: host, power supply, operating instructions

■ Remote Control

 Power button: Turn the fan on and off		 Swing: Start and stop swing
 Max mode: Maximum power Strong airflow		 Increase Airflow Decrease Airflow 9 speed levels to choose from
 Quiet Mode: Soft and smooth airflow		 Sleep Timer 1 to 8 hours of timed shutdown



The device can be switched on and off by pressing the "ON & OFF" button.



Press the "strong wind mode" button on the remote control. The display will show H and the wind strength will increase. Press again to exit strong wind mode.
(You can also exit the current mode by pressing the "+" - "Exit button.")



Press the "Sleep mode" button on the remote control. The display shows L and the wind force is reduced. Press again to exit the night sleep mode.
(You can also exit the current mode by pressing the "+" - "Exit button.")



Press the "Oscillation" button on the remote control to switch on the oscillating function. This fan can swing 80° left and right. Press this button again to end the shaking process.



Press the "+" button on the remote control to increase the air volume. Press the "-" button to decrease the air volume. There are 9-speed settings.



Press the timer button on the remote control to set 1 to 8 hours. After the timer function is set, other functions can be used normally. When the device is turned off, the timing setting is also canceled.

 
 
■ Remote Control

1. Battery replacement method: as shown in the picture.

Please note the battery direction.


2. Battery:

- Do not charge the battery
- NOT a toy, out reach of kids
- If you are swallowed, see a doctor

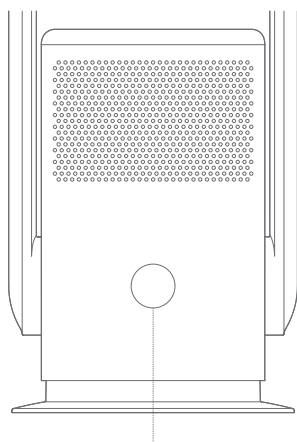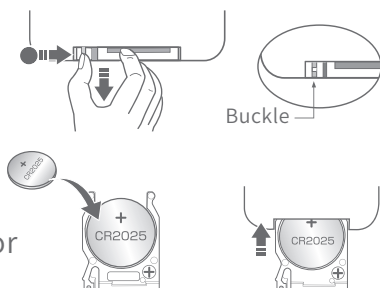

Signal Receiver

 
The remote control should be pointed at the remote control signal receiver on the display to maximize the remote control signal.

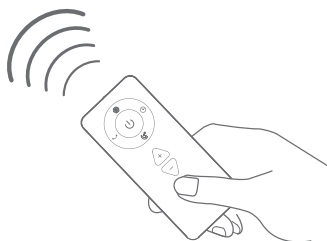

Possible phenomenon

1. This fan may respond to the remote control of other devices.
 2. If you use the remote control of this fan, other devices may respond.
- This is due to the overlapping frequencies of the remote control. There is no quality problem in the product itself. To avoid misuse, keep the remote control away from other electrical devices during operation.

 ■ Host operation

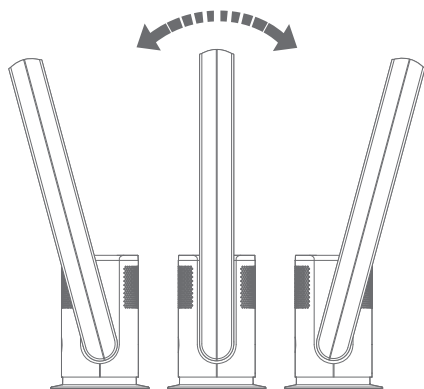

■ Air outlet setting

Set the wind outlet after fan has stopped.

Hold fan body with one hand and set the wind outlet 15 ° before and after.

■ Switch on and off

Connect the power supply, the LED display lights up and the machine goes into standby mode.

Click the host's power button, the buzzer will beep once and the fan will start.

Press and hold the power button for 2 seconds, the buzzer will beep twice and the fan will stop running after you release your hand.

■ Set the air volume

 
When the host is operating: Click the button to adjust the air volume from 1 to 9.

■ Oscillation

When the host is operating, press and hold the screentouch button for 1 second. The buzzer beep once and the fan starts to oscillating.

Press and hold the screentouch button again for 1 second. The buzzer beep once and the fan stops oscillating.

■ Installation

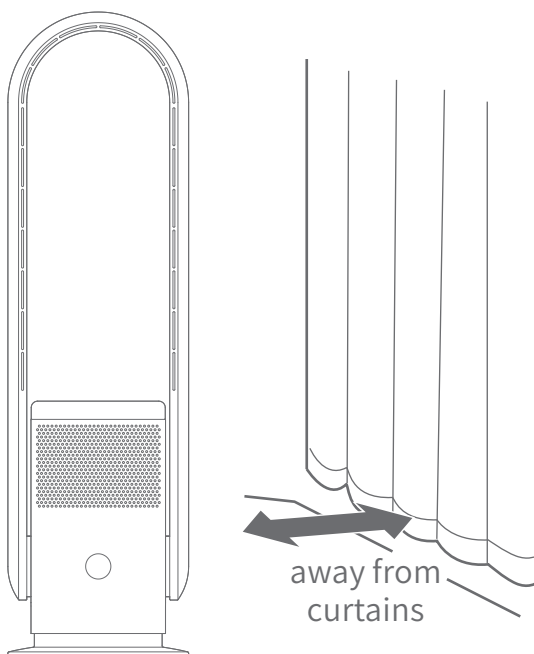


- Please use the fan on a flat platform. Do not place the fan in an unstable place, such as an inclined or soft surface, to avoid damage or malfunctions caused by the fan tipping over.
- Avoid blocking the air inlet when using. Stay away from the curtains to avoid objects blocking the air inlet and the fan not working.
- Do not place any objects within 30 cm of the air outlet, otherwise the blower effect will be impaired.

■ Filter replacement


This machine is equipped with an air cleaning filter.

Before using the fan, the filter should be installed in the fan so that the air can be cleaned.

 
Installation and replacement method of air cleaning filter:

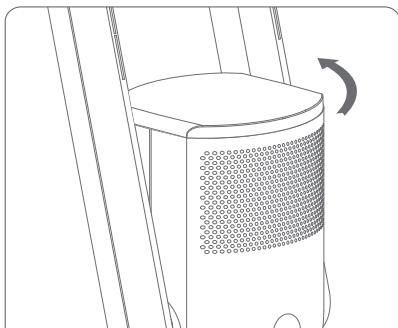

 
1. Turn the filter system top cover counterclockwise to unlock and remove the filter.

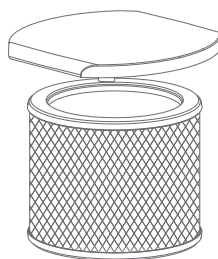

 2. Disconnect the old filter from the top cover.

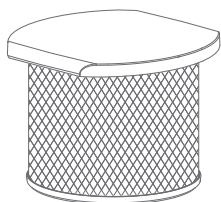

 3. The new filter and top cover are attached and assembled with a buckle.

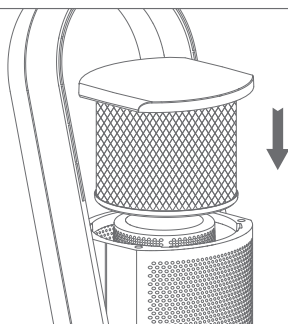

4. After assembling, put it back in the main unit and turn it clockwise to secure it.

■ Auto reminder of Filter Replacing



The fan has a memory function. After a total of 720 hours of operation, the display (as shown in the figure) lights up cycle indicator light when turned on, the buzzer sounds 5 times and the gear is displayed after 5 seconds.

After replacing the filter screen, the power button on the remote control device can clear the alarm for 5 seconds and the operating time is converted again.

■ Maintenance

- Before maintenance work, pull the mains plug out of the socket.



■ Surface

Gently wipe the fan surface with a soft, dry cloth. If the surface of the fan is dirty, dilute it with a mild detergent and wipe the surface of the fan with a soft cloth. Then wipe them off with a dry, soft cloth.

■ Air inlet & air outlet

Use a soft brush or vacuum cleaner to clean the dust at the air inlet and outlet. If there is too much dust, this can affect the fan.

■ Remote control

 
Gently wipe the surface of the remote control with a soft, dry cloth. If it will not be used for a long time, please remove the button battery in the remote control.

■ Power plug


Please clean the power plug with a soft, dry cloth.

■ Safekeeping

1. After the fan has been cleaned, it can be stored in a plastic bag.
2. Keep away from vibrations and electrical devices with cooling / heating function.
3. Do not expose it to direct sunlight, hot and humid places.
4. Keep out of the reach of kids.

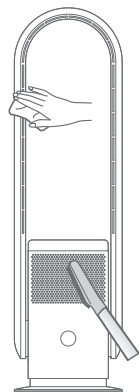

Warranty Card

Customer	Name		12 months warranty
	Address		
	Tel		Inspectors
	Date		
<p>Please fill in the warranty card in detail and stamp the dealer seal, otherwise it will be invalid.</p> <p>1.This product is free of charge for service under normal use within 12 months from the date of purchase.</p> <p>2.When the warranty card deadline is exceeded and the parts need to be replaced, the maintenance fee will be charged as appropriate.</p> <p>3.During the warranty period, repairs will not be free as followings:</p> <p>a. Failure to present warranty card or proof of purchase (invoice or receipt)</p> <p>b. Maintenance beyond the warranty period</p> <p>c. Damage caused by disassembly</p> <p>d. Damage caused by mistake/negative use (such as long-term use in harsh environments)</p> <p>e. Surface aging when in use.</p>			Dealer signature
<div>  <p>Any quality issue please contact us: Email:service@u-ultty.com www.u-ultty.com Scan QR Code Get support from ULTTY</p> </div>			