


How to perform manual firmware update on DWR-X2000


- 1 Visit the D-Link support page at <https://www.dlink.com/en/change-region>, select your country, find your device model, and download the latest firmware
- 2 Connect your PC to the DWR-X2000 either via Wi-Fi or Ethernet cable
Note: To avoid disruption during the firmware upgrade, it is advised that you use a wired connection
- 3 Once connected, open a web browser and type in the URL bar <https://192.168.0.1>
- 4 To access the router's settings, enter the username and password. If you've previously changed the password, use the updated one. Otherwise, use the default username "**admin**" and the default password located on the label at the back of the router.

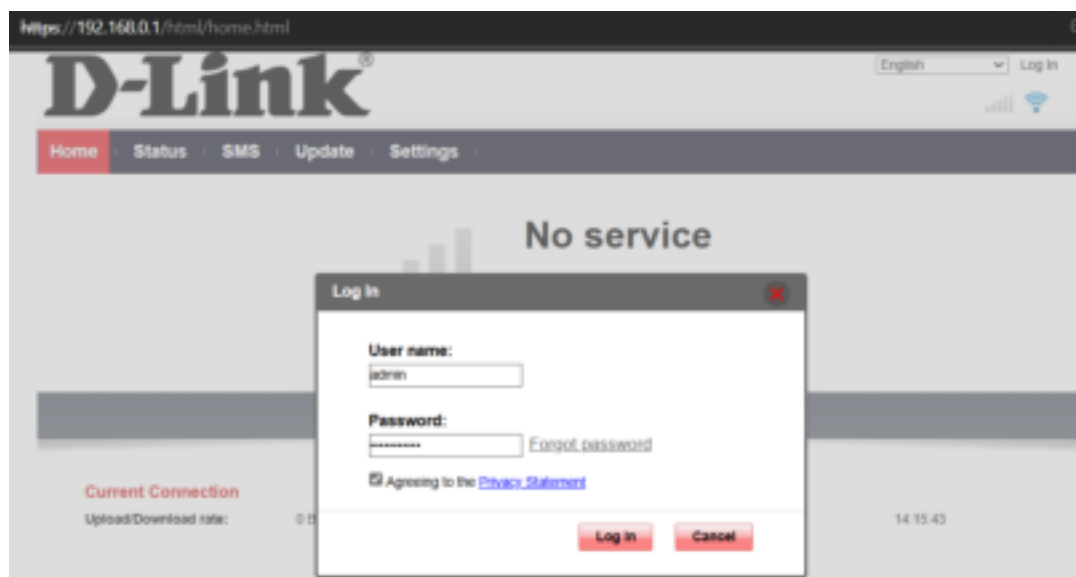

If you forget your router's configuration password, perform a factory reset to restore default settings.

Note: This will erase all current settings, and you'll need to reconfigure the router

- 5 Navigate to **Update** Tab, click on **Local Update** and click on **Select File**.

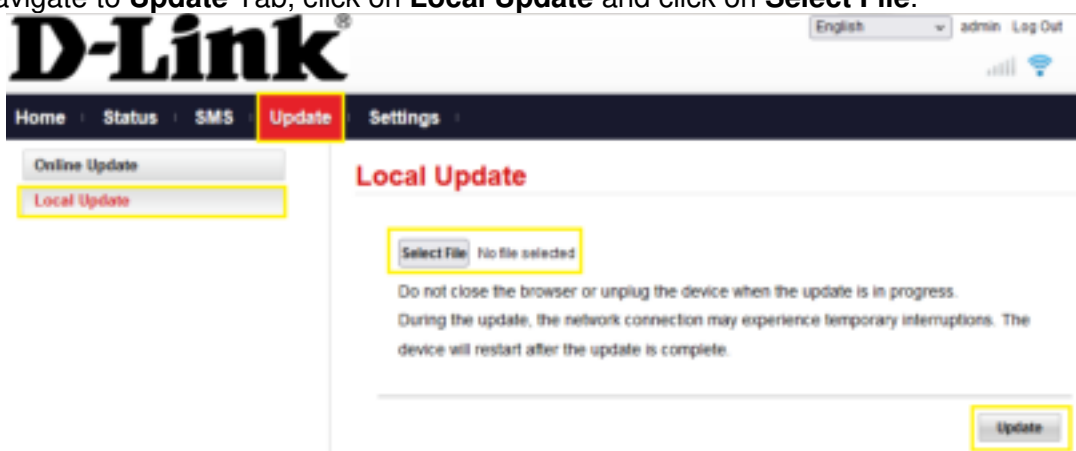

- 6 Locate the **.bin** or the **zip file** downloaded in step 1.
- 7 Highlight the file by clicking it once then click Open. Then, click "**Update**" to initiate the firmware update process.
- 8 The router will start upgrading its firmware. Do **not** turn off or disconnect the router during the upgrade process, as this could cause issues.

The upgrade may take several minutes. Once completed, the router will reboot automatically.

---END---