


### Part A - Stitch Composer


Open the Stitch Composer software in the Horizon Link Suite.

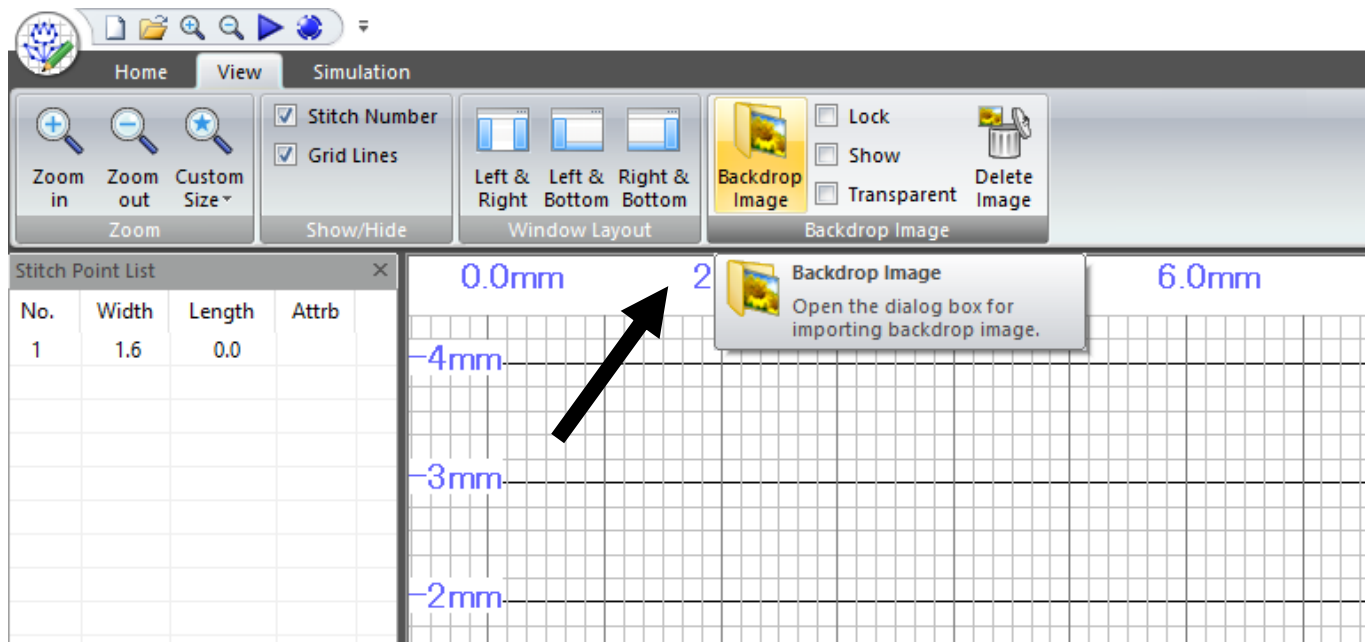

Open the View icon at the top of the screen.


Click on the Backdrop Image icon and select the CUP artwork.

## Part A - Stitch Composer

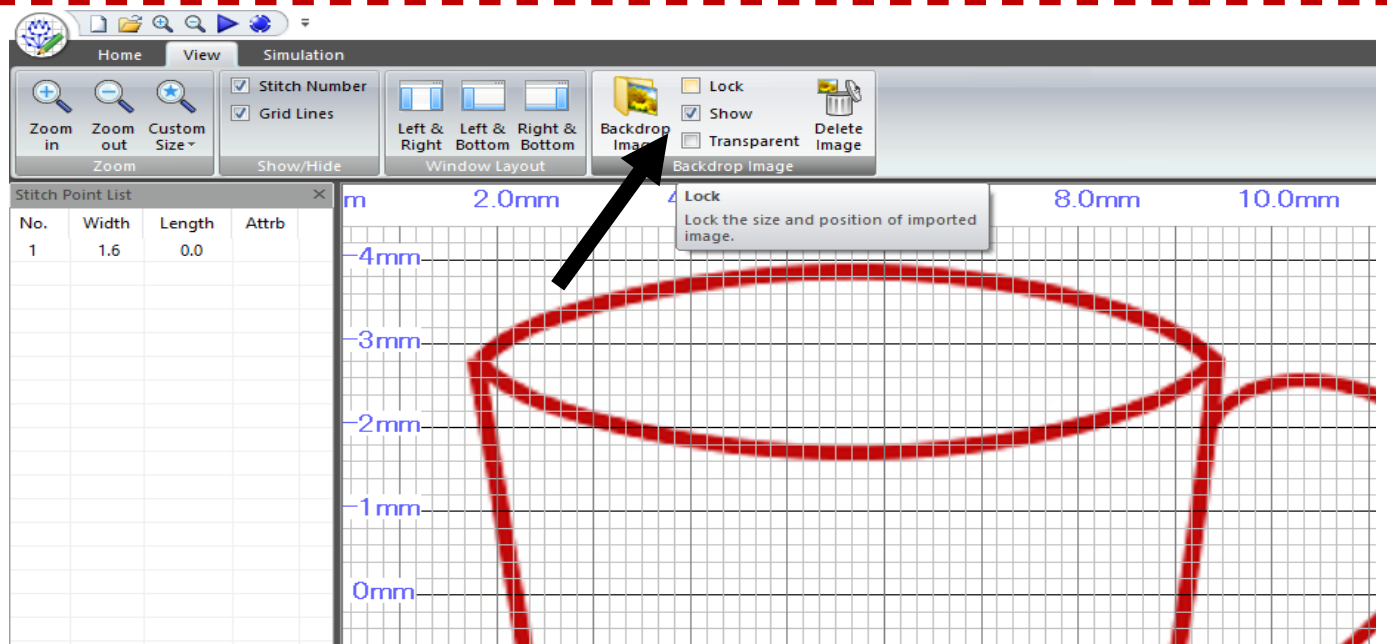


Move the artwork around by holding down the left click on the mouse and dragging into place.

Select Lock to lock down the artwork.

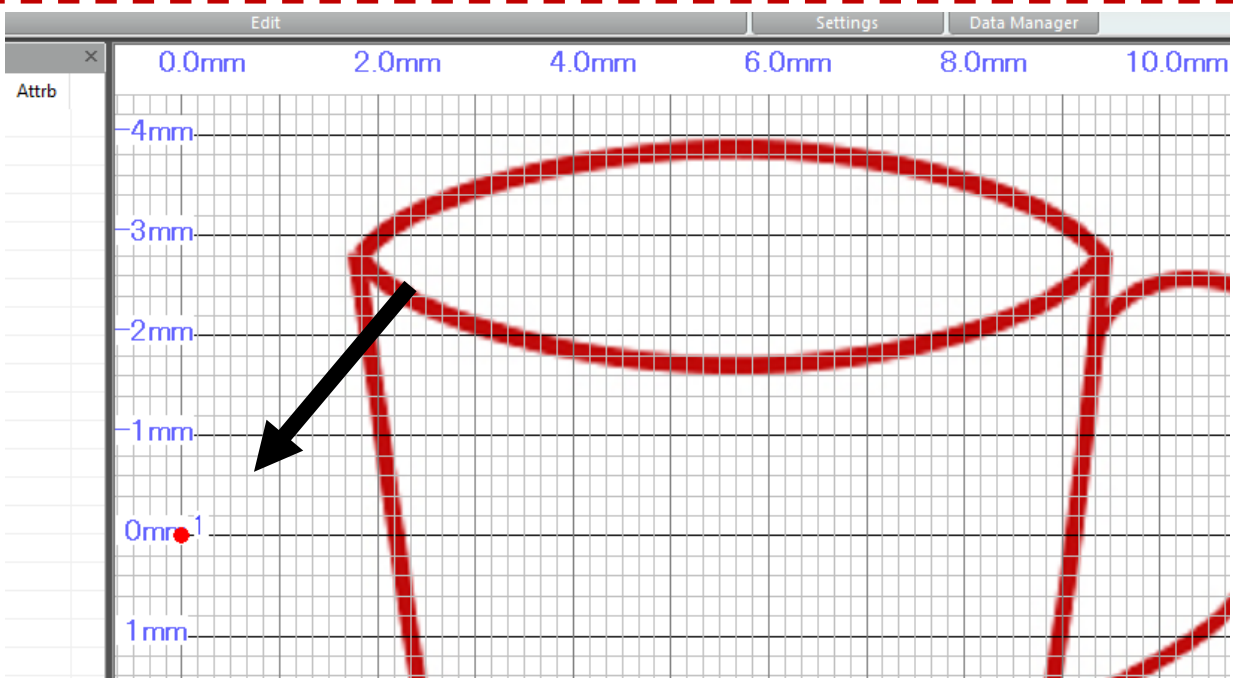


Place the cursor on the intersection of the grid at the 0.0mm and 0mm, left click the mouse to set the first stitch point.

## Part A - Stitch Composer


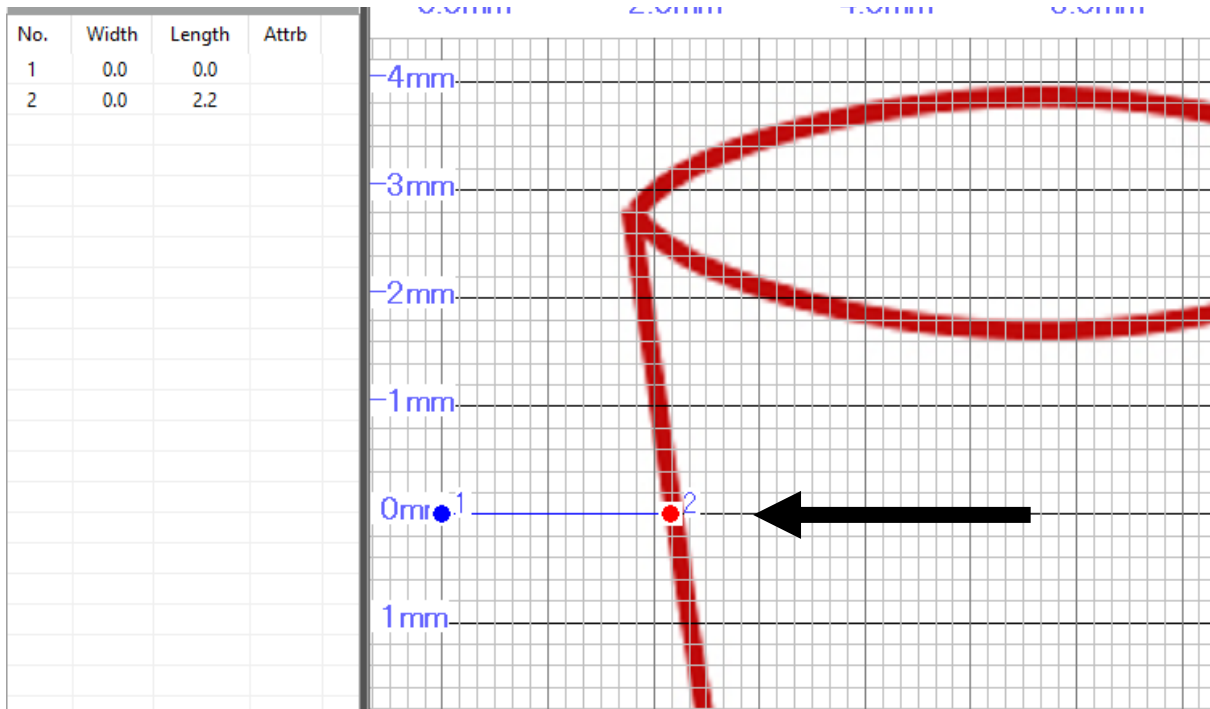


Move along the 0mm gridline to where the Artwork starts and place the next stitch point.

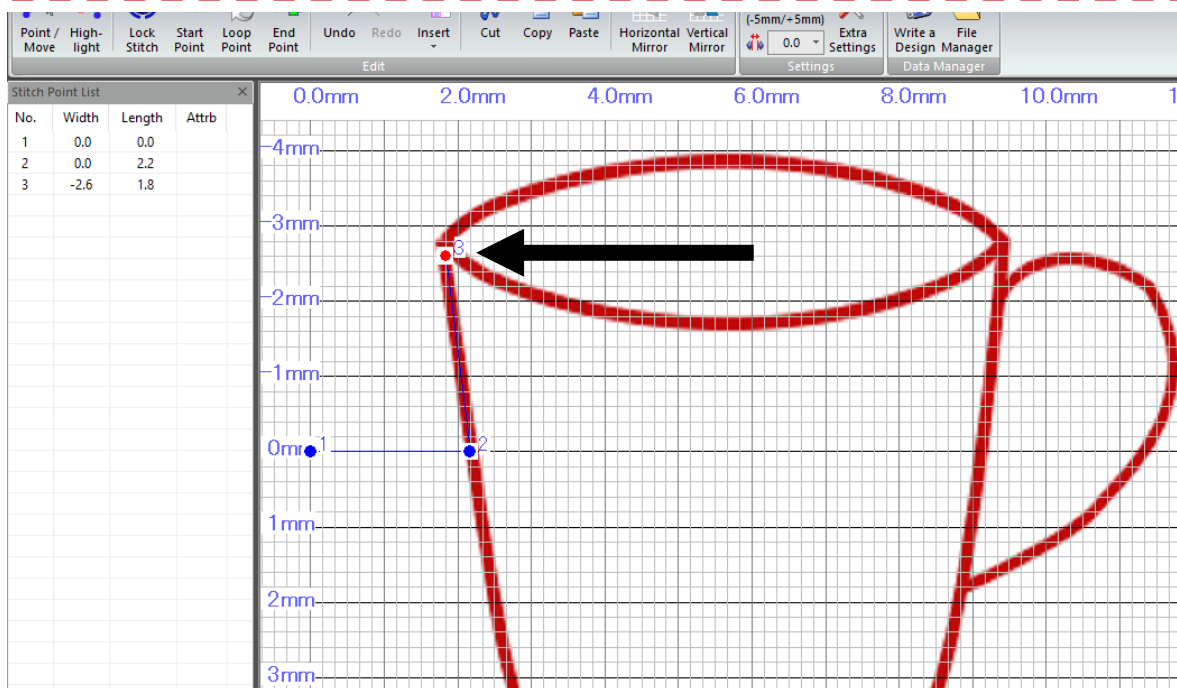


Follow the line of the edge of the cup to where the 3 edges of the cup meet, placing stitch points as you to.

## Part A - Stitch Composer

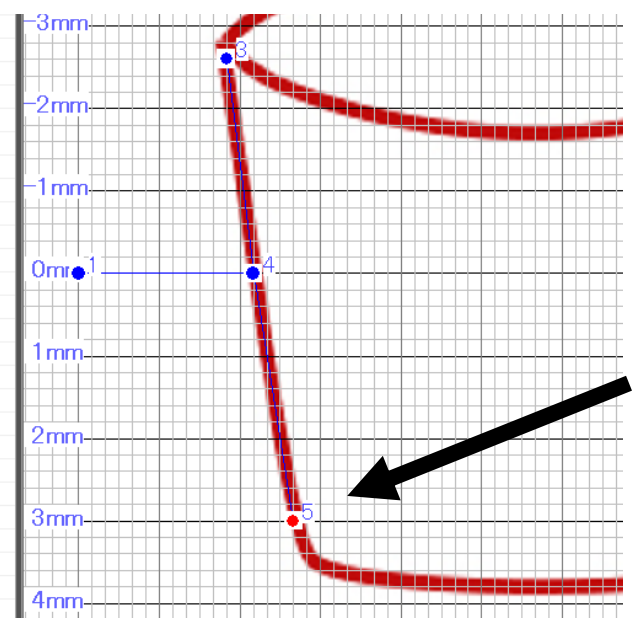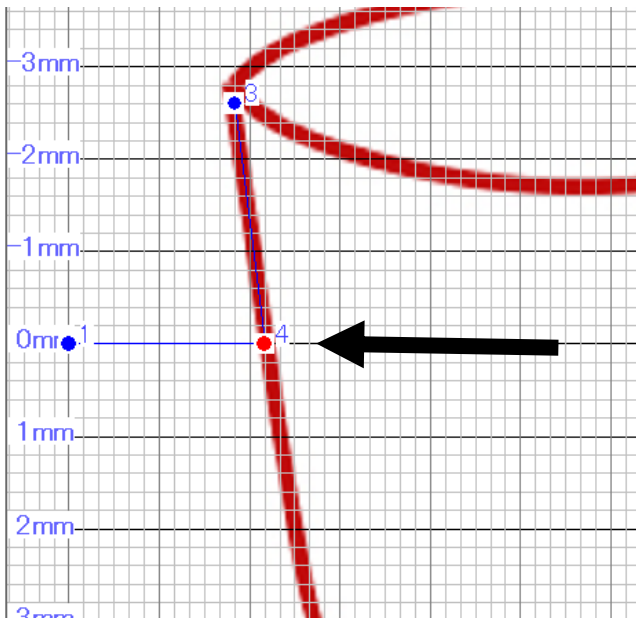


Place the next stitch point directly over the top of point 2 as you head down the side of the cup, place stitch point 5 at the base of the cup.

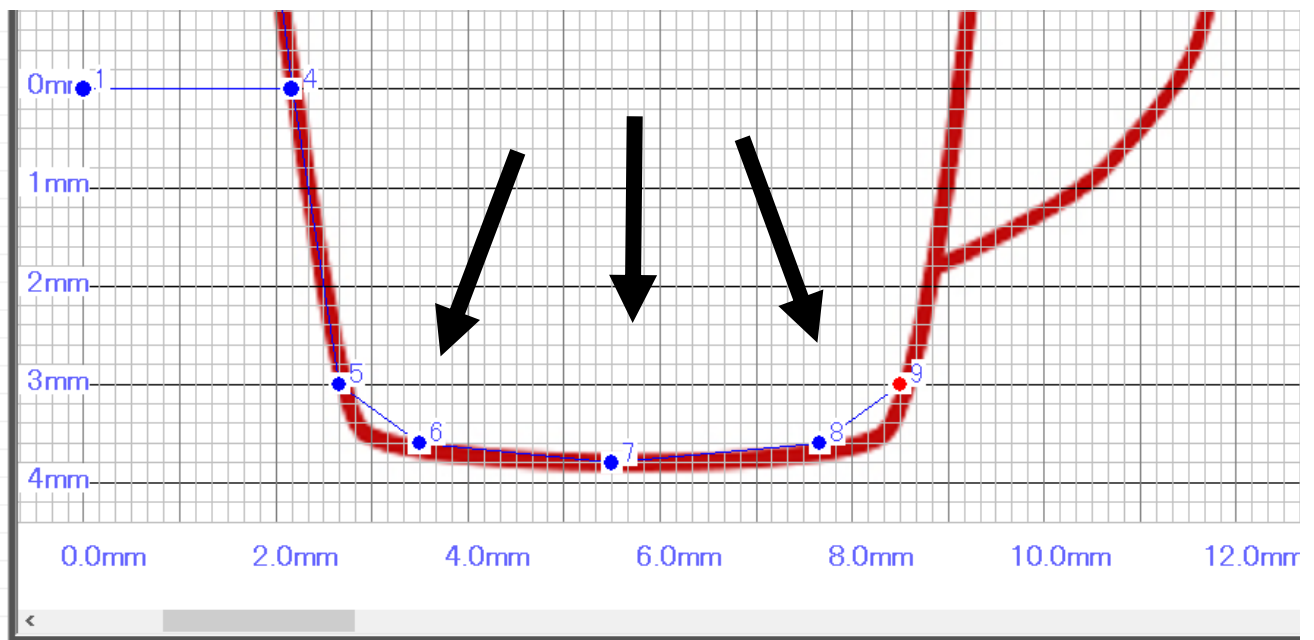


Place stitch points 6, 7, 8 & 9 so they create the curve to the base of the cup.

## Part A - Stitch Composer

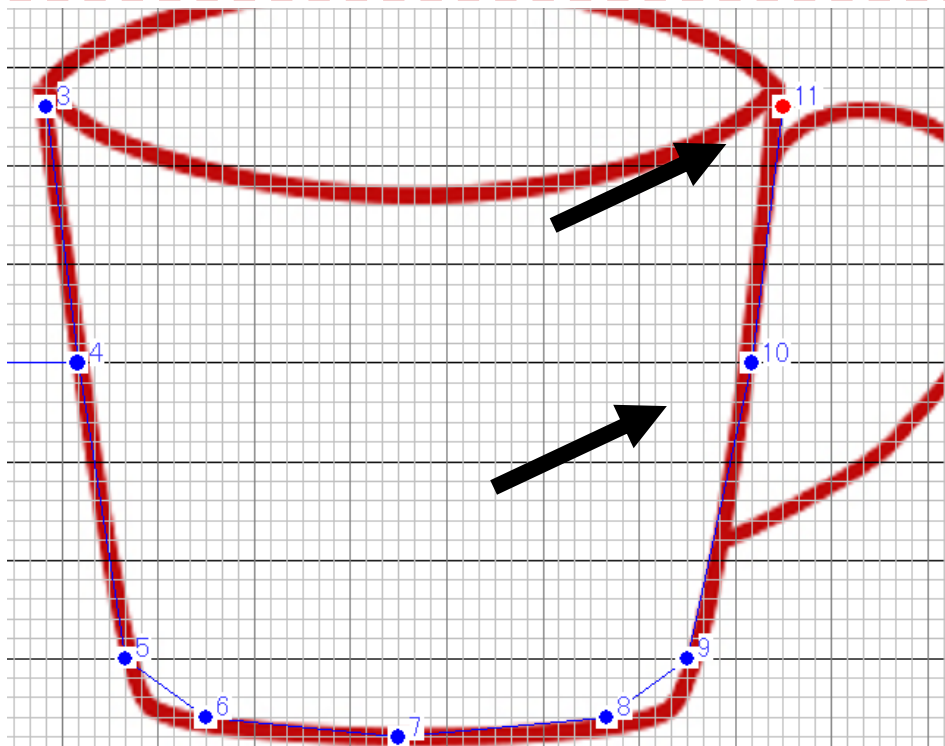


Place the stitch points 10 and 11 to create the opposite side of the cup.

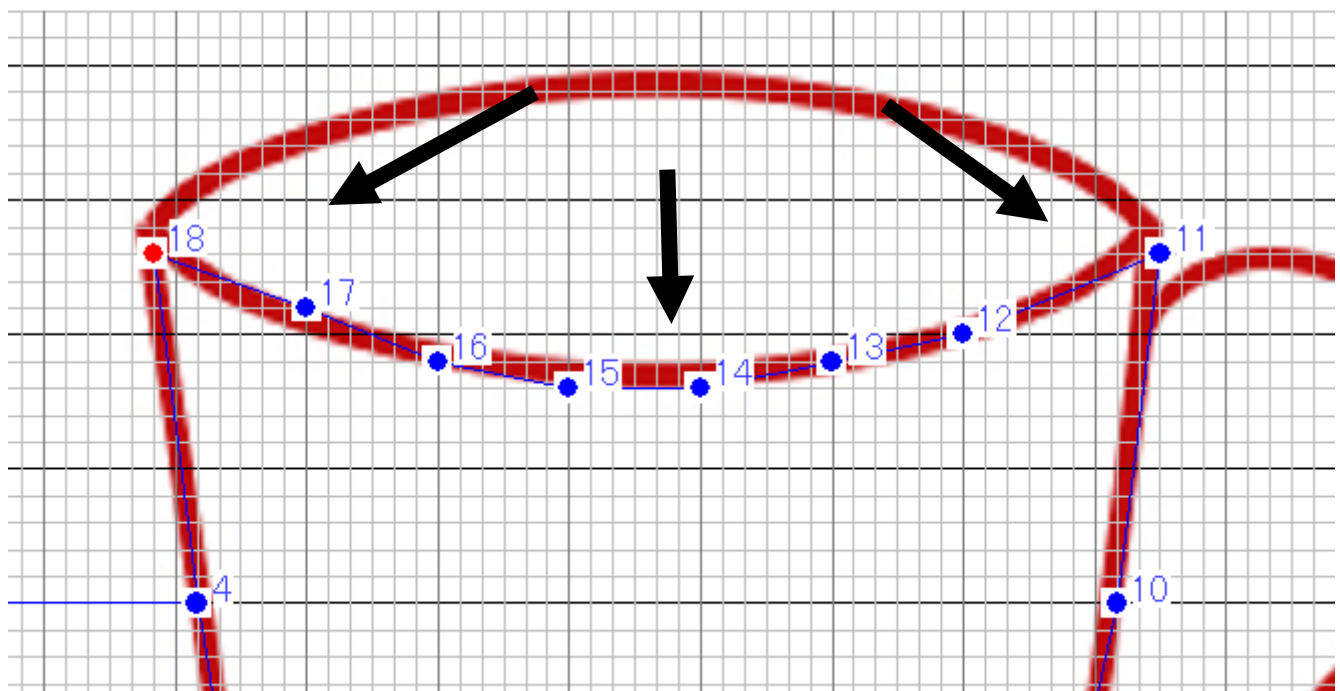


Follow the line around the lip of the cup placing stitch points as you go. Placing stitch point 18 on top of stitch point 3.

## Part A - Stitch Composer

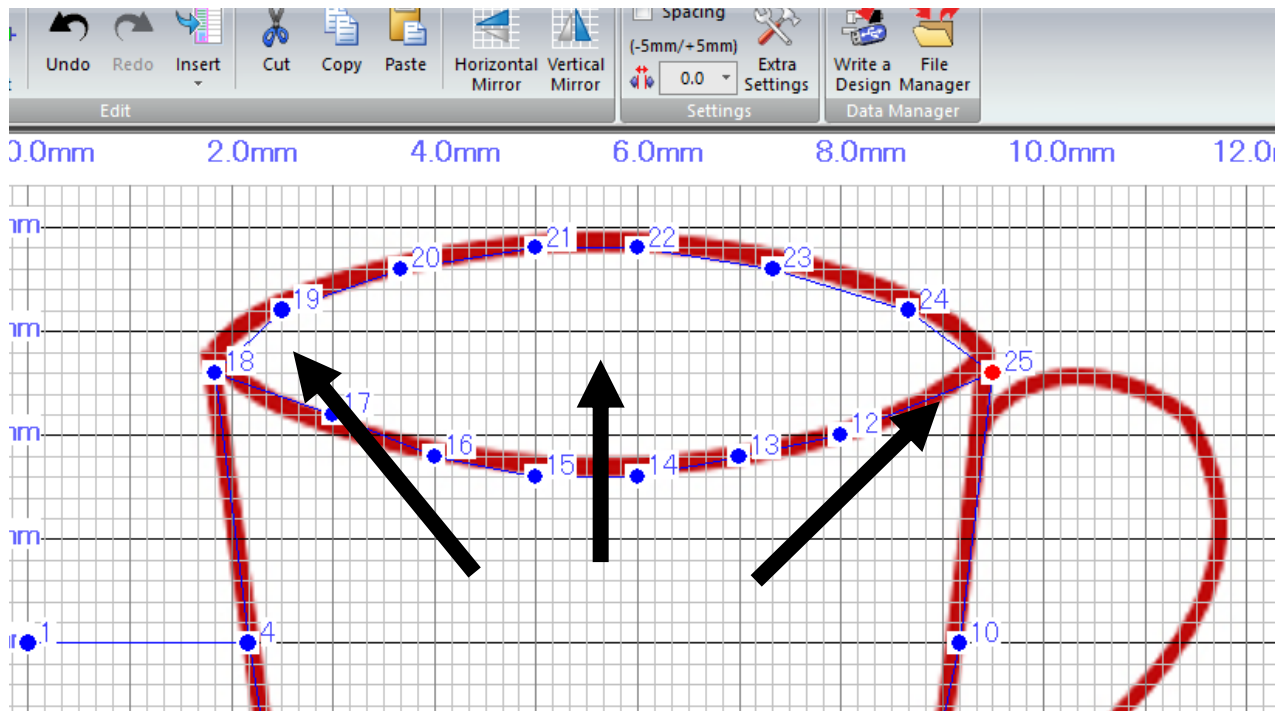


Continue following the line around the top of the cup lip, placing stitch points as you go, place the stitch point 25 on top of stitch point 11.

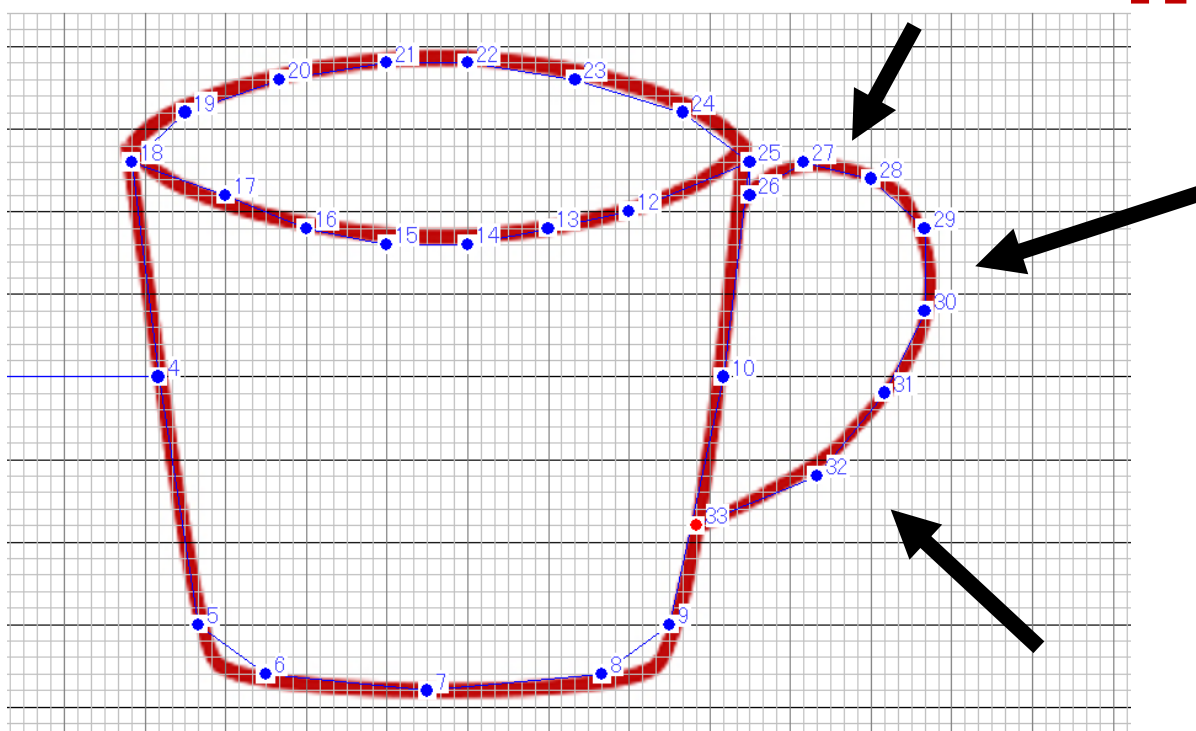


Place stitch point 26 where the handle of the cup meets the righthand side of the cup. Follow the curve of the handle around placing stitch points evenly as you go.

## Part A - Stitch Composer

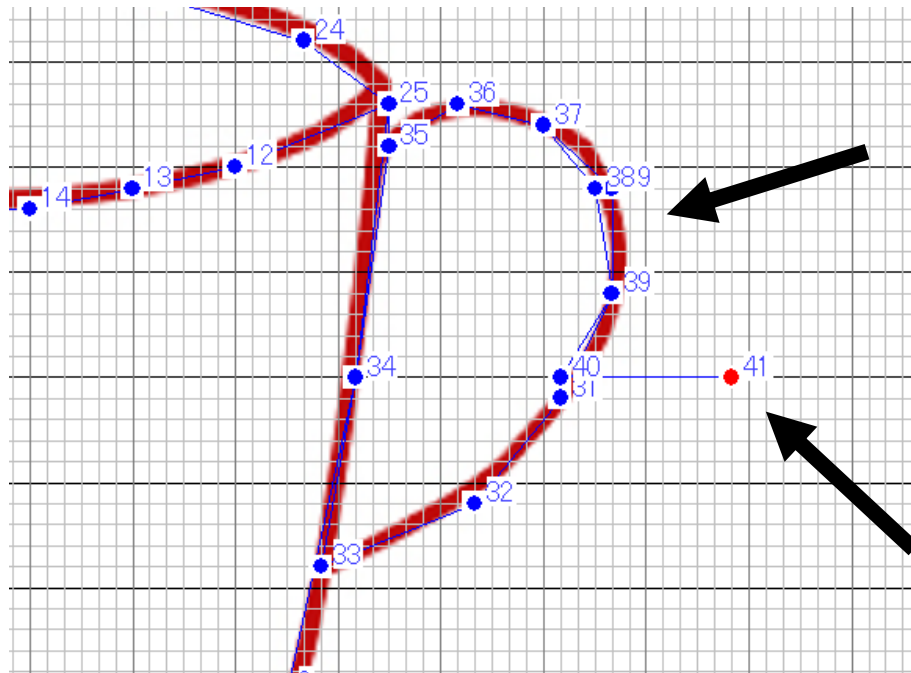

From where stitch point 33 intercepts follow the line back up to point 26 placing points and back around the handle stopping at point 31.

Place stitch point 41 along the 0mm grid line where it intercepts 12.5mm.

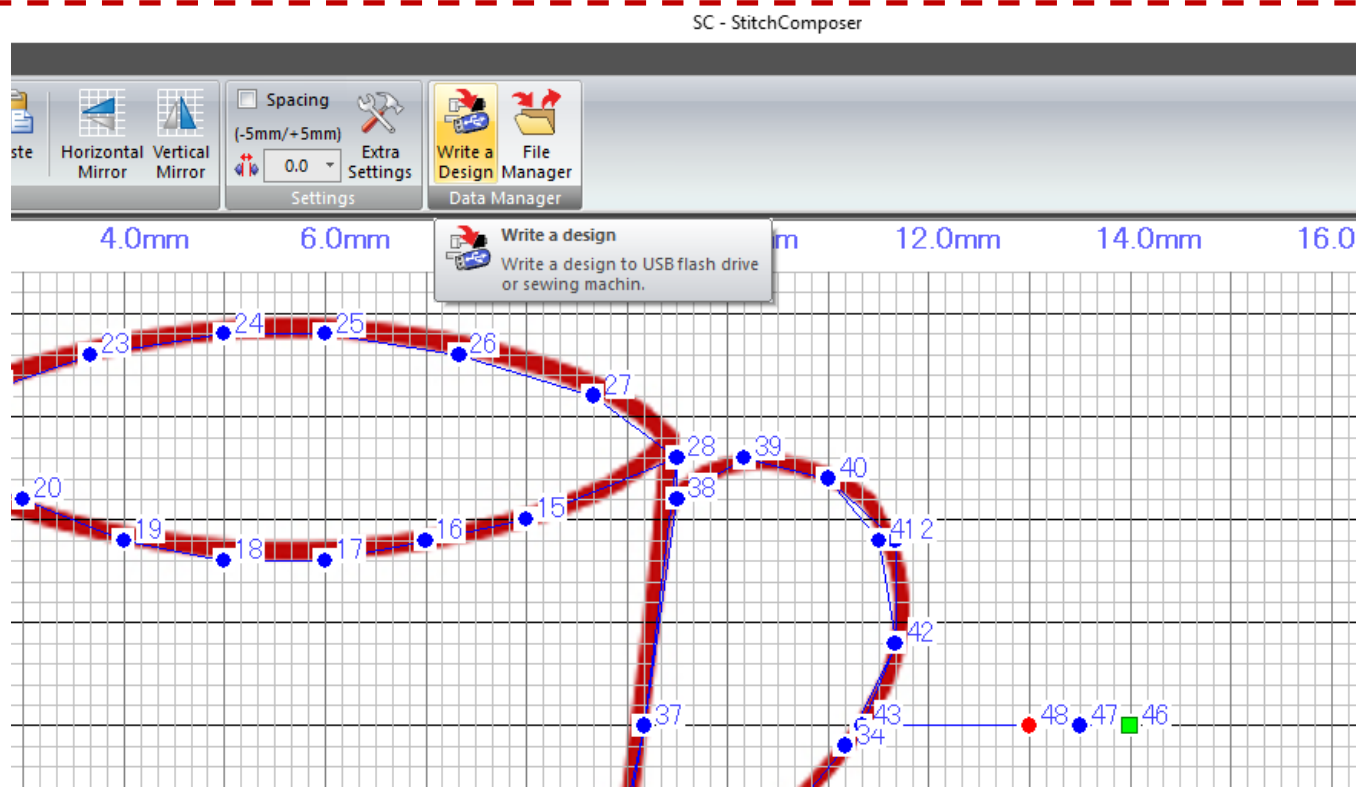

Select Lock Stitch to complete the stitch pattern.



SC - StitchComposer

End point Undo Redo Insert Cut Copy Paste Horizontal Mirror Vertical Mirror Spacing (-5mm/+5mm) Extra Settings Write a Design File Design Manager Data Manager

0.0mm 2.0mm 4.0mm 6.0mm 8.0mm 10.0mm 12.0mm 14.0mm 16.0mm 18.0mm 20.0mm

4mm 3mm 2mm 1mm 0mm 1mm 2mm 3mm 4mm

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40

Write a Design

ORD

Ordf


Cup.stx

Rename

Close

Select Write to Design.

Rename the design Cup and save in the Ordf folder.

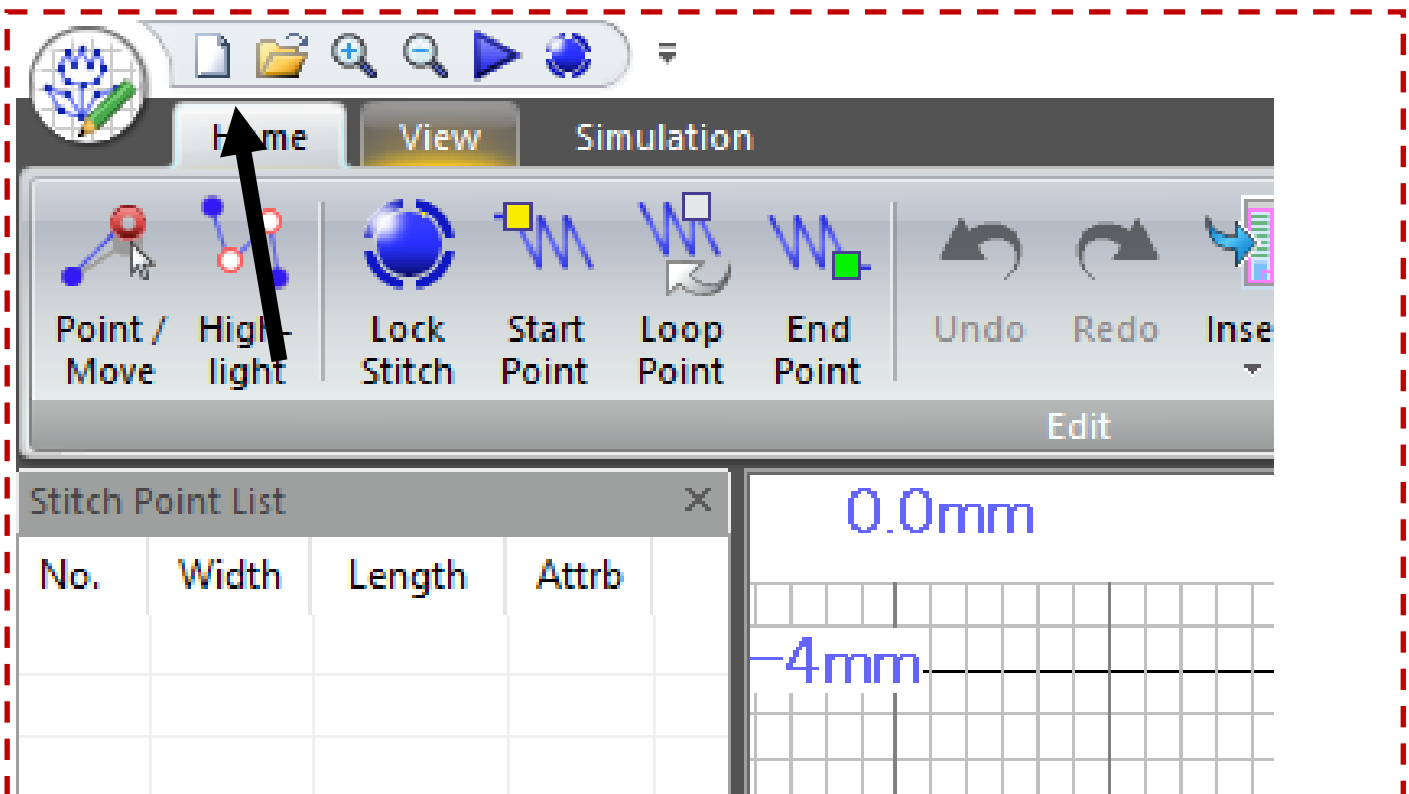


---

8




## Part A - Stitch Composer

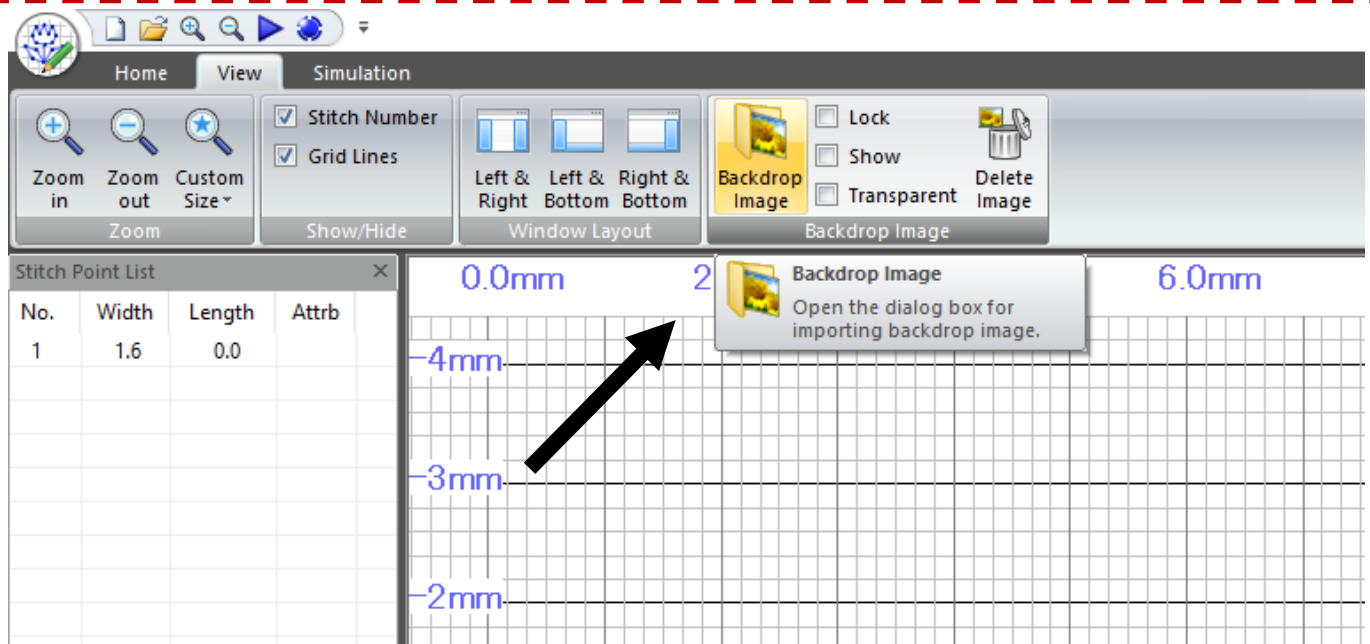


Open the View icon in the top tool bar.

Click on the Backdrop image and select the pulse artwork.

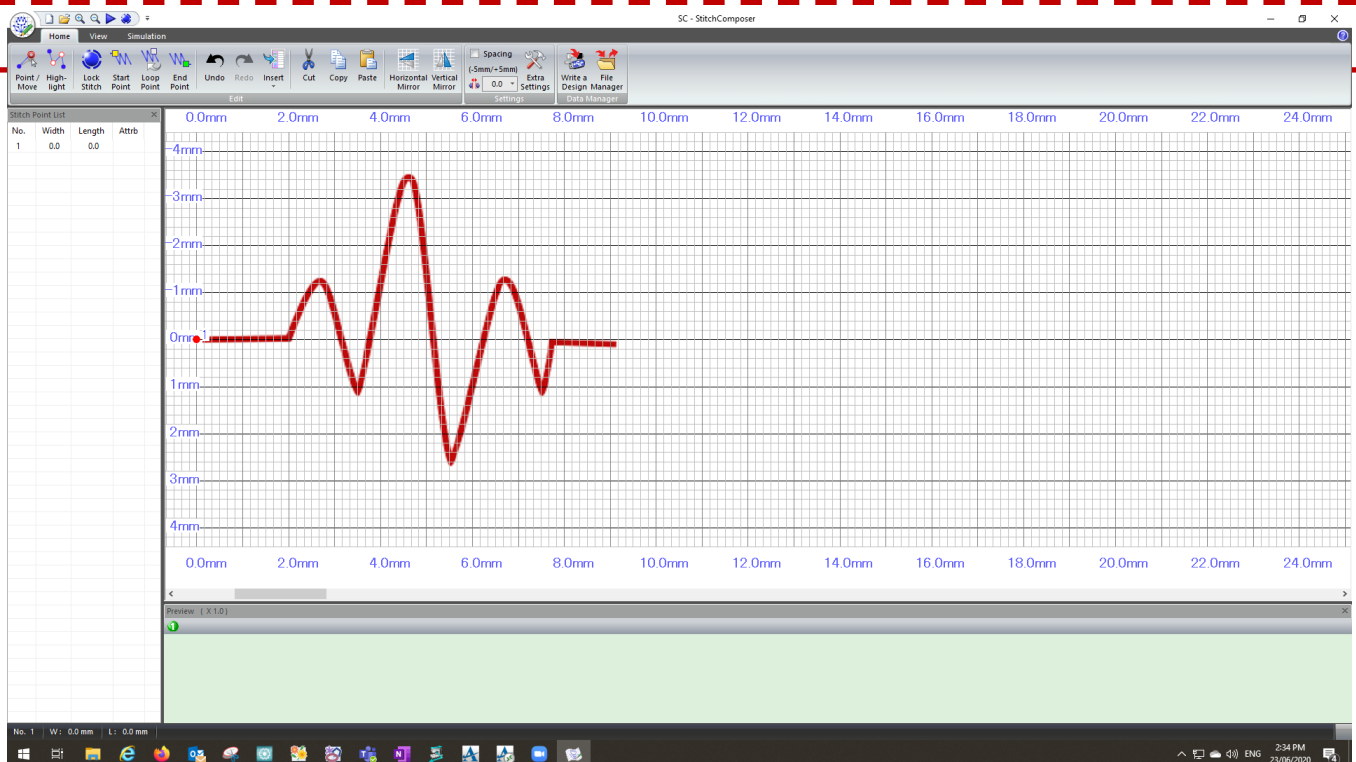


Move the artwork around by holding down the left click of the mouse and dragging it into place. Select Lock to lock down the artwork.

## Part A - Stitch Composer

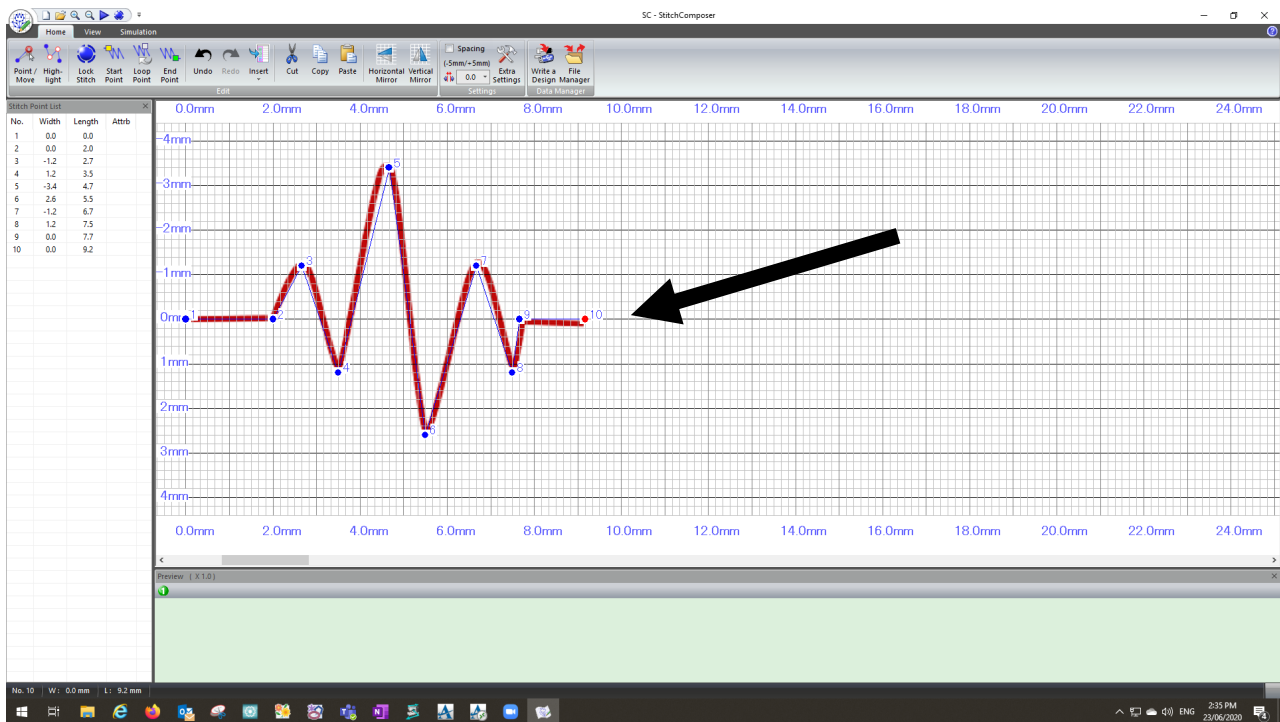


Place the cursor on the intersection of the grid at the 0.0mm and 0mm, left click the mouse to set the first stitch point. Follow the artwork along placing stitch points as you go

until you reach the end.

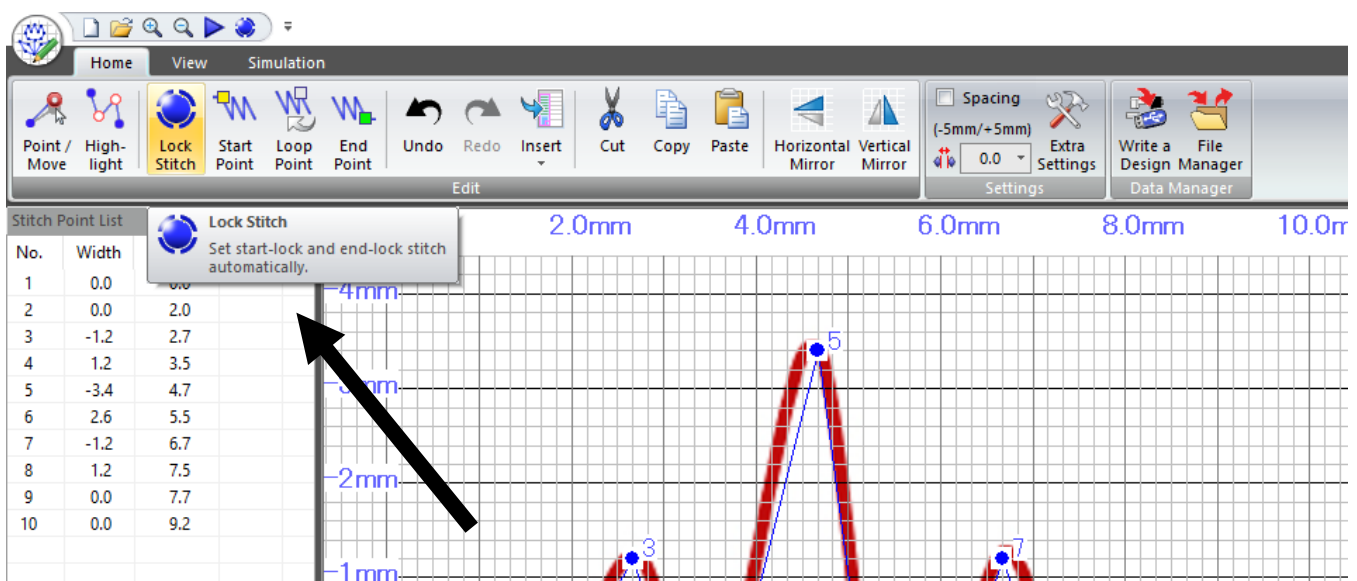

Select the Lock stitch to complete the stitch pattern.

## Part A - Stitch Composer

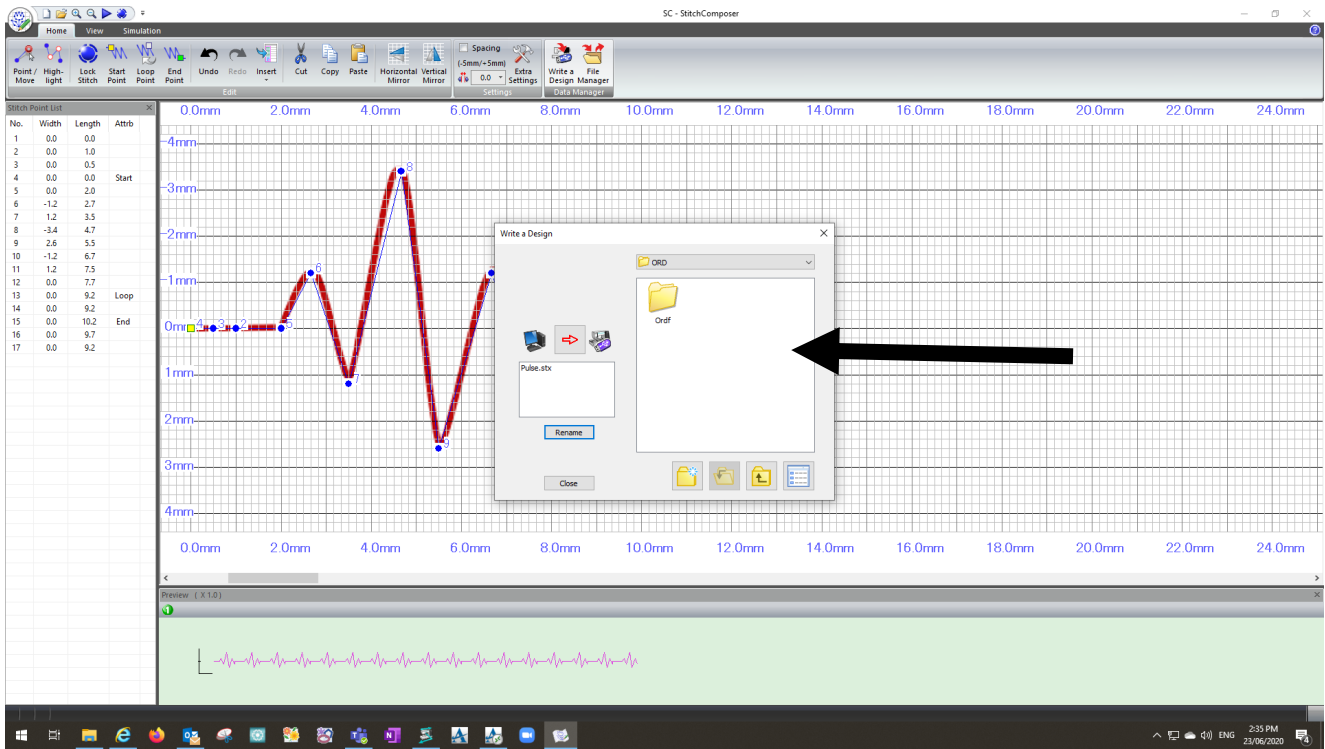

Select Write to Design. Rename the design Pulse and save in the Ordf Folder.

### Part B - Mug Rug



#### REQUIREMENTS

Machine Embroidery Thread  
All purpose Sewing Thread  
Fusible Fleece 7 1/2" X 6"  
Quilting Fabric 7 1/2" x 6" -Front  
12" X 13" -Back  
Homespun 7" X 6"  
Fusible Medium Tear Away Stabilizer  
Erasable Fabric Pen  
Pins  
Iron & Best Press  
MC 15000v3  
SQ14 hoop

#### INSTRUCTIONS

Following manufactures instructions attach the medium weight fusible tear away stabilizer to the wrong side of the 12" X 13" block of background fabric.



Hoop the prepared fabric in the SQ14 hoop.


Select the Built-in Design Key.



Select design # 28 from the Favourites Design folder.




Select the Edit Mode Key.

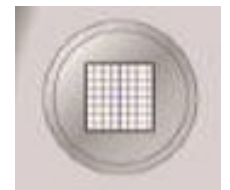

Select the Resize key and increase to 120%.



Select the Single Colour Key.

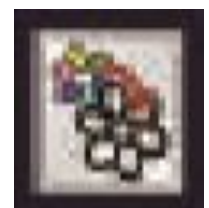


Thread the machine with Embroidery thread and stitch out the design.

### Part B - Mug Rug

 Remove stabilizer from the back when the design is complete.

Press the embroidered block with the iron and trim back to 7" (w) X 6" (h).

Select Quilting stitch #2 and attach the O Foot.



Thread the machine with complementary sewing thread.

With right sides together pin the embroidered block and the homespun block together at the base of the embroidery.



Following manufactures instructions attach a strip of fusible medium weight Tear Away Stabilizer to the reverse side of the homespun.



Attach the F Foot to the sewing machine and thread the machine with



complementary embroidery thread.

Using an erasable fabric maker rule a 1/4" line down the left side of the homespun as a starting guide.



Insert the USB into the port of the sewing machine.


Select the Home Key.



Select the Decorative & Quilting Stitches key.



Select the Created Stitches key.

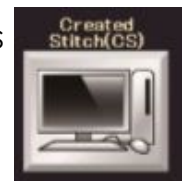

Select the Import key and locate the created stitches from the USB.



Select the Pattern Combination key.



Select decorative Stitch A04.

Select the Home key.

Select the Decorative & Quilting Stitches key.



### Part B - MUG RUG

Select the Created Stitches key.

Select the Pulse stitch.

Select the Cup stitch.

Select the Pulse stitch.

Select Save .



Open the Ordf folder on the USB stitch.



Rename the design as Line 1 and select OK.



Stitch out the first line of combination stitches and delete the stitches when finished.

Select the Home key.

Select the Decorative & Quilting key.

Select the Decorative stitch key.

Scroll through the pages and select Decorative stitch A04.

Select the Pattern Combination key.



Select the Bridge Stitch #1.



Select the Home key and open the Monogram stitches.



Select the C, then select the Upper/Lower Case key and type in "offee"



Select Bridge Stitch #1 and finish with the Pulse stitch.

Save the pattern combination as Line2.

Using the previous stitch as a guide stitch out stitch pattern combination 2.



Select Open File and locate stitch pattern combination 1 save to the USB.

Using the previous stitch line as a guide stitch out a the second row of the stitch combination,.

Remove the stabilizer from the reverse side of the fabric, press with the iron and Best Press.

Trim the Black back to 7 1/2"(H) X 6"(w).



Follow manufactures instructions attach the fusible fleece to the wrong side of the stitched block.

With right sides together pin the backing fabric to the topside of the stitched



## Part B - MUG RUG

fabric.

Select Quilt stitch

#2, thread the machine with

sewing thread and

stitch a 1/4" seam around the edge of the block leaving a gap for turning.



Trim the corners back and turn through the correct way.

Press with the iron and hand stitch the opening closed.

