A560 3D Fixed Wing

Vertical Flight with 1 Switch
Assembly & Disassembly Instruction




All electronic components of A560 are already set. If it's the RTF version(with transmitter T8S and receiver packed), all you need to do after unpacking the box is to assemble the wing, and then fly it.

Note: If it is the PNP version(without transmitter T8S and receiver packed), please follow the instruction manual of A560 to set channel 5 and channel 7 in your transmitter.



A560 Introduction:

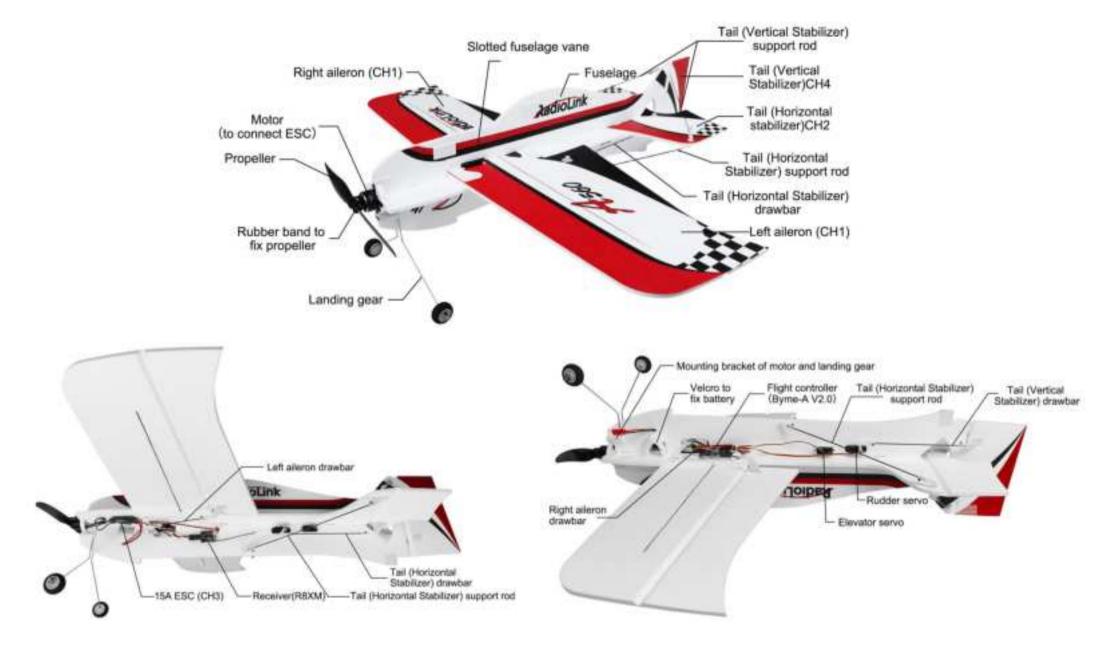


RTF A560 Spare Part List:




Note: Please refer to the sales interface for the actual spare part list.

A560 Assembly Steps:


1. Install the wing

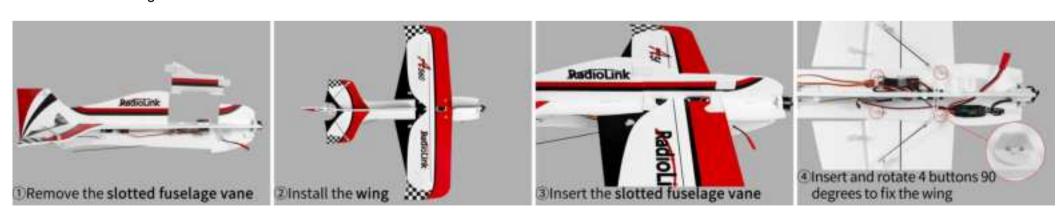

2. Connect tail support rods

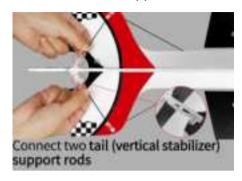

3. Connect aileron drawbars

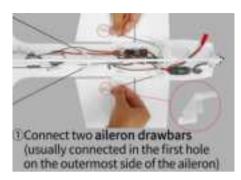

4. Install the landing gear



5. Install the propeller



A560 Disassembly Steps:

After the flight, please disconnect the battery first, and then refer to the above assembly steps to disassemble the parts of A560 in turn. The disassembly steps are as follows:

- 1. Disassemble the propeller and landing gear. Please see Note①
- 2. Disassemble the the drawbars and tail support rods. Please see Note2
- 3. Diassemble the buttons to fix the wing. Remove the slotted fuselage vane and wing. Insert the slotted fuselage vane back.
- 4. Arrange all the spare parts and put them into the bag in turn. Keep all drawbars and rods parallel to the fuselage when packing it. Please see Note®

Disassembly Notes:

① When disassembling the landing gear, please push the two metal rods of the landing gear in opposite directions at the same time, and then push the metal rods to make it out of the slot.



② When disassembling the drawbars or support rods, please put the screwdriver in the middle gap of the clasp, and then pry it.



(3) when packing the fuselage in the bag, please keep all drawbars and support rods parallel to the fuselage to avoid damage to the drawbar/rod caused by improper placement.



A560 Packing Steps:

After the disassembly, please pack the parts of the A560 in the bag as shown in the picture below.





CM210 charger + Landing gear + Button to fix aileron + Fiber tape + Cross screwdriver + Spare clasp for drawbar/support rod + Spare servo arm



T8S Transmitter Overview:

Three-way switch CH7(SWA) (Flight mode switch) Knob-switch CH8(VRA) (PTZ Adjustment) Throttle/ Rudder Stick Power Button Trimmer Buttons Mode 2 Three-way switch CH5(SWB) (Flight mode switch) Push-button CH6(VRB) (Camera shutter) Aileron/ Elevator Stick

Six Flight Modes Switch of A560:



Scan below codes to view A560 tutorials:

A560 Assembly



A560 Disassembly



A560 Flight Tutorial



A560 User Manual

