

# Quick Start Guide

## **PowerXL**<sup>TM</sup> products that excel GRILL AIR FRYER COMBO

See owner's manual for complete instructions and important safety information before using this product.

### FOR AIR FRYING

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).



#### STEP 1

Attach the Air Frying Lid to the appliance. Open the lid. Ensure that the Inner Pot is in place in the Base.



#### STEP 2

Arrange your food in the Inner Pot. Close the lid.



#### STEP 3

Select one of the one-touch presets to set a cooking time and temperature or set the time and temperature manually. Press the Start Button to begin the cooking process.



#### STEP 4

Once the cooking timer has run out, open the lid and carefully remove food with tongs or oven mitts.

# Quick Start Guide

## **PowerXL™** products that excel **GRILL AIR FRYER COMBO**

See owner's manual for complete instructions and important safety information before using this product.

### FOR GRILLING

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).



#### STEP 1

Attach the Air Frying Lid to the appliance. Open the lid. Ensure that the Inner Pot is in place in the Base. Place the Grill Plate in the Inner Pot. Ensure that the Grill Plate sits evenly.



#### STEP 2

Arrange your food on the Grill Plate in the Inner Pot. Close the lid.



#### STEP 3

Select the Grill preset. Press the Start Button to begin the cooking process.



#### STEP 4

Once the cooking timer has run out, open the lid and carefully remove food with tongs or oven mitts.