 
 
 
 
 
 




| Original                                                                                       | Recharge                                                                                              |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  On / Off     |  Power               |
|  Mute All     |  Audio / Lang I/II   |
|  Mute         |  Mute / Dimmer       |
|  CD-DVD       |  Shift + 3           |
|  FM-AM        |  Shift + 6           |
|  AUX          |  Shift + 7           |
|  TV           |  Shift + 1           |
|  CBL-SAT      |  Shift + 0           |
|  VCR          |  Shift + 4           |
|  Up / Tune + |  Up                 |
|  DVD Menu   |  D.Menu / Top      |
|  Settings   |  Setup / OPT /     |
|  Left       |  Left              |
|  Enter      |  OK                |
|  Right      |  Right             |
|  Guide      |  Guide / EPG / -/- |
|  System     |  Menu / Home       |

| Original                                                                                                    | Recharge                                                                                                          |
|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  Down / Tune -           |  Down                          |
|  Exit                    |  Exit / Cancel / Clear         |
|  Track/Chap./CH +        |  CH+ / Page+                   |
|  Volume +                |  Vol+                          |
|  Track/Chap./CH -        |  CH- / Page-                   |
|  Volume -                |  Vol-                          |
|  Stop                    |  Stop / Hold                   |
|  Pause                   |  Pause / Step / Freeze         |
|  Play                    |  Play / Slow                   |
|  I<< / Seek -           |  I<< / Preset-                |
|  I<< / Seek -          |  << / Tune-                  |
|  >>I / Seek +          |  >> / Tune+                  |
|  >>I / Seek +          |  >>I / Preset+               |
|  Shuffle / Presets <-- |  Red / Netflix / Search      |
|  Repeat / Presets -->  |  Blue / Prime Video / Random |
|  1                     |  1                           |
|  2                     |  2                           |



