



- A Left Mouse Button**
- B Right mouse button**
- C Scroll Wheel**
- D Side button one**
- E Side button two**
- F Pixart 3327 Sensor**
- G PTFE Mouse Feet**
- H DPI Indicator Light**
- I DPI Button**

Press the DPI button at the bottom to change DPI levels. Default DPI levels indicated by light are as follows -

Yellow - 400 DPI

Green - 800 DPI

Cyan - 2000 DPI

Purple - 4000 DPI

Blue - 8000 DPI

Red - 12400 DPI

You can change the default DPI levels with the Pegasus Lite Software.

Download the Pegasus Lite Software from kreo-tech.com/pages/downloads

Have questions?


Call/WhatsApp us on

 +91 961 150 7877

Or simply drop us a text on Instagram

 @kreosphere

Go Beyond Limits

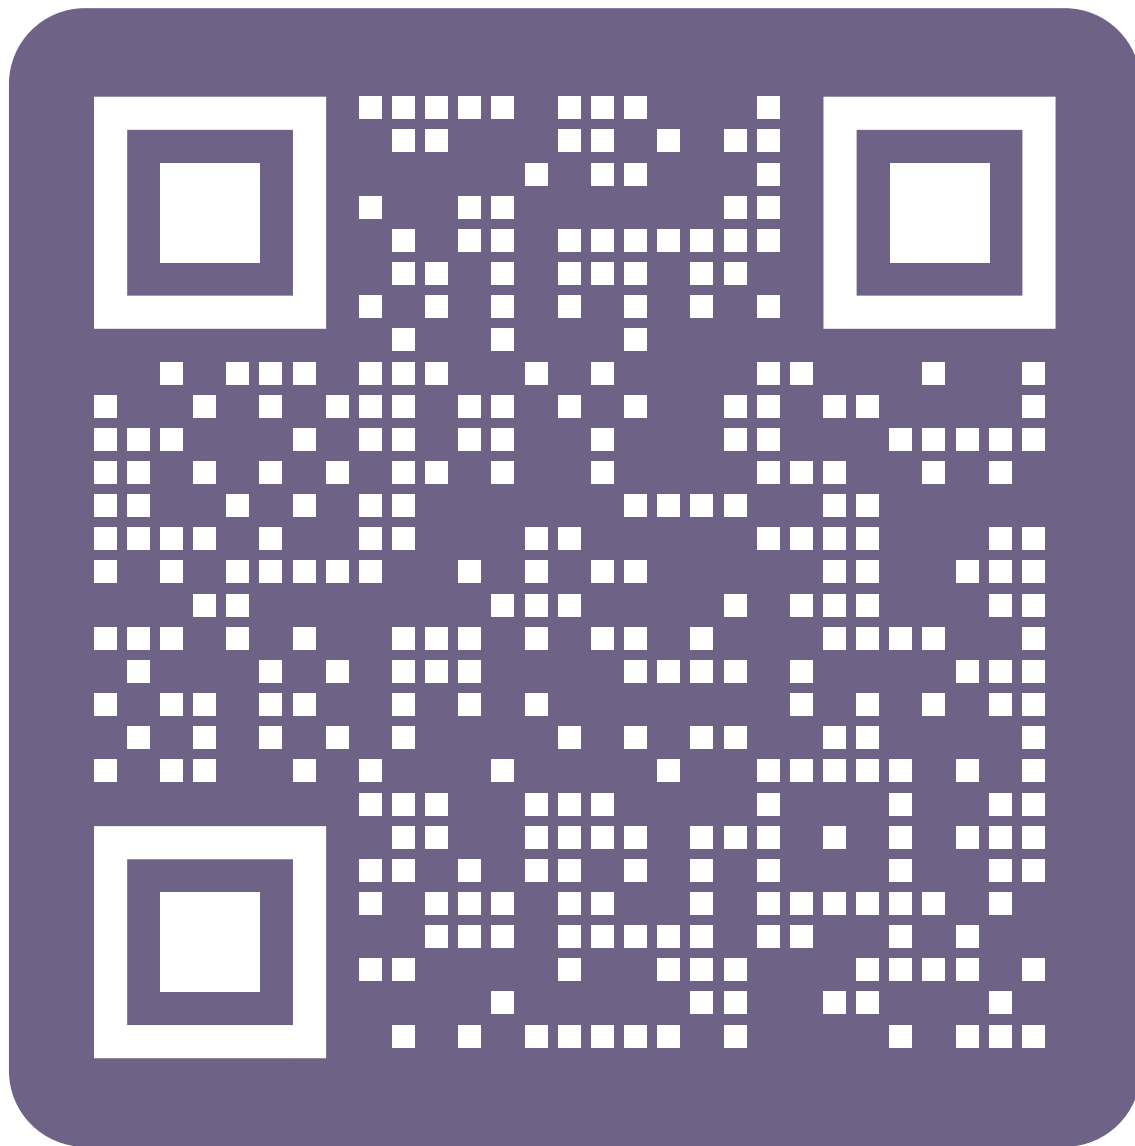

Blast off into the **#Kreosphere**



 49± GRAMS  PIXART 3327  PROGRAMMABLE BUTTONS