



 
USE AND CARE GUIDE

2000 LUMENS RECHARGEABLE WORK LIGHT

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

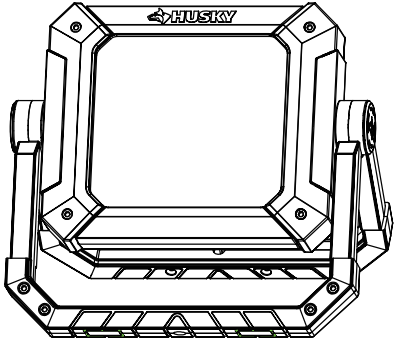


THANK YOU
We appreciate the trust and confidence you have placed in Husky through the purchase of this rechargeable work light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents	2	Pre-Operation	4
Safety Information	2	Operation	6
Warranty	3	Care and Cleaning	7
Specifications	3	Maintenance	7

Safety Information

Read all safety warnings and instructions.

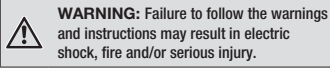

- Prevent unintentional starting.
Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

WARNING – When using flashlights or lanterns, additional precautions should always be followed, including the following:

- To reduce the risk of injury, close supervision is necessary when a product is used near children.

Safety Information(continued)

- Do not contact hot parts.
- Only use attachments recommended or sold by the manufacturer.
- Do not use in the rain.
- To reduce the risk of electrical shock, do not put work light in water or other liquid. Do not place or store product where it can fall or be pulled into a tub or sink.
- WARNING: To reduce the risk of injury, do not stare at operating lamp. Serious eye injury could occur.
- WARNING: Do not use the magnet for horizontal overhead mounting.

SAVE THESE INSTRUCTIONS.

Warranty

The manufacturer warrants the product to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. We take pride in the design and construction of each of our products and work to maintain the quality of our materials and craftsmanship to assure your satisfaction.

If any problems appear, the purchaser may return the item, freight prepaid, together with a copy of your original purchase receipt to place of purchase and it will be replaced with the same or comparable model free of charge. This warranty does not cover fixtures that have been altered in any way; it is void if damage or defect has resulted from accident, abuse, misuse or faulty repair.

In no event will the manufacturer be liable for any incidental or consequential damages. No charge will be acceptable for unauthorized repairs, parts or service. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation of incidental or consequential damages may not apply to you. Legal warranty rights will vary from state to state and you may have other rights.


Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.HUSKYTOOLS.com.

Specifications

Product Weight	1.79 lb	Input Voltage	DC5V
Product Width	7.81 in.	Input Current	2A
Product Depth	2.30 in.	Power	20W
Product Height	7.32 in.	Recharge time	6hrs
Run Time	High: 3hrs / Medium 6hrs / Low: 12hrs		
Lumen Output	High: 2000lm / Medium: 1000lm / Low: 500lm		

Pre-Operation

 PACKAGE CONTENTS

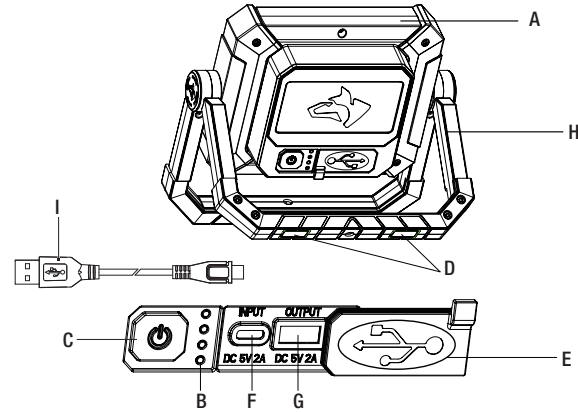

Part	Description	Part	Description
A	Work light	F	USB input socket (Type C)
B	Charging indicator	G	USB output socket
C	ON/OFF switch	H	Stand
D	Magnet	I	USB cable
E	Protective cap		

Charging the product

NOTES:

- Remove all packaging materials from the product.
- Before use, you need to recharge the rechargeable battery before use. The charging process takes about 6 hours. The rechargeable battery is firmly integrated into the base of the product.
- Fully charge the rechargeable battery prior to first use.
- Charge the battery if it becomes empty (only 1 LED of the charging indicator [B] is flashing).
- Open the protective cap [E].
- Connect the USB plug of the USB cable [I] to the USB input socket (Type C) [F] on the product. The USB cable is for charging only,not for other use.

NOTES:

- The battery charging status is shown by the charging indicator [B]:
- Under input current 2A, the charging time is approximately 6 hours when the battery was drained.

Operation

1 Using as a LED light


- Fully charge the product as described in the section “Charging the product”. The product can be operated in 4 different modes. Select these by repeatedly pressing the ON/OFF switch [C].

ON/OFF switch	Mode
Press 1x	Work light 100 % brightness
Press 2x	Work light 50% brightness
Press 3x	Work light 25% brightness
Press 4x	Flash
Press 5x	Switch off the light
Press after 30s	Switch off the light

- The product is equipped with 4 magnets [D] at the bottom of stand. With all these magnets, the product can be attached to magnetisable surfaces

Adjusting the light direction

- To adjust the light direction, rotate stand (A) and work light body (B) to suitable position.
- Stand (A) can be rotated 270 degrees and work light body (B) can be rotated 360 degrees.

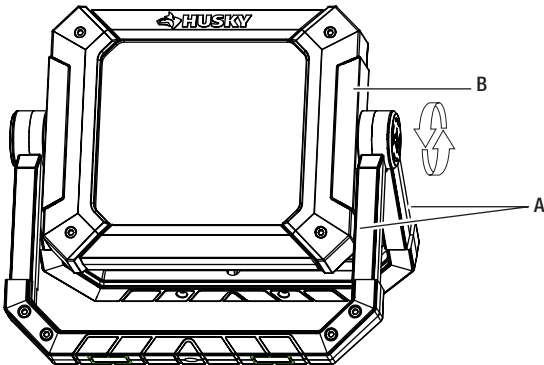

2 Using as a charger

- It can be used to charge small electronics devices with USB socket (Type A port) for charging.
- The charging current the device requires can not exceed 2A. Carefully read the instructions for use of the device you wish to charge.



WARNING: Always make sure that the worklight is cooled down before attempting to clean it.

- Clean the device regularly with a non-abrasive cleaner.
- Allow the work light to cool down completely before storing.
- Store in a safe place, out of the reach of children.

Maintenance

When the device is not in use, we recommend that the battery is charged at least every 3 months.



Questions, problems, missing parts? Before returning to the store, call Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.